


Raymarine®

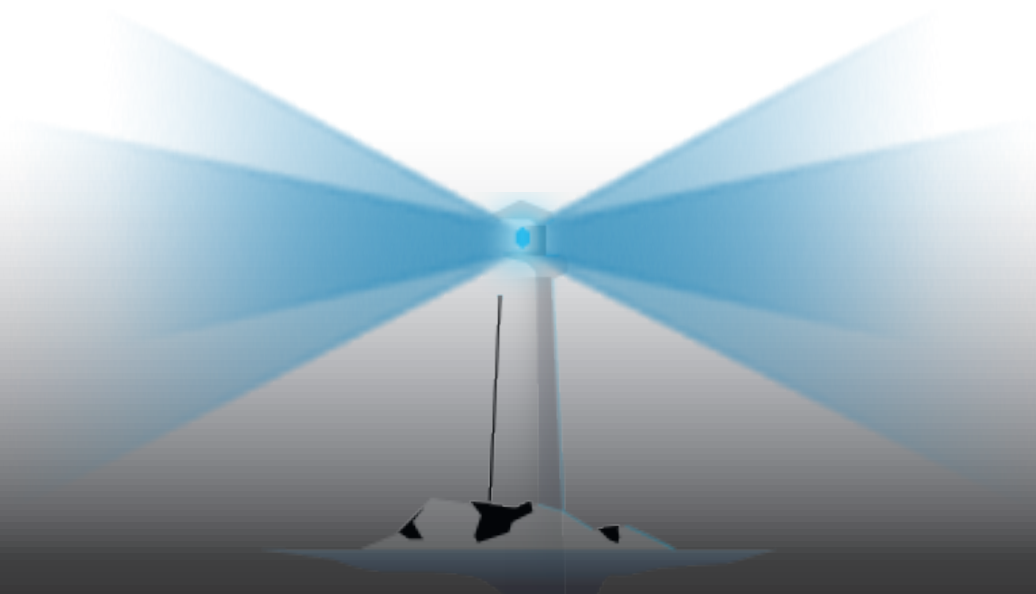

LIGHTHOUSE 4

VERSION 4.0

Advanced operation instructions

English (en-US)
Date: 04-2022
Document number: 81406 (Rev 1)
© 2022 Raymarine UK Limited

Trademark and patents notice

Raymarine, Tacktick, Clear Pulse, Truzoom, SeaTalk, SeaTalk^{hs}, SeaTalkng, and **Micronet**, are registered or claimed trademarks of Raymarine Belgium.

FLIR, YachtSense, DockSense, LightHouse, RangeFusion, DownVision, SideVision, RealVision, HyperVision, Dragonfly, Element, Quantum, Axiom, Instalert, Infrared Everywhere, The World's Sixth Sense and **ClearCruise** are registered or claimed trademarks of FLIR Systems, Inc.

All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.

This product is protected by patents, design patents, patents pending, or design patents pending.

Fair Use Statement

You may print no more than three copies of this manual for your own use. You may not make any further copies or distribute or use the manual in any other way including without limitation exploiting the manual commercially or giving or selling copies to third parties.

Software updates



Check the Raymarine website for the latest software releases for your product.

www.raymarine.com/software

Product documentation



The latest versions of all English and translated documents are available to download in PDF format from the website:

www.raymarine.com/manuals.

Please check the website to ensure you have the latest documentation.

Publication copyright

Copyright ©2022 Raymarine UK Ltd. All rights reserved. No parts of this material may be copied, translated, or transmitted (in any medium) without the prior written permission of Raymarine UK Ltd.

CONTENTS

| | | | |
|---|-----------|--|--|
| CHAPTER 1 IMPORTANT INFORMATION | 18 | | |
| Safety warnings | 18 | | |
| Product warnings | 19 | | |
| Electronic chart data..... | 19 | | |
| Regulatory notices | 19 | | |
| End-User License Agreements (EULAs) | 19 | | |
| Open source license agreements..... | 19 | | |
| Regulatory approvals | 19 | | |
| Warranty registration..... | 19 | | |
| Technical accuracy | 19 | | |
| CHAPTER 2 DOCUMENT AND PRODUCT INFORMATION | 20 | | |
| 2.1 Product documentation | 21 | | |
| User manuals Print Shop | 21 | | |
| 2.2 Document illustrations and screenshots | 21 | | |
| 2.3 Applicable software version | 21 | | |
| 2.4 Compatible MFDs | 22 | | |
| 2.5 New software features..... | 22 | | |
| Spotify app removal..... | 23 | | |
| RMK and sonar module compatibility..... | 23 | | |
| CHAPTER 3 GENERAL INFORMATION | 24 | | |
| 3.1 Applications and integrations..... | 25 | | |
| 3.2 Menu types | 25 | | |
| 3.3 Setting controls | 27 | | |
| 3.4 Sidebar | 27 | | |
| Sidebar selector | 28 | | |
| Customizing data sidebars | 29 | | |
| 3.5 Data overlays | 29 | | |
| Adding a data overlay..... | 29 | | |
| Data overlay and Sidebar data items..... | 30 | | |
| Cyclops Marine load cells | 34 | | |
| CHAPTER 4 SET UP | 35 | | |
| 4.1 Controls..... | 36 | | |
| Axiom, Axiom plus and Axiom XL controls..... | 36 | | |
| Axiom Pro controls | 36 | | |
| RMK controls..... | 37 | | |
| iKey bluetooth keyboard controls..... | 38 | | |
| 4.2 Power | 39 | | |
| Axiom, Axiom + and Axiom XL | 39 | | |
| Axiom Pro..... | 40 | | |
| 4.3 Getting started..... | 40 | | |
| First power up | 40 | | |
| First power up data master selection | 40 | | |
| Startup wizard | 41 | | |
| Safety clearances | 42 | | |
| First power up Limitation on Use acknowledgement..... | 44 | | |
| Engine manufacturer selection | 45 | | |
| Sonar transducer calibration | 45 | | |

| | |
|---|----|
| RealVision™ AHRS calibration | 46 |
| Transducer calibration (iTC-5) | 47 |
| Multiple data sources (MDS)..... | 49 |
| Assigning a function to the User | |
| Programmable Button (UPB) | 50 |
| Performing a settings or factory reset..... | 50 |
| Importing user data..... | 50 |
| 4.4 Shortcuts menu | 50 |
| Taking a screenshot | 51 |
| Activating touchlock | 51 |
| Radar standby | 51 |
| Eject SD card | 51 |
| Enabling/Disabling sonar modules | 51 |
| Autopilot shortcuts | 51 |
| Bluetooth volume control | 52 |
| Adjusting brightness..... | 52 |
| Display mode..... | 52 |
| 4.5 Memory card compatibility | 53 |
| Removing MicroSD card from its adaptor | 54 |
| Inserting a MicroSD card — Axiom variants | 54 |
| Inserting a MicroSD card — Axiom Pro | |
| variants..... | 54 |
| Inserting external storage devices - RCR..... | 55 |
| 4.6 Software updates | 55 |
| Checking current software..... | 56 |
| Updating software | 56 |

| | |
|--|----|
| Updating software available online | 57 |
| 4.7 Device pairing..... | 57 |
| Pairing a RMK remote keypad | 57 |
| Pairing with a Quantum Radar scanner | 57 |
| Pairing a Bluetooth speaker | 58 |

CHAPTER 5 HOMESCREEN 59

| | |
|---|----|
| 5.1 Accepting the Limitations on Use..... | 60 |
| 5.2 Homescreen overview..... | 60 |
| 5.3 MFD Apps..... | 61 |
| 5.4 Creating an app page..... | 63 |
| Customizing an existing app page | 64 |
| Editing the splitscreen ratio | 64 |
| 5.5 Homescreen data widget | 64 |
| Enabling and configuring the data widget..... | 65 |
| 5.6 Global positioning..... | 65 |
| Global Navigation Satellite System (GNSS) | |
| constellations | 65 |
| Satellite based augmentation systems | |
| (SBAS)..... | 66 |
| GNSS (GPS) Status | 66 |
| GNSS settings | 67 |
| GNSS constellation selection compatible | |
| receivers..... | 68 |
| 5.7 My profiles..... | 70 |
| Demo profiles..... | 70 |
| 5.8 Status area..... | 71 |

| | |
|--|----|
| Status area icons..... | 72 |
| 5.9 My data..... | 73 |
| Fuel/trip manager | 73 |
| Files | 75 |
| Import/export..... | 75 |
| 5.10 Alarms | 77 |
| Alarm manager | 77 |
| Alarm settings | 78 |
| External alarm speaker / buzzer | 80 |
| Acknowledging alarms | 80 |
| Digital switching alarms..... | 80 |
| 5.11 Man Overboard (MOB)..... | 80 |
| MOB mode | 81 |
| 5.12 DSC VHF radio integration | 81 |
| 5.13 Homescreen settings menus | 82 |
| Selecting display language..... | 83 |
| Boat details | 84 |
| Tanks | 85 |
| Units of measure | 88 |
| Splashscreen and background images | 88 |
| Data master..... | 90 |
| Shared Brightness..... | 91 |
| NMEA 0183 settings..... | 92 |
| 5.14 IP device user interface access..... | 93 |
| 5.15 Connecting to a wireless display..... | 93 |
| Disconnecting a wireless display | 94 |

| | |
|-----------------------------------|----|
| Unpairing a wireless display..... | 94 |
|-----------------------------------|----|

CHAPTER 6 AUTOPILOT CONTROL 95

| | |
|--|-----|
| 6.1 Commissioning - Evolution autopilot system..... | 96 |
| Commissioning pre-requisites..... | 96 |
| Commissioning steps..... | 96 |
| Vessel hull type selection..... | 96 |
| Using the Dockside wizard | 96 |
| Compass linearization — Evolution autopilots | 99 |
| Compass lock..... | 101 |
| 6.2 Autopilot control..... | 101 |
| Engaging the autopilot — Locked heading | 101 |
| Engaging the autopilot — Navigation | 102 |
| Engaging and disengaging the autopilot - physical buttons | 102 |
| Disengaging the autopilot..... | 102 |
| 6.3 Pilot sidebar..... | 102 |
| 6.4 Pilot pop-up | 103 |
| 6.5 Autopilot Control — Pilot set-up menu | 104 |
| 6.6 Rudder damping levels and deadband angles..... | 106 |
| Adjusting the Rudder Damping level..... | 106 |

CHAPTER 7 WAYPOINTS, ROUTES AND TRACKS 107

| | |
|--------------------------|-----|
| 7.1 Waypoints..... | 108 |
| Placing a waypoint | 108 |

| | |
|---|-----|
| Waypoint management..... | 108 |
| 7.2 Routes..... | 110 |
| Creating a Route..... | 110 |
| Autoroute..... | 111 |
| Importing a route..... | 112 |
| Route management..... | 113 |
| 7.3 Tracks..... | 114 |
| Creating a track..... | 114 |
| Converting a track to a route..... | 115 |
| Track management..... | 115 |
| 7.4 Sharing Waypoints, Routes and Tracks..... | 115 |
| 7.5 Waypoint, routes and tracks capacity..... | 116 |

CHAPTER 8 SEARCH AND RESCUE PATTERNS (SARS)..... 117

| | |
|--|-----|
| 8.1 SAR (Search and Rescue) patterns..... | 118 |
| 8.2 Sector search pattern..... | 118 |
| Creating a sector search pattern..... | 119 |
| Drift effects on sector search patterns..... | 120 |
| 8.3 Expanding square search pattern..... | 121 |
| Creating an expanding square search pattern..... | 121 |
| Drift effects on expanding square search patterns..... | 123 |
| 8.4 Creeping line / Parallel line search pattern..... | 123 |
| Creating a Creeping line / Parallel line search pattern..... | 124 |

CHAPTER 9 CHART APP - GENERAL..... 126

| | |
|---|-----|
| 9.1 Chart app chapters..... | 127 |
| 9.2 Chart app overview..... | 127 |
| Chart app controls..... | 128 |
| Chart ranging and panning..... | 128 |
| Chart app context menu..... | 128 |
| Selecting a chart card..... | 129 |
| Chart modes..... | 129 |
| Vessel details..... | 130 |
| Object selection and information..... | 131 |
| Layers..... | 132 |
| View and motion..... | 133 |
| Camera tracking..... | 133 |
| 9.3 Cartography overview..... | 133 |
| End-User License Agreements (EULAs)..... | 134 |
| Supported cartography vendors..... | 134 |
| 9.4 LightHouse charts..... | 135 |
| LightHouse Chart Store..... | 135 |
| Pre-loaded LightHouse Chart Cards..... | 135 |
| Redeeming chart voucher..... | 136 |
| Downloading charts from My Charts..... | 136 |
| 9.5 S-63 Encrypted Charts..... | 137 |
| S-63 Encrypted Charts installation process..... | 137 |
| Obtaining an S-63 MFD activation file..... | 137 |

| | |
|---|-----|
| Copying user permit file(s) to memory card..... | 138 |
| Purchasing S-63 Encrypted Charts..... | 138 |
| Installing base cells and cell permits | 139 |
| Installing cumulative updates | 139 |
| S-63 Encrypted Chart settings..... | 140 |
| 9.6 Navigation..... | 141 |
| Navigating to a waypoint or point of interest | 141 |
| Restarting cross track error (XTE) | 141 |
| Following routes..... | 141 |
| 9.7 Depths and contours | 143 |
| Depth soundings..... | 143 |
| Depth contours | 144 |
| 9.8 Target tracking | 146 |
| AIS target tracking..... | 146 |
| Radar target tracking..... | 149 |
| 9.9 Collision avoidance | 152 |
| Dangerous targets alarm | 152 |
| Predicted areas of danger | 153 |
| Obstruction alarm (legacy LightHouse charts)..... | 158 |
| LightHouse charts dangerous objects | 159 |
| 9.10 Target intercept..... | 160 |
| 9.11 RealBathy™ | 160 |

| | |
|---|------------|
| Setting up and creating RealBathy contours..... | 161 |
| 9.12 Reeds almanac | 162 |
| 9.13 Find nearest..... | 162 |
| 9.14 Measure..... | 163 |
| Measuring vessel to point..... | 164 |
| Measuring point to point..... | 164 |
| Deleting rulers..... | 164 |
| 9.15 ClearCruise™ Augmented Reality | 164 |
| Field of View | 165 |
| 9.16 UAV Chart integration..... | 166 |
| Showing or hiding the UAV icon | 166 |
| Performing a UAV Goto | 166 |
| 9.17 SonarChart™ Live | 166 |
| Enabling SonarChart Live..... | 167 |
| 9.18 Chart settings menu | 167 |
| Cartography settings menu | 168 |
| Layers settings menu | 168 |
| Depth settings menu | 171 |
| View & motion settings menu..... | 173 |
| Advanced settings menu..... | 174 |
| Page settings menu..... | 175 |
| CHAPTER 10 CHART APP - SIMPLE MODE..... | 176 |
| 10.1 Simple mode..... | 177 |
| 10.2 Simple mode main menu..... | 177 |
| 10.3 Simple mode settings menus..... | 177 |

| | | | |
|--|------------|--|--|
| CHAPTER 11 CHART APP - DETAILED MODE | 178 | | |
| 11.1 Detailed mode | 179 | | |
| 11.2 Detailed mode main menu..... | 179 | | |
| 11.3 Detailed mode settings menus | 179 | | |
| CHAPTER 12 CHART APP - FISHING CHART MODE | 180 | | |
| 12.1 Fishing chart mode | 181 | | |
| 12.2 Fishing chart mode main menu..... | 181 | | |
| 12.3 Fishing intel menu | 181 | | |
| Sea surface temperature menu | 182 | | |
| 12.4 SiriusXM layer options | 182 | | |
| 12.5 Fishing chart mode settings menus | 182 | | |
| CHAPTER 13 CHART APP - ANCHOR MODE | 183 | | |
| 13.1 Anchor mode | 184 | | |
| 13.2 Anchor mode main menu | 185 | | |
| 13.3 Setting up the anchor drag alarm..... | 185 | | |
| 13.4 Anchor mode settings menus..... | 186 | | |
| CHAPTER 14 CHART APP - RACING MODE..... | 187 | | |
| 14.1 Racing mode main menu..... | 188 | | |
| 14.2 Laylines | 188 | | |
| Sailing data page | 189 | | |
| Laylines — system requirements..... | 189 | | |
| Enabling Laylines | 189 | | |
| Laylines settings menu | 189 | | |
| Displaying and interpreting laylines..... | 190 | | |
| Displaying wind shift data | 191 | | |
| 14.3 Race Start Line (SmartStart) and Race Timer..... | 192 | | |
| Creating the Race Start Line | 192 | | |
| Starting the Race Timer..... | 194 | | |
| Race laylines..... | 194 | | |
| Race sidebar | 194 | | |
| Dashboard..... | 195 | | |
| 14.4 Racing mode settings menus..... | 195 | | |
| CHAPTER 15 CHART APP - FISH MAPPING MODE | 196 | | |
| 15.1 Fish mapping mode | 197 | | |
| Activating your SiriusXM receiver | 197 | | |
| 15.2 Fish mapping mode main menu | 198 | | |
| 15.3 Fishing recommendations..... | 198 | | |
| 15.4 Fish mapping layers..... | 199 | | |
| 15.5 Layer / fish type identification | 199 | | |
| 15.6 Limiting data display limits | 200 | | |
| 15.7 Fish mapping subscription | 200 | | |
| 15.8 Fish mapping mode settings menus | 200 | | |
| CHAPTER 16 CHART APP – WEATHER MODE..... | 201 | | |
| 16.1 Weather mode | 202 | | |
| Weather mode context menu | 202 | | |
| 16.2 Weather mode main menu | 202 | | |
| 16.3 Activating your SiriusXM receiver | 203 | | |
| SR200 diagnostics mode | 203 | | |
| 16.4 Weather layers..... | 203 | | |
| 16.5 Animated weather | 204 | | |

| | |
|---|------------|
| 16.6 Weather radar layer | 205 |
| 16.7 Cities and Surface observation stations layers | 206 |
| 16.8 Cloud top and Lightning layers | 206 |
| 16.9 Sea surface temperature and Surface pressure layers | 207 |
| Surface pressure patterns..... | 207 |
| 16.10 Storm cast and Storm tracks layers | 208 |
| 16.11 Wind and Watchbox layers..... | 209 |
| 16.12 Wave direction, wave height and wave period layers | 210 |
| 16.13 Weather mode settings menus..... | 211 |
| 16.14 Weather settings menu..... | 211 |
| 16.15 Weather subscription..... | 211 |
| 16.16 Glossary of weather terms..... | 213 |
| CHAPTER 17 CHART APP - TIDES MODE..... | 215 |
| 17.1 Tides mode..... | 216 |
| 17.2 Tides mode main menu..... | 216 |
| 17.3 Using animation controls | 217 |
| 17.4 Setting a specific date for animations..... | 217 |
| 17.5 Tide station information..... | 217 |
| 17.6 LightHouse charts dynamic tide graphic..... | 218 |
| 17.7 Navionics dynamic tide graphic | 218 |
| 17.8 Current station information | 218 |
| 17.9 LightHouse Charts dynamic current graphic | 219 |
| 17.10 C-Map dynamic current graphic | 219 |
| 17.11 Navionics dynamic current graphic..... | 219 |
| 17.12 Displaying tide or current graphs..... | 220 |
| 17.13 Tides mode settings menus | 220 |

| | |
|--|------------|
| CHAPTER 18 FISHFINDER APP | 221 |
| 18.1 Sonar technologies..... | 222 |
| Traditional sonar technology | 222 |
| CHIRP technology | 222 |
| CHIRP Sonar overview | 222 |
| CHIRP DownVision™ overview | 223 |
| SideVision™ overview..... | 224 |
| CHIRP RealVision™ 3D overview..... | 225 |
| 18.2 Sonar module range..... | 226 |
| Sonar minimum depths | 226 |
| 18.3 Fishfinder app overview..... | 226 |
| Fishfinder app controls..... | 227 |
| RealVision 3D controls | 228 |
| 18.4 Opening the Fishfinder app..... | 228 |
| 18.5 Sonar transducer calibration | 230 |
| Depth offset | 230 |
| Setting a depth offset..... | 230 |
| Setting a temperature offset | 230 |
| Ping depth limit..... | 231 |
| 18.6 Sonar channels..... | 231 |
| Selecting a Sonar channel | 232 |
| 18.7 Placing a Waypoint (Sonar, DownVision and SideVision)..... | 232 |
| Placing a waypoint RealVision 3D | 232 |
| 18.8 Fish detection..... | 233 |
| 18.9 Sonar scroll back | 233 |
| 18.10 Sonar sensitivity controls | 234 |

| | | | |
|---|------------|---|-----|
| 18.11 Fishfinder settings menu | 235 | 19.9 Radar targets | 253 |
| CHAPTER 19 RADAR APP | 239 | Radar target acquisition data source requirements | 254 |
| 19.1 Radar app overview | 240 | Radar targets | 254 |
| Radar app controls | 240 | Acquiring a target manually | 254 |
| Radar app context menu | 241 | Automatic target acquisition | 255 |
| Camera tracking | 241 | Radar target list | 256 |
| 19.2 Radar feature comparison | 242 | Target settings | 256 |
| Compatible Radar scanners | 244 | Onscreen target settings | 257 |
| 19.3 Opening the Radar app | 245 | Clearing / resetting trails | 258 |
| Putting the radar into standby | 246 | Target context menu | 258 |
| Powering down your radar scanner | 246 | 19.10 Dangerous targets alarm | 258 |
| 19.4 Set up and configuration | 246 | 19.11 Guard zone alarms | 258 |
| Selecting a Radar scanner | 246 | 19.12 Doppler Radar overview | 259 |
| Dual range | 247 | Doppler mode | 260 |
| Timed Radar transmission | 247 | Doppler data source requirements | 260 |
| Setting open array antenna size | 247 | 19.13 Blank sectors | 261 |
| Bearing alignment | 248 | 19.14 Radar sensitivity controls | 261 |
| 19.5 Radar modes | 248 | 19.15 Radar settings menus | 262 |
| 19.6 Range rings | 249 | Transmission settings menu | 262 |
| 19.7 Range and bearing | 249 | View & Motion settings menu | 263 |
| VRM (Variable Range Marker) / EBL (Electronic Bearing Line) | 250 | Presentation settings menu | 264 |
| 19.8 AIS targets | 250 | Preferences settings menu | 264 |
| AIS target list | 251 | Installation settings menu | 265 |
| AIS targets | 251 | Advanced settings menu | 266 |
| AIS settings menu | 253 | Page settings menu | 266 |

| | |
|---|------------|
| CHAPTER 20 FIRST RESPONDER | 267 |
| 20.1 First responder configuration | 268 |
| Responder setup | 269 |
| 20.2 Heading and SOG Homescreen status | 270 |
| 20.3 Settings password protection..... | 270 |
| 20.4 Depth data monitor | 271 |
| 20.5 Data logging | 271 |
| 20.6 Waypoint at Range and Bearing from location | 272 |
| 20.7 Intel targets..... | 272 |
| Creating an Intel target..... | 272 |
| Accessing target options..... | 273 |
| Intel target options | 273 |
| Intel target list..... | 273 |
| 20.8 DSC targets..... | 273 |
| Accessing target options..... | 274 |
| DSC target options..... | 274 |
| DSC target list | 274 |
| 20.9 Target Of Interest (TOI) | 275 |
| OneShot TOI decay times | 275 |
| TOI OneShot settings..... | 276 |
| TOI transmission rates | 276 |
| TOI cancellation repeat..... | 276 |
| TOI position updates | 276 |
| Accessing target options..... | 276 |
| TOI options..... | 277 |
| TOI list | 277 |

| | |
|--|-----|
| 20.10 First responder AIS modes..... | 278 |
| AIS mode status icons | 278 |
| Blue Force Tracking..... | 278 |
| 20.11 SITREP (Situation report)..... | 279 |
| 20.12 SAR pattern receipt..... | 279 |
| 20.13 Messaging..... | 280 |
| Message inbox..... | 280 |
| New broadcast..... | 281 |
| New direct message..... | 281 |
| Reply to messages..... | 281 |
| Onscreen keyboard | 281 |
| Message symbols..... | 282 |
| 20.14 Import and export Waypoints and Routes over NMEA networks | 282 |
| Importing Waypoints or Routes over NMEA 2000 | 283 |
| Importing waypoints or routes over NMEA 0183..... | 283 |
| Exporting waypoints or routes over NMEA 0183..... | 285 |

| | |
|---------------------------------------|------------|
| CHAPTER 21 DASHBOARD APP | 287 |
| 21.1 Dashboard app overview | 288 |
| Dashboard app controls | 288 |
| Switching data page..... | 288 |
| Selecting Data pages to display | 288 |
| 21.2 Default data pages..... | 289 |

| | | | |
|--|------------|---|------------|
| 21.3 Customizing existing Data pages..... | 289 | Troll mode..... | 309 |
| Data overlay and Sidebar data items..... | 289 | 22.6 Settings..... | 309 |
| 21.4 Dashboard settings menu | 294 | Fault codes..... | 309 |
| 21.5 CZone plug and play | 296 | Maintenance | 309 |
| Creating CZone digital switching pages | | Advanced..... | 310 |
| automatically..... | 296 | CHAPTER 23 MERCURY VESSELVIEW APP..... | 311 |
| 21.6 Navigation and Sailing dials | 297 | 23.1 VesselView app overview | 312 |
| Sailing dials for laylines | 298 | System status | 313 |
| Sailing data items..... | 298 | Engine warning messages..... | 313 |
| Race Start data items | 298 | Mercury SmartCraft integration helm | |
| CHAPTER 22 YAMAHA APP | 300 | grouping | 313 |
| 22.1 Yamaha engine gateway selection | 301 | Information messages..... | 314 |
| Compatible Yamaha gateways | 301 | 23.2 VesselView Sidebar..... | 314 |
| 22.2 Yamaha HDMI overview | 301 | 23.3 Sport exhaust | 314 |
| 22.3 Yamaha app overview | 301 | 23.4 Steering angle indicator | 315 |
| Requirements | 301 | 23.5 Engine data page..... | 315 |
| Yamaha app controls | 302 | 23.6 Faults | 316 |
| Switching data page..... | 302 | Fault code history | 316 |
| 22.4 Customizing Data pages..... | 302 | On Board Diagnostics (OBD)..... | 316 |
| Available data items | 302 | CHAPTER 24 VIDEO APP | 317 |
| 22.5 Engine page..... | 306 | 24.1 Video app overview..... | 318 |
| Engines | 306 | Video app pages..... | 318 |
| Transmission | 307 | Renaming video feeds..... | 318 |
| Status and warning indicators | 307 | Video app controls..... | 319 |
| Tanks | 308 | Pan, Tilt, Zoom (PTZ) camera controls..... | 319 |
| Engine trim | 308 | 24.2 Thermal camera screen overview..... | 319 |

| | | | |
|--|------------|---|------------|
| 24.3 Opening the Video app..... | 320 | AR200 calibration settings..... | 342 |
| Selecting a video feed..... | 321 | Continual monitoring and adaptation | 343 |
| Dual streaming..... | 321 | Compass lock..... | 343 |
| 24.4 Video app settings | 322 | CHAPTER 26 AUDIO APP..... | 344 |
| 24.5 Maritime (M-Series) camera compatibility..... | 325 | 26.1 Audio app overview..... | 345 |
| CHAPTER 25 CLEARCRUISE (OBJECT DETECTION | | Compatible entertainment systems | 345 |
| / VIDEO ANALYTICS, AND AUGMENTED | | Audio app controls..... | 346 |
| REALITY)..... | 330 | Audio sidebar | 348 |
| 25.1 ClearCruise™ features..... | 331 | 26.2 Opening the Audio app..... | 348 |
| 25.2 Camera setup..... | 332 | 26.3 Getting started | 350 |
| Fixed camera calibration..... | 332 | Selecting an audio zone | 350 |
| Pan and Tilt camera calibration..... | 333 | Selecting an audio source..... | 350 |
| 25.3 AR200 setup for Augmented Reality..... | 334 | Muting and unmuting | 350 |
| 25.4 ClearCruise™ Object Detection (Video | | Browsing for tracks | 350 |
| Analytics) overview | 335 | Browsing for stations / channels..... | 351 |
| ClearCruise settings (Object Detection / Video | | Saving presets | 351 |
| Analytics)..... | 335 | Powering off entertainment systems | 351 |
| 25.5 Augmented Reality (AR) overview | 336 | 26.4 Audio app menu options | 351 |
| 25.6 Augmented Reality flags..... | 337 | Audio app settings menu | 352 |
| Selected flags..... | 337 | Adjusting balance and fade controls | 353 |
| Goto flag..... | 339 | Adjusting multi-zone controls | 354 |
| 25.7 ClearCruise settings (Augmented | | SR200 diagnostics mode | 354 |
| Reality)..... | 339 | CHAPTER 27 PDF VIEWER APP..... | 356 |
| Range limit..... | 340 | 27.1 PDF Viewer app overview..... | 357 |
| 25.8 Roll correction | 340 | 27.2 Opening PDF files..... | 357 |
| 25.9 AR200 Calibration (Linearization) | 342 | 27.3 PDF Viewer controls | 357 |
| Magnetic deviation..... | 342 | | |

| | |
|--|------------|
| 27.4 Searching a PDF | 358 |
| CHAPTER 28 UAV (UNMANNED AERIAL VEHICLE) APP..... | 359 |
| 28.1 UAV disclaimer | 360 |
| 28.2 UAV app overview | 360 |
| Compatible UAVs | 361 |
| UAV sport mode..... | 361 |
| UAV app settings menu | 361 |
| 28.3 UAV pre-requisites | 362 |
| Removing the RC cable..... | 362 |
| UAV controller connection..... | 362 |
| 28.4 UAV precautions | 363 |
| No-fly zones | 363 |
| 28.5 Getting started | 363 |
| 28.6 UAV app page | 364 |
| 28.7 Opening the UAV app..... | 364 |
| 28.8 Launching the UAV | 366 |
| 28.9 Controlling the UAV in flight..... | 366 |
| 28.10 Retrieving your UAV | 366 |
| 28.11 Disconnect UAV remote controller from MFD | 367 |
| 28.12 Fish on / Circle me mode | 367 |
| 28.13 UAV Chart integration | 368 |
| Showing or hiding the UAV icon | 369 |
| Performing a UAV Goto | 369 |
| 28.14 UAV Emergency procedures..... | 369 |

| | |
|--|------------|
| CHAPTER 29 PARTNER INTEGRATION AND THIRD-PARTY APPS | 371 |
| 29.1 Partner integration | 372 |
| 29.2 LightHouse third-party apps..... | 372 |
| 29.3 App launcher | 372 |
| Installing Lighthouse third-party apps | 373 |
| Removing an apk app..... | 373 |
| 29.4 Interface shortcuts on the homescreen..... | 374 |
| 29.5 Internet connection..... | 374 |
| Connecting to the internet..... | 374 |
| Wi-Fi settings | 374 |
| 29.6 Bluetooth speaker set up | 375 |
| Enabling and disabling Bluetooth | 375 |
| Bluetooth Settings..... | 375 |
| Pairing a Bluetooth speaker | 376 |
| Bluetooth volume control | 376 |
| CHAPTER 30 MOBILE APP SUPPORT | 377 |
| 30.1 Raymarine mobile apps..... | 378 |
| 30.2 Connecting an Android device to the display | 378 |
| 30.3 Connecting an iOS device to the display | 379 |
| 30.4 RayConnect..... | 379 |
| LightHouse charts | 379 |
| Account settings | 381 |
| 30.5 Fishidy sync..... | 381 |
| Enable sync..... | 382 |
| Disable sync..... | 382 |

| | | | |
|---|------------|---|-----|
| 30.6 Navionics plotter sync..... | 383 | APPENDIX A NMEA 0183 SENTENCE SUPPORT | 405 |
| 30.7 Controlling your MFD using RayControl | 383 | APPENDIX B NMEA 2000 PGN SUPPORT | 406 |
| 30.8 Controlling your MFD using RayRemote | 383 | APPENDIX C HARDWARE AND SOFTWARE COMPATIBILITY | 408 |
| 30.9 Viewing your MFD screen using RayView..... | 384 | APPENDIX D DOCUMENT CHANGE HISTORY | 408 |
| CHAPTER 31 TROUBLESHOOTING | 385 | | |
| 31.1 Troubleshooting | 386 | | |
| 31.2 Diagnostic product information..... | 386 | | |
| Saving product information | 386 | | |
| 31.3 Power up troubleshooting..... | 387 | | |
| Performing a power on reset — Axiom™ | 387 | | |
| Performing a power on reset - Axiom Pro..... | 388 | | |
| Performing a Power on Reset - eS and gS Series MFDs..... | 388 | | |
| 31.4 Radar troubleshooting | 389 | | |
| 31.5 GNSS (GPS) troubleshooting..... | 390 | | |
| 31.6 Sonar troubleshooting | 390 | | |
| 31.7 Camera troubleshooting | 393 | | |
| 31.8 Augmented Reality (AR) Troubleshooting | 395 | | |
| 31.9 Wi-Fi troubleshooting..... | 396 | | |
| 31.10 Wireless display troubleshooting..... | 398 | | |
| 31.11 Data troubleshooting | 399 | | |
| 31.12 Touchscreen troubleshooting..... | 399 | | |
| CHAPTER 32 TECHNICAL SUPPORT | 400 | | |
| 32.1 Raymarine product support and servicing..... | 401 | | |
| Viewing product information..... | 402 | | |
| Remote Support via AnyDesk..... | 402 | | |
| 32.2 Learning resources | 402 | | |

CHAPTER 1: IMPORTANT INFORMATION

Safety warnings



Warning: Ensure safe navigation

This product is intended only as an aid to navigation and must never be used in preference to sound navigational judgment. Only official government charts and notices to mariners contain all the current information needed for safe navigation, and the captain is responsible for their prudent use. It is the user's responsibility to use official government charts, notices to mariners, caution and proper navigational skill when operating this or any other Raymarine product.



Warning: Minimum Safe Depth, Width and Height

Depending on cartography vendor, the **Minimum safe depth**, **Minimum safe width**, and **Minimum safe height** settings that you specify for your vessel will be used during automatic route generation. These settings will ensure that automatic routes are not generated in areas that are unsuitable for your vessel.

Minimum safe settings are user-defined calculations. As these calculations are outside of Raymarine's control, Raymarine will not be held liable for any damage, physical or otherwise, resulting from the use of the automatic route generation feature or the **Minimum safe depth**, **Minimum safe width** or **Minimum safe height** settings.



Warning: Automatic route generation

- Do NOT rely on automatically generated routes to guarantee that the route is safe to navigate. You MUST review the suggested route carefully and where necessary edit the route before following it.
- If a waypoint within any automatically generated route is added or moved the Automatic route generation algorithm will NOT be used, extra care should be taken to ensure that the route leg and any moved waypoints are safe to navigate.



Warning: Traffic separation

Automatic route generation features do not adhere to the Traffic Separation Schemes identified in Rule 10 of the *International Regulations for Preventing Collisions at Sea 1972* as amended.

Raymarine® therefore recommends that you do NOT use Automatic route generation to create any part of a route which will cross traffic lanes or pass near to traffic separation lines. In these situations Automatic route generation MUST be switched Off and the route or route leg MUST be built manually, ensuring compliance to the rules laid out in the above regulations.



Warning: Minimum Sonar Depth

Accurate bottom tracking can be unreliable in depths shallower than 0.8 m/2.62 ft. When operating at or below this depth be cautious of misleading sonar returns or false bottom tracking.



Warning: Radar transmission safety

The radar scanner transmits electromagnetic energy. Ensure all personnel are clear of the scanner when the radar is transmitting.



Warning: Sonar operation

- NEVER touch the transducer face when the sonar is powered on.
- SWITCH OFF the sonar if divers are likely to be within 7.6 m (25 ft) of the transducer.

Product warnings

Electronic chart data

Raymarine does not warrant the accuracy of such information, and is not responsible for damages or injuries caused by errors in chart data or information utilized by the product and supplied by third parties. Use of electronic charts provided by third parties is subject to the supplier's End-User License Agreement (EULA).

Regulatory notices

End-User License Agreements (EULAs)

The EULAs for third-party electronic charts are available via the following links:

- **LightHouse charts:** — [LightHouse Navigation Charts EULA 84231-3-EN.pdf](#)
- **Navionics charts:** <https://www.navionics.com/usa/la>
- **CMAP charts:** <https://www.c-map.com/legal/terms-and-conditions-eula>

Open source license agreements

This product is subject to certain open source license agreements. Copies of the license agreements can be found on the Raymarine website: www.raymarine.com/manuals.

Regulatory approvals

Regulatory approvals are available to view on your MFD from the settings menu, **Homescreen > Settings > Regulatory approvals**

Warranty registration

To register your Raymarine product ownership, please visit www.raymarine.com and register online.

It is important that you register your product to receive full warranty benefits. Your unit package includes a bar code label indicating the serial number of the unit. You will need this serial number when registering your product online. You should retain the label for future reference.

Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, Raymarine cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice. As a result, Raymarine cannot accept liability for any differences between the product and this document. Please check the Raymarine website (www.raymarine.com) to ensure you have the most up-to-date version(s) of the documentation for your product.

CHAPTER 2: DOCUMENT AND PRODUCT INFORMATION

CHAPTER CONTENTS

- 2.1 Product documentation — page 21
- 2.2 Document illustrations and screenshots — page 21
- 2.3 Applicable software version — page 21
- 2.4 Compatible MFDs — page 22
- 2.5 New software features — page 22

2.1 Product documentation

The following documentation is applicable to your product:

Applicable documents

- **81406** — LightHouse 4 operation instructions (This document)
- **87298** — Axiom MFD Installation instructions
- **87219** — Axiom Pro MFD Installation instructions
- **87344** — Axiom XL MFD Installation instructions
- **81367** — RMK-10 Remote Keypad Installation and operation instructions
- **81351** — RMK-9 Remote Keypad Installation and operation instructions

This and other Raymarine product documents are available to download in PDF format from www.raymarine.com.

Related documents

- **81370** — LightHouse 3 operation instructions
- **81405** — First responder LightHouse 3 operation instructions

User manuals Print Shop

Raymarine provides a Print Shop service, enabling you to purchase a high-quality, professionally-printed manual for your Raymarine product.

Printed manuals are ideal for keeping onboard your vessel, as a useful source of reference whenever you need assistance with your Raymarine product.

Visit <http://www.raymarine.co.uk/view/?id=5175> to order a printed manual, delivered directly to your door.

For further information about the Print Shop, please visit the Print Shop FAQ pages: <http://www.raymarine.co.uk/view/?id=5751>.

Note:

- Accepted methods of payment for printed manuals are credit cards and PayPal.
- Printed manuals can be shipped worldwide.
- Further manuals will be added to the Print Shop over the coming months for both new and legacy products.
- Raymarine user manuals are also available to download free-of-charge from the Raymarine website, in the popular PDF format. These PDF files can be viewed on a PC / laptop, tablet, smartphone, or on the latest generation of Raymarine multifunction displays.


2.2 Document illustrations and screenshots

Note:

Whilst care is taken to ensure that the illustrations and screenshots provided in this document portray the latest hardware and software versions available, where differences are purely aesthetic some illustrations and screenshots may depict an older version of hardware or software.

2.3 Applicable software version

This handbook is applicable to Multifunction Display (MFD) operating system LightHouse™ version 4.0.70.

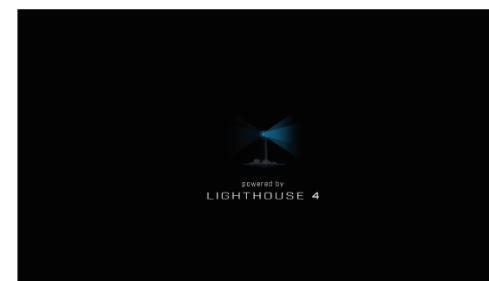


Product software is updated regularly to add new features and improve existing functionality. Check the website to obtain the latest software and user manuals:

- www.raymarine.com/software

- www.raymarine.com/manuals

2.4 Compatible MFDs

The LightHouse™ 4 operating system is compatible with the MFDs listed below.

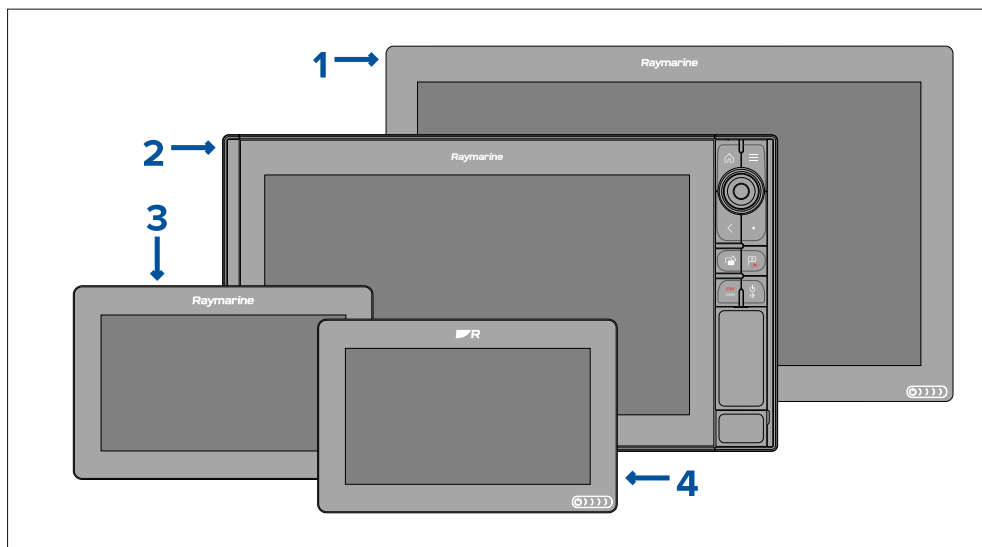

1. Axiom XL
2. Axiom Pro
3. Axiom
4. Axiom +

2.5 New software features

The following new features are available in LightHouse™ version 4.0.70, which were not available in previous versions of the LightHouse™ operating system.

Note:

When your MFD is upgraded to the LightHouse™ version 4.0.70 operating system (or higher), connected Raymarine sonar modules and RMK remotes will require updating to a software version that is compatible with the LightHouse™ 4 operating system. For details refer to: [p.23 — RMK and sonar module compatibility](#)

New features:

- Mercury VesselView features:
 - New VesselView steering angle indicator. For details refer to: [p.315 — Steering angle indicator](#)
 - New VesselView OBD indicator. For details refer to: [p.316 — On Board Diagnostics \(OBD\)](#)
 - New VesselView advanced engine data page. For details refer to: [p.315 — Engine data page](#)
- Sirius Fish Mapping:
 - New Fish mapping chart mode available on SR200 receivers. For details refer to: [p.196 — Chart app - Fish mapping mode](#)
 - Fish mapping and weather layers available in Fishing chart mode. For details refer to: [p.181 — Fishing intel menu](#)
- Sirius Weather features:
 - New Sea Surface Temperature (SST) transparency control. For details refer to: [p.207 — Sea surface temperature and Surface pressure layers](#)
 - New 10 nm range for weather watchbox. For details refer to: [p.211 — Weather settings menu](#)
 - New legend in weather mode. For details refer to: [p.202 — Weather mode main menu](#)
- Homescreen
 - Support for custom user background images for the startup screen (splashscreen) and homescreen. For details refer to: [p.88 — Splashscreen and background images](#)
 - Data widget. For details refer to: [p.64 — Homescreen data widget](#)

- Chart app
 - Added support for Imray electronic charts. For details refer to: [3rd party raster charts](#)
 - New route highlighting feature. For details refer to: [Route highlighting](#)
 - Added ability to view historical Navionics SonarChart Live in chart app. For details refer to: [p.171 — Depth settings menu](#)
 - Added Relief shading and SonarChart shading options to Navionics overlays. For details refer to: [p.168 — Layers settings menu](#)
 - Added ability to use Speed Over Ground (SOG) instead of Speed Through Water (STW) for heading vector: For details refer to: [p.130 — Vessel details](#)
- Fish detection algorithm improved to support CP100, CP370, CP470 and CP570 sonar modules. For details refer to: [p.233 — Fish detection](#)
- Added support for multi-zone volume controls for compatible JL Audio and Rockford Fosgate entertainment systems: For details refer to: [p.354 — Adjusting multi-zone controls](#)
- Spotify app will be removed when a factory reset is performed. For details refer to: [p.23 — Spotify app removal](#)
- Radar **Target expansion** setting has been renamed to **Expanded returns**. See: [p.264 — Preferences settings menu](#)

Spotify app removal

The version of the Spotify app installed on previous versions of LightHouse is no longer fully functional. Therefore, the Spotify app is no longer included with the LightHouse™ 4.0.70 operating system. The latest compatible version of the app can be downloaded from the LightHouse apps page of the website: <https://www.raymarine.eu/multifunction-displays/lighthouse3/lighthouse-apps/>

Before installing the new Spotify app, the old version must first be removed from your MFD.

For details on removing the app, refer to: [p.373 — Removing an apk app](#)

For details on installing a downloaded app, refer to: [p.373 — Installing Lighthouse third-party apps](#)

Note:

Performing a factory reset will automatically remove the older version of the Spotify app from your MFD.

RMK and sonar module compatibility

When your MFD is upgraded to the LightHouse™ version 4.0 operating system (or higher), connected Raymarine sonar modules and RMK remotes should be updated to the latest software versions to ensure that they can utilize the latest features and improvements.

RMK compatible software version

- **RMK-9** (A80217) — Bundle V20.0.8 (application V20.0.15 / platform V18.0.17).
- **RMK-10** (A80438 / T70293) — Bundle V20.0.8 (application V20.0.15 / platform V18.0.17).

Sonar module compatible software version

- **CP100** (E70204) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **CP200** (E70256) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **CP370** (E70297) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **CP470** (E70298) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **CP570** (E70258) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **RVX1000** (E70511) — V4.0.70 (same version number as MFD software).

CHAPTER 3: GENERAL INFORMATION


CHAPTER CONTENTS

- [3.1 Applications and integrations — page 25](#)
- [3.2 Menu types — page 25](#)
- [3.3 Setting controls — page 27](#)
- [3.4 Sidebar — page 27](#)
- [3.5 Data overlays — page 29](#)

3.1 Applications and integrations

LightHouse™ 4 MFDs support native LightHouse MFD apps, approved third-party apps, and also integrations with select partner hardware interfaces.

MFD apps

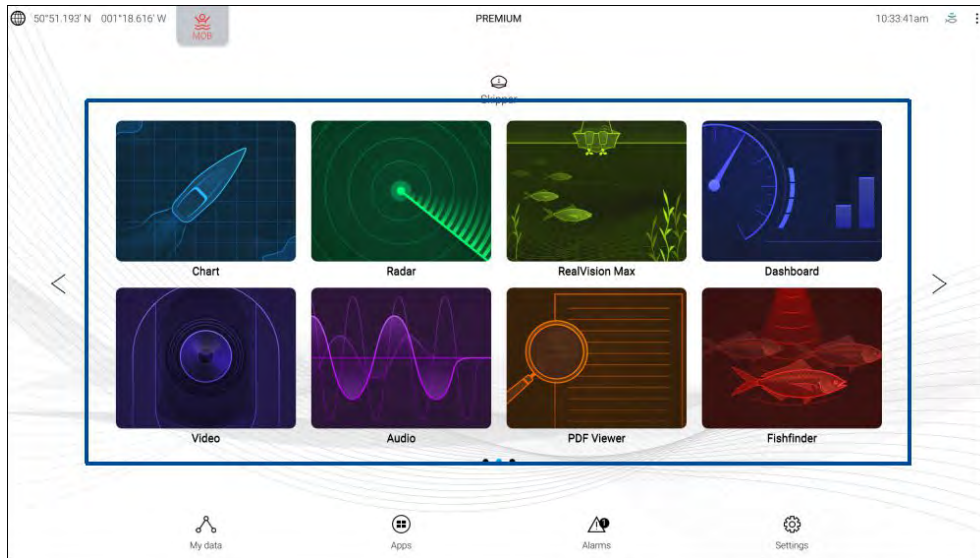

LightHouse MFD apps are an integral part of the operating system and are accessed using app page icons available on the Homescreen. App page icons can contain one fullscreen app, or multiple apps in a splitscreen arrangement.

For more details about LightHouse MFD apps, refer to: [p.61 – MFD Apps](#)

LightHouse™ third-party apps



LightHouse™ third-party apps are apps that are developed entirely by third parties, and are approved for use on the MFD by Raymarine. These apps are accessed from the LightHouse app launcher found on the Homescreen.

For more details about third-party apps, refer to: [p.372 – LightHouse third-party apps](#)

Partner integrations


The LightHouse™ operating system also enables partner organizations to integrate the user interface of their hardware so it can be accessed using the MFD. When compatible partner hardware is detected, icons can be displayed on the Homescreen and in the App launcher.

For more details about partner integration, refer to: [p.372 – Partner integration](#)

3.2 Menu types

The LightHouse™ operating system uses several types of menus which contain settings and options for your MFD.

MFD app main menu

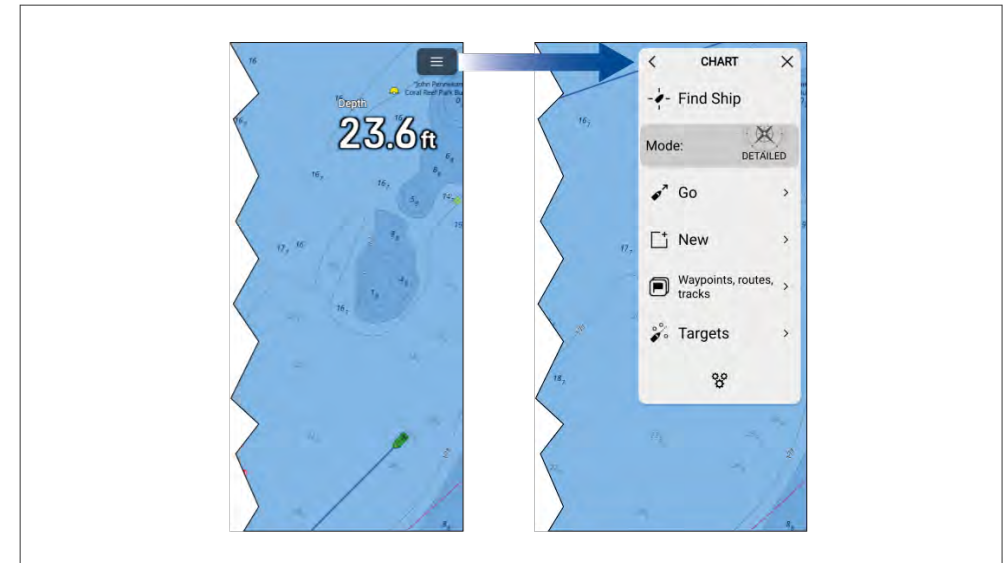


Each MFD app includes a main menu that provides access to the app's settings and functions.

The MFD app main menu is accessed by selecting the menu icon located in the top right of the screen.

Selecting the < (Back), X (Close) icons or selecting an area of the screen away from the menu, will close the menu.

Selecting a menu item with a > (right arrow) will open a settings page or other menu options related to that item.

Settings pages

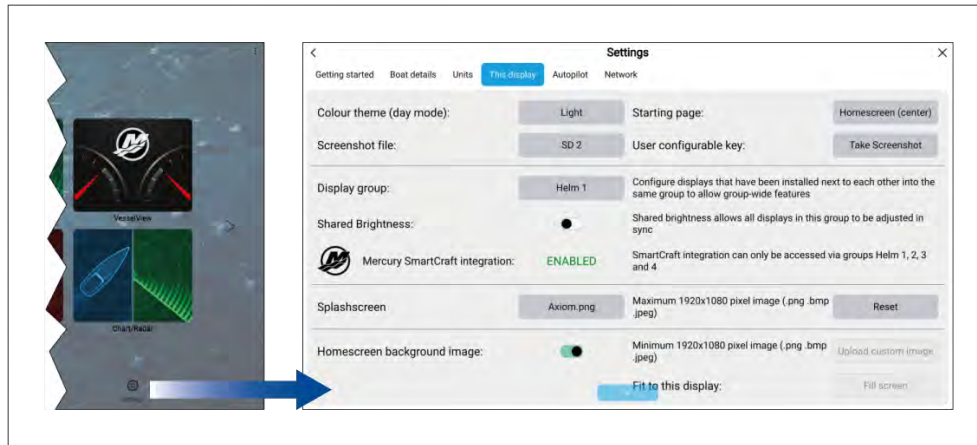


Settings pages are fullscreen pages containing settings and menu options. Settings pages are usually laid out using tabs to group similar setting together.

Settings pages are accessed by selecting the **Settings** icon located on the bottom right of the homescreen or the bottom of each MFD app main menu. Other settings pages are also available by selecting menu items that have a > (right arrow) located on the right side of the menu option.

Selecting tab titles in settings pages will display the contents for that tab.

Selecting the < (Back) or X (Close) icons will close the menu.

Context menus

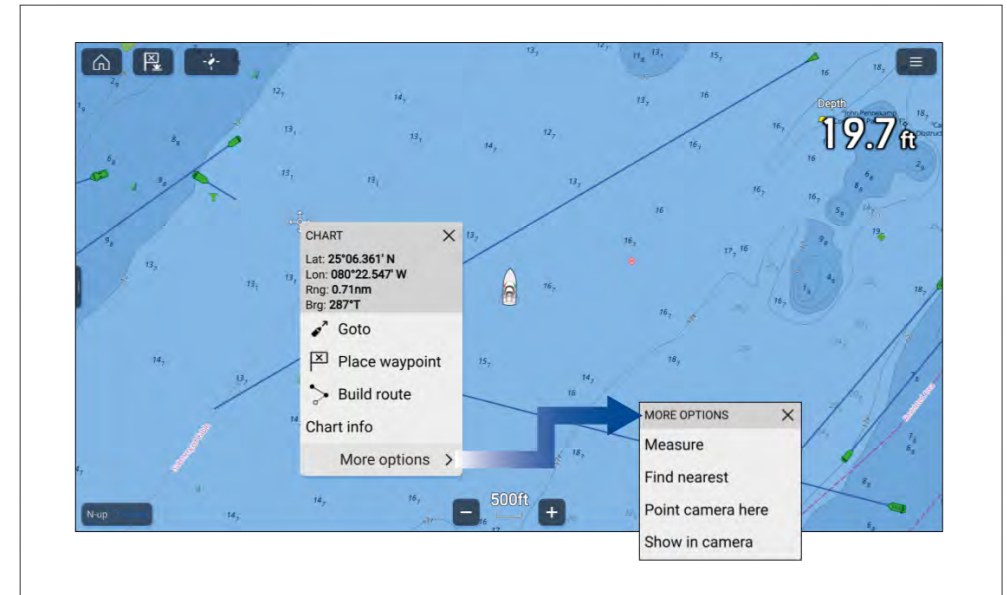


Context menus are available in MFD apps. Context menus are accessed by pressing and holding (highlighting with cursor and pressing **OK** button) on an onscreen object or location within an MFD app.

Context menus provide context-sensitive information and options.

Selecting **more options** will display further menu options.

Selecting X (Close) or selecting an area of the screen away from the menu will close the menu.

Pop-over menus

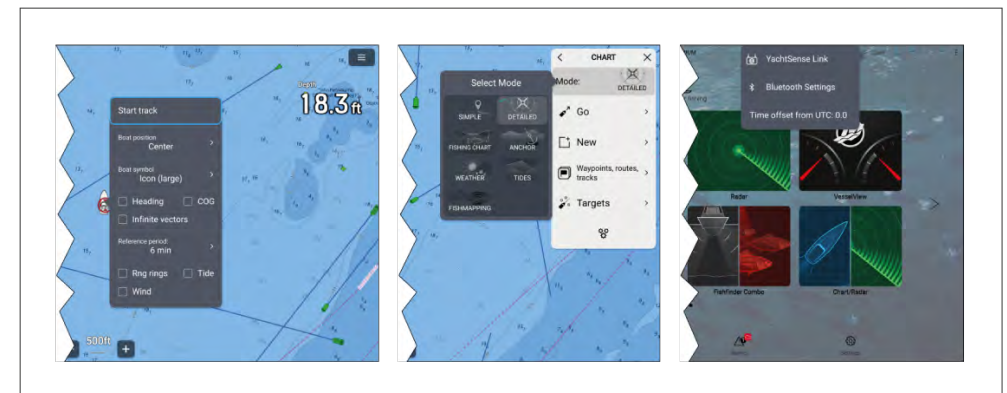


Pop-over menus are available on the homescreen, in MFD apps and from settings pages. Pop-over menus provide access to further menu options and settings.

Selecting an area of the screen away from the menu will close the menu.

3.3 Setting controls

Various controls are available to aid settings adjustments.

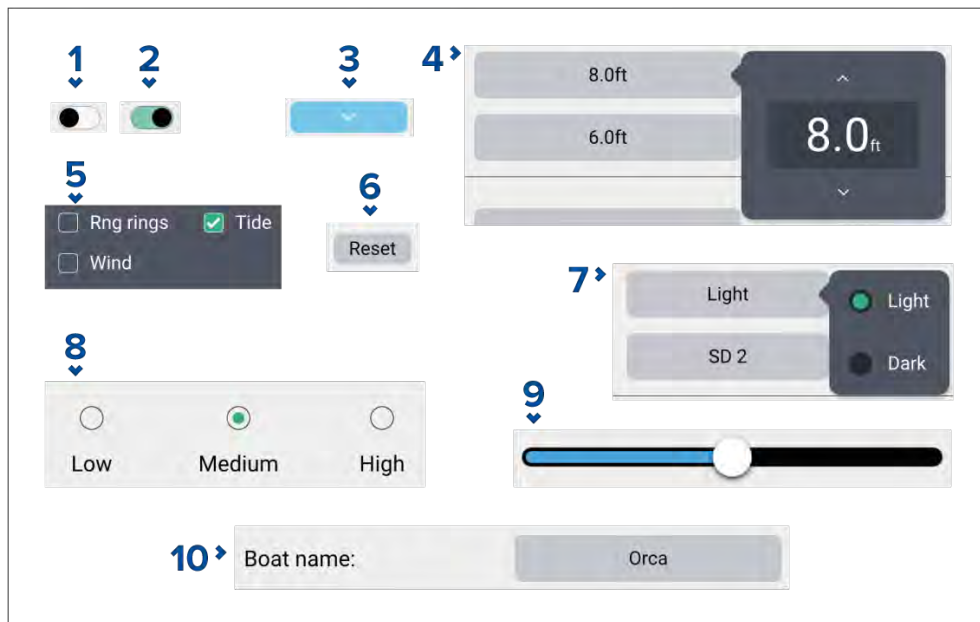

1. **Toggle switch** in off state (i.e.: disabled). Select to enable option.
2. **Toggle switch** in on state (i.e.: enabled). Select to disable option.
3. **Page down button** — selecting the page down button will scroll the current menu or settings page (when the page down button is visible you can also swipe to scroll up/down).
4. **Setting field numeric value** — selecting will display the numeric adjustment control you can then use the up and down arrows to adjust the value.
5. **Tick boxes** — when a tick is displayed in the box the option is enabled. Select the box to enabled and disable the option.

6. **Setting button** — selecting the button will perform the related procedure or acknowledge a notification.
7. **Setting field options** — selecting will display a pop-over menu with the available options, selecting an option will change selection to that option.
8. **Radio buttons** — selecting an option will change selection to that option.
9. **Slider control** — usually used for setting percentages, select and slide circle to adjust value.
10. **Setting field text value** — selecting will display the onscreen keyboard you can then enter the desired text.

3.4 Sidebar

The Sidebar is available in all app pages that are accessed from the Homescreen. The sidebar provides quick access to system data.

The sidebar is accessed using the touchscreen.



1. A short left to right swipe when touching the sidebar control on the left edge of the screen will display the sidebar. A long swipe will display the sidebar and sidebar selector
2. With the sidebar open a left to right swipe on the sidebar will open the sidebar selector. A right to left swipe will close the sidebar.

- With the sidebar selector displayed you can select a sidebar icon to display that sidebar. A right to left swipe will close the sidebar selector. The sidebar selector will automatically close after approximately 10 seconds of inactivity.
- If you want the sidebar to be permanently displayed, select and hold on a sidebar icon and then select the pin icon. When pinned, the sidebar cannot be closed by swiping and must be unpinned before you can close the sidebar.



Selecting the 'X' located on the top right of the sidebar will close the sidebar and sidebar selector.




The Sidebar is opened automatically in the Chart app when a **Goto** or **Follow** action is initiated.



Sidebar selector

Selecting an icon from the sidebar selector will display that sidebar.

The following sidebars are available:

| | |
|---|---|
|  | <p>Data 1 — The Data 1 sidebar is a default sidebar that is always available. The default data items are:</p> <ul style="list-style-type: none"> Vessel position (Lat/Lon) COG (Course Over ground) SOG (Speed Over ground) BTW (Bearing To Waypoint) DTW (Distance To Waypoint) Rudder bar (rudder position) <p>The data items can be customized.</p> |
|  | <p>Data 2 — The Data 2 sidebar is a default sidebar that is always available. The default data items are:</p> <ul style="list-style-type: none"> Active waypoint (Waypoint name) Wpt TTG (Waypoint Time To Go) Wpt ETA (Waypoint Estimated Time of Arrival) BTW (Bearing To Waypoint) DTW (Distance To Waypoint) Rudder bar (rudder position) |

| | |
|---|---|
|  | <p>The data items can be customized.</p> <p>Search — The Search sidebar is a default sidebar that is always available. The sidebar provides data and options relevant for following SAR (Search And Rescue) patterns. The available data items are:</p> <ul style="list-style-type: none"> Brg to CSP (Bearing to Commence Search Point) Leg 1 Leg 2 Target SOG TTP COG Advance wpt XTE SOG Stop Route Rudder bar (rudder position) <p>The data items cannot be customized</p> <p>Note:</p> <p>Brg to CSP, Leg 1 and leg 2 will update as your route progresses to show current leg and subsequent 2 legs.</p> |
|  | <p>Pilot — The Pilot sidebar is available when the MFD has Pilot control enabled. Refer to: p.101 — Autopilot control. The data and options displayed on the sidebar are dependent on autopilot mode. Refer to: p.102 — Pilot sidebar. The displayed data and options cannot be customized.</p> |
|  | <p>Race start — The Race start sidebar is available when a sailing activity is chosen during the MFD's initial startup wizard. For details of the data and options available refer to: p.194 — Race sidebar. The displayed data and options cannot be customized.</p> |
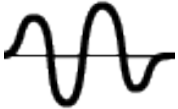
| | |
|---|--|
|  | <p>Audio — The Audio sidebar is available when compatible audio equipment is connected. For details of the options available refer to: p.348 — Audio sidebar The displayed options cannot be customized.</p> |
|  | <p>Mercury VesselView — The Mercury sidebar is available when the MFD is integrated with Mercury VesselView engines. For details of the options available refer to: p.314 — VesselView Sidebar The displayed data cannot be customized.</p> |

Customizing data sidebars

The data displayed in sidebars **Data 1** and **Data 2** can be customized by following the steps below.

With the **Data 1** or **Data 2** sidebar displayed:

1. Press and hold on the data item you want to customize.
2. Select **Edit** from the pop-over menu.
3. Select the data item that you want to be displayed.

3.5 Data overlays

Data overlays can be used to display system data on homescreen app pages.

Up to 4 data overlays can be added to each app page. Data overlays are not available for the Mercury VesselView app or for fullscreen partner integration interface pages.

Data overlays can be added, customized or deleted by selecting **Edit data overlays** from the app's **Page settings** menu: **Menu > Settings > Page settings > Edit data overlays**.

In edit mode you can customize existing data overlays by selecting it to display the pop-over menu.


From the pop-over menu the following options are available:

- Change the data item in a data overlay by selecting **Edit** and choosing a new data item from the list.
- Change the location of a data overlay by selecting **Move** and then moving it to a new location.

- Change the size of a data overlay by selecting **Resize** and choosing either **Small**, **Medium**, **Large** or **Extra large**.
- Remove a data overlay by selecting **Delete**

Adding a data overlay

New data overlays can be added following the steps below.

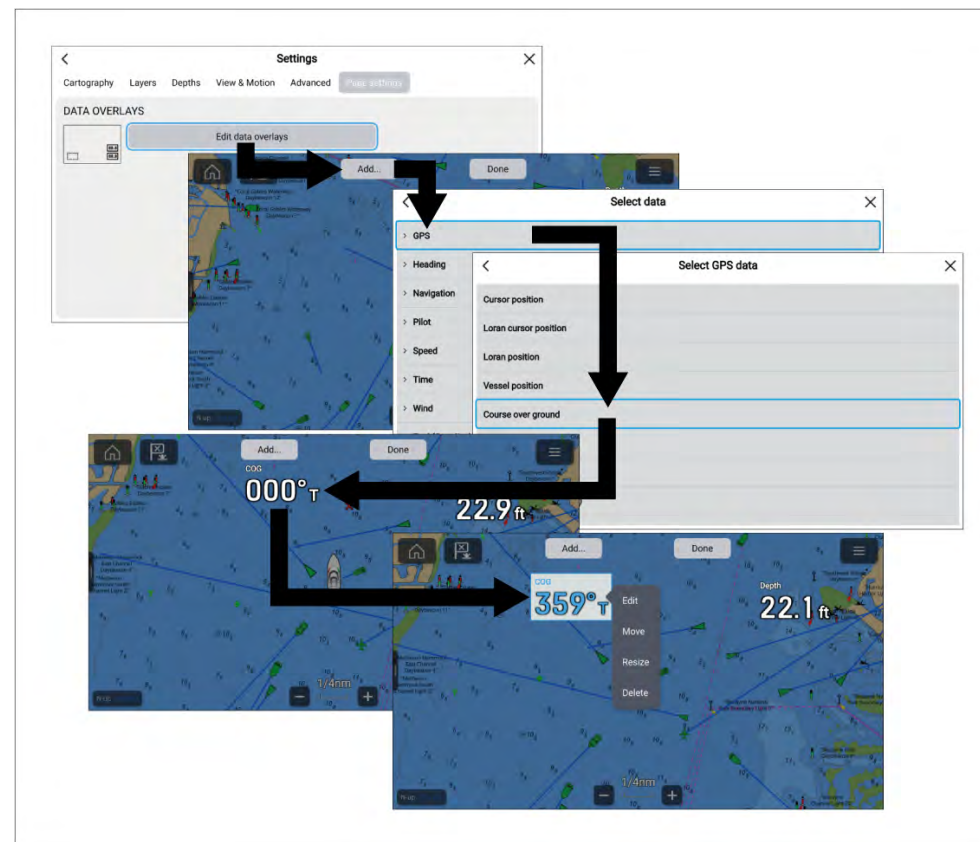

1. Select **Edit data overlays** from the **Page settings** menu: **Menu > Settings > Page settings..**
2. Select **Add** or select and hold on a location and select **Add new**.
3. Select a data category from the list.
4. Select a data item from the list.
5. If required select and hold on the new data overlay and drag it to a new location.

6. Select **Done** to confirm the new data overlay(s).

Data overlay and Sidebar data items

The following data items are available for display in the Dashboard app, in Data overlays and Sidebars.

Note:

- For data to be available compatible sensors and transducers are required to be connected to the same data network as the MFD.
- Standard NMEA 2000 PGNs are listed next to the relevant data items.
- Supported Raymarine and 3rd party proprietary messages are not listed.

| Data category | Data items |
|--|--|
| Battery Battery related data. Data items are available for the number of batteries specified in the Boat details settings: Homescreen > Settings > Boat details > Num of batteries . | <ul style="list-style-type: none"> • Battery voltage (PGN 127508) • Battery current (PGN 127508) • Time till zero charge (PGN 127506) • Battery temperature (PGN 127508) • State of charge (PGN 127506) |
| Boat <hr/> Note: <ul style="list-style-type: none"> • (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> • Roll (PGN 127257) • Mast rotation • Pitch (PGN 127257) • Rate of turn (PGN 127251) • Trim tabs⁽¹⁾ (PGN 130576) |
| Depth Depth related data. | <ul style="list-style-type: none"> • Maximum depth • Minimum depth • Depth (PGN 128267) |

| Data category | Data items |
|--|--|
| Display Data relating to the voltage supplied to the MFD. <hr/> Note: <ul style="list-style-type: none"> • (1) Data item is only available in Sidebars and data overlays. • (2) Data item is only available in Sidebars. | <ul style="list-style-type: none"> • Supply voltage⁽¹⁾ • Supply voltage level⁽²⁾ |
| Distance <hr/> Note: <ul style="list-style-type: none"> • (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> • Distance to line • Distance to tack • Trip (manual) • Trip (month) • Trip (day) • Trip (season) • Line bias • Ground log • Trip (PGN 128275) • Log (PGN 128275) • Log Trip⁽¹⁾ |

| Data category | Data items |
|---|--|
| <p>Engine Engine related data requires data connection to compatible vessel engine(s). Data items are available for the number of engines specified in the Boat details settings: Homescreen > Settings > Boat details > Num of engines</p> | <ul style="list-style-type: none"> • Engine trip (PGN 127497) • Trans oil temp (PGN 127493) • Fuel flow (avg) (PGN 127497) • Trans oil pressure (PGN 127493) • Gear (PGN 127493) • Engine load (PGN 127489) • Alternator (PGN 127489) • Oil temperature (PGN 127489) • Oil pressure (PGN 127489) • Engine RPM (PGN 127488) • Engine hours (PGN 127489) • Coolant temperature (PGN 127489) • Coolant pressure (PGN 127489) • Boost pressure (PGN 127488) • Fuel pressure (PGN 127489) • Fuel flow (inst) (PGN 127489) • Fuel flow (PGN 127489) • Tilt position (PGN 127488) |
| <p>Fuel Data related to fuel economy. An 'All tanks' category is available when more than 1 fuel tank has been specified that combines data from all fuel tanks.</p> | <ul style="list-style-type: none"> • Est. fuel remaining (PGN 127496) • Total fuel (vol) (PGN 127505) • (vol) • (%) • Total fuel (%) • Engine economy total (PGN 127497) • Time to empty (PGN 127496) • Distance to empty (PGN 127496) |

| Data category | Data items |
|--|---|
| | <ul style="list-style-type: none"> • Fuel flow total (PGN 127497) • Fuel used (trip) (PGN 127497) • Fuel used (season) (PGN 127497) |
| <p>Environment</p> <p>Note:</p> <ul style="list-style-type: none"> • (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> • Drift (PGN 129291) • True wind chill • App wind chill • Set (PGN 129291) • Max water temp • Min water temp • Water temp (PGN 130310 / 130311 / 130312 / 130316) • Max air temp • Min air temp • Humidity (PGN 130311 / 130313) • Dew point • Barometric pressure (PGN 130310) • Air temp (PGN 130310) • Sunset Sunrise⁽¹⁾ • Set Drift⁽¹⁾ (PGN 129291) • Water & Supply⁽¹⁾ |
| <p>Inside Environment Data items are available for the number of interior environment sensors specified in the Boat details settings: Homescreen > Settings > Boat details > Num of interior environment sensors.</p> | <ul style="list-style-type: none"> • Inside humidity (PGN 130313) • Inside temperature (PGN 130316) |
| <p>GPS</p> | <ul style="list-style-type: none"> • Cursor position |

| Data category | Data items |
|---|--|
| <p>Note:</p> <ul style="list-style-type: none"> (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> Loran cursor position Loran position Vessel position (PGN 129025 / PGN 129029) SOG (Speed Over Ground) (PGN 129026) Course over ground (PGN 129026) Average SOG Maximum SOG COG SOG (Course Over Ground) (Speed Over ground)⁽¹⁾ (PGN 129026) |
| <p>Heading</p> <p>Note:</p> <ul style="list-style-type: none"> (1) Steer to layline is only available when boating activity is set to Sailing in the initial MFD start up wizard. (2) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> Steer to layline⁽¹⁾ Heading error Tack heading Locked heading Heading (PGN 127250) Locked heading & Error⁽²⁾ Heading & Speed⁽²⁾ |
| <p>Navigation</p> <p>Note:</p> <ul style="list-style-type: none"> (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> Sailing Wpt TTG (Waypoint Time To Go) Sailing Dist to Wpt (Distance To Waypoint) Next waypoint Loran target position Cross tack error Waypoint TTG (Time To Go) Route TTG (Time To Go) |

| Data category | Data items |
|---------------|--|
| | <ul style="list-style-type: none"> Target position Waypoint ETA (time & date) (Estimated Time of Arrival) Route ETA (time & date) (Estimated Time of Arrival) Distance to waypoint Distance made good Course made good Bearing Origin to Waypoint Bearing to waypoint Active waypoint Route ETA (Estimated Time of Arrival) Waypoint ETA (Estimated Time of Arrival) CTS & DTW⁽¹⁾ (Course To Steer & Distance To Waypoint) CMG & VMG⁽¹⁾ (Course Made Good & Velocity Made Good) BTW & DTW⁽¹⁾ (Bearing To Waypoint & Distance To Waypoint) Waypoint info⁽¹⁾ CMG & DMG⁽¹⁾ (Course Made Good & Distance Made Good) |
| Pilot | <ul style="list-style-type: none"> Rudder angle (PGN 127245) |
| Speed | <ul style="list-style-type: none"> VMG to waypoint (Velocity Made Good) |

| Data category | Data items |
|--|---|
| <p>Note:</p> <ul style="list-style-type: none"> (1) Polar performance is only available when boating activity is set to Sailing in the initial MFD start up wizard. | <ul style="list-style-type: none"> Speed thru water (PGN 128259) VMG to windward (Velocity Made Good) Avg speed Max speed Target speed Polar performance⁽¹⁾ |
| <p>Time</p> <p>Note:</p> <ul style="list-style-type: none"> (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> Sunset time Sunrise time UTC date (Universal Time Coordinated) (PGN 129033) UTC time (Universal Time Coordinated) (PGN 129033) Race timer⁽¹⁾ Date (PGN 126992) Time (PGN 126992) Time to tack Time to burn |
| <p>Wind</p> <p>Note:</p> <ul style="list-style-type: none"> (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> True wind angle (PGN 130306) Cardinal Beaufort Ground wind direction (PGN 130306) Ground wind speed (PGN 130306) True wind direction (PGN 130306) Minimum true wind angle Maximum true wind angle Minimum true wind speed |

| Data category | Data items |
|------------------------|---|
| | <ul style="list-style-type: none"> True wind speed (PGN 130306) Maximum app wind speed App wind speed (PGN 130306) Minimum app wind angle App wind angle (PGN 130306) Maximum app wind angle Minimum app wind speed Minimum true wind speed GWD & Beaufort⁽¹⁾ (Ground Wind Direction) GWS & GWD⁽¹⁾ (Ground Wind Speed & Ground Wind Direction) AWA & VMG⁽¹⁾ (Apparent Wind Angle & Velocity Made Good) AWA & AWS⁽¹⁾ (Apparent Wind Angle & Apparent Wind Speed) TWA & VMG wind⁽¹⁾ (True Wind Angle & Velocity Made Good) TWA & TWS⁽¹⁾ (True Wind Angle & True Wind Speed) |
| Fuel (Gasoline) | <ul style="list-style-type: none"> % (PGN 127505) |
| Fresh water | <ul style="list-style-type: none"> % |
| Live well | <ul style="list-style-type: none"> % |
| Grey water | <ul style="list-style-type: none"> % |

| Data category | Data items |
|--------------------|--|
| Black water | <ul style="list-style-type: none"> • % |
| Load cells | <ul style="list-style-type: none"> • Pre-defined list of Load cells <div style="border: 1px solid black; background-color: #f0f0f0; padding: 5px; margin-top: 10px;"> <p>Note: Cyclops marine Load cells are supported — refer to: p.34 — Cyclops Marine load cells</p> </div> |

Cyclops Marine load cells

Cyclops Marine is a third party company providing wireless load-sensing devices for use in sailing, and especially race sailing.

These sensors measure the load bearings on key rigging components, such as forestay, sidestay, backstay, or any sheet, halyard, control line, vang, tack line, or runner.

The Cyclops Marine sensors connect wirelessly to the below-deck Cyclops Marine Gateway, which interfaces with compatible Raymarine MFDs and displays key load bearings at identified stress points on a yacht's rigging.

In the MFD's Dashboard app, you can see at a glance the live, static and dynamic load data transmitted by the Cyclops Marine sensors, at up to 50 sensor placements.

CHAPTER 4: SET UP


CHAPTER CONTENTS

- 4.1 Controls — page 36
- 4.2 Power — page 39
- 4.3 Getting started — page 40
- 4.4 Shortcuts menu — page 50
- 4.5 Memory card compatibility — page 53
- 4.6 Software updates — page 55
- 4.7 Device pairing — page 57

4.1 Controls

Axiom, Axiom plus and Axiom XL controls


Axiom, Axiom + and Axiom XL MFDs have a touchscreen and a power swipe touch control.

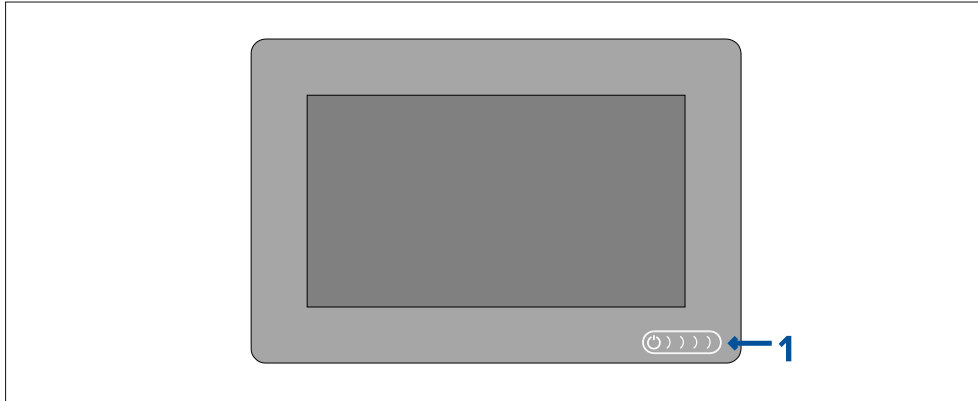

1. **Power swipe** — Swipe your finger from left to right on the power swipe to power on the MFD. When powered on swipe again to open the shortcuts page.

Axiom Pro controls


Axiom Pro includes both a touchscreen and physical buttons that can be used to control the MFD. The details below describe the buttons and their functions.

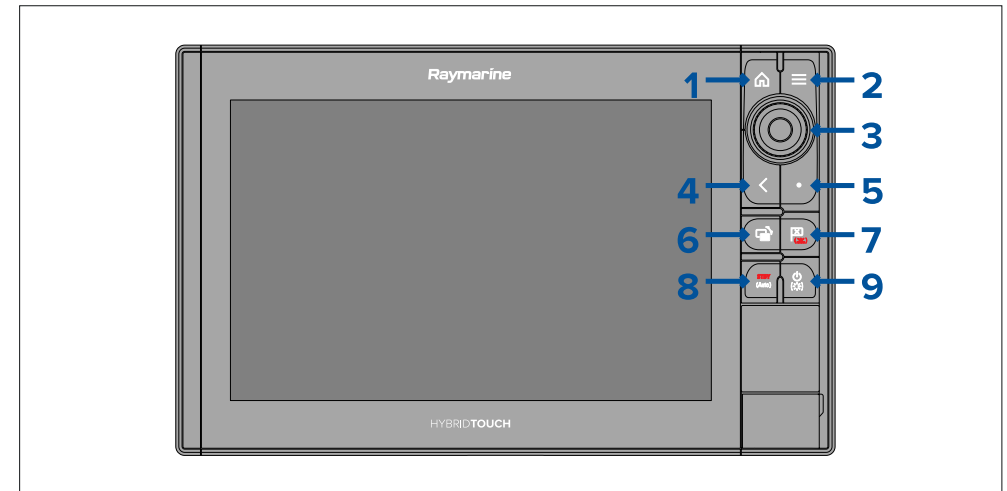

1. **Home** — Press to display the Homescreen.
2. **Menu** — Press to open or close menus.
3. **Uni-controller** — The Uni-controller consists of a center **OK** button, **Directional** controls and a **Rotary** knob.
4. **Back** — Press to return to the previous menu or dialog.
5. **User Programmable Button (UPB)** — You can select which function this button controls. Refer to [Assigning a function to the User Programmable Button \(UPB\)](#) for more information.
6. **Switch active** — Press momentarily to switch the active pane in a splitscreen page. A long press expands the selected pane.
7. **Waypoint / MOB** — Press momentarily to place a waypoint at your vessel's location. A long press activates the Man overboard (MOB) alarm.
8. **Pilot** — Press momentarily to display or hide the Pilot sidebar. A long press engages the autopilot in locked heading mode, or disengages an active autopilot.
9. **Power** — Press to power on the MFD. When the MFD is powered on, pressing this button displays the Shortcuts page.

Uni-controller


The Uni-controller functions as detailed below.

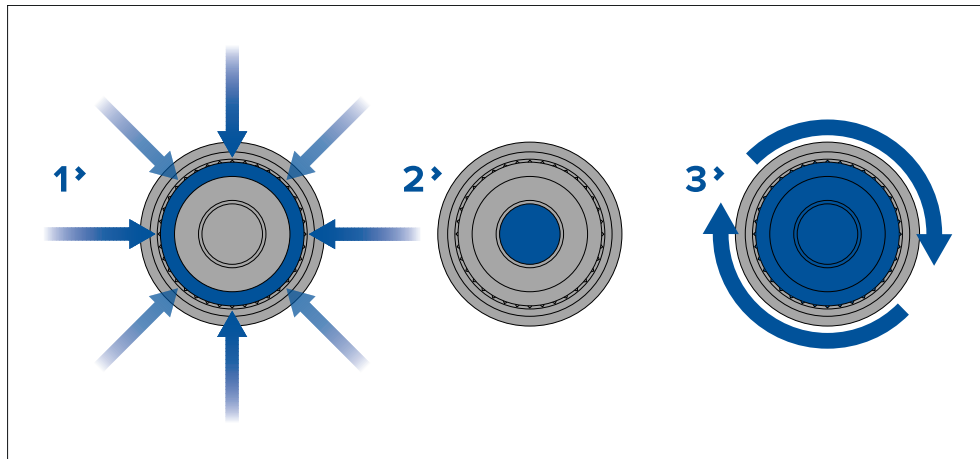

1. **Directional** — Use the 8-way directional controls to reposition the cursor onscreen.
2. **OK** — Push the button to confirm a selection.
3. **Rotary** — Turn clockwise to Range or Zoom In and counterclockwise to Range or Zoom out.

RMK controls

MFDs can be controlled remotely using an RMK-9 or RMK-10.

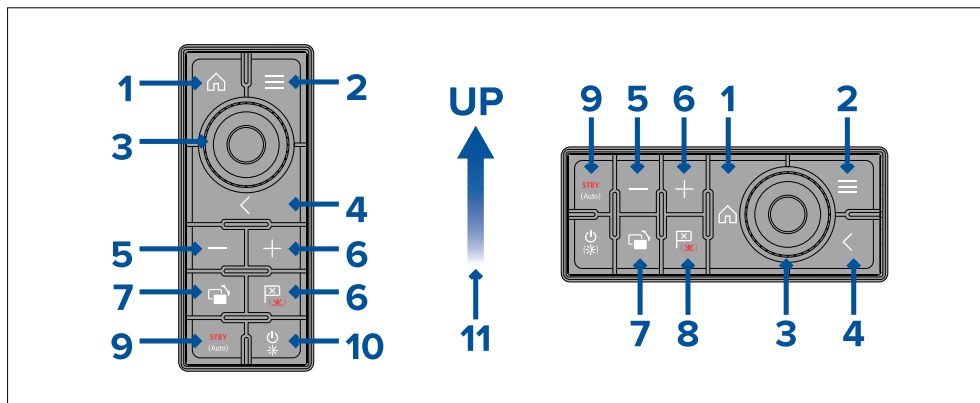

1. **Home** — press to return to the Homescreen.

2. **Menu** — accesses menus. Press again to close menus.
3. **UniController** — provides a rotary control and a joystick that includes an **OK** push button for using menus and applications.
4. **Back** — press to return to a previous menu or dialog level.
5. **-** (Minus/Negative symbol) — press to range out.
6. **+** (Plus/Positive symbol) — press to range in.
7. **Active** — press to switch the active pane, or to switch the active multifunction display (in multiple display systems).
8. **Waypoint / MOB** — press and release to access the waypoint options. Press again to place a waypoint. Press and hold to place a Man Overboard (MOB) marker at your current position.
9. **Standby (Auto)** — press to disengage integrated autopilot, press and hold to activate Auto mode on integrated autopilot.
10. **Power** — see table below:

| Configuration | Display State | Momentary press | Press and hold |
|---------------|--------------------------------|---------------------------------------|------------------------------|
| Single MFD | Off | Not applicable | Not applicable |
| | On | Open Shortcuts page | Power off / put into Standby |
| Multiple MFDs | All displays Off | Not applicable | Not applicable |
| | All displays On | Open Shortcuts page on active display | Power down all displays |
| | 1 Display On and 1 display Off | Open Shortcuts page on active display | Power down active display |

Note: MFDs that are powered off must be switched back on using the MFD's **Power** button.

11. Direction of Joystick Up.

iKey bluetooth keyboard controls

The MFD is compatible with the iKey Bluetooth keyboard. When connected the bluetooth keyboard can be used to control the MFD.



In addition to the usual alphanumeric keyboard functions the keyboard provides mapping of the MFD's physical buttons, as follows:

- **F4** — User Programmable Button (available on Axiom Pro MFDs)
 - Press and hold — Choose action for button
- **F6** — Power/Shortcuts
 - Press and hold — shut down
- **F6**
- **F7** — Home
- **F8** — Event marker / Waypoint
- **F9** — Menu (App specific menu)
- **F11** — Switch Active
- **F12** — Pilot
- **Esc** — Back
- **Enter** — OK
- **Up arrow** — UniControl Up


- **Down arrow** — UniControl Down
- **Left arrow** — UniControl Left
- **Right arrow** — UniControl Right
- **Trackpad** — Touchscreen / UniControl directions
- **Trackpad + Left trackpad button** — Pan chart area (Chart app)
- **Trackpad + Right trackpad button** — Pan chart area (Chart app)
- **Left trackpad button** — Select / OK
 - Press and hold — long press (touchscreen)
- **Right trackpad button** — OK
 - Press and hold — long press (touchscreen)
- **>** — Increase MFD brightness (when Shortcuts page is displayed) / back sonar scroll-back bar in Fishfinder app
- **<** — Decrease MFD brightness (when Shortcuts page is displayed) / forward sonar scroll-back bar in Fishfinder app
- **+** — Range / Zoom In
- **-** — Range / Zoom Out
- **Pg Up (Fn + Up arrow)** — Range / Zoom In
- **Pg Dn (Fn + Down arrow)** — Range / Zoom Out

Connecting a bluetooth keyboard

Follow the steps below to connect a bluetooth keyboard to your MFD.

Note:

The steps below describe connecting the ikey bluetooth keyboard. Other bluetooth keyboards may be connected in a similar way.

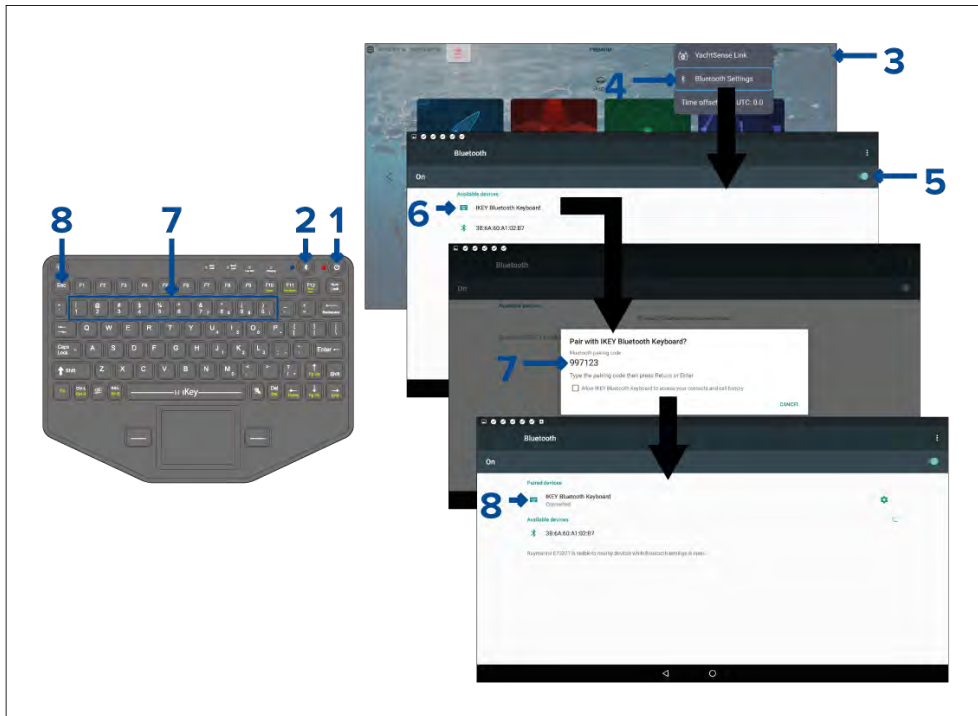

1. Press and hold the **Power** button for approximately 4 seconds, until the power button LED flashes red.
2. Press and release the **Bluetooth** button.
3. From the MFD, select the status area (top right of homescreen).
4. Select **Bluetooth Settings**.
5. Enable bluetooth using the toggle switch.
6. Select the bluetooth keyboard.
7. Using the keyboard enter the bluetooth pairing code that is displayed on the MFD screen and press **Enter**.
8. Once connected press the **Esc** button on the keyboard to return to the homescreen.


4.2 Power

Axiom, Axiom + and Axiom XL

Powering on the display

When power is available to the MFD and the MFD is powered off, the power symbol will be illuminated.


To power on the MFD:

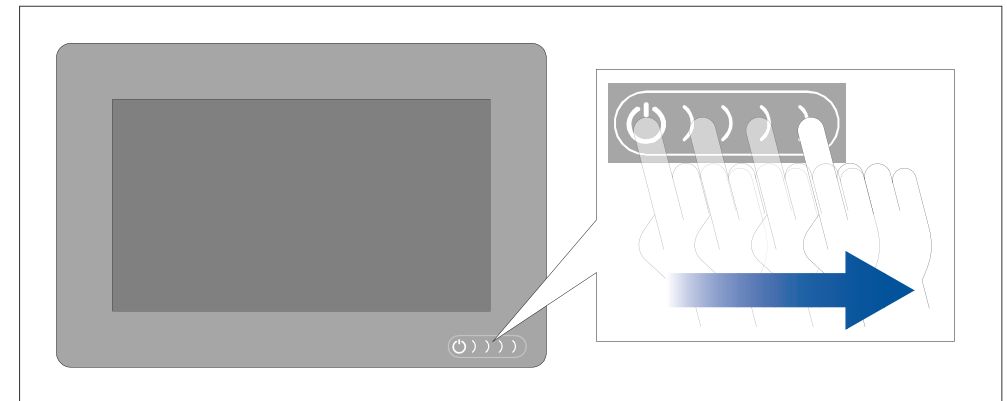

1. Swipe your finger from left to right across the power swipe touch control. The MFD will boot up.

Powering off the display

When the MFD is powered on follow the steps below to power it off.

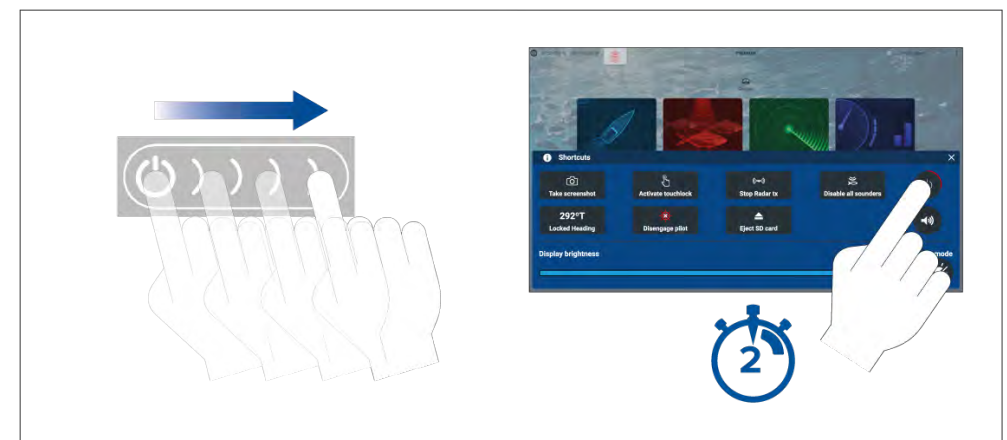

1. Swipe your finger from left to right across the power swipe touch control
The Shortcuts menu is displayed.
2. Press and hold the **Power symbol** until the screen switches off.

Note:

When powered off, the unit may still draw a small amount of power from the battery. If this is a concern, unplug the power supply or switch off at the breaker.

Switching on and off at the breaker

If you wish to ensure that the MFD is not consuming any power then it must be switched off at the breaker or have the power cable unplugged.
When the breaker is switched back on, or the cable is reconnected, the MFD will resume in the same power state that it was in when it was switched off.


Axiom Pro

Powering on the display

1. Press the power button to power on the display.
The MFD will boot up.

Powering off the display

When the MFD is powered on follow the steps below to power it off.

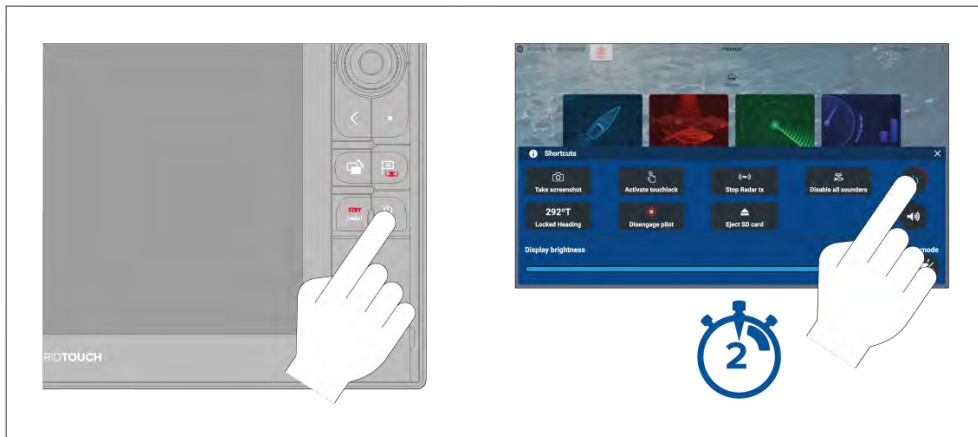

1. Press the **Power** button.
The Shortcuts menu is displayed.
2. Press and hold the **Power symbol** until the screen switches off.

Alternatively, you can press and hold the **Power** button for approximately 6 seconds to power off your display.

Note:

When powered off, the unit may still draw a small amount of power from the battery. If this is a concern, unplug the power supply or switch off at the breaker.

Switching on and off at the breaker

If you wish to ensure that the MFD is not consuming any power then it must be switched off at the breaker or have the power cable unplugged.
When the breaker is switched back on, or the cable is reconnected, the MFD will resume in the same power state that it was in when it was switched off.

4.3 Getting started

First power up

When you power up your new Multifunction Display (MFD) for the first time a number of actions are required.

The list below shows the actions that should be performed on your new MFD:


1. **Power** on the display.
2. Select your **Data master** (only required on networks with more than 1 MFD).
3. Complete the **Startup wizard** (the wizard will not be shown if you are connecting to an existing system that has already been set up).
4. Read and agree to the **Limitations on Use** disclaimer.
5. Select/check your preferred **Data sources**, if required.
6. Perform **Engine identification**, if required.
7. Select/check **Transducer settings**, if required

First power up data master selection

SeaTalkhs[®] Networks that contain more than 1 MFD must have a designated data master. The data master is the primary MFD on the network and should be the MFD that is also connected to the SeaTalkng[®] / NMEA 2000 CAN bus

and any other sources of data in your system. The data master bridges the data over the SeaTalkhs[®] network to any compatible networked 'repeater' MFDs.

By default your MFD will be set as a Data master. If you are connecting a new MFD to a network that already includes an MFD then on first power up the 'Multiple data masters found' notification will be displayed.

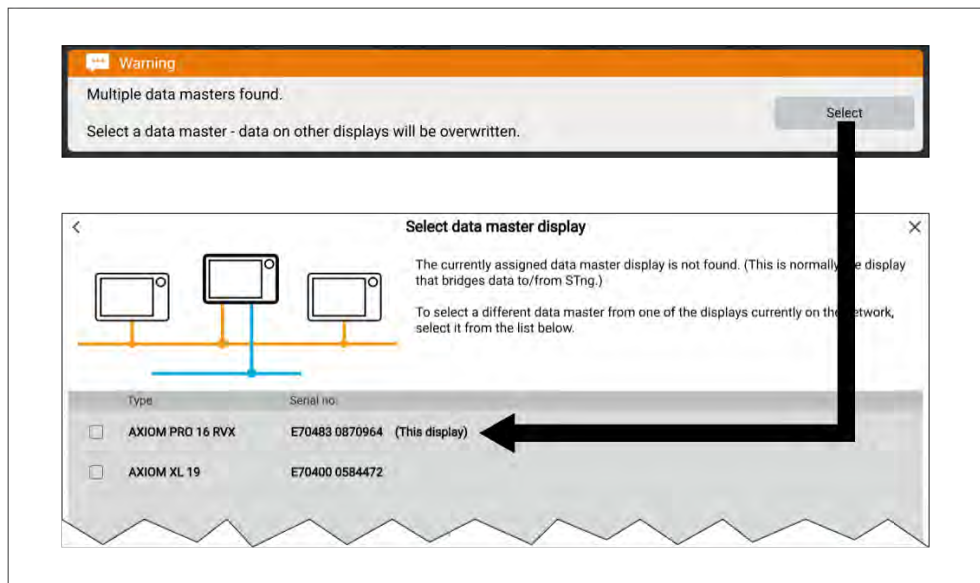

Select the button from the notification and choose your desired data master from the list.

Note:

If you are selecting a new data master then all networked MFDs settings and any saved waypoints, routes and tracks will be overwritten with those of the new data master MFD. To prevent loss of data and settings perform a back up of data and settings on current data master first before assigning the new data master.

You can change your Data master at anytime by selecting **Assign as Data master** from the pop-over menu for the MFDs listed in the **Network** settings menu: **Homescreen > Settings > Network**.

Startup wizard

If the MFD is being installed as a stand alone installation or as part of a new system, then the first time the MFD is powered on the Startup wizard will be displayed. The Startup wizard will help you configure important settings on your MFD.

If an existing MFD is chosen as the data master then the start up wizard will be skipped.

Follow the onscreen instructions and configure the relevant settings.

The Startup wizard will also be displayed after a **Factory reset** is performed.

The MFD will guide you through:

- Language selection
- Boating activity selection
- Boat details configuration

Languages

The following user interface languages are available:

| | | | |
|----------------------------|-------------------|------------------------------|--------------------------------|
| Arabic (ar-AE) | Bulgarian (bg-BG) | Chinese (Simplified) (zh-CN) | Chinese (Traditional) (zh-TW) |
| Croatian (hr-HR) | Czech (cs-CZ) | Danish (da-DK) | Dutch (nl-NL) |
| English (en-GB) | English (en-US) | Estonian (et-EE) | Finnish (fi-FI) |
| French (fr-FR) | German (de-DE) | Greek (el-GR) | Hebrew (he-IL) |
| Hungarian (he-IL) | Icelandic (is-IS) | Indonesian (Bahasa) (id-ID) | Italian (it-IT) |
| Japanese (ja-JP) | Korean (ko-KR) | Latvian (lv-LV) | Lithuanian (lt-LT) |
| Malay (Bahasa) (ms-MY ZSM) | Norwegian (nb-NO) | Polish (pl-PL) | Portuguese (Brazilian) (pt-BR) |
| Russian (ru-RU) | Slovenian (sl-SI) | Spanish (es-ES) | Swedish (sv-SE) |
| Thai (th-TH) | Turkish (tr-TR) | Vietnamese (vi-VN) | |

The selected language also determines the default units of measure used by the MFD.

Boating activities

During the start up wizard the boating activity must be selected. The selected boating activity will pre-configure the MFD using applicable settings. Some of these settings may not be available to other boating activities.

One of the following boating activities can be selected:

- **Fishing (freshwater)**
- **Fishing (saltwater)**
- **Motor cruising**
- **First responder**
- **Sailing**
- **Other**
- **Retail/demonstration**

Boat details

During the start up wizard you will be requested to enter the details listed below for your boat. You can also add or changes these details at anytime from the **Boat details** settings menu: **Homescreen > Settings > Boat details**.

Safety clearances

- Minimum safe depth
- Minimum safe height
- Minimum safe width

For details and guidance on how to set safety clearances refer to: [p.42 – Safety clearances](#)

Engines

- Number of engines
- Engine manufacturer

Tanks

- Number of fuel tanks
- Number of fuel (gasoline) tanks
- Number of fresh water tanks
- Number of live well tanks
- Number of gray water tanks

- Number of black water tanks

Batteries

- Number of batteries


Safety clearances

Minimum safe depth

During the start up wizard you can set a minimum safe depth for your vessel. The minimum safe depth can also be added or changed at anytime from the **Boat details** setting menu: **Homescreen > Settings > Boat details**.

A suitable value for minimum safe depth can be established by identifying your vessel's maximum draft and adding a safety margin.

- **Maximum vessel draft** — the distance from the waterline to the lowest point of your vessel's hull/keel.
- **Safety margin** — an adequate clearance below the hull/keel to allow for draft variation and changes in water or bottom conditions.

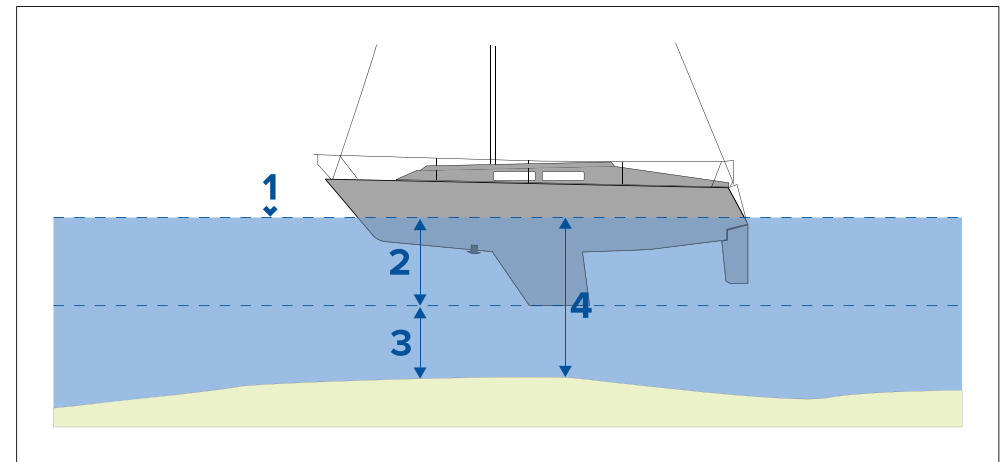

1. Waterline
2. Maximum vessel draft
3. Safety margin
4. **Minimum safe depth**

Minimum safe depth calculation guidance

The information below is provided for guidance only and is not exhaustive. Some influencing factors can be unique to certain vessels and/or areas of water and may not be listed below. You should ensure you account for ALL factors that apply to your current situation when making calculations.

Some of the factors that can influence how much a vessel draws are shown below:

- **Vessel displacement (weight)** — A vessel's draft will increase when it is fully laden when compared with its unladen displacement.
- **Water type** — A vessel's draft will increase by approximately 2% to 3% in fresh water compared to seawater.

Some of the factors that should be taken into account when calculating a safety margin are:


- **Vessel maneuvering characteristics** — A vessel's draft increases due to squat, trim, roll, pitch and heave.
- **Chart accuracy** — The electronic chart depth may not be accurate or the true depth may have changed since the last survey.
- **Weather conditions** — High air pressure, and prevailing wind strength and direction can affect wave height.

Minimum safe height

During the start up wizard you can set a minimum safe height for your vessel. The minimum safe height can also be added or changed at anytime from the **Boat details** setting menu: **Homescreen > Settings > Boat details**.

A suitable value for minimum safe height can be established by identifying your vessel's maximum height from the waterline and adding a safety margin.

- **Maximum vessel height** — the distance from the waterline to the highest point of your vessel e.g.: top of the mast.
- **Safety margin** — an adequate clearance above your mast to allow for height variation.

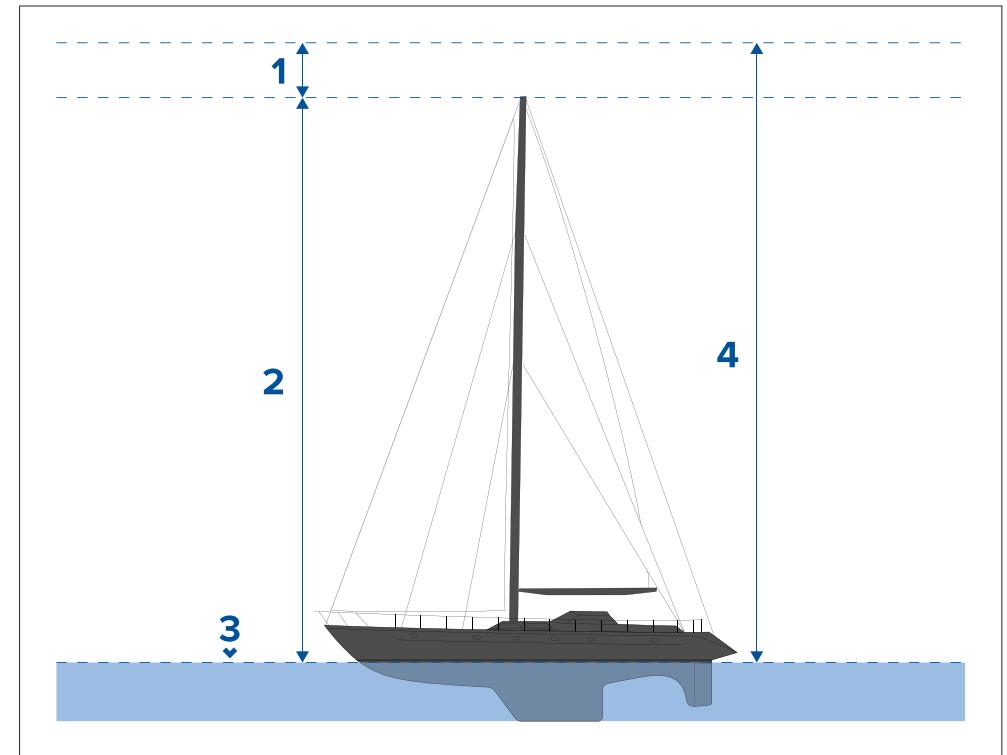

1. Safety margin
2. Maximum height from waterline
3. Waterline
4. **Minimum safe height**

Minimum safe height calculation guidance

The information below is provided for guidance only and is not exhaustive. Some influencing factors can be unique to certain vessels and / or areas of water and may not be listed below. You should ensure you account for ALL factors that apply to your current situation when making calculations.

Some of the factors that can influence vessel height are shown below:

- **Vessel displacement (weight)** — A vessel's height (from the waterline) will decrease when it is fully laden compared with its unladen displacement.
- **Water type** — A vessel's height will decrease by approximately 2% to 3% in fresh water compared to seawater.

Some of the factors that should be taken into account when calculating a safety margin are:


- **Vessel maneuvering characteristics** — A vessel's height changes due to squat, trim, roll, pitch and heave.
- **Chart accuracy** — The electronic chart data may not be accurate or may have changed since the last survey.
- **Weather conditions** — Low air pressure, and prevailing wind strength and direction can affect water level.

Minimum safe width

During the start up wizard you can set a minimum safe width for your vessel. The minimum safe width can also be added or changed at anytime from the **Boat details** setting menu: **Homescreen > Settings > Boat details**.

A suitable value for minimum safe width can be established by identifying your vessel's maximum width and adding a safety margin to each side.

- **Maximum width** — Taken from the widest point.
- **Safety margin** — An adequate clearance to either side of the vessel.)

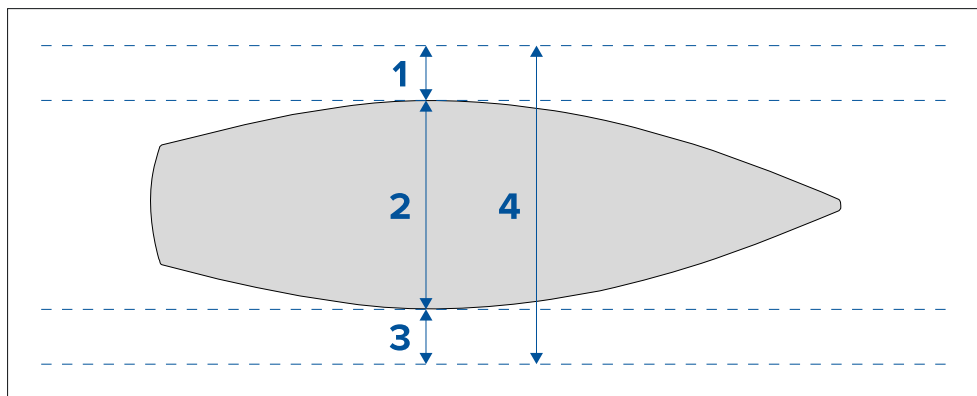

1. Port safety margin
2. Maximum vessel width (beam)
3. Starboard safety margin
4. **Minimum safe width**

Minimum safe width calculation guidance


The information below is provided for guidance only and is not exhaustive. Some influencing factors can be unique to certain vessels and / or areas of water and may not be listed below. You should ensure you account for ALL factors that apply to your current situation when making calculations.

Some of the factors that should be taken into account when calculating a Safety Margin are:

- **Vessel maneuvering characteristics** — A vessel's required clearance will increase due to roll.
- **Chart accuracy** — The electronic chart data may not be accurate or may have changed since last surveyed.

First power up Limitation on Use acknowledgement

After you have completed the Startup wizard the Limitation on Use (LoU) disclaimer is displayed.

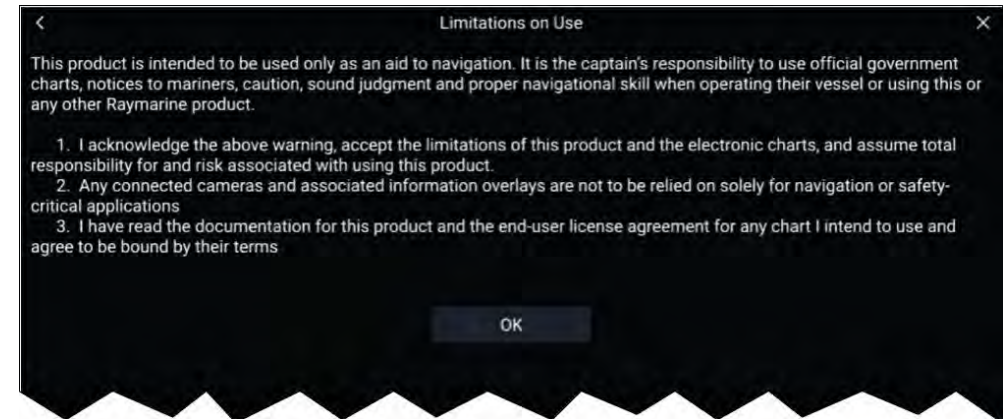

You must read and agree to the terms in order to use your MFD.

Selecting **OK** means you have accepted the terms of use.

Engine manufacturer selection

Engine data from engine management systems that transmit compatible data or that are connected via a compatible engine gateway can be displayed on the MFD. During the start up wizard you can select your engine manufacturer. Engine manufacturer can also be selected or changed at anytime from the **Boat details** setting menu: **Homescreen > Settings > Boat details**.

You can select one of the following engine manufacturers:

- **Mercury** — Selecting Mercury will make the Mercury VesselView MFD app available on the MFD.
- **Yamaha** — Selecting Yamaha will make the Yamaha MFD app available on the MFD.
- **Yamaha HDMI** — Selecting Yamaha HDMI will make the Yamaha HDMI MFD app available on the MFD.
- **Other** — Selecting other will enable engine data from compatible engines that are either directly connected or connected via the ECI-100 available on the MFD.

Identifying engines

If your MFD has mislabelled your engines this can be corrected by running the engine identification wizard.

When the engine manufacturer is set to **Other** the engine identification wizard will be enabled in the **Boat details** menu: **Homescreen > Settings > Boat details > Identify engines**.

1. Ensure the correct number of engines is selected in the **Num of Engines:** box.
2. Select **Identify engines**.
3. Follow the onscreen prompts to complete the engine identification wizard.


Sonar transducer calibration

Sonar transducers should be calibrated to ensure accurate readings are displayed on the MFD.

Depth offset

Depths are measured from the transducer face to the bottom (e.g.: seabed). An offset value can be applied to the depth data so that the displayed depth reading represents the depth reading taken from either the keel (negative offset) or the waterline (positive offset).


Before setting a waterline or keel offset, establish the vertical distance between the transducer and waterline or the bottom of your vessel's keel, as appropriate. Then set this distance as the depth offset value.

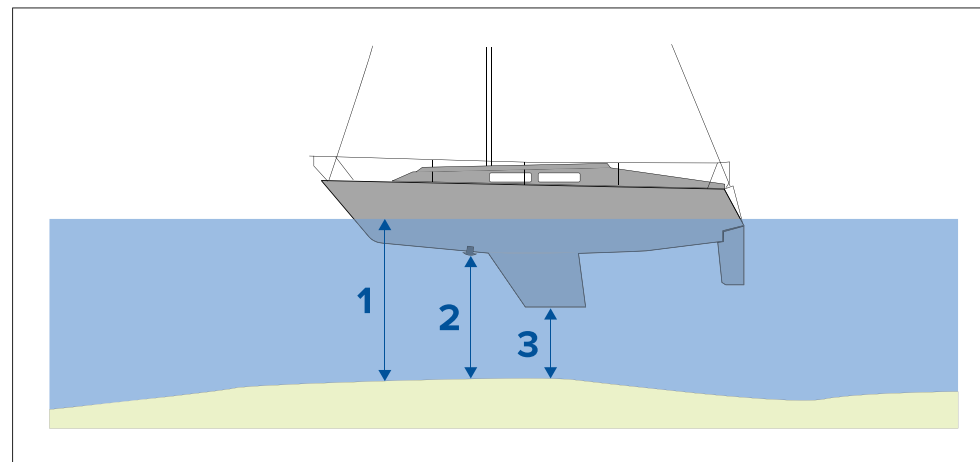

1. **Below waterline** — The depth reading will be increased from the transducer's default reading.
2. **Below transducer** — This is the default reading from the transducer (zero offset applied).
3. **Below keel** — The depth reading will be decreased from the transducer's default reading.

Setting a depth offset

You can set the point depth readings are taken from.

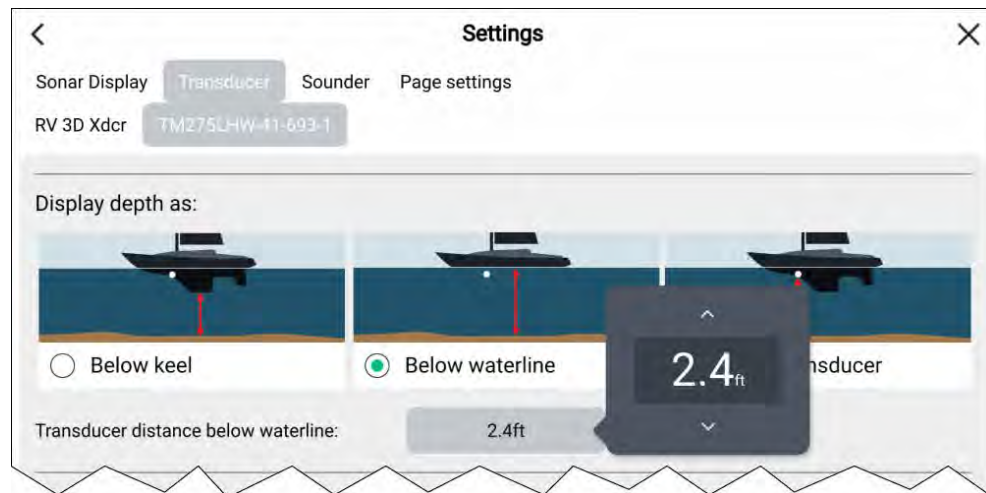

1. Open the **Fishfinder app**.
2. Open the **Transducer** settings menu: **Menu > Settings Transducer**.
3. If you have more than 1 sonar transducer installed, then you will need to select the relevant transducer.
4. Select either **Below keel**, **Below waterline**, or **Below transducer** as required.
 - i. If you have selected **Below keel** enter your transducer's distance above the lowest point of your keel in the offset field.
 - ii. If you have selected **Below waterline** enter your transducer's distance below the waterline in the offset field.

Setting a temperature offset

If your sonar transducer includes a temperature sensor then you can check and calibrate your temperature reading.




1. Open the **Fishfinder app**.

2. Open the **Transducer** settings menu: **Menu > Settings Transducer**.
3. If you have more than 1 sonar transducer installed, then you will need to select the relevant transducer.
4. If required, select the **Enable temperature sensor** toggle switch to enable the sensor.
5. Measure the actual water temperature using a thermometer.
6. Check your reading against the displayed **Current temperature**.
7. If the readings are not the same, select **Calibrate temp** and enter the difference between your 2 readings.

RealVision™ AHRS calibration

RealVision™ transducers include a built-in AHRS (Attitude and Heading Reference Sensor), which measures the motion of your vessel to assist in the rendering of sonar images. After installation all RealVision™ transducers require calibration.

An uncalibrated transducer can produce an offset to the front edge of the render of the bottom in the sonar image, as illustrated below.

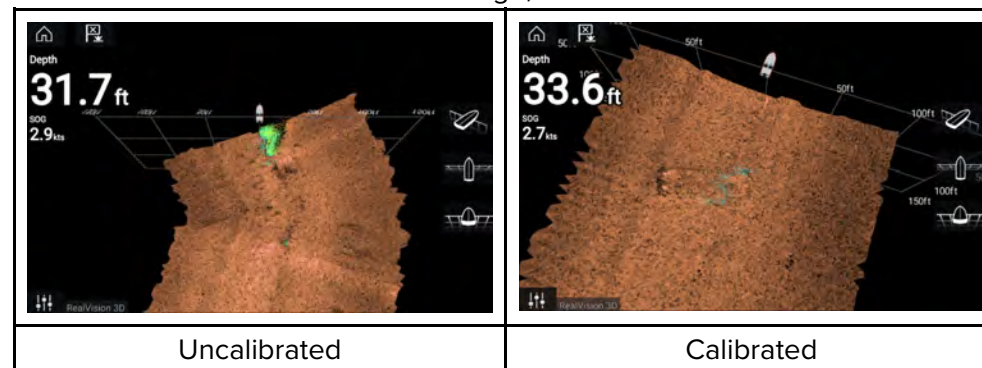

Calibration is an automatic process and starts after your vessel has turned approximately 100° at a speed of between 3 –15 knots. Calibration requires no user input, however at least a 270° turn is required before the calibration process can determine the local deviation and apply a relevant offset.

The time it takes to complete the calibration process will vary according to the characteristics of the vessel, the installation environment of the transducer, and the levels of magnetic interference at the time of conducting the process. Sources of significant magnetic interference may increase the time required to complete the calibration process. Certain areas with substantial magnetic deviation may require extra circles or “figure of 8” manoeuvres to be performed. Examples of such sources of magnetic interference include:

- Vessel engines
- Vessel alternators
- Marine pontoons
- Metal-hulled vessels
- Underwater cables

Note:

In some circumstances, it is beneficial to disable Realvision AHRS if local sources of magnetic interference are distorting the sonar image. Realvision AHRS can be disabled from **Settings**.

Menu > Settings > Sounder > AHRS stabilization

Note:

The Calibration process will require repeating after a **Sonar reset** or MFD **Factory reset**.

Transducer calibration (iTC-5)

You can calibrate depth, speed and wind instrument transducers connected to your Lighthouse MFD via an iTC-5 (Instrument Transducer Converter).

Note:

Transducer calibration requirements:

- An iTC-5 Instrument Transducer Converter.
- An MFD designated as the Data master.
- LightHouse version 3.11 or later or LightHouse version 4.0 or later.

Note:

You can only calibrate transducers that are directly connected to the iTC-5 you select for calibration. In systems with more than 1 iTC-5, it is important to remember which transducer(s) are connected to each iTC-5 instrument.


Selecting a transducer iTC-5

To calibrate instrument transducers, find the relevant iTC-5 from the list of devices connected to your MFD's network.


1. Select the **Network** settings tab

Homescreen > Settings > Network

2. Find and select the iTC-5 that the transducer you want to calibrate is connected to.
3. Select **Calibrate** from the pop-over menu..

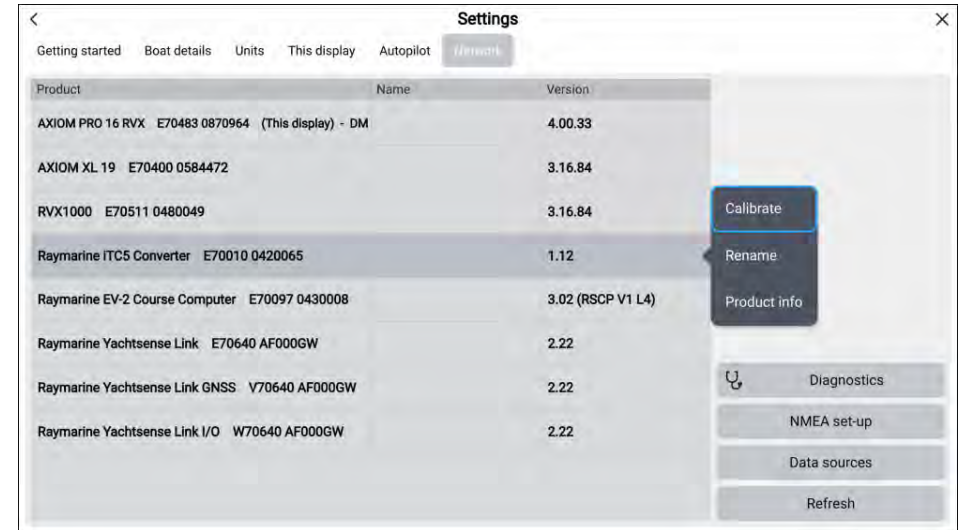


4. Select the transducer type (either **Depth**, **Wind** or **Speed**).

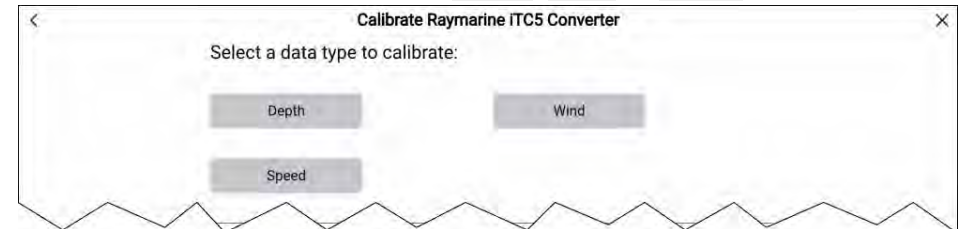

Instrument depth calibration

Calibrate your instrument depth transducer as follows.

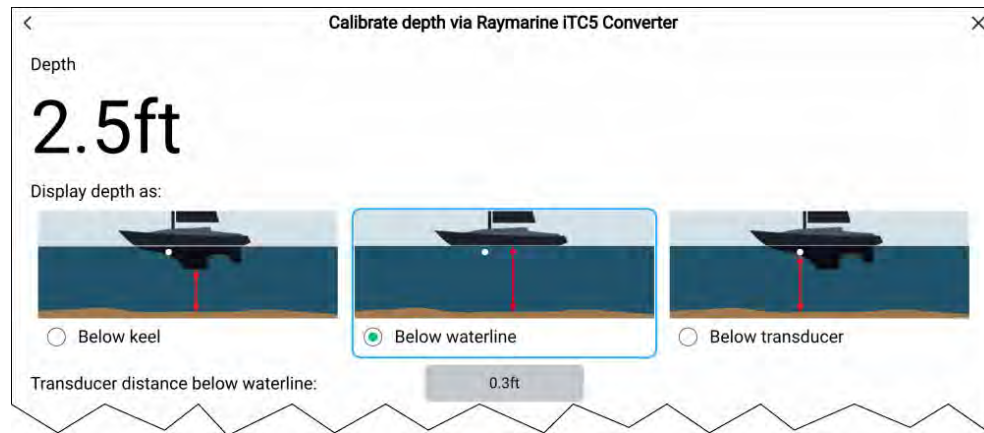


Select either:

- **Below keel** — The depth reading will be decreased from the transducer's default reading by the offset value you specify. The offset should be the distance between the transducer and the bottom of the keel.
- **Below waterline** — The depth reading will be increased from the transducer's default reading by the offset value you specify. The offset should be the distance between the waterline and the transducer.
- **Below transducer** — This is the transducer's default reading no offset is required.

Wind calibration

Calibrate your wind transducer as follows:

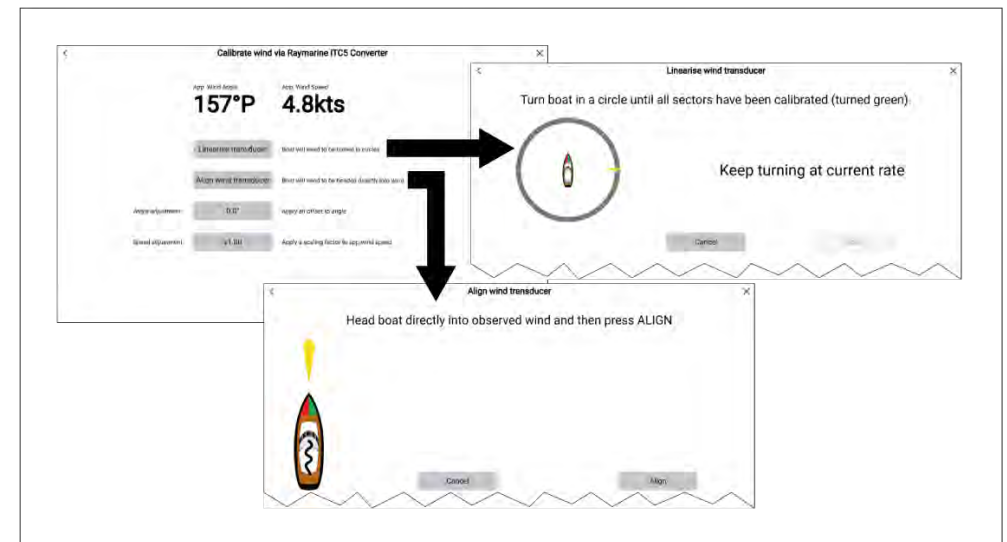


- **Linearise transducer** — Turn your boat in circles until all sectors have been calibrated (the ring turns green as sectors complete).
- **Align wind transducer** — Head your boat directly into observed wind and select **Align**.
- **Angle adjustment** — You can apply a specified offset to wind angle readings.
- **Speed adjustment** — You add a scaling factor to apparent wind speed.

Speed calibration

Calibrate your speed transducer as follows:

For best results, ensure that there is minimal or no tide/current effect when calibrating speed through water.

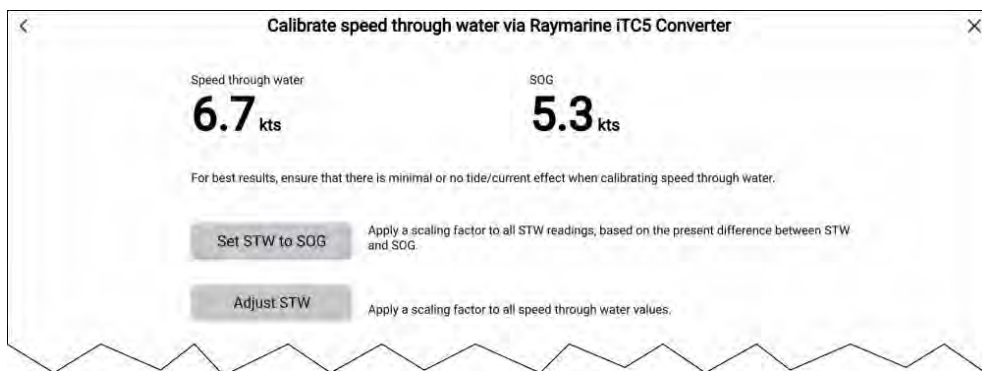

- **Set STW to SOG** — Select to apply a scaling factor to all STW readings, based on the present difference between STW and SOG.
- **Adjust STW** — Apply a scaling factor to all speed through water values.

Multiple data sources (MDS)

MDS is a Raymarine scheme for managing multiple sources of identical data types on the same network (e.g.: in an MFD network you may have more than one source of GPS / GNSS position data).

The MFD will automatically select a preferred data source (device) to use for that data type.

MDS can be used for the following data types:

- Depth
- Speed through water
- Heading
- GPS
- GPS Datum
- Wind
- Time & Date

If you do not want to use the automatically selected data source you can manually select your preferred data source.

Note:

For MDS to be available on your system, all products in the system that report data must be MDS-compliant. The system will report any products that are NOT MDS-compliant. It may be possible to upgrade the software for these non-compliant products, to make them compliant. Visit the Raymarine website (www.raymarine.com) to obtain the latest software for your products.


If MDS-compliant software is not available for the product and you do NOT want to use the system's preferred data source, you must remove any non-compliant products from the system. You should then be able to select your preferred data source.

Once you have completed setting up your preferred data sources, you may be able to add non-compliant products back into the system.

Data sources menu

When a system includes multiple sources of an MDS compatible data type the system will automatically choose the most appropriate source for the data. If you prefer, you can manually select your own data source.

The **Data sources** menu can be accessed on your Data master MFD, from the **Settings** menu: **Homescreen > Settings > Network > Data sources**.

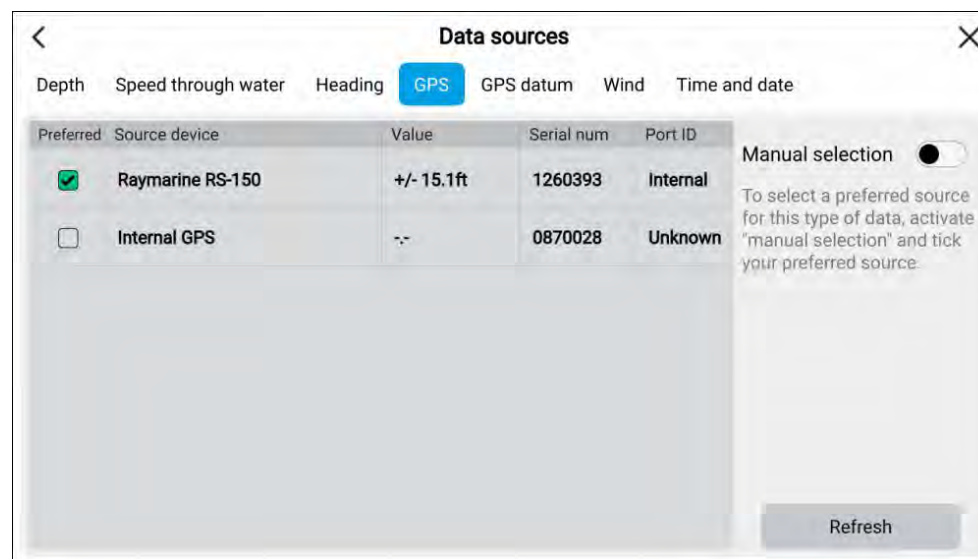

Each menu tab enables you to view the available data sources and, if required, manually select your preferred data source. The currently active data source will be ticked and display its current value in use.

To manually select a data source, enable the **Manual selection** toggle switch and then select your preferred data source from the list.

Networked MFDs will automatically be updated to use the Data sources selected on your Data master MFD.

Select the **Refresh** button at the bottom of the screen to refresh the list.

Assigning a function to the User Programmable Button (UPB)

You can assign a function to the User Programmable Button on an Axiom™ Pro MFD.

1. Press and hold the **User Programmable Button** on the MFD.
2. Select the required function from the list.

You can also assign a function to the **User Programmable Button** from the Settings menu: **Homescreen > Settings > This Display > User Configurable Key**.

Performing a settings or factory reset

Performing a **Factory reset** will erase ALL user data and reset the display's settings to their Factory default values. Performing a **Settings reset** will restore your display's settings to factory defaults, whilst retaining user data.

1. Select **Settings reset**, from the **This display** menu: **Homescreen > Settings > This display > Settings reset** to perform a settings reset.
2. Select **Factory reset**, from the **This display** menu: **Homescreen > Settings > This display > Factory reset** to perform a factory reset.

Importing user data


You can import user data (i.e.: Waypoints, Routes and Tracks) to your MFD.

1. Insert the MicroSD card that contains your user data files into a card reader slot on your MFD or connected card reader.
2. Select **Import from card** from the Import/export page: (**Homescreen > My data > Import/export > Import from card**).
3. Select the relevant SD card slot from the file browser and then navigate to your User data file (.gpx).

4. Select the relevant GPX file.
Your user data has now been imported.
5. Select **OK**.

4.4 Shortcuts menu

The Shortcuts menu can be accessed by swiping left to right across the **Power swipe** on an Axiom™, Axiom™ + or Axiom™ XL MFD, or by pressing the **Power** button on an Axiom™ Pro MFD.

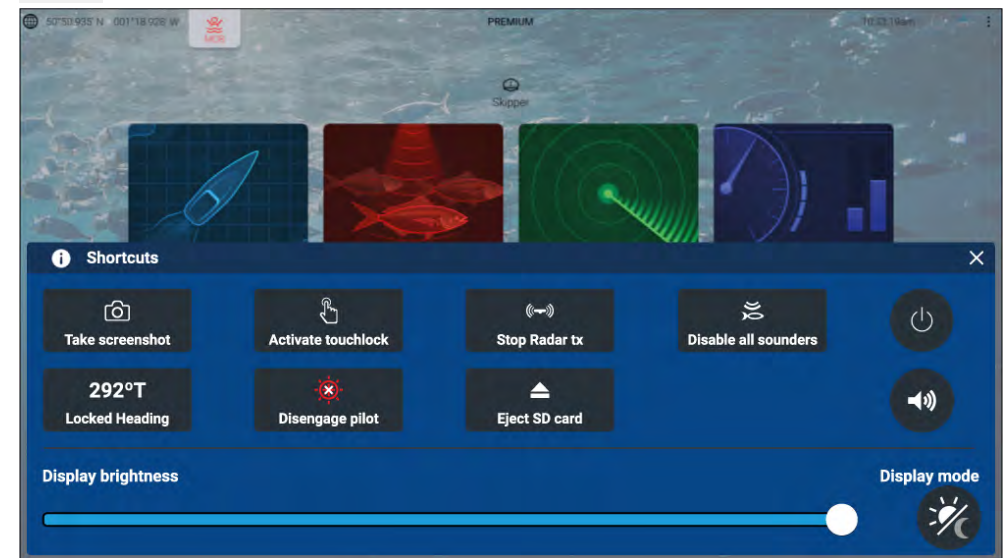

Note:

Some of the displayed options are dependent on connected hardware, e.g. the **Engage / Disengage autopilot** option is only available if you have an autopilot system connected to your MFD.

The following shortcuts are available.

- Take Screenshot
- Activate Touchlock
- Stop Radar transmitting
- Disable all Sounders

- Adjust Locked heading
- Engage / Disengage autopilot
- Eject SD card
- Power off
- Adjust Bluetooth speaker volume
- Adjust Brightness
- Display mode

Taking a screenshot

You can take a screenshot and save the image to external memory.

1. (applies only to Axiom™, Axiom™ + or Axiom™ XL MFDs). Alternatively, press the **Power** button momentarily.
 - i. On Axiom™, Axiom™ + or Axiom™ XL MFDs swipe your finger from left to right across the **Power swipe**.
 - ii. On Axiom™ Pro MFDs press the **Power** button.
The Shortcuts menu is displayed.
2. Select **Take screenshot**.

The screenshot will be saved in .png format to the **Screenshot file** location. The screenshot file location can be selected from the **This display** settings menu: **Homescreen > Settings > This display > Screenshot file**.

Note:

Due to protected content restrictions you cannot take a screenshot when the video input on an Axiom™ Pro or the Video 2 or HDMI input on an Axiom™ XL MFD is displayed onscreen.

Activating touchlock

In rough weather conditions precipitation may lead to erroneous touches being detected by the touchscreen. In these conditions you can use touchlock to prevent this.

1. Select **Activate touchlock** from the **Shortcuts** menu.

*With touchlock activated the touchscreen will be disabled. To re-enable the touchscreen, swipe from left to right across the **Power** button swipe area.*

Radar standby

You can place a transmitting Radar in Standby from the Shortcuts menu.

1. Select **Stop Radar tx** from the **Shortcuts** menu.

You can start your radar transmitting again from the Radar app.

Eject SD card

Safely eject your SD card from your MFD.

Important:

Failure to eject cards safely may result in corrupted data or memory cards.

1. Select **Eject SD card** from the **Shortcut** menu.
2. Select the card reader slot you want to eject from the pop-over menu.
3. Physically eject the card from the reader.
4. Select **I have removed SD cards** to complete the process.

Enabling/Disabling sonar modules

Your sonar module can be enabled and disabled from the shortcuts menu. In systems with multiple sonar modules the control will enable and disable all connected sonar modules.

1. Select **Enable all sounders** or **Disable all sounders**.

Autopilot shortcuts


When Autopilot control is enabled, the shortcuts menu provides an autopilot icon which can be used to engage and disengage your autopilot

When the autopilot is engaged in locked heading mode you can also adjust the locked heading from the Shortcuts menu.

Bluetooth volume control


When your MFD is paired (connected) to a bluetooth speaker, controls will be available on the homescreen and on the shortcuts menu to adjust speaker volume. separate volume controls will be available for apps and alarms.

Homescreen

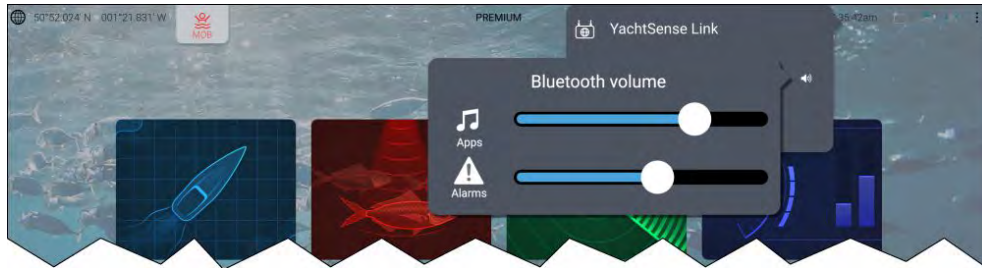

From the homescreen select the status area located on the top right of the screen and then select the Speaker symbol to display the bluetooth volume controls.

Shortcuts menu

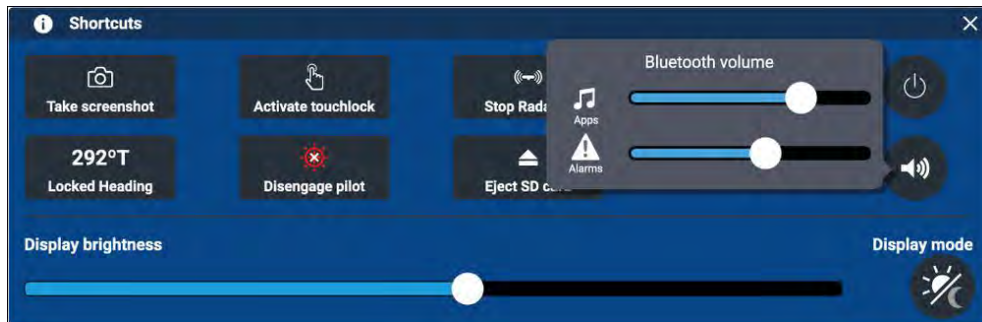


From the shortcuts menu select the speaker symbol to display the bluetooth volume control.

Use your finger to move the volume control along the relevant slider bar to adjust the volume.

Adjusting brightness

LCD brightness can be adjusted from the shortcuts menu.

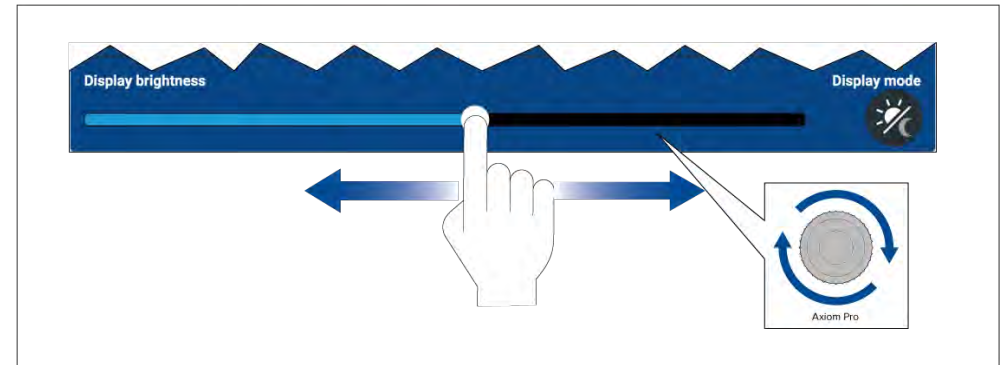

With the shortcuts menu displayed:

1. Move the **Display brightness** control along the slider bar to adjust the brightness.


*With the Shortcuts menu displayed you can also use the **Power** button or the **Power swipe** to increase the brightness level in increments.*

On an Axiom Pro MFD you can also twist the uni-controller to adjust the brightness level.


Display mode

In addition to the default **Day** display mode the MFD can also be configured for night time use using the **Night** or **Extra dark** display modes.

The display mode can be changed by selecting the **Display mode** icon from the shortcuts menu.

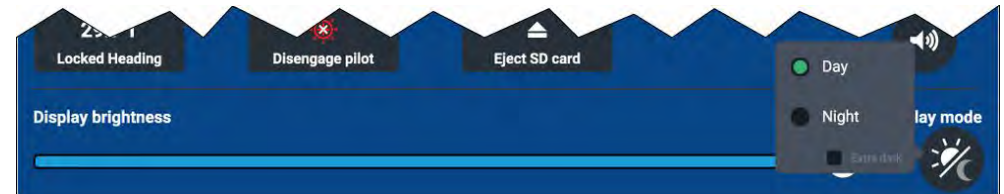

Press the power button / swipe the **Power swipe** to display the shortcuts menu then select the **Display mode** icon. You can then switch between **Day**, **Night**, and **Extra dark** display modes.

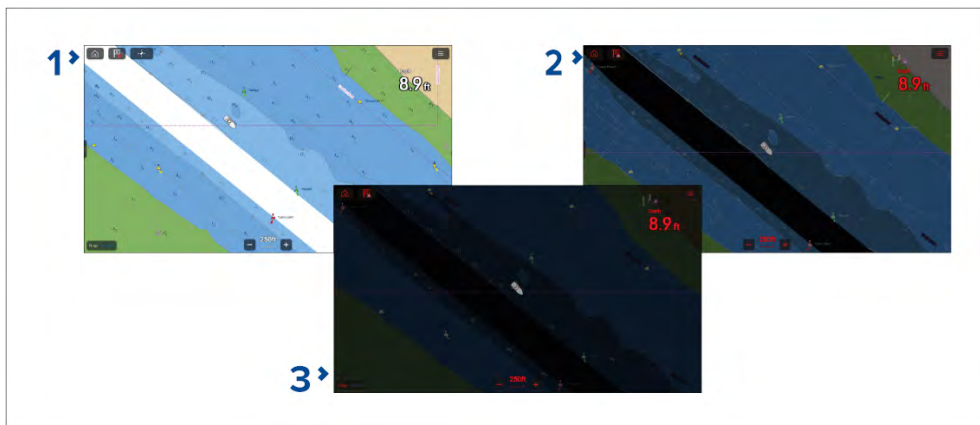

1. **Day** — This is the default mode and uses standard colors using either the **Light** or **Dark** color theme that is selected in the **This display** settings menu: **Homescreen > Settings > This display**.
2. **Night** — Uses red text and icons and dark background colors.
3. **Extra dark** — Uses red text and icons and very dark background colors. Extra dark mode is only available when dark mode is active.

Note:

When using the night or extra dark mode at night be careful of changing back to day mode or accessing an MFD screen that does not support the mode as the higher display brightness could be compromise your night vision..

4.5 Memory card compatibility

MicroSD memory cards can be used to backup / archive data (e.g. Waypoints, Routes and Tracks). Once data is backed up to a memory card, old data can be deleted from the system. The archived data can be retrieved at any time. It is recommended that your data is backed up to a memory card on a regular basis.

Compatible cards

The following types of MicroSD cards are compatible with your MFD. **If the card's native format does not match one of the MFD's supported formats, the card will not be recognized by the MFD. In this situation, it will be necessary to re-format the card using a separate device, such as a laptop or PC for example.**

| Type | Size | Native card format | MFD supported Format |
|--|-------------|------------------------|----------------------|
| MicroSDSC (Micro Secure Digital Standard Capacity) | Up to 4GB | FAT12, FAT16 or FAT16B | NTFS, FAT32, exFAT |
| MicroSDHC (Micro Secure Digital High Capacity) | 4GB to 32GB | FAT32 | NTFS, FAT32, exFAT |
| MicroSDXC (Micro Secure Digital eXtended Capacity) | 32GB to 2TB | exFAT | NTFS, FAT32, exFAT |

- **Speed class rating** — For best performance it is recommended that you use Class 10 or UHS (Ultra High Speed) class memory cards, or better.
- **Use branded memory cards** — When archiving data it is recommended that you use good quality branded memory cards.


Caution: Care of chart and memory cards

To avoid irreparable damage to and / or loss of data from chart and memory cards:


- Ensure that chart and memory cards are fitted the correct way around. DO NOT try to force a card into position.
- DO NOT use a metallic instrument such as a screwdriver or pliers to insert or remove a chart or memory card.
- Ensure correct memory card ejection procedure is carried out before removing the chart or memory card from the card reader.

Removing MicroSD card from its adaptor

MicroSD memory and cartography chart cards are usually supplied inserted into an SD card adaptor. The card will need to be removed from the adaptor before inserting into your display.

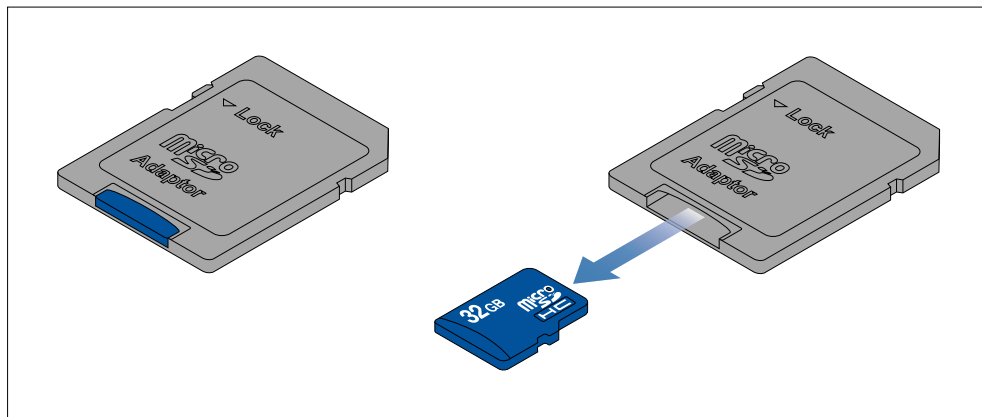

Inserting a MicroSD card — Axiom variants

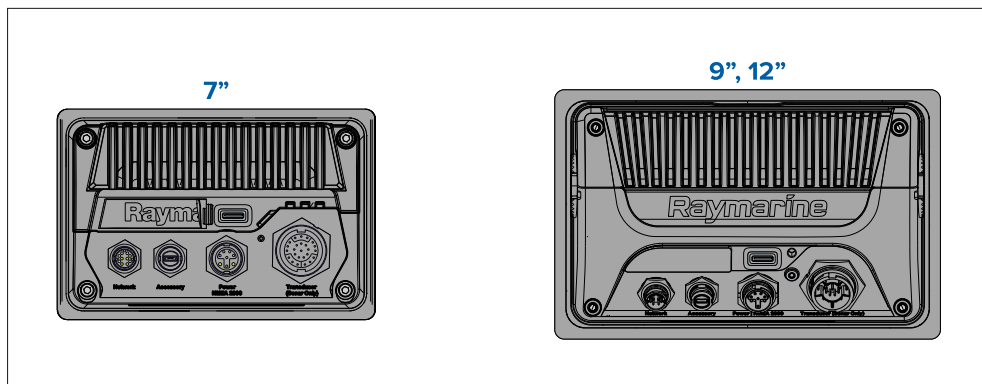


1. Pull back the microSD card reader cover as shown above.
2. Insert your microSD card with the contacts facing down.
3. Close the cover and ensure it is seated correctly.

Removing a MicroSD card

1. Select **Eject SD card** from the **Import/export** page: **Homescreen > My data > Import/export > Eject SD card.**
2. Remove the MicroSD card from the Rear of the MFD.

3. Ensure you close the card reader's cover.

Inserting a MicroSD card — Axiom Pro variants

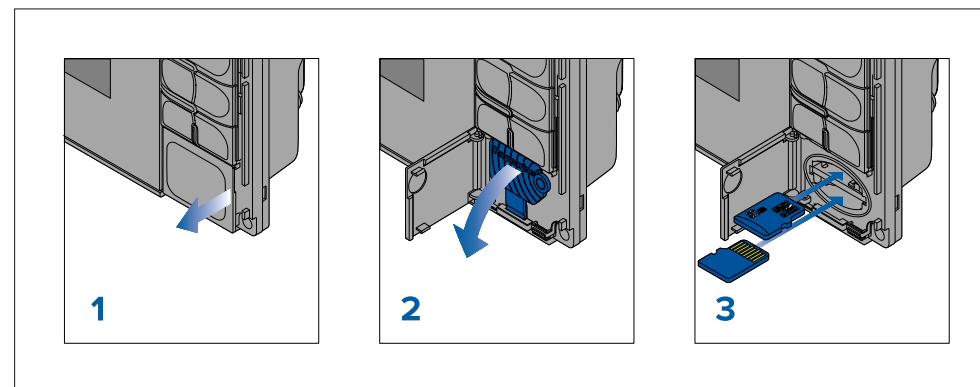

1. Open the card reader door.
2. Pull down the card reader cover.
3. Insert the card into a card slot and push until it clicks into place.


Note: When inserting a card into the lower card slot the memory card must be orientated with the contacts pointing upwards.

Removing a MicroSD card - Axiom Pro

With the card reader door open and cover pulled down:

1. Hold the **Power** button to access the **Shortcuts** menu, and then select the **Eject SD Card** option.
2. Push the card in until it clicks.
3. Pull the card free from the card slot.

Inserting external storage devices - RCR

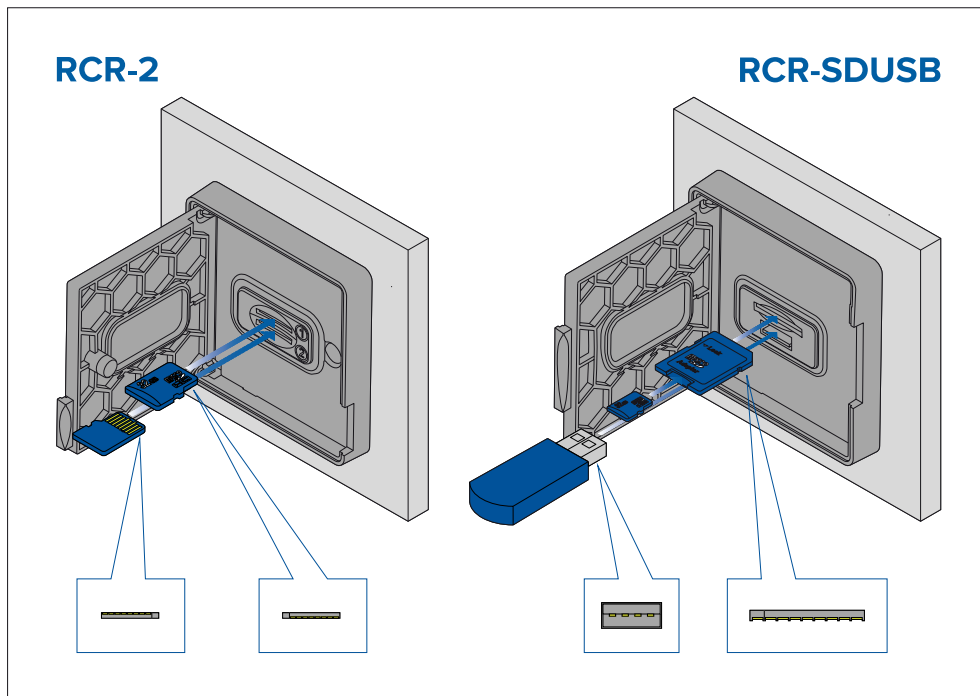

1. Open the card reader door.
2. Insert the storage device into a card slot and push until it clicks into place.
 - RCR-SDUSB slot 1 — With the contacts facing down, insert an SD card (or an SD card adaptor containing a MicroSD card) into the upper slot, labelled (1), and push until it clicks into place.
 - RCR-SDUSB slot 2 — With the contacts facing down, insert a USB drive directly into the lower slot, labelled (2).
 - RCR-2 slot 1 — With the contacts facing down, insert a MicroSD card into the upper slot and push until it clicks into place.
 - RCR-2 slot 2 — With the contacts facing up, insert a MicroSD card into the lower slot and push until it clicks into place.

Removing external storage (SD and MicroSD)

With the card reader door open:

1. Use the MFD's **Power** button to access the **Shortcuts** menu, and then select the **Eject SD Card** option.

2. Push the card in until it clicks.
3. Pull the card free from the card slot.

Removing external storage USB drive

With the card reader door open and cover pulled down:

1. Pull the drive free from the card slot.

Caution: Ensure card reader cover or door is securely closed

To prevent water ingress and consequent damage to the product, ensure that the card reader door or cover is firmly closed.

4.6 Software updates

Raymarine® regularly issues software updates for its products which provide new and enhanced features and improved performance and usability. It's important to ensure that you have the latest software for your products by regularly checking the Raymarine® website for new software releases.


www.raymarine.com/software

Note:

- It is recommended that you always backup your User data before performing a software update.
- To update compatible SeaTalkng® products you must use the designated Datamaster MFD that is physically connected to the SeaTalkng® backbone.
- In order to perform a software update any connected autopilot or Radar must be switched to Standby.
- The MFD's "Check online" feature is only available when the MFD has an Internet connection.
- To check which products are compatible with the MFD software update process, please refer to the website: www.raymarine.com/software.

Checking current software


The network settings menu provides details of the MFDs and connected devices software version.

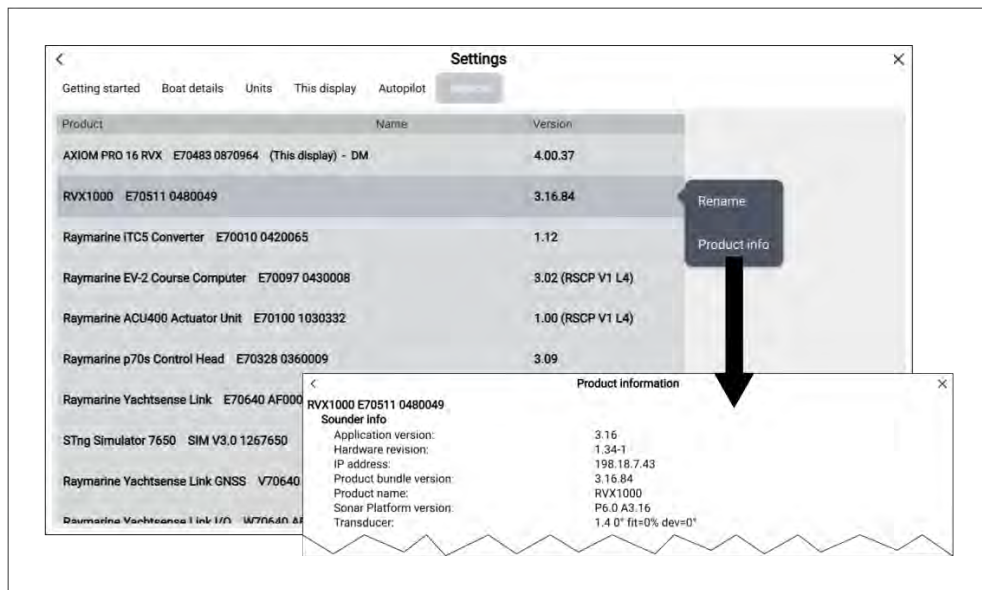

1. Open the **Network** settings menu: **Homescreen > Settings > Network**. A list of connected devices is displayed. The version column identifies the devices current software version.
2. Select a product from the list and then select **Product Info** from the pop-over menu to view more details about a product.

Updating software

MFD and connected device software can be updated from a memory card containing the software update files or by connecting the MFD to the internet and checking online for available software updates. Follow the steps below to install software using a memory card.

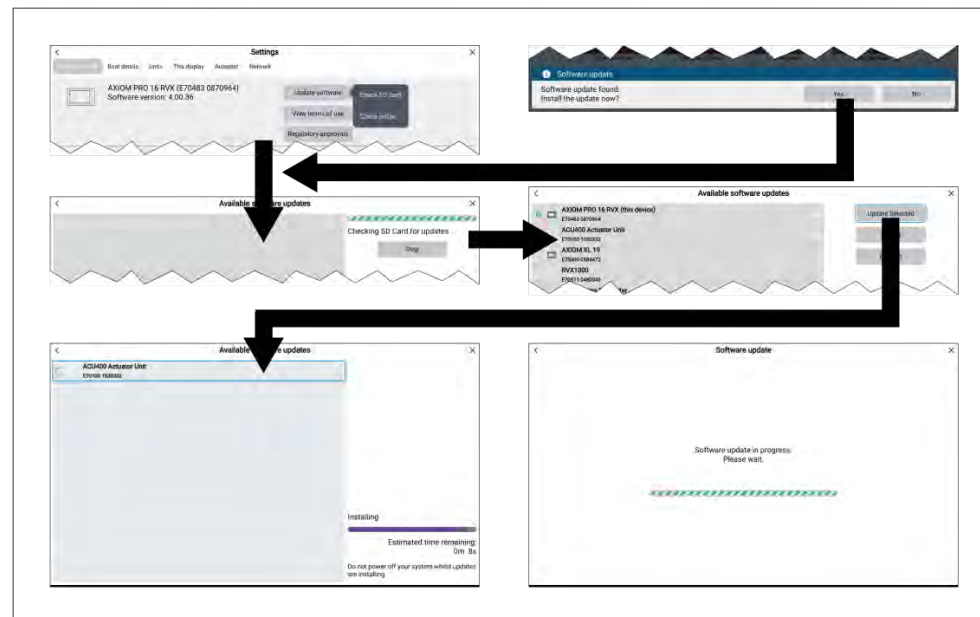

1. Check the software version of your product(s). Refer to [p.56 – Checking current software](#)
2. Compare your product(s) current software version to the latest version available on the Raymarine website www.raymarine.com/software
3. Download any newer software versions for your product(s).
4. Copy the files to MicroSD card.

Important:

The downloaded files may need unzipping first.

5. With your MFD powered on, insert the MicroSD card into the card reader slot.
Your MFD will automatically detect software files.

6. Select **Yes** on the new software found notification.
If the update is not automatically detect you can select Check SD card from the Update software pop-over menu available on the Getting started settings menu: **Homescreen > Settings > Getting started > Update software > Check SD card.**

7. The MFD will check your MicroSD card for available software updates and display a list of devices for which software updates are available.
8. Ensure that the relevant products in the list are selected.

You can select and deselect product(s) by selecting them in the list.

9. Select **Update selected** to commence the update process.

Networked MFDs will all display a software update in progress screen until all software updates are complete. During this time you will not be able to interact with your MFDs.

Updating software available online

MFD and connected device software can be updated from a memory card containing the software update files or by connecting the MFD to the internet and checking online for available software updates. Follow the steps below to install software available online.

1. Select **Update software** from the **Getting started** settings menu: (**Homescreen > Settings > Getting started > Update software**).
2. Select **Check online** from the pop-over menu.
3. If required, set up a Wi-Fi connection by selecting **Wi-Fi settings** and connecting to a Wi-Fi access point/hotspot that has an internet connection.
4. Select **Start** and then follow any onscreen instructions.
5. The MFD will check the internet for available software updates and display a list of devices for which software updates are available.
6. Ensure that the relevant products in the list are selected.

You can select and deselect product(s) by selecting them in the list.

7. Select **Update selected** to commence the update process.

Networked MFDs will all display a software update in progress screen until all software updates are complete. During this time you will not be able to interact with your MFDs.

4.7 Device pairing

Pairing a RMK remote keypad

You can control your MFD with an RMK keypad.

From the **This display** tab of the **Settings** menu: **Homescreen > Settings > This display** .

1. Select **Pair keypad**.
2. Follow the onscreen instructions to pair your keypad.

Ensure you select the correct orientation for the keypad during the pairing process.

3. Repeat steps 1 and 2 on each MFD you want to control from your keypad.

Note:

Please refer to the controls section of your keypad's documentation for details on controlling MFDs using a keypad.

Clear pairing (RMK)

1. Select **Clear pairings** to unpair ALL RMK keypads currently paired with the MFD.

Pairing with a Quantum Radar scanner

You can connect a Quantum Radar scanner to your MFD using Wi-Fi.

Pre-requisites:

- Ensure you have connected your Quantum Radar scanner in accordance with the instructions provided with the Radar scanner.
- Ensure you know your Radar scanner's SSID and passcode.

1. Select **Pair with Quantum** from the **This display** tab: **Homescreen > Settings > This display > Pair with Quantum**.
2. Follow the onscreen instructions to pair with your Quantum Radar.

The pairing process may take several minutes to complete.

For more information on the Quantum Radar pairing process (including troubleshooting information), refer to the Quantum Radar Installation instructions documents.

Pairing a Bluetooth speaker

Before attempting to pair with a Bluetooth speaker, ensure that the speaker is switched on and discoverable.

With your MFD's Bluetooth enabled:

1. From the Bluetooth settings page, select the relevant device from the **Available devices** list.
2. If requested, confirm the bluetooth pairing code.

If pairing is successful the speaker will appear in the **Paired devices** list and display the **Connected** message.


CHAPTER 5: HOMESCREEN

CHAPTER CONTENTS

- 5.1 Accepting the Limitations on Use — page 60
- 5.2 Homescreen overview — page 60
- 5.3 MFD Apps — page 61
- 5.4 Creating an app page — page 63
- 5.5 Homescreen data widget — page 64
- 5.6 Global positioning — page 65
- 5.7 My profiles — page 70
- 5.8 Status area — page 71
- 5.9 My data — page 73
- 5.10 Alarms — page 77
- 5.11 Man Overboard (MOB) — page 80
- 5.12 DSC VHF radio integration — page 81
- 5.13 Homescreen settings menus — page 82
- 5.14 IP device user interface access — page 93
- 5.15 Connecting to a wireless display — page 93

5.1 Accepting the Limitations on Use

After your MFD has powered up the Homescreen is displayed with the limitations on use disclaimer.

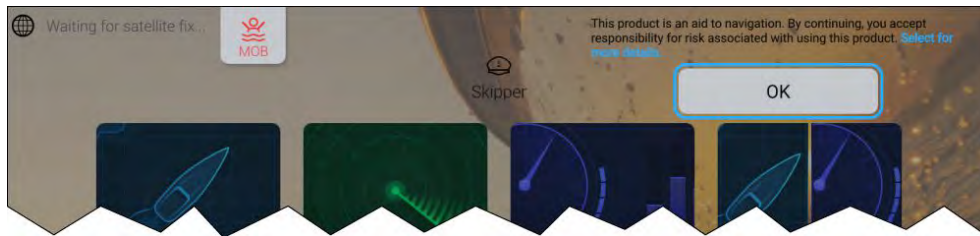

1. Before using the MFD you must accept the Limitations on Use (LoU) disclaimer. To view the full LoU Disclaimer, select the **Select for more details** link.


The LoU acknowledgment is displayed each time the display is powered on and for each new user profile. The full LoU text can be accessed at any time from the **Getting started** settings menu: **Homescreen > Settings > Getting started > View terms of use.**

Note:

By selecting the OK button you are agreeing to the full terms of use.

5.2 Homescreen overview

All settings and apps are accessed from the Homescreen. The homescreen is split in to 3 pages. The center page is shown by default.

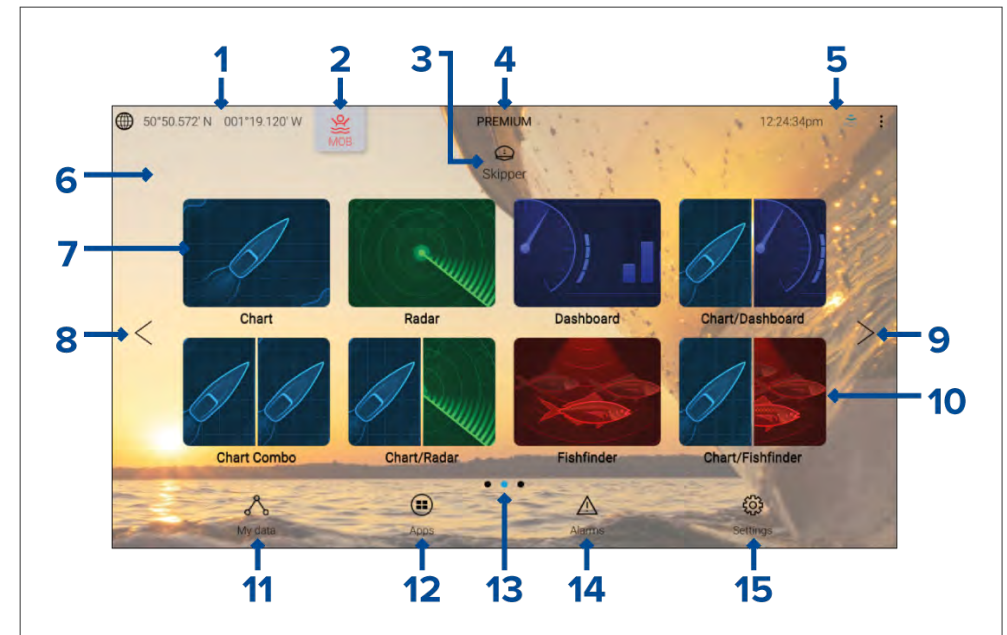

1. **GNSS position/fix details** — Select the text or icon to view GNSS settings and fix accuracy details. For details refer to: [p.66 — GNSS \(GPS\) Status](#)
2. **MOB (Man Over Board)** — Select and hold to activate the MOB alarm. For details refer to: [p.80 — Man Overboard \(MOB\)](#)
3. **Profiles** — Select the text or icon to access user and demo profiles. For details refer to: [p.70 — My profiles](#)
4. **Premium logo** — The premium logo identifies that you have a LightHouse™ chart card inserted that has a valid premium subscription. The logo is not displayed if your subscription has expired. For details refer to: [p.135 — LightHouse charts](#)
5. **External device connections and system time** — Icons are displayed to signify external device connections. Select this area to access Bluetooth and YachtSense™ Link settings, disengage your autopilot or to adjust the UTC time offset. For details refer to: [p.71 — Status area](#)
6. **Homescreen background image** — The default image is determined by the boating activity selected during the start up wizard. The

background image can be customized from the **This display** settings menu: **Homescreen > Settings > This display**. For details refer to: [p.88 — Splashscreen and background images](#)

7. **Fullscreen app page icon** — Select an icon to open the relevant MFD app page. For available MFD apps refer to: [p.61 — MFD Apps](#)
8. **Homescreen page navigation** — Select the < (left) arrow, or swipe your finger from left to right across the homescreen to cycle though homescreen pages on the left.
9. **Homescreen page navigation** — Select the > (right) arrow, or swipe your finger from right to left across the homescreen to cycle though homescreen pages on the right.
10. **Splitscreen app page icon** — Select an icon to open the relevant MFD app page. App pages can contain more than 1 MFD app. For details on creating new homescreen app pages refer to: [p.63 — Creating an app page](#)
11. **My data** — Select to access my data (Waypoints, Routes and Tracks), the fuel manager and to view files on external storage. For details refer to: [p.73 — My data](#)
12. **App launcher** — Select to access installed Android apk apps and shortcuts to user interfaces for integrated partner hardware. For details refer to: [p.372 — App launcher](#)
13. **Homescreen page navigation** — Identifies the current homescreen page.
14. **Alarm manager** — Select to access the alarm manager and view alarm history. For details refer to: [p.77 — Alarms](#)
15. **Settings menus** — Select to access the MFD's settings menus. For details refer to: [p.82 — Homescreen settings menus](#)

Note:

When more than 1 display is connected to the same network, then the Homescreen of the MFD designated as Data Master will be mirrored on all MFDs.

5.3 MFD Apps

MFD apps are displayed on your MFD in app pages. Each app page is accessed from the homescreen. App pages can be fullscreen, containing only 1 MFD app or they can be splitscreen, containing up to 4 apps.

Note:

- Not all apps appear on the homescreen by default. If an app is not present on the homescreen you can create a new app page that contains this app.
- Some apps require connected hardware or specific MFD configurations for the apps to be available.

The available MFD apps are:

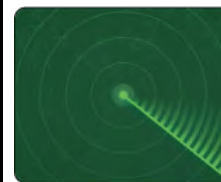
Navigation apps



Chart — The Chart app displays electronic cartographic information from your Chart cards and when used in conjunction with a GNSS receiver, plots your vessel's position. The Chart app can be used to mark specific locations using Waypoints, build and navigate Routes or keep a record of where you have been by recording a Track.

For more information refer to [p.126 — Chart app - General](#)

To use the chart app for navigation as a minimum navigational electronic charts and a GNSS receiver is required.


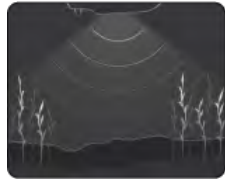

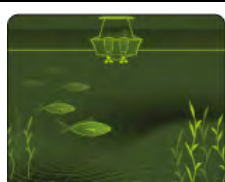


Radar — The Radar app is a situational awareness aid that displays a graphical representation of your surroundings in relation to your vessel using the echo/target returns from a connected Radar scanner. The Radar app allows you to track targets and measure distances and bearings.





For more information refer to [p.239 — Radar app](#)

To use the radar app a compatible radar scanner is required.



Sonar / Fishfinder apps

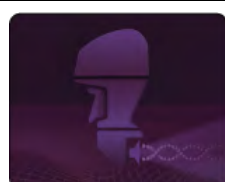

| | |
|--|---|
|  | <p>Fishfinder — The Fishfinder app uses a connected sonar module and transducer to help you to find fish by building up an underwater view of bottom structure and targets in the water column covered by your transducer. This Fishfinder app icon denotes that a conical beam transducer channel is being used. For more information refer to p.221 — Fishfinder app. To use the sonar/fishfinder app a compatible sonar transducer is required.</p> |
|  | <p>This Fishfinder app icon denotes that a DownVision™ transducer channel is being used.</p> |
|  | <p>This Fishfinder app icon denotes that a SideVision™ transducer channel is being used.</p> |
|  | <p>This Fishfinder app icon denotes that a RealVision™ 3D transducer channel is being used.</p> |

Data and engine apps



| | |
|---|---|
|  | <p>Dashboard — The Dashboard app provides data readings from connected sensors and equipment. The Dashboard app is also used for controlling, configured, compatible, Digital Switching hardware. For more information refer to p.287 — Dashboard app. To display data compatible products that transmit supported data is required.</p> |
|  | <p>Yamaha — The Yamaha app provides data readings from compatible Yamaha engines. For more information refer to p.300 — Yamaha app. Compatible Yamaha engines and gateway is required.</p> |
|  | <p>Yamaha HDMI — The Yamaha HDMI app provides data readings from connected Yamaha engines that use a compatible HDMI interface. For more information refer to p.300 — Yamaha app. Compatible Yamaha engines and HDMI gateway is required.</p> |
|  | <p>VesselView — The VesselView app provides data readings from compatible Mercury engines. For more information refer to p.311 — Mercury VesselView app. Compatible Mercury VesselView engines and gateway are required.</p> |

Entertainment apps


| | |
|---|--|
|  | <p>Audio — The Audio app allows you to control audio from a connected compatible entertainment system. For more information refer to p.344 — Audio app. Compatible entertainment system is required.</p> |
|  | <p>Video — The Camera app allows you to control and view feeds coming from connected video equipment such as an IP camera or Thermal camera. For more information refer to p.317 — Video app. Compatible visible light or thermal camera is required.</p> |

| | |
|---|--|
|  | <p>UAV — The UAV (Unmanned Aerial Vehicle) app provides remote controls, settings and video display, including flight data for your compatible UAV device. For more information refer to p.359 — UAV (Unmanned Aerial Vehicle) app. Compatible drone is required.</p> |
|  | <p>PDF Viewer — The PDF Viewer app allows you to open PDF files located on your external storage. For more information refer to p.356 — PDF Viewer app</p> |

YachtSense and DockSense apps

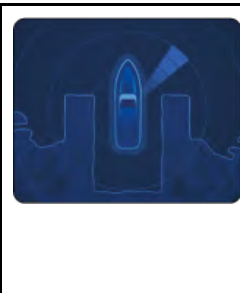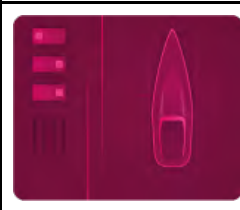
| | |
|--|--|
|  | <p>DockSense — The DockSense app is used to control DockSense™ alert and DockSense™ Control systems.</p> <ul style="list-style-type: none"> • For DockSense™ Alert refer to separate operation instructions — document number 81393. • For DockSense™ Control refer to separate operation instructions — document number: 81398. <p>Requires a fully commissioned DockSense system.</p> |
|  | <p>YachtSense — The YachtSense app is used to control YachtSense™ digital control system. Requires a fully commissioned YachtSense digital control system.</p> |

Other apps

| | |
|---|--|
|  | <p>Messaging — The First responder boating activity profile includes a Messages app. For details refer to: p.280 — Messaging. The Messages app also requires STEDS compatible AIS hardware.</p> |
|---|--|

5.4 Creating an app page

New app pages can be created in the blank spaces available on the homescreen.

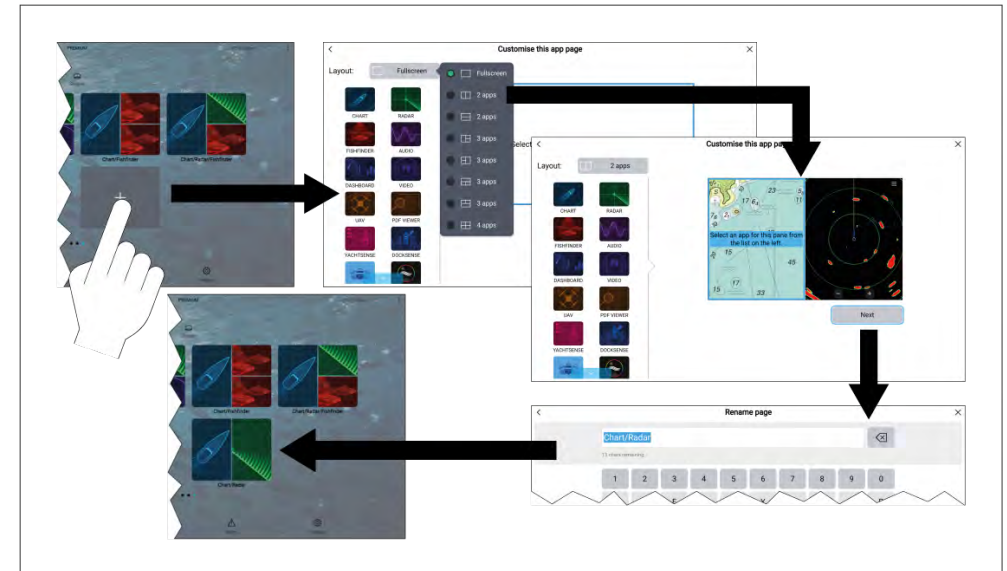

1. Press and hold on a blank space on the onscreen.
2. Select the **Layout:** option and choose the desired page layout.
 - Some apps are restricted to certain layouts.*
3. Select the icons for the Apps that you want to be displayed on the page.
4. Select **Next**.
5. Enter a name for your new app page.

A default name will be suggested.

6. Select **Save**.

The app page is saved and the new app page icon will be shown on the homescreen.

Note:

If your system includes hardware for third party integration partners the Interface shortcuts for these will also be listed.


Customizing an existing app page

You can rename, change the apps or delete existing app pages.

1. Select and hold on an existing app page icon on the homescreen.
2. Select from the following options:
 - **Customize** — Selecting Customize will open the page creation page where you can select the layout and which apps you want on the app page.
 - **Delete** — Selecting delete will delete the page from the homescreen. The delete action cannot be undone.
 - **Rename** — Selecting Rename will open the onscreen keyboard so that you can change the name of the app page.

Editing the splitscreen ratio

The size of the apps in a splitscreen app page can be changed.

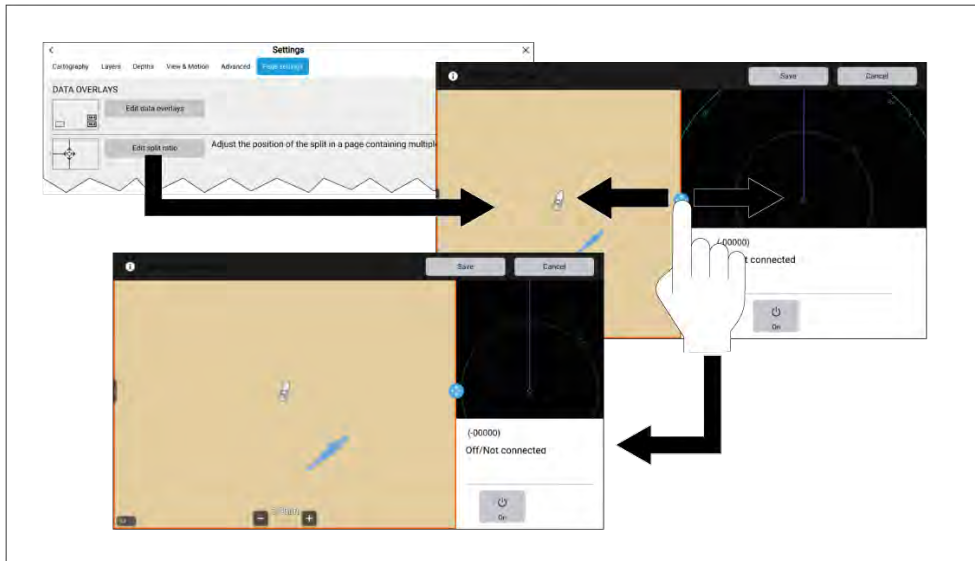


With a Splitscreen app page displayed:

1. Select **Edit split ratio** from the **Page settings** menu: **Menu > Settings > Page settings > Edit split ratio.**
2. Drag the Resize icon to create the desired split ratio.
3. Select **Save.**

5.5 Homescreen data widget

The app page icon used for the fullscreen dashboard app on the homescreen can be changed to a dynamic data widget.

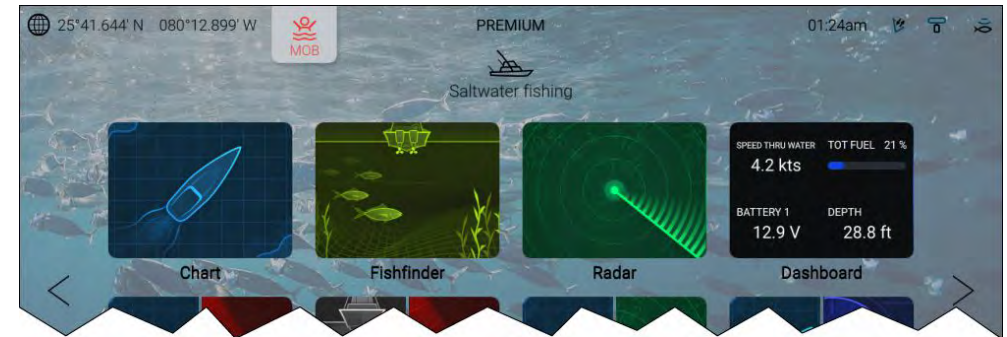


The dynamic data widget can display up to 4 live data items.

The data widget can be selected to open the dashboard app.

Enabling and configuring the data widget

You can enable and configure the data widget by following the steps below.

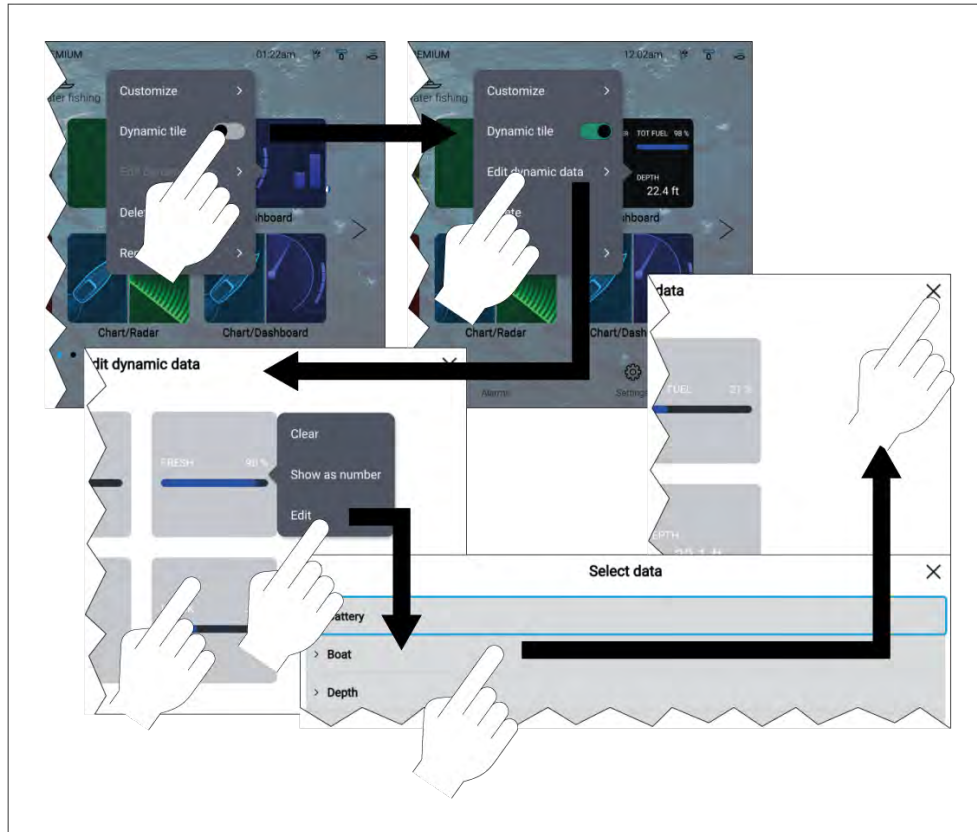

From the homescreen:

1. Press and hold on the fullscreen dashboard app page icon.
2. Enable the **Dynamic tile** toggle switch.
3. Select **Edit dynamic data**.
4. Select a data item.
5. Select **Edit** from the pop-over menu.
6. Select the type of data item you want to display.

The data items are split into number data items and graphical bar data items.

7. Select the relevant data item category and then select the data item.
8. Select the < (Back) or X (Close).

9. Follow steps 4 to 8 for each of the data items.


10. Select the < (Back) or X (Close) to return to the homescreen.

5.6 Global positioning

Global Navigation Satellite System (GNSS) constellations

A GNSS constellation is a system of satellites that provides autonomous geospatial positioning that allows electronic devices with compatible receivers to determine their location (longitude, latitude and altitude).

Available GNSS constellations

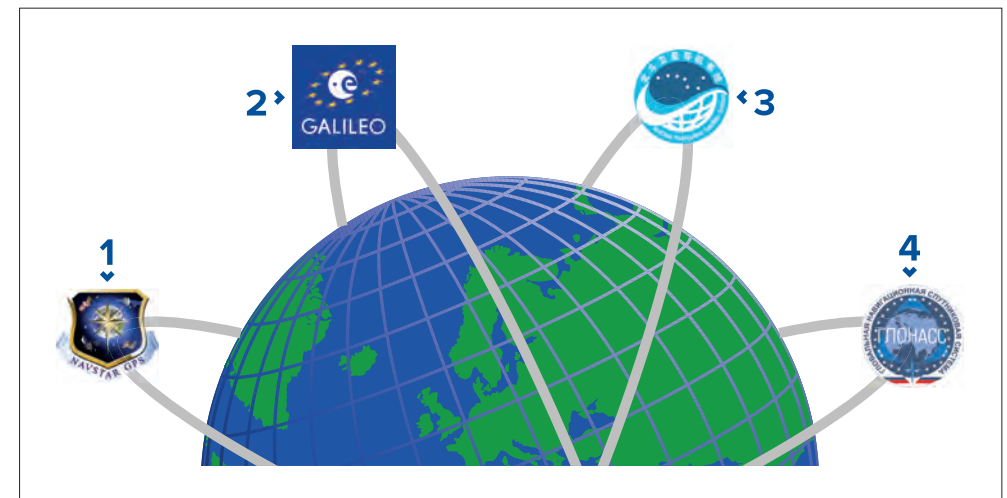

1. **GPS** — (NAVSTAR) Global Positioning System is the US owned constellation of satellites that became fully operational in 1995. GPS is the most widely used GNSS constellation and the term GPS has become synonymous with GNSS.
2. **Galileo** — EU owned satellite constellation that became fully operational in 2019.
3. **BeiDou** — Chinese Regional Navigation Satellite System, currently in its third generation, became fully operational in 2020.
4. **GLONASS** — (**G**LObalnaya **N**Avigatsionnaya **S**putnikovaya **S**istema" or "Global Navigation Satellite System") is the Russian owned constellation of satellites that has offered global coverage since 2010.

GNSS Constellations:

The GPS constellation (USA) is always enabled and cannot be disabled. One other GNSS can be enabled at the same time as GPS:

The GNSSs available are:

- BeiDou (China)
- Galileo (EU) — Not currently supported.
- GLONASS (Russia)

Note:


GNSS constellation selection is only available when using a compatible GNSS (GPS) receiver. **Not all MFD and GNSS receiver variants support the same range of constellations:**

- For a list of compatible GNSS receivers refer to: [p.68 — GNSS constellation selection compatible receivers](#)
- For the settings available on incompatible receivers refer to: [GNSS settings for incompatible GNSS receivers](#)

Satellite based augmentation systems (SBAS)

Satellite based augmentation systems (SBAS) are systems that are used to complement existing GNSS by providing differential corrections that improve GNSS performance, including accuracy, availability and reliability.

The image below shows approximate coverage of the SBASs available on the MFD:

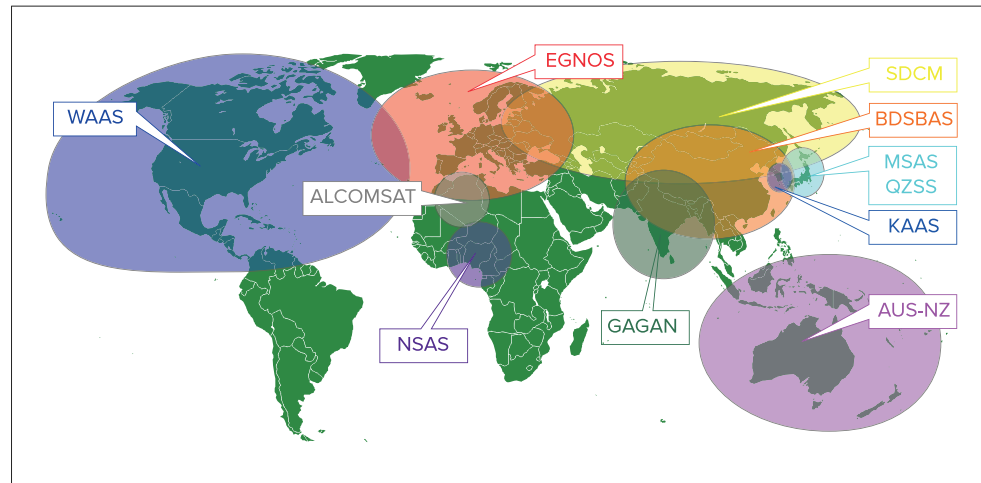


1. **ALCOMSAT** (Algeria)

2. **AUS-NZ** (Australia / New Zealand)
3. **BDSBAS** (China)
4. **EGNOS** (Europe)
5. **GAGAN** (India)
6. **KAAS** (Korea)
7. **MSAS** (Japan)
8. **NSAS** (Nigeria)
9. **SDCM** (Russia)
10. **WAAS** (USA)
11. **QZSS** (JAPAN)

GNSS (GPS) Status

Your vessel's GNSS (GPS) position is provided in the top left corner of the Homescreen. The status of the position fix and the satellites in use is displayed in the Fix menu.

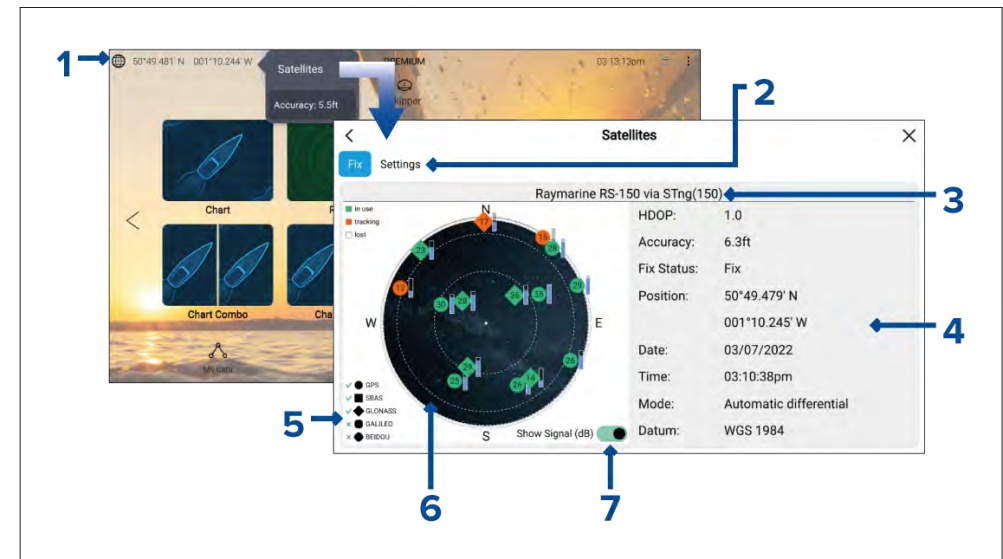

1. If latitude and longitude is displayed on the Homescreen, you have a valid position fix. If the text turns red, your fix accuracy is low. To access the **Fix** menu select the Position details area on the Homescreen and then select **Satellites** from the Pop-over menu.

2. Select to access settings related to the GNSS (GPS) receiver.
3. The name of the GNSS (GPS) receiver currently being used to provide position data to the system is displayed centered at the top of the screen.
4. Position fix and fix accuracy data is displayed.

Note: Not all hardware variants support the display of position fix and accuracy information.

5. The shape of the satellite symbols identify which GNSS constellation they belong to.


Note: When using a compatible GNSS receiver, ticks are shown next to the symbols to indicate which constellations are currently selected for positioning. For a list of compatible GNSS receivers refer to: [p.68 – GNSS constellation selection compatible receivers](#)

6. The sky view on the left side of the page shows the position of navigation satellites. The color of the satellite identifies its status:
 - Green = satellite in use
 - Orange = tracking satellite (not currently used for position fix)
 - Gray = searching for satellites
7. The signal strength indicator for the satellites can be enabled and disabled using the **Show Signal (dB)** toggle switch.

GNSS settings

The settings for your GNSS (GPS) receiver (internal or external) can be accessed from the **Satellites** menu: **Homescreen > GNSS pop-over > Satellites > Settings**.

Settings displayed are for the GNSS (GPS) receiver currently in use. The name of the GNSS (GPS) receiver currently being used by the system is displayed in the **Fix** menu.

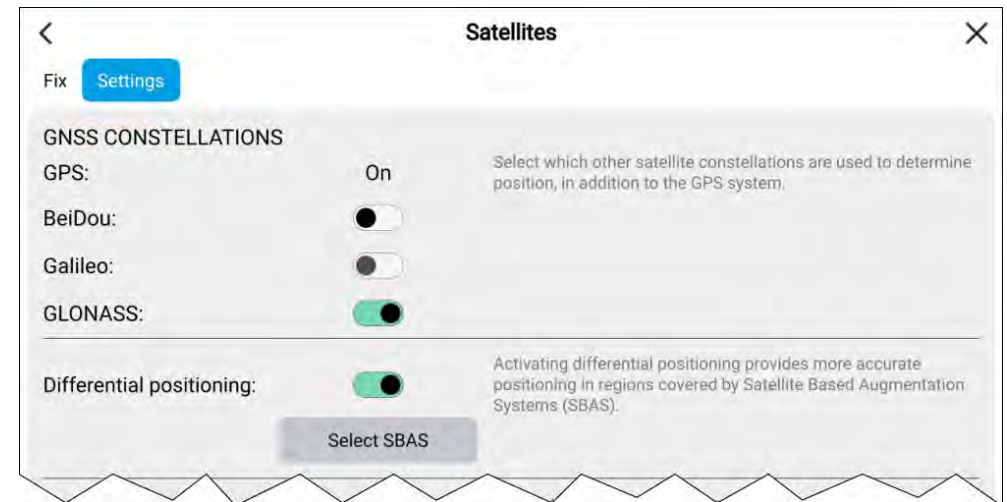

GNSS Constellations:

The GPS constellation (USA) is always enabled and cannot be disabled. One other GNSS can be enabled at the same time as GPS:

The GNSSs available are:

- BeiDou (China)
- Galileo (EU) — Not currently supported.
- GLONASS (Russia)

Note:

GNSS constellation selection options will be disabled 'grayed out' when using an incompatible GNSS (GPS) receiver.

- For a list of compatible GNSS receivers refer to: [p.68 – GNSS constellation selection compatible receivers](#)
- For the settings available on incompatible receivers refer to: [GNSS settings for incompatible GNSS receivers](#)

Differential positioning:


- Enable and disable the use of **Differential positioning** (SBAS) using the toggle switch. Enabling differential positioning provides more accurate positioning in regions covered by Satellite Based Augmentations Systems (SBAS).

- Select **Select SBAS** to view a list of supported SBASs used for differential positioning. The SBASs being used can be enabled and disabled using the relevant check boxes

Note:

SBAS selection options will be disabled ‘grayed out’ when using an incompatible

- For a list of compatible GNSS receivers refer to: [p.68 — GNSS constellation selection compatible receivers](#)
- For the settings available on incompatible receivers refer to: [GNSS settings for incompatible GNSS receivers](#)

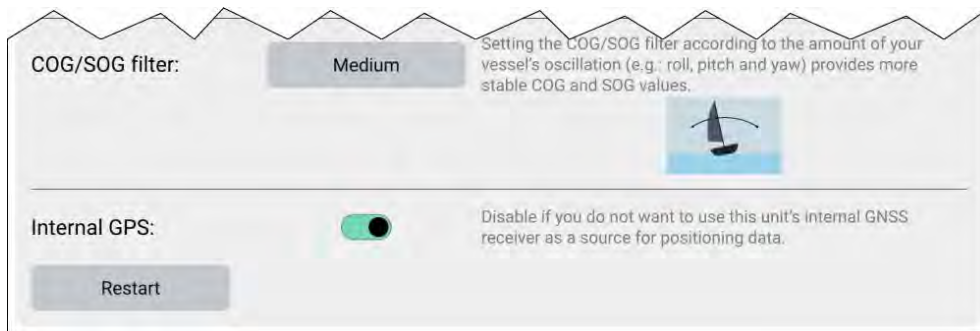

COG / SOG filter

Setting the COG / SOG filter according to the amount of your vessel's oscillation (e.g.: roll, pitch and yaw) provides more stable COG and SOG values.

The data reported by your GNSS receiver provides an instantaneous measure of the receiver's speed and direction. Under certain conditions the data can become erratic. (e.g.: a slow moving sailing vessel in rough seas will have a high oscillations and will benefit from a High setting, whereas a power boat that can quickly change speed and direction will have a low oscillation and will benefit from a low settings.)

The available options are:

- High
- Medium (default)
- Low

Note:

The filter does not affect your GNSS receiver's reported position.

Internal GPS

If applicable, you can enable and disable the MFD's internal receiver using the toggle switch.

Disable if you do not want to use the MFD's internal GNSS receiver as a source for positioning data.

For troubleshooting purposes you can also **Restart** the active GNSS receiver.

GNSS constellation selection compatible receivers

GNSS constellation selection and SBAS selection is only available on supported Raymarine GNSS receivers.

Compatible receivers

The following GNSS receivers support GNSS constellation selection and SBAS selection:

- Axiom™+ MFD's internal GNSS receiver running LightHouse™ version 4.0 or later or LightHouse™ version 3.14 or later.
- Axiom™ Pro MFD's internal GNSS receiver running LightHouse™ version 4.0 or later or LightHouse™ version 3.14 or later.
- Axiom™ XL MFD's internal GNSS receiver running LightHouse™ version 4.0 or later or LightHouse™ version 3.14 or later.
- RS150 external GNSS receiver running software version 1.28 or above.



Incompatible receivers

The following GNSS receivers do NOT support GNSS constellation selection and SBAS selection:

- Axiom™ MFD's internal GNSS receiver.
- Axiom™+ MFD's internal GNSS receiver running LightHouse™ version 3.13 or below.
- Axiom™ Pro MFD's internal GNSS receiver running LightHouse™ version 3.13 or below.
- Axiom™ XL MFD's internal GNSS receiver running LightHouse™ version 3.13 or below.
- RS150 external GNSS receiver running software below version 1.28.
- AR200 Augmented reality sensor.

GNSS settings for incompatible GNSS receivers

The available settings when using a GNSS receiver that does NOT support GNSS constellation selection and SBAS selection is shown below.

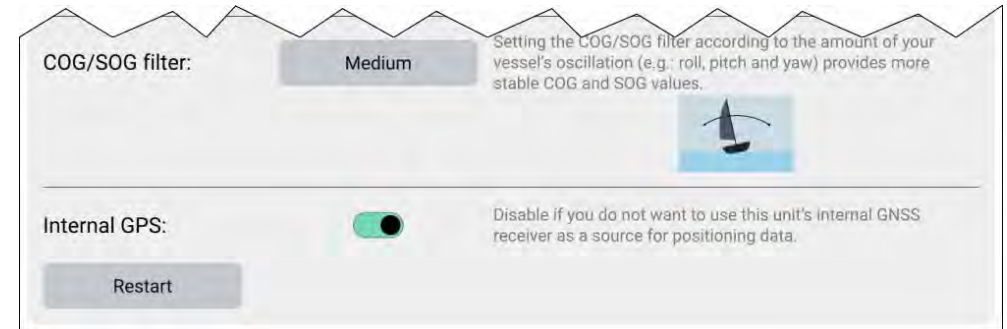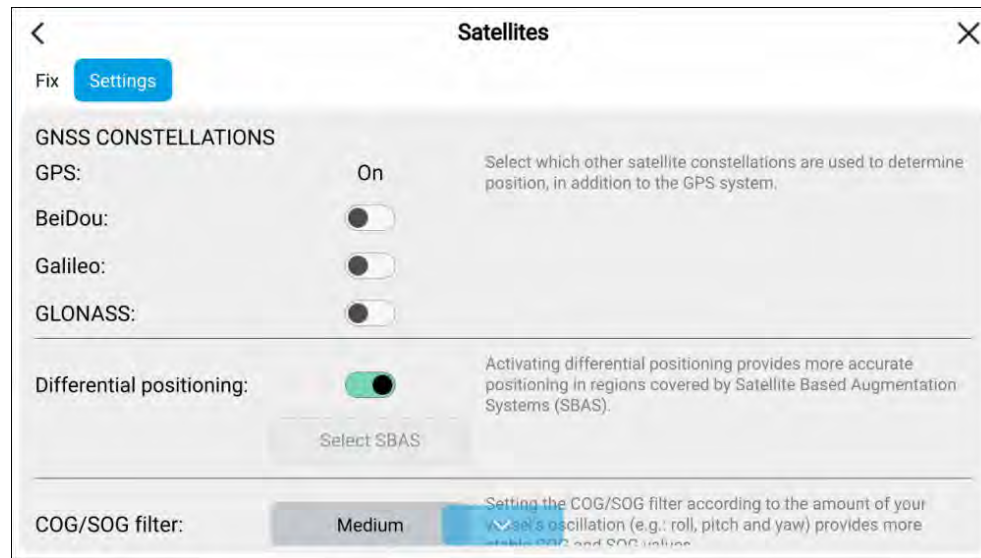

COG / SOG filter

Setting the COG / SOG filter according to the amount of your vessel's oscillation (e.g.: roll, pitch and yaw) provides more stable COG and SOG values.

The data reported by your GNSS receiver provides an instantaneous measure of the receiver's speed and direction. Under certain conditions the data can become erratic. (e.g.: a slow moving sailing vessel in rough seas will have a high oscillations and will benefit from a High setting, whereas a power boat that can quickly change speed and direction will have a low oscillation and will benefit from a low settings.)

The available options are:

- High
- Medium (default)
- Low

Note:

The filter does not affect your GNSS receiver's reported position.

Internal GPS

If applicable, you can enable and disable the MFD's internal receiver using the toggle switch.

Disable if you do not want to use the MFD's internal GNSS receiver as a source for positioning data.

For troubleshooting purposes you can also **Restart** the active GNSS receiver.

Note:

GNSS constellation selection is not supported and the options will be disabled when using an incompatible GNSS receiver.

Differential positioning:

- Enable and disable the use of **Differential positioning** (SBAS) using the toggle switch. Enabling differential positioning provides more accurate positioning in regions covered by Satellite Based Augmentations Systems (SBAS).

Note:

Differential positioning can be enabled and disabled but individual SBAS selection is not supported and the option will be disabled when using an incompatible GNSS receiver..


5.7 My profiles

You can share your MFD with other users by creating user profiles on your MFD. Profiles enable you to retain your own personal settings whilst letting other users personalize the MFD's settings to their preference.

Note:

User data such as waypoints, routes, tracks, images and video recordings etc. will be available to all users, and are shared by all users. This means that, for example, if you add or delete a waypoint while using one user profile, the change will also be reflected in all other profiles on the MFD, including demo profiles.

You can access the profiles page by selecting the profile icon on the homescreen.

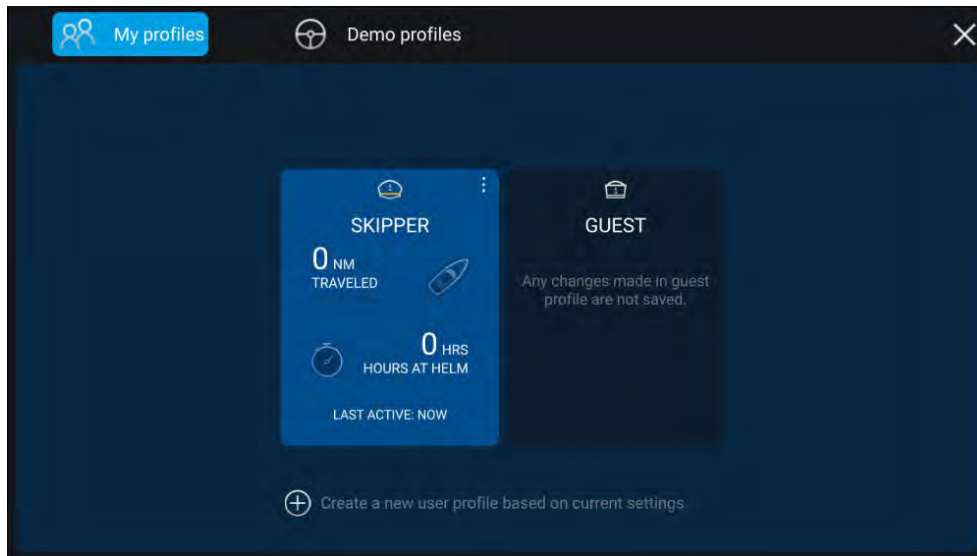

Selecting the + (plus) icon will create a new profile based on the profile that is currently in use.

MFD settings changes are unique to the profile in use and are retained the next time the profile is used.

The distance and time that a profile has been active is displayed for each profile.

Profile names and icons can be customized. You can also reset the distance and time for each profile.


A Guest profile is available for temporary users. Setting changes to the Guest profile are not retained. Each time the guest profile is activated the settings are based on the last used profile.

When the MFD is rebooted the last used profile will be active.

Demo profiles are also available to help you practice operating your MFD with simulated data.

Demo profiles

Profiles are available for simulation and demonstration purposes. A demo movie, stored on external storage, can also be set to play when a demo profile is activated and inactivity has been detected for 60 seconds.

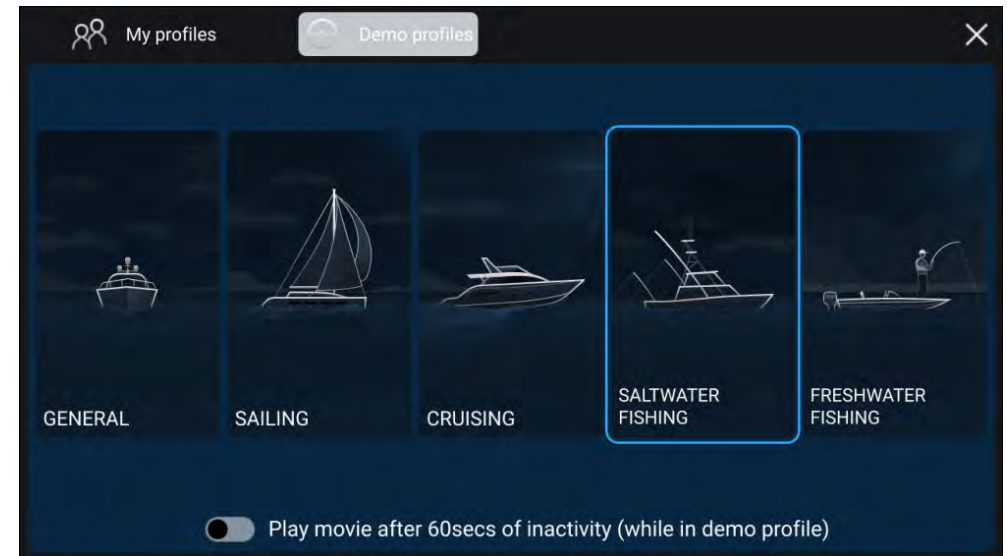

Selecting a demo profile will provide your MFD with simulated data to help you practice operating your display.

Important:

- It is recommended that demo profiles are NOT activated whilst navigating.
- User **data** such as waypoints, routes, and tracks is shared with all the other user profiles on the MFD. This means that, for example, if you add or delete a waypoint while using a demo profile, the change will also be reflected in all other user profiles on the MFD.
- Demo profiles will NOT display any real data, including safety warnings and messages.
- Any **settings** changes made will not affect User profiles.

Demo movie requirements

A demo movie file can be set to play when a demo profile is active and the MFD has not been used for 60 seconds.

Demo movie files must be in the .mov file format and encoded using the H.264 video codec standard. The Demo movie files must be saved to an external storage device connected to the MFD. Demo movies are not shared across networked MFDs.

When the Demo movie feature is activated the system will search for a demo movie file associated with the active demo profile. If an associated file cannot be found then the generic demo.mov is played. See below for filename details.


| Demo profile | Associated filename |
|---|---------------------|
| General | demo_general.mov |
| Sailing | demo_sailing.mov |
| Cruising | demo_cruising.mov |
| Saltwater fishing | demo_salt.mov |
| Freshwater fishing | demo_fresh.mov |
| Plays in all demo profiles if an associated demo file is not found. | demo.mov |

If an MFD is powered off with the demo movie active then the next time the MFD is powered on the demo movie will play immediately after boot up.

Any interaction with the Touchscreen or physical buttons will stop the movie playing and return you to the active demo profile.

5.8 Status area

You can view the status of certain connected devices using the MFD's Status area on the homescreen. The status area is located at the top right of the homescreen. The status area also includes the **Time** received from internal or external GNSS receiver and identifies when an Axiom™ Pro MFD is in **Touchlock** mode.

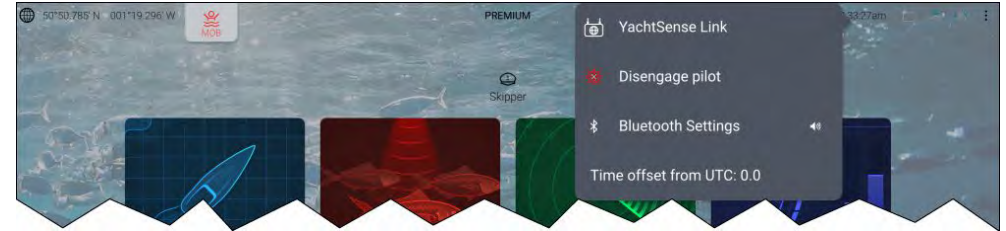

Device status

The status of the following devices is shown in the status area: autopilot, AIS, radar, sonar transducer, YachtSense link router and bluetooth connection.

Pop-over menu options

From the pop-over menu the following options are available:



- **YachtSense Link** — Select to access the YachtSense Link router's user interface.
- **Disengage pilot** — Select to disengage your autopilot.
- **Bluetooth Settings** — Select to access bluetooth connection settings. Select the speaker icon to access bluetooth volume controls.
- **Time offset from UTC** — Select to adjust the Time offset from UTC.

MFDs that are configured using the First responder boating activity includes additional **AIS mode**, and **SITREP** options and provides Data logging status. For details refer to: [p.267 — First responder](#)




Status area icons

The icons displayed in the Status area signify the current status of certain connected devices.

YachtSense™ Link

| Icon | Status | Icon | Status |
|---|----------------------------|---|--|
|  | YachtSense™ Link connected |  | YachtSense™ Link not connected / disconnected. |


AIS

| Icon | Status | Icon | Status |
|---|--------------------------------|---|-------------------------------------|
|  | AIS transmitting and receiving |  | AIS receive only (e.g. Silent Mode) |
|  | AIS Error | | |



Note:

The First responder boating activity profile includes an additional AIS icon. For details refer to: [p.267 – First responder](#)




Autopilot

| Icon | Status | Icon | Status |
|---|-------------------|------|--------|
|  | Autopilot engaged | | |




Bluetooth

| Icon | Status | Icon | Status |
|---|------------------------------|---|------------------------------|
|  | Bluetooth on / not connected |  | Bluetooth connected / paired |


Radar

| Icon | Status | Icon | Status |
|---|--------------------|---|---------------|
|  | Radar transmitting |  | Radar standby |
|  | Radar error | | |

Sonar / Transducer

| Icon | Status | Icon | Status |
|---|---------------|---|-------------------|
|  | Sonar pinging |  | Sonar not pinging |
|  | Sonar error | | |

Touchlock


| Icon | Status | Icon | Status |
|---|------------------|------|--------|
|  | Touchlock active | | |

Note:

The First responder boating activity profile also includes Data logging status icons. For details refer to: [p.267 – First responder](#)

5.9 My data

Selecting **My data** from the homescreen provides access to user data such as waypoints, routes and tracks. You can also access the fuel manager, file browser and the data import and exports settings.

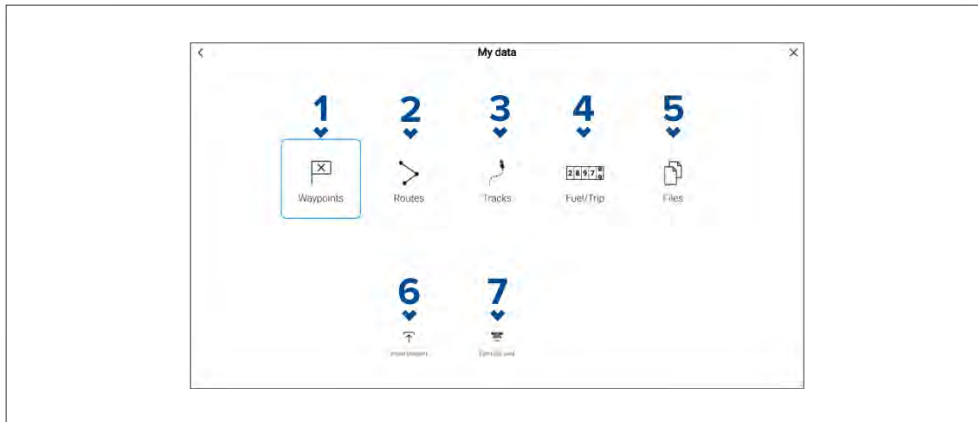

1. **Waypoints** — Select to access the waypoints list to manage your waypoints.
2. **Routes** — Select to access the routes list to manage your routes.
3. **Tracks** — Select to access the tracks list to manage your tracks.
4. **Fuel/Trip** — Select to access and set up the fuel manager and view trip data.

5. **Files** — Select to access the file browser.
6. **Import/export** — Select to access back up and restore settings.
7. **Eject SD card** — Select before ejecting a memory card to ensure it is removed safely.

Note:

MFDs configured with the First responder boating activity profile include a Messages icon on the My data page which allows access to the Messages app. For details refer to: [p.280 – Messaging](#)

The Messages app also requires STEDS compatible AIS hardware.

Related links:

- [p.179 – Detailed mode main menu](#)
- [p.181 – Fishing chart mode main menu](#)
- [p.188 – Racing mode main menu](#)
- [p.198 – Fish mapping mode main menu](#)

Fuel/trip manager

The fuel/trip manager collects trip data automatically based on distance travelled and provides an estimate of how much fuel you have remaining based on user inputted fuel refill data.

The Fuel/trip manager can be accessed by selecting **Fuel/Trip** from the **My Data** page: **Homescreen > My Data > Fuel/Trip**.



1. Estimated fuel remaining
2. **Set all tanks full** — Select when you have filled up all tanks.
3. **Add partial fuel fill** — Select to enter a specific volume of fuel during a partial tank fill.

Note: If you enter the wrong amount of fuel this can be corrected by entering a minus value as a partial fuel fill, this will reduce the total amount of fuel remaining by the amount entered.


4. Trip (Manual) — accumulates data until reset.
5. Trip (Day) — resets automatically when local time passes midnight.
6. Trip (Month) — resets automatically on the 1st day of the month.
7. Trip (Season) — accumulates data until reset.
8. **Reset trip** — The **Trip (Manual)** and **Trip (Season)** logs can be reset by selecting the relevant **Reset Trip** button.

Note:

- The Fuel manager estimates the amount of fuel remaining onboard based on logging each time you fill up, your vessel's total fuel capacity, and how much fuel is burned by your engine(s). Incorrect entries will affect the fuel calculations which could result in a shortage of fuel.
- The Fuel remaining calculation is an estimate and will be inaccurate if fuel fills are not entered, entered incorrectly, or if fuel is used by other sources (e.g.: generators).
- Distance to Empty and Time to Empty values are based on estimated fuel remaining calculations which do not take into account the effects of weather and tide on fuel usage.
- This system is not a substitute for other fuel calculations. You should not rely on the Fuel manager calculations for accurate voyage planning or in emergency and safety critical situations.

Fuel set up

The fuel manager can be enabled and configured from the **Fuel set up** menu.

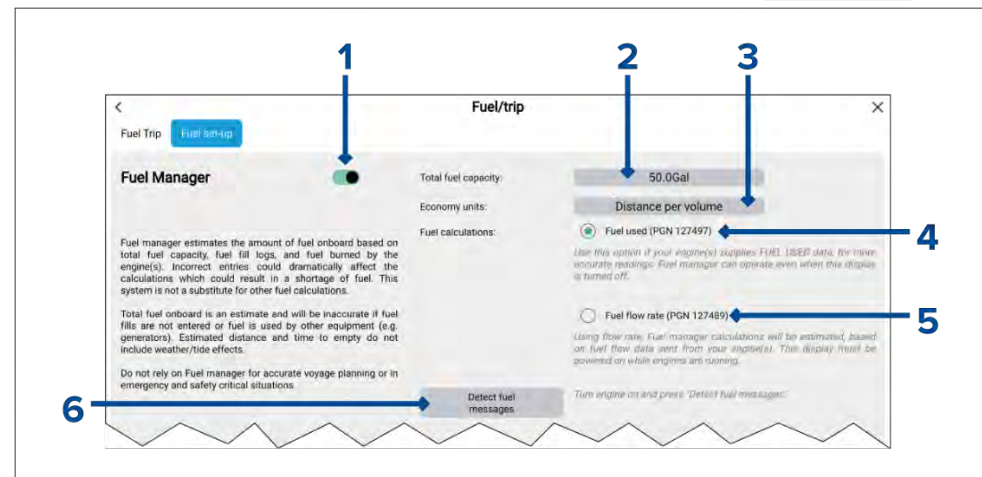

1. **Fuel Manager** — Select to enable or disable the fuel manager.
2. **Total fuel capacity** — Sum of total capacity of all your fuel tanks.
3. **Economy units** — Economy units used in data overlays, Side bars or the Dashboard app.
4. **Fuel used (PGN 127497)** — Use this option if your engine(s) supply Fuel used data. When Fuel used is selected the Fuel manager will continue

to operate when the MFD is switched off. This option usually provides more accurate readings.

5. **Fuel flow rate (PGN 127489)** — this option estimates fuel calculations based on fuel flow rate data sent by your engine(s). Your MFD must remain switched on, whilst engines are running.
6. **Detect fuel messages** — If you are unsure which engine messages your engine provides, select this option to determine the correct message.

Setting up the fuel manager


To start using the fuel manager you must first specify the total capacity of your fuel tanks, and then fill the tanks to set a reference level for the fuel manager.

From the **Fuel set-up** page: **Homescreen > My Data > Fuel/Trip > Fuel set-up:**

1. Select the box next to **Total fuel capacity:** and enter the total capacity of all of your fuel tanks.
2. Select the **Fuel manager** toggle switch to enable the fuel manager.
3. Select the box next to **Economy units:** and select either: Distance per volume, Volume per distance, or Litres per 100km.
4. Select either **Fuel used (PGN 127497)** or **Fuel flow rate (PGN 127489)**. If you are unsure, select **Detect fuel messages** to detect which messages are available to your MFD.
5. Fill up your fuel tanks.
6. Once the tanks are full, select **Set all tanks full** from the **Fuel Trip** menu.
7. Log each subsequent fuel fill whether partial or full.

Files

The file browser can be used to **Open** and **Delete** photos / images and PDF documents, saved to external storage, and can also be used to **Import** or **Delete** user data and MFD settings files) saved to external storage.

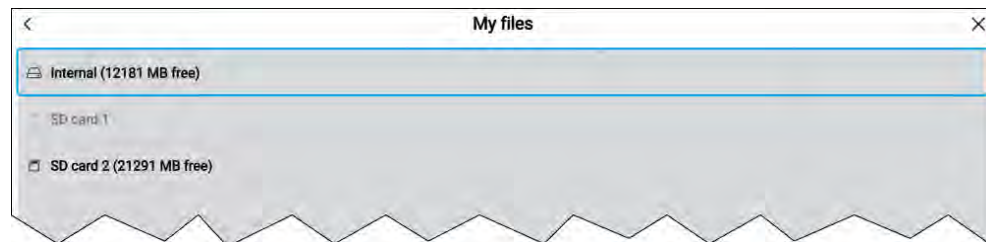

Selecting a storage device expands its contents, allowing you to browse the contents.

The following file type can be viewed:

- **PDF files** — Selecting a PDF document will open a pop-over menu where you can choose to **Open** or **Delete** the file.
- **Image files** — Selecting an image file will open a pop-over menu where you can choose to **Open** or **Delete** the file.
- **Video files** — Selecting an MPEG4 video file will open a pop-over menu where you can choose to **Open** or **Delete** the file.
- **gpx** — Selecting a gpx file (user data file which can contain waypoint, routes and tracks) will open a pop-over menu where you can choose to **Import** or **Delete** the file.
- **lh3** — Selecting a lh3 (MFD settings backup) file will open a pop-over menu where you can choose to **Restore** or **Delete** the file.
- **Lighthouse_id.txt** — Selecting the Lighthouse_id.txt file will open a pop-over where you can **Open** the file so that you can scan the QR code when installing LightHouse Charts via the Raymarine app.
- **apk** — Android apk apps downloaded from the Raymarine website can be installed from the file browser.


Note:

Only file types that are supported by your MFD will be visible in the browser.

Import/export

User data and MFD settings can be imported and exported from your MFD. User data (Waypoint, Routes and Tracks) is saved in the common .gpx file format. MFD settings will be saved in .lh3 format.

The Import/export page can be accessed from the My data page: **Homescreen > My data > Import/export.**

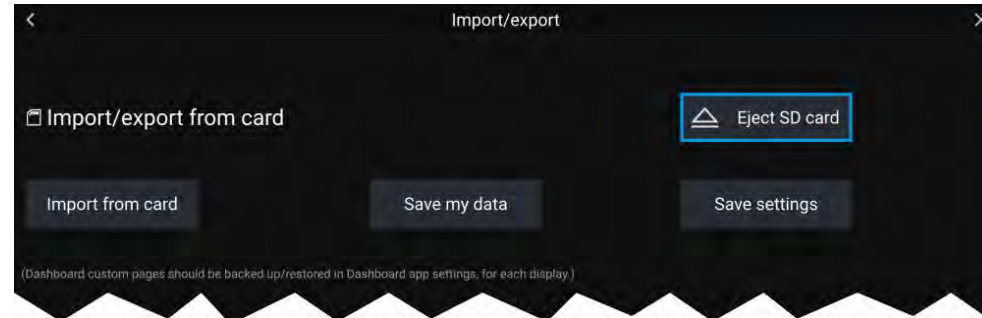

Saving user data (My data)

You can backup your user data (waypoints, routes and tracks) to a MicroSD card.

Note:

The LightHouse 3 and LightHouse 4 operating systems allow multiple waypoints to be created with the same waypoint name. If you intend to import the saved waypoints to a different system ensure that all waypoint names are unique or that the system you are importing them onto supports non-unique waypoint names.

Example: If more than 1 waypoint with the same waypoint name is imported into a LightHouse 2 MFD only 1 waypoint with that waypoint name will be imported as the LightHouse 2 operating system requires waypoint names to be unique.

1. Insert a memory card into your display's card reader.
2. Select **Save data to card** from the Import/export page: **Homescreen > My data > Import/export**.
A pop-over menu is displayed.
3. Select the desired option:
 - **Save all data** to save (export) all waypoints, routes and tracks.
 - **Save waypoints** to save (export) all waypoints.
 - **Save routes** to save (export) all routes.
 - **Save tracks** to save (export) all tracks.
4. Select **Save** to save the user data using the default filename. Alternatively:
 - i. Use the onscreen keyboard to enter your own filename and then select **Save**.
5. Select **OK** to return to the Import/export page, or select **Eject card** to safely remove the memory card.

The user data file is saved to the '\Raymarine\My Data\' directory of your memory card in gpx format.

Saving MFD settings

You can backup your MFD's settings to an external storage device, allowing you to restore your personalized MFD settings at a later date.

Important:

- Saving your MFD settings will also save any new or customized dashboard pages.
- Digital switching dashboard pages will not be saved when saving your MFD's settings.


1. Insert a memory card into a card reader slot on your MFD.
2. Select **Save settings** from the Import/export page: **Homescreen > My data > Import/export**.
3. Select the relevant card slot from the Info dialog.
4. Select **Save** to save the user data using the default filename. Alternatively:
 - i. Use the onscreen keyboard to enter your own filename and select **Save**.
5. Select **OK** to return to the Import/export page, or select **Eject card** to safely remove the memory card.

Importing user data or MFD settings from a memory card

You can restore user data (waypoints, routes and tracks) from an external storage device.

Important:

- Restoring your MFD settings will also restore any new or customized dashboard pages.
- Digital switching dashboard pages will not be restored when importing your MFD's settings.

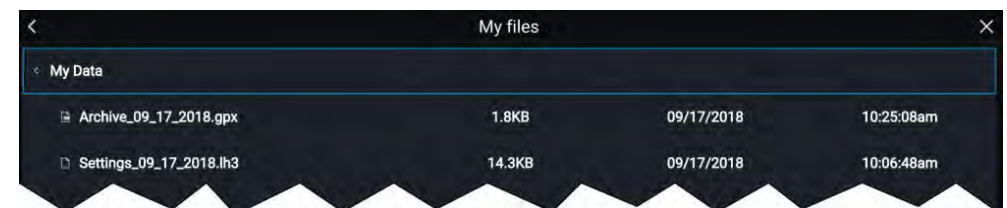

1. Insert the memory card containing your saved data into a card reader slot.

2. Select **Import from card** from the Import/export page: **Homescreen > My data > Import/export**.

The file browser is displayed

3. Navigate to the gpx or lh3 file that you want to import.

*User data and MFD settings files will be located in the **Raymarine\My Data** folder on your memory card.*

4. Select the file.
The import will commence.
5. If importing a gpx file, select **OK** when complete, alternatively
6. If importing MFD settings, select **Yes** to confirm restoring your MFD's settings.

Your MFD will reboot to complete the process.

5.10 Alarms

Alarms are used to alert you to a situation or hazard requiring your attention. Alarms are triggered by system functions and external devices connected to the MFD (Multifunction Displays). Alarms are displayed on all networked MFDs.


Alarms are color coded to signify their severity:

Dangerous alarms




Red — A Red notification is used to signify a dangerous alarm condition, immediate action is required due to a potential or immediate danger to life or vessel. Dangerous alarms are accompanied by an audible tone. The Dangerous alarm notification and audible tone will continue to be displayed until acknowledged or the conditions that triggered the alarm are no longer present. Acknowledged alarms may remain active whilst the alarm condition persists but will not trigger further onscreen or audible notifications.

Warning alarms

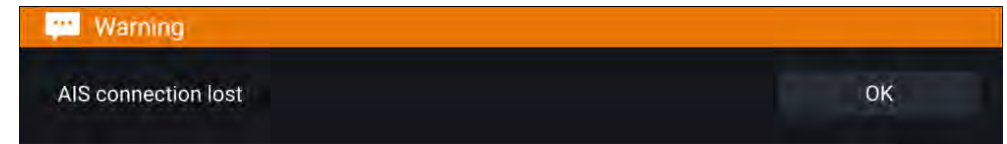

Orange — An Orange notification is used to signify a warning alarm condition. Warnings alarms are used to signify that there has been a change in situation that you need to be aware of. Warnings alarms are accompanied by an audible tone. The warning alarm notification and audible tone will continue to be displayed until acknowledged or the conditions that triggered the alarm are no longer present. Acknowledged alarms may remain active whilst the alarm condition persists but will not trigger further onscreen or audible notifications.

Notifications

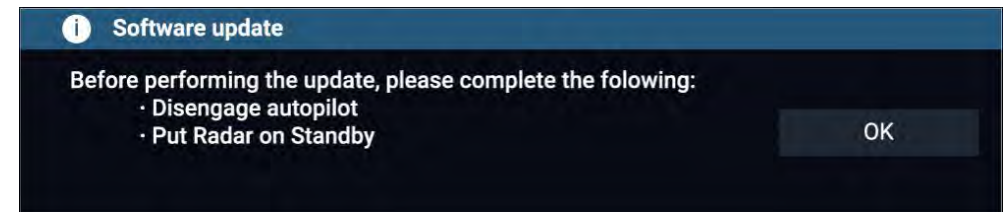

Blue — A Blue notification is used to signify information requiring user acknowledgement. Unless they require user interaction, information notifications may self dismiss after 3 seconds. Information notifications are not accompanied by an audible tone and are not displayed in the Active alarms or Alarm history lists.

Alarm manager

The Alarm manager is used to list current active alarms, enable and disable alarms, adjust alarm thresholds and view Alarm history.

Active alarms

The Alarm manager can be accessed by selecting **Alarms** from the Homescreen.

Example: Active alarms tab



The Active alarms tab lists all alarms that are currently active. Alarms will remain active until the conditions that triggered the alarm are no longer present, e.g.: a Shallow depth alarm will automatically dismiss when the depth becomes deeper.

Alarm history

Example: Alarm history tab



All Dangerous (Red) and Warning (Orange) alarms will appear in the Alarm history list. The history list will include an entry for the alarm being triggered (raised) and also for when the alarm is acknowledged (cleared). The Alarm field contains the name of the alarm and the events field contains details of the alarm condition and its time and date.

The Alarm history list can be cleared by selecting **Clear history**.

Active alarm indication

Your MFD can be configured to provide active alarm indication from the Homescreen and from MFD apps. When enabled the Homescreen **Alarms** icon and MFD app's Home icon will indicate that an alarm is currently active.

Active alarm indication can be enabled and disabled from the alarms settings tab: **Homescreen > Alarms > Settings > Home button active alarm indicator**.



The Home icon will turn Red and have an exclamation mark placed inside it. The Homescreen Alarms icon will display the number of active alarms.

Alarm settings

Depending on connected peripheral hardware and MFD configuration the alarms listed below can be enabled and disabled and where applicable alarm thresholds can be set or changed.

Note:

Alarms are only triggered when relevant hardware (e.g.: sensors) is connected and reporting the data required for the alarm.

- **Dangerous Radar targets**— If enabled, an alarm is triggered when Radar targets become dangerous. Radar targets are deemed dangerous when they have the potential to cross your path within a specified distance and time. For alarm parameters refer to: [p.258 — Dangerous targets alarm](#)

- **Lost Radar targets** — If enabled, an alarm is triggered when dangerous Radar targets become lost (i.e.: no Radar return from the target has been received for 20 seconds).
- **Dangerous AIS targets** — If enabled, an alarm is triggered when AIS targets become dangerous. AIS targets are deemed dangerous when they have the potential to cross your path within a specified distance and time. For alarm parameters refer to: [p.152 — Dangerous targets alarm](#)
- **Do not alarm for static AIS targets** — Enables ability to ignore AIS targets that are considered static (travelling under 2 Knots). Static targets that become dangerous will still be identified onscreen but will not trigger the dangerous targets alarm.
- **Guard zone 1** — If enabled, an alarm is triggered when Radar returns are detected within guard zone 1.
- **Guard zone 2** — If enabled, an alarm is triggered when Radar returns are detected within guard zone 2.
- **Waypoint arrival** — If enabled, when you arrive at a waypoint, an alarm is triggered. This setting allows you to specify a radius size for three types of arrival alarm. When your vessel crosses the specified radius, the Waypoint Arrival alarm is triggered. The following Waypoint arrival alarms are available:
 - **Arrival radius** — Used when the MFD is NOT in pilot integration mode and the Autopilot is in Track mode.
 - **Pilot track mode radius** — Used when the MFD is integrated with an Autopilot and the Autopilot is in Track mode.
 - **Search route arrival radius** — Used when the MFD is following a SAR pattern. Also helpful when race sailing and using Laylines, or when fishing, as this alarm setting provides a smaller radius to ensure you don't get alerted too far away from the target waypoint.
- **Interception arrival** — If enabled, during target interception an alarm is triggered when your vessel reaches the distance specified in **Arrival radius**.
- **Off track** — If enabled, during active navigation an alarm is triggered when your vessel steers off track by more than the specified **Cross track error** value.
- **Shallow depth** — If enabled, when the depth detected by your depth transducer passes the specified value the Shallow depth alarm is triggered.

Note: The MFD shallow depth alarm is independent of the Shallow depth alarm available on instrument displays. If you have Instrument displays connected to your system it is recommended that their shallow depth alarms are disabled.

- **Position drift** — If enabled, an Alarm is triggered when your vessel drifts from its current GNSS (GPS) position by more than the specified **Drift range**.
- **Anchor drag** — When the Anchor drag alarm has been configured and activated in the Chart app the Anchor drag alarms can be turned off by selecting **Raise anchor**
- **Low fuel remaining** — If enabled, an alarm is triggered when the fuel remaining in your fuel tanks reaches the specified **Fuel level**.

Note: The Fuel manager must be enabled for alarms to be triggered.

- **LightHouse chart obstructions**, If enabled, an alarm is triggered when an obstruction is detected. For details refer to: [p.158 — Obstruction alarm \(legacy LightHouse charts\)](#)
- **DSC alarms** — If enabled, an alarm is triggered when DSC distress calls are received.
- **AIS safety messages** — If enabled, an alarm is triggered when AIS safety messages are received.
- **MOB data type** — Determines whether the MOB waypoint is fixed at the **Position** the alarm was triggered, or advances its position based on tide and wind effects (**Dead reckoning**).
- **Fishing range** — If enabled, an alarm is triggered when your Depth reading reaches the depth specified in **Shallow water arrival** or **Deep water arrival**.
- **Water temperature alarm** — If enabled, an alarm is triggered when the water temperature reading reaches the temperature specified in **Lower temp limit** or **Upper temp limit**.
- **Digital switching alarms** — When your system includes Digital switching a list of all configured Digital switching alarms will be displayed.
- **AX8 camera messages** — If enabled, messages from a connected AX8 camera will be presented as alarms on your MFD.
- **Engine alarms** — If enabled, alarms will be triggered when engine warning alarms are received from connected, compatible engine management systems or interfaces.

- **Minimum sonar depth** — When your sonar transducer detects depths of 0.8 m/2.62 ft the alarm is triggered.

Important: Accurate bottom tracking can be unreliable in depths shallower than 0.8 m/2.62 ft. When operating at or below this depth be cautious of misleading sonar returns or false bottom tracking.

- **Home button active alarm indicator** — If enabled, when an alarm is active the onscreen Home icon is colored Red and contains a warning triangle.

External alarm speaker / buzzer

If your MFD has a built-in buzzer or is connected to a wired external buzzer then MFD alarms will trigger an audible tone. If you connect your MFD to a Bluetooth speaker then the alarm tone can also be heard from the speaker as well.

When connected to a Bluetooth speaker a separate volume control is available to control the volume of MFD Alarms sounded through the speaker. Please refer to the [Bluetooth speaker pairing](#) details.

Acknowledging alarms

Follow the steps below to acknowledge an active alarm.

With an alarms notification displayed onscreen:

1. Select **OK**.
The notification is dismissed and the audible tone is stopped.

An acknowledged alarm remains active until the conditions that triggered the alarm are no longer present.


Note:

If an alarm notification includes an **Edit** button, selecting it will display the relevant setting in the Alarms menu so that, if required, you can change the alarm threshold.

Digital switching alarms

When your MFD is connected to a Digital switching system, alarms specific to your installation can be enabled and disabled using the Alarm manager.

Example: Digital switching alarms

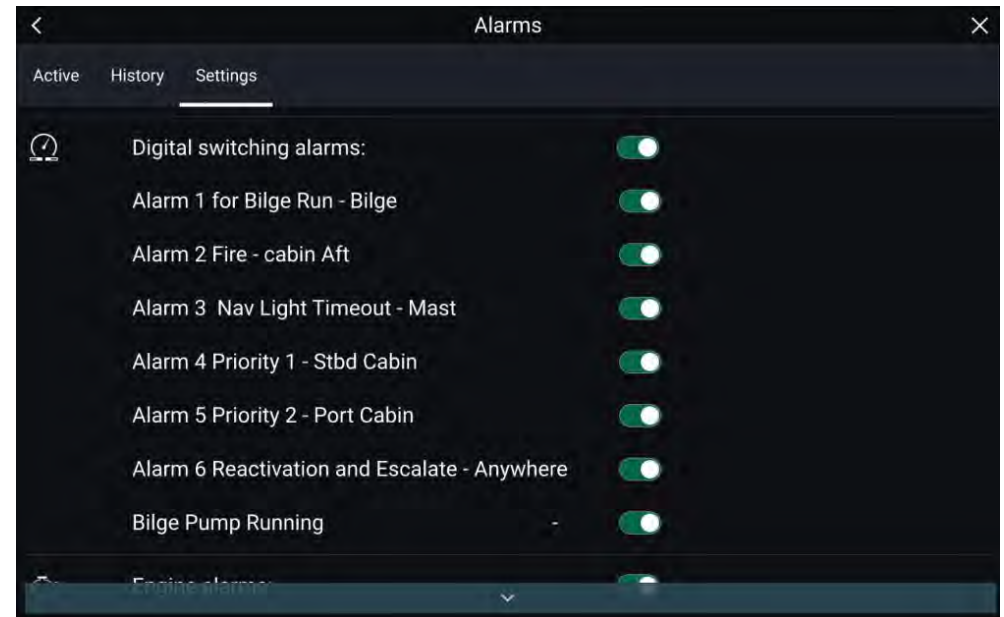


Each Digital switching system may be unique, with the alarms being defined when your system was configured.


5.11 Man Overboard (MOB)

If a person or object falls overboard, you can use the Man Overboard (MOB) alarm to mark the position that your vessel was at when the MOB alarm was activated.

The MOB alarm is activated using the MOB icons.

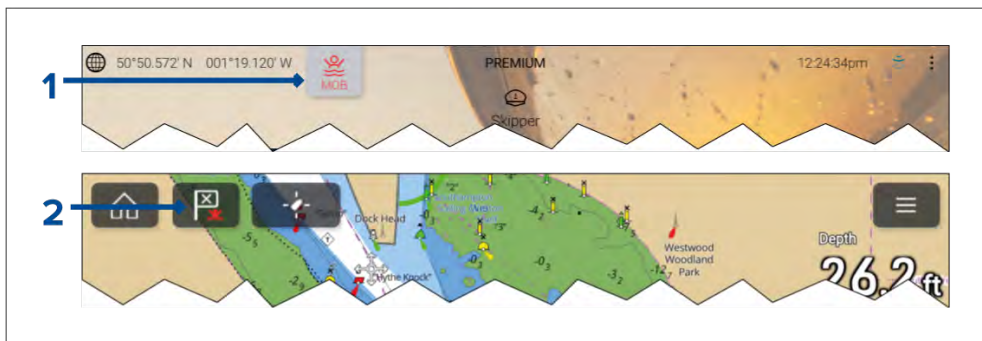

1. The MOB alarm can be activated by pressing and holding on the MOB icon on the Homescreen.
2. The MOB alarm can also be activated by pressing and holding on the waypoint / MOB icon located at the top of all MFD apps.

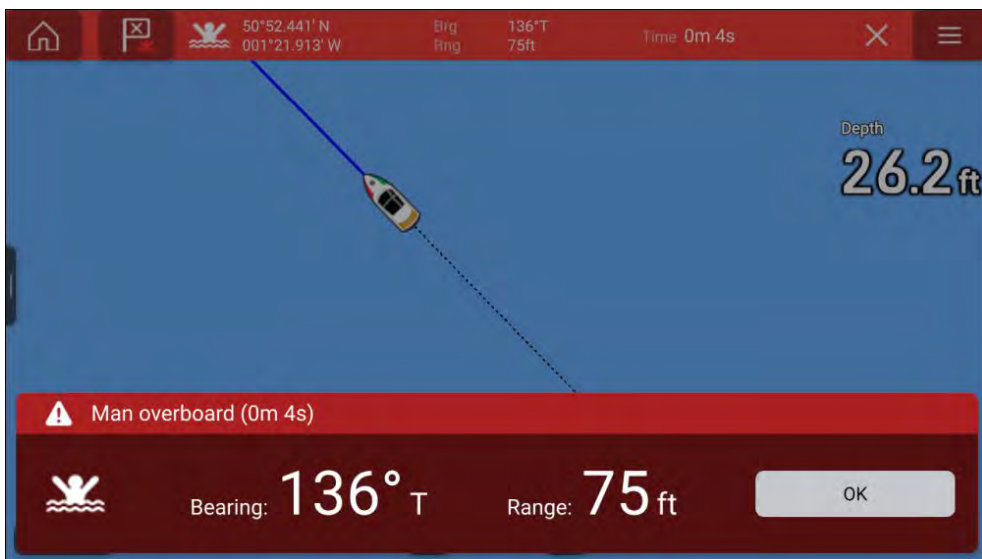

The MOB feature requires your vessel to have a valid position fix from a GNSS (GPS) receiver. Dead reckoning mode also requires Heading and Speed data.

When you activate the MOB alarm:

- an audible alarm is sounded which is repeated every 30 seconds until the alarm is cancelled.
- a MOB Databar providing Bearing and range from MOB, and elapsed time since MOB was initiated, is displayed along the top of the screen. The

Databar persists across apps and the Homescreen, and remains until the MOB alarm is cancelled.

- a MOB warning is displayed in the bottom of the screen, which requires acknowledgement.
- the Chart app is placed in a special MOB mode to help you navigate back to the point your vessel was at when the MOB was initiated.


MOB mode

MOB can be set to Dead Reckoning or Position mode. Dead Reckoning mode will take into consideration the effects of wind and tides. This usually provides a more accurate course. Position mode does not take these factors into account. You can change the MOB mode at anytime from the Alarms menu: **Homescreen > Alarms > Settings > MOB data type:**

5.12 DSC VHF radio integration

The MFD can display DSC distress alert information received by a connected DSC VHF radio.

When DSC alarms are enabled (**Homescreen > Alarms > Settings > DSC alarms**), if a DSC distress call is received by your DSC VHF radio a notification is also displayed on the MFD.

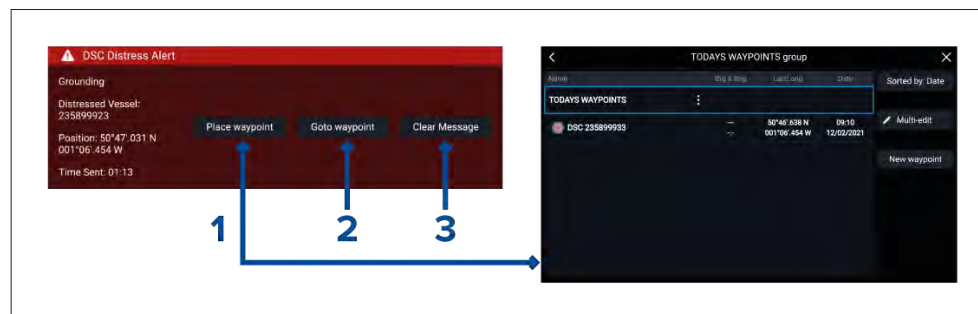

1. **Place waypoint** — Selecting **Place waypoint** places a waypoint at the latitude and longitude specified in the notification. The special DSC waypoint symbol is used for waypoints created from DSC notifications. DSC waypoints use the MMSI of the originating vessel as the waypoint name. If subsequent DSC distress calls are received from the same vessel MMSI then after selecting **Place waypoint** there will be 2 options to choose from:

- **Replace waypoint** — Selecting **Replace waypoint** will replace the existing waypoint with a new waypoint using the updated notification details.
 - **Place new waypoint** — Selecting **Place new waypoint** will create a new waypoint and add a suffix (A.B.C etc.) to each new waypoint's name.
2. **Goto waypoint** — Selecting **Goto waypoint** sets a goto to the latitude and longitude specified in the notification.
 3. **Clear message** — Selecting **Clear message** clears the alert from the screen.

Note:

If position data is not included in the DSC notification then **Place waypoint** and **Goto waypoint** options will not be available.

5.13 Homescreen settings menus

The homescreen settings menu is accessible from the bottom of the Homescreen and contains important information and settings for your MFD.

The **Settings** menu is divided into different tabs, the settings available are:

| Menu | Settings |
|------------------------|--|
| Getting started | <ul style="list-style-type: none"> • View hardware and software information about your MFD. • View cartography details for inserted chart cards. • Update MFD software • View the LoU disclaimer (Getting started tab). • Change the user interface language. • View the Regulatory approvals. |
| Boat details | <ul style="list-style-type: none"> • Set boat icon and name. • Configure Sailing [Sailing vessel's only]. • Configure Minimum safe depth, height and width. • Add distances for anchoring mode. • Configure engines. • Configure batteries. • Configure fuel tanks. • Configure environment sensors. |
| Units | <ul style="list-style-type: none"> • Configure preferred units of measurement. • Configure Bearing mode. • Configure variation. • Configure GNSS (GPS) system datum. • Set time differentials. |

| Menu | Settings |
|---------------------|--|
| This display | <ul style="list-style-type: none"> • Color theme (day mode). • Assign a Homescreen page or app to start on power up. • Select save location for screenshots. • ⁽¹⁾Configure User Programmable Button (UPB; Axiom Pro displays only). • Configure Shared brightness. • ⁽²⁾Change or reset splashscreen graphic. • Change or reset homescreen background image. • Pair / unpair connected RMK external keypads. • ⁽³⁾Enable / disable external alarm output. • ⁽²⁾Connect to a wireless display. • Configure Wi-Fi Sharing, pair with a wireless Quantum Radar scanner, configure Wi-Fi settings and set up mobile app access. • Enable and disable the MFD's DHCP server. • ⁽²⁾Connect to a Bluetooth device. • Perform a Settings or Factory reset. |
| Autopilot | <ul style="list-style-type: none"> • Enable / Disable Autopilot control. • Set autopilot response. • Access advanced autopilot settings. |

| Menu | Settings |
|------------------|---|
| Network | <ul style="list-style-type: none"> • View list of networked MFDs. • Assign the MFD Data master. • View software and network details for the MFD you are using. • Rename connected network devices. • Save or Erase diagnostics logs to external storage. • View and Save Diagnostic information about products connected to your MFD. • Enable sonar recording for troubleshooting purposes. • Set up NMEA 0183 options on an Axiom Pro. • Assign your preferred data sources (Data master only). • Refresh network list. |
| Responder | <p>The Responder menu tab is only available when First responder is selected as the 'Boating activity' during step 2 of the MFD's initial startup wizard. The Responder menu includes settings for STEDS specific features, which require an AIS5000 to be connected to the system. .For details refer to: p.269 – Responder setup</p> |

Note:

⁽¹⁾ Available on Axiom™ Pro MFDs.

⁽²⁾ Available on Axiom™, Axiom™ +, Axiom™ Pro and Axiom™ XL MFDs.

⁽³⁾ Available on Axiom™ XL MFDs.

Selecting display language

You can choose which language you want the display's user interface to use.

1. Select the **Language** button from the **Getting started** menu: **Homescreen > Settings > Getting started > Language:**
2. Select your desired language.

Languages

The following user interface languages are available:

| | | | |
|----------------------------|-------------------|------------------------------|--------------------------------|
| Arabic (ar-AE) | Bulgarian (bg-BG) | Chinese (Simplified) (zh-CN) | Chinese (Traditional) (zh-TW) |
| Croatian (hr-HR) | Czech (cs-CZ) | Danish (da-DK) | Dutch (nl-NL) |
| English (en-GB) | English (en-US) | Estonian (et-EE) | Finnish (fi-FI) |
| French (fr-FR) | German (de-DE) | Greek (el-GR) | Hebrew (he-IL) |
| Hungarian (he-IL) | Icelandic (is-IS) | Indonesian (Bahasa) (id-ID) | Italian (it-IT) |
| Japanese (ja-JP) | Korean (ko-KR) | Latvian (lv-LV) | Lithuanian (lt-LT) |
| Malay (Bahasa) (ms-MY ZSM) | Norwegian (nb-NO) | Polish (pl-PL) | Portuguese (Brazilian) (pt-BR) |
| Russian (ru-RU) | Slovenian (sl-SI) | Spanish (es-ES) | Swedish (sv-SE) |
| Thai (th-TH) | Turkish (tr-TR) | Vietnamese (vi-VN) | |

The selected language also determines the default units of measure used by the MFD.

Boat details

To ensure correct operation and display of data you should set the Boat Details settings according to your requirements.

Boat details can be accessed from the **Settings** menu: **Homescreen > Settings > Boat Details**

| Option | Description |
|-------------------|--|
| Boat type: | Selection determines the icon used to signify your vessel in the Chart app. Note: When the MFD is using the Sailing boating activity selecting one of the sailing vessels can also improve accuracy of leeway calculations. |
| Boat Name: | Configures your system with your vessel's name. |

| Option | Description |
|---|---|
| [Sailing only] Sail performance: | Select Fixed Angles or Polar laylines. |
| [Sailing only] [Fixed Angles only] Upwind angle: | Set the angle of upwind layline calculations. |
| [Sailing only] [Fixed Angles only] Downwind angle: | Set the angle of downwind layline calculations. |
| [Sailing only] [Polar only] Polar: | Select the Polar table that will define your layline calculation. |
| Min safe height: | Enter your vessel's maximum unladen height from the waterline. To ensure adequate clearance, it is recommended that you add a safety margin to this figure to allow for variation caused by vessel movements. |
| Min safe width: | Enter your vessel's maximum width at its widest point. To ensure adequate clearance on both sides, it is recommended that you add a safety margin for port and starboard to this figure to allow for variation caused by vessel movements. |
| Min safe depth: | Enter your vessel's maximum depth when fully laden. This is the depth from the waterline to the lowest point on the vessel's keel. To ensure adequate clearance, it is recommended that you add a safety margin to this figure to allow for variation caused by vessel movements. |
| Boat length: | Enter your vessel's length from bow to stern. Boat length is used for Anchor mode and the Anchor drag alarm in the Chart app. |
| Bow to GPS: | Enter the distance that your GNSS (GPS) receiver is from your vessel's bow. This measurements is used in Anchor mode and the Anchor drag alarm in the Chart app. |

| Option | Description |
|---|---|
| Num of engines: | Select the number of engines on your vessel. When connected to a compatible system, your MFD can monitor engine data. |
| Identify engines: | Once you have selected the number of engines, select Identify engines and follow the onscreen instructions to configure your engines. May require an extra hardware interface to enable engine data to be displayed. |
| Engine manufacturer: | To interface with Yamaha , Yamaha HDMI and Mercury gateways select the relevant manufacturer from the list. Otherwise select Other . |
| [Num of engines 2 only] Configure Yamaha Quad display: | Select whether your MFD is displaying for a twin engine system, or for the port or starboard side of a quad engine system. |
| Num of Batteries: | Configures your system with the number of batteries on your vessel. |
| Tanks: | Calibrate your vessel's tanks. |
| Num of interior environment sensors: | Allows the display of multiple instances of interior temperature and humidity sensor's data. Up to 10 sensors can be used. |

Tanks

The MFD can monitor the status of vessel tanks that use a compatible tank sender or have a compatible tank sender adaptor fitted.


The following types of tank can be monitored:

- Fuel tanks — up to 5 tanks
- Fuel (gasoline) tanks — up to 2 tanks
- Fresh water tanks — up to 2 tanks
- Live well tanks — up to 2 tanks
- Gray water tanks — up to 2 tanks
- Black water tanks — up to 2 tanks

Important:

The number of each tank should be selected during step 3 of the MFD's initial start up wizard.

The number of each type of tank can be viewed from the Boat details settings menu. Selecting **Configure Tanks** will display a list of all detected tanks.

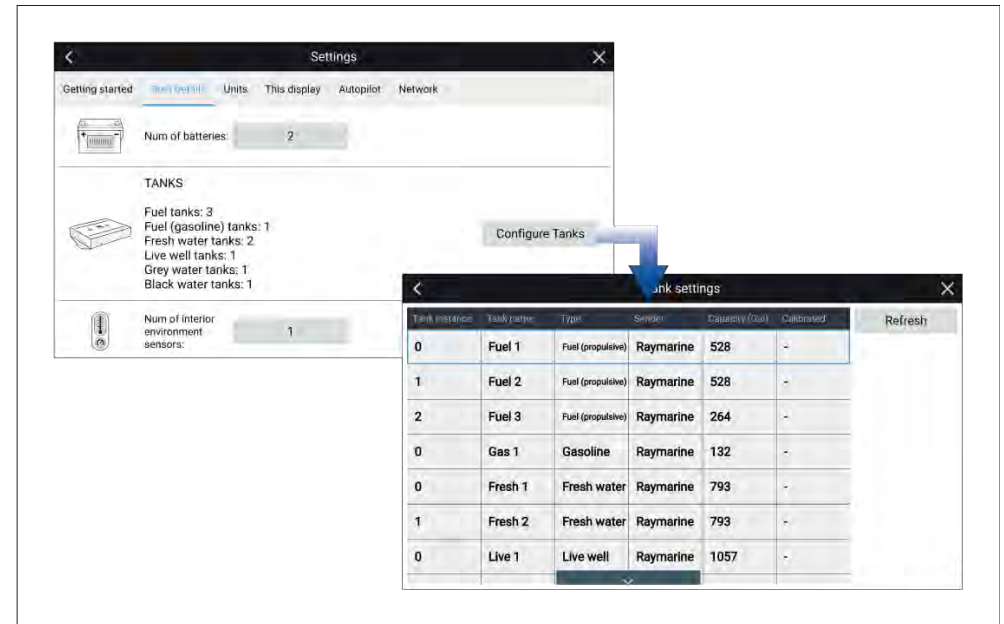

The details shown in the list of tanks are automatically detected.

Note:

If the number of tanks shown in the Boat details settings menu does not match the number of tanks listed when Configure tanks is selected then either:

- The number of tanks selected during the MFD's initial start up wizard may have been incorrect.
- The tank may not have a compatible sender or sender adaptor.
- There is a problem with the data connection or the tank's sender / sender adaptor.

Calibrating tanks

When displaying tank levels on your MFD it's important to ensure the levels are correctly calibrated. Failure to do so may result in inaccurate level readings.

Tanks can be calibrated and edited on the Boat details settings menu: **Homescreen > Settings > Boat details** .

Tanks can be calibrated with the following Oceanic Systems tank senders:


- 3271 Volumetric Fuel Sender
- 3281 Water Level Senders
- 3125 Tank Sender Adapter
- 4291 Tank Level Adapter

Note:

- Ensure tanks are empty before calibration.
- Completing calibration will overwrite any existing calibration already recorded.


From the **Boat details** menu:

1. Select **Configure tanks**.
2. Select the tank you want to calibrate.
The Pop-over menu is displayed.
3. If required, adjust the tank's capacity
4. Select **Calibrate** and then select the desired method for tank calibration:
 - i. **Run wizard**: refer to:
 - ii. **Import calibration**: refer to:

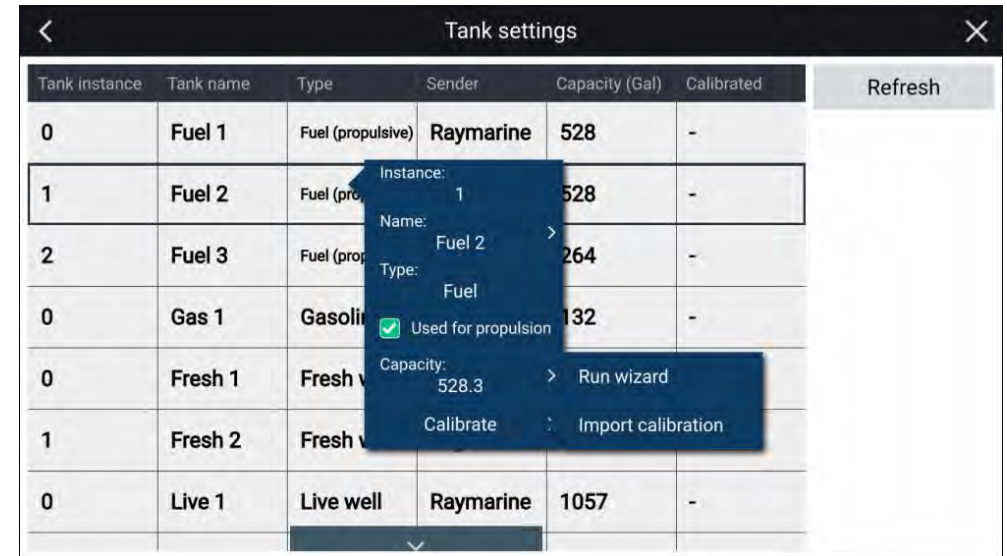

Setting fuel tanks as not for propulsion

By default all fuel tanks will be used for fuel economy calculations. If required, you can configure specific fuel tanks so that they are not used in fuel economy calculations.

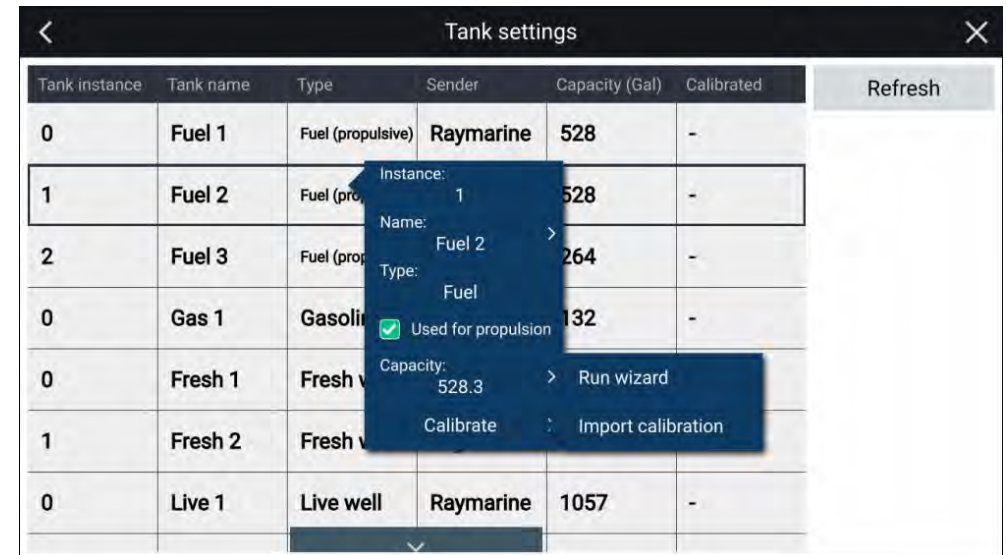

Note:

- Fuel tanks currently being included in fuel economy calculations will be listed as **Fuel (propulsive)**.
- Fuels tanks listed as **Fuel** will not be included in fuel economy calculations.
- Fuel tanks listed as **Gasoline** will never be included in fuel economy calculations.

From the Boat details settings menu:

1. Select **Configure tanks**.
2. Select the relevant fuel tank from then list.
3. Select the tick next to **Used for propulsion**.

With the tick removed the selected fuel tank will no longer be used for fuel economy calculations.

Run wizard calibration

You can calibrate your tank by setting a series of **calibration points** and filling your tank in intervals.

The shape of your tank determines how many calibration points you should enter for calibration. 2 calibration points are required as a minimum, but up to 101 points can be entered. Generally, the more calibration points entered the more precise tank readings will be.

Additional calibration points are used to account for changes in tank volume at different parts of an irregularly shaped tank. Depending on the size and shape of your tank it is recommended that you enter calibration points to mark each change in the shape of the fuel tank; for example, straight corners require an additional point, and slopes require 2 points.

The illustration above shows the minimum number of calibration points recommended for some typical tank shapes:

1. The tank shown on the left is rectangular and symmetrical; it only requires 2 calibration points to define the bottom and top of the tank.
2. The tank shown in the center has a greater volume at the bottom; 3 points are required to define the bottom, top and corner of the fuel tank.
3. The tank shown on the right has a greater volume at the bottom and is sloped. 4 points are required to define the bottom of the tank, the top, and a further 2 points to define the slope.

Wizard Calibration

1. Select the number of calibration points (minimum of 2) and press **next**.
2. Fill the tank to the units displayed on screen and press **Ok**.
3. To complete the calibration process, repeat step 2 until the tank has been filled.


Import calibration

You can calibrate your tanks by importing CSV files that contain specific tank calibration data. These files are typically supplied by tank manufacturers or dealers.

Note: CSV files used for import calibration must start with: '0,0' and end in: '100,100'

To **Import calibration** via CSV file:

1. Select the appropriate CSV file from the file explorer.
2. Press **Yes**.

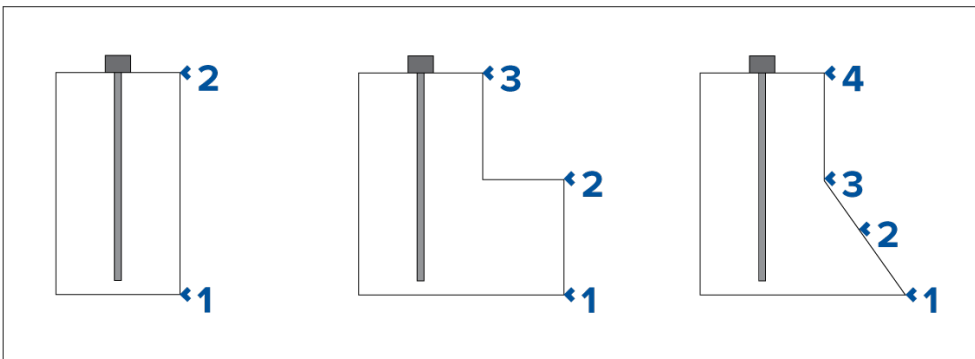

Units of measure

You can select your preferred units for data readings from the **Units** tab of the **Settings** menu: **Homescreen > Settings > Units**.

| Measurement | Units |
|--------------------------|--|
| Distance units | <ul style="list-style-type: none"> • NM & ft — Nautical miles & Feet • NM & m — Nautical miles & Meters • mi & ft — Miles & Feet • km & m — Kilometers and Meters • NM & yd — Nautical miles & Yards |
| Speed units | <ul style="list-style-type: none"> • Kts — Knots • MPH — Mile per hour • KPH — Kilometers per hour |
| Depth units | <ul style="list-style-type: none"> • Meters — m • Feet — ft • Fathoms — Fm |
| Temperature units | <ul style="list-style-type: none"> • Celsius — C • Fahrenheit — F |
| Date format | <ul style="list-style-type: none"> • MM : DD : YYYY • DD : MM : YYYY • MM : DD : YY • DD : MM : YY |
| Lat/Long format | <ul style="list-style-type: none"> • DD°MM'.MMM • DD:MM:SS • DD:MM:SS.S • DD:MM.MMM • DD°MM'SS • DD°MM.MMM' |

| Measurement | Units |
|-------------------------|---|
| Volume units | <ul style="list-style-type: none"> • US Gallons — Gsl • Imperial Gallons — Gal • Liters — Ltr |
| Economy units | <ul style="list-style-type: none"> • Distance per Volume • Volume per Distance • Liters per 100 km |
| Wind speed units | <ul style="list-style-type: none"> • Knots — kts • Meters per Second — m/s |
| Pressure units | <ul style="list-style-type: none"> • Bar • PSI • Kilopascals — KPa |
| Time format | <ul style="list-style-type: none"> • 12hr • 24hr |

Splashscreen and background images

During boot up the MFD will show the Axiom logo splashscreen. The homescreen will use preset background images based on the boating activity chosen during the start up wizard.

You can configure your MFD to use your own custom images for the splashscreen and the homescreen background.

Your custom images must meet the following requirements:

Note:

- Custom images must be in .png, .bmp or .jpg format.
- You cannot use copyrighted images without permission from the copyright owner.
- Custom images cannot exceed the maximum resolution supported by your MFD.
- For optimum image quality, the resolution of the image should match the resolution of your MFD.

Your MFD's resolution can be found in the Splashscreen and Homescreen background image settings: **Homescreen > Settings > This display**. Refer to the following table for a full list of screen resolutions: [Axiom screen resolutions](#).

Custom images are unique to each MFD and are not shared across the network with other MFDs. Custom images can be reset to use default images again.

Performing a factory reset will also remove any custom images.

Axiom screen resolutions

The screen resolutions for Axiom™, Axiom™+, Axiom™ Pro, and Axiom™ XL displays are shown below.


| MFD variant | Screen resolution (W x H) | DPI |
|---------------|---------------------------|----------------------------|
| Axiom™ 7+ | 1024 x 600 | 170.77 (Pixels not square) |
| Axiom™ 9+ | 1280 x 720 | 163.45 |
| Axiom™ 12+ | 1280 x 800 | 124.5 |
| Axiom™ 7 | 800 x 480 | 134.31 (Pixels not square) |
| Axiom™ 9 | 800 x 480 | 104.24 (Pixels not square) |
| Axiom™ 12 | 1280 x 800 | 124.5 |
| Axiom™ Pro 9 | 1280 x 720 | 163.45 |
| Axiom™ Pro 12 | 1280 x 800 | 124.5 |
| Axiom™ Pro 16 | 1920 x 1080 | 141.7 |
| Axiom™ XL 16 | 1920 x 1080 | 141.7 |
| Axiom™ XL 19 | 1920 x 1080 | 119.25 |
| Axiom™ XL 22 | 1920 x 1080 | 102.44 |
| Axiom™ XL 24 | 1920 x 1200 | 94.07 |

Customizing the splashscreen

The standard Axiom™ logo splashscreen that is displayed during boot up can be customized.

Note:

Images that are not the correct resolution are automatically stretched to fill the screen.

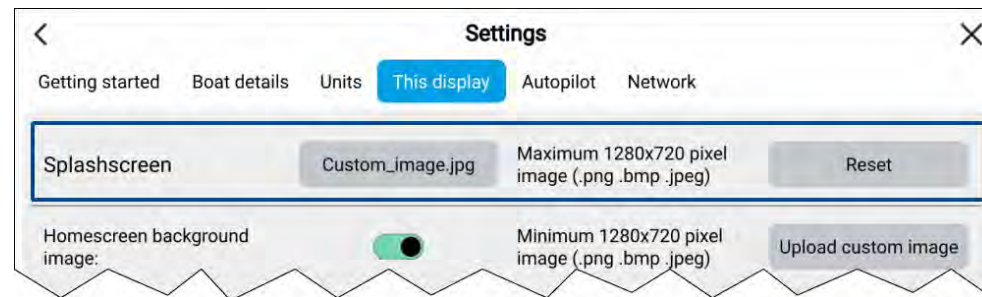


1. Save your custom image to a MicroSD card and insert the card into a card reader slot on your MFD.
2. Select **This display** from the **Settings** menu: **Homescreen > Settings > This display**.
3. Select the **Splashscreen** field containing the image name (default is Axiom.jpg).
The file browser is displayed.
4. Browse to your custom image and select it.
5. Select **Yes** on the notification popup.
The image is imported to your MFD.

The next time your MFD powers up, your custom image will be displayed.

You can reset the image at anytime by selecting **Reset**.

Customizing the homescreen background

The homescreen background can be configured to display a custom image.

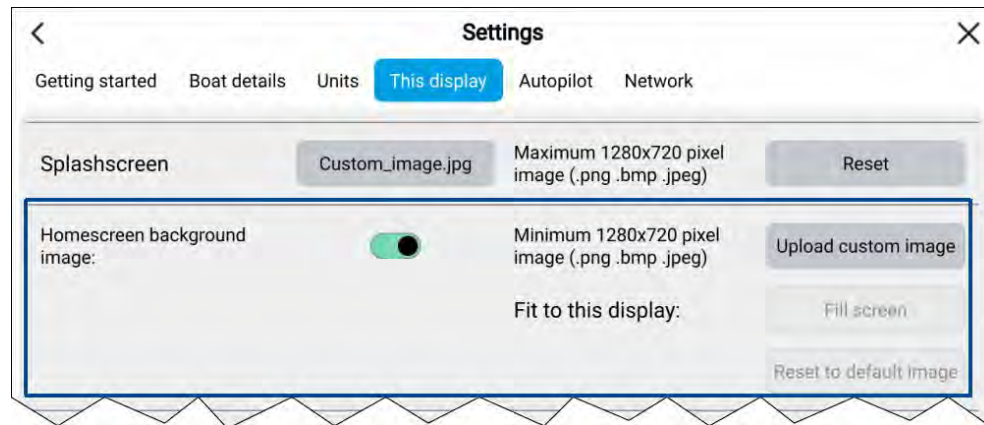

1. Save your custom image to a MicroSD card and insert the card into a card reader slot on your MFD.
2. Select **This display** from the **Settings** menu: **Homescreen > Settings > This display**.
3. Ensure **Homescreen background image** toggle switch is enabled.
4. Select **Upload custom image**.
The file browser is displayed.
5. Browse to your custom image and select it.
6. Select **Use as background** from the pop-over menu.
The Homescreen will be displayed using your custom image as the background

If the images is not the same resolution as your MFD then you can stretch the image by selecting **Fill screen** from the **Fit to this display** menu option: **Homescreen > Settings > This display > Fit to this display**. By default this setting will be set to **Fill screen**.

You can reset the image at anytime by selecting **Reset to default image**.

Data master

Systems containing more than one MFD must have a designated Data master MFD. The Data master is the primary MFD in the network, and should be the MFD that is physically connected to the SeaTalkng® / NMEA 2000 CAN bus

network, and any other devices and sources of data in your system. The Data master bridges the data over the SeaTalkhs™ network to any compatible networked 'repeater' MFDs.

Information shared by the Data master includes:

- Cartography
- Waypoints, Routes and Tracks
- Radar
- Sonar
- Data received from the autopilot, GNSS (GPS) receiver, instruments, transducers, the engine and any other compatible external sources.

Note:

Your system may be wired for redundancy with data connections made to repeat displays. However these connections will only become active in the event of a fault and / or reassignment of the data master.

Note:

In an autopilot system which does not contain a dedicated pilot control head the Data master also acts as the autopilot controller.

Switching Data Master

You can switch the MFD you want to be the Data master at any time.



From the Network tab: **Homescreen > Settings > Network:**

1. From the list, select the MFD you want to designate as the new Data master.

2. Select **Assign as Data Master** from the pop-over options.


Shared Brightness

Shared brightness enables simultaneous brightness adjustment of all products that are part of the same group.

The following products are compatible with shared brightness:

- LightHouse™ 4 MFDs.
- LightHouse™ 3 MFDs using software version 3.4 or greater.
- LightHouse™ or LightHouse™ 2 powered MFDs.
- SeaTalkng® Instrument displays and Pilot controllers.
- SeaTalkng® VHF DSC Radios.
- RMK-9 and RMK-10 remote buttonpads.

Any adjustments to the shared brightness level will be applied to all products assigned to the same group.

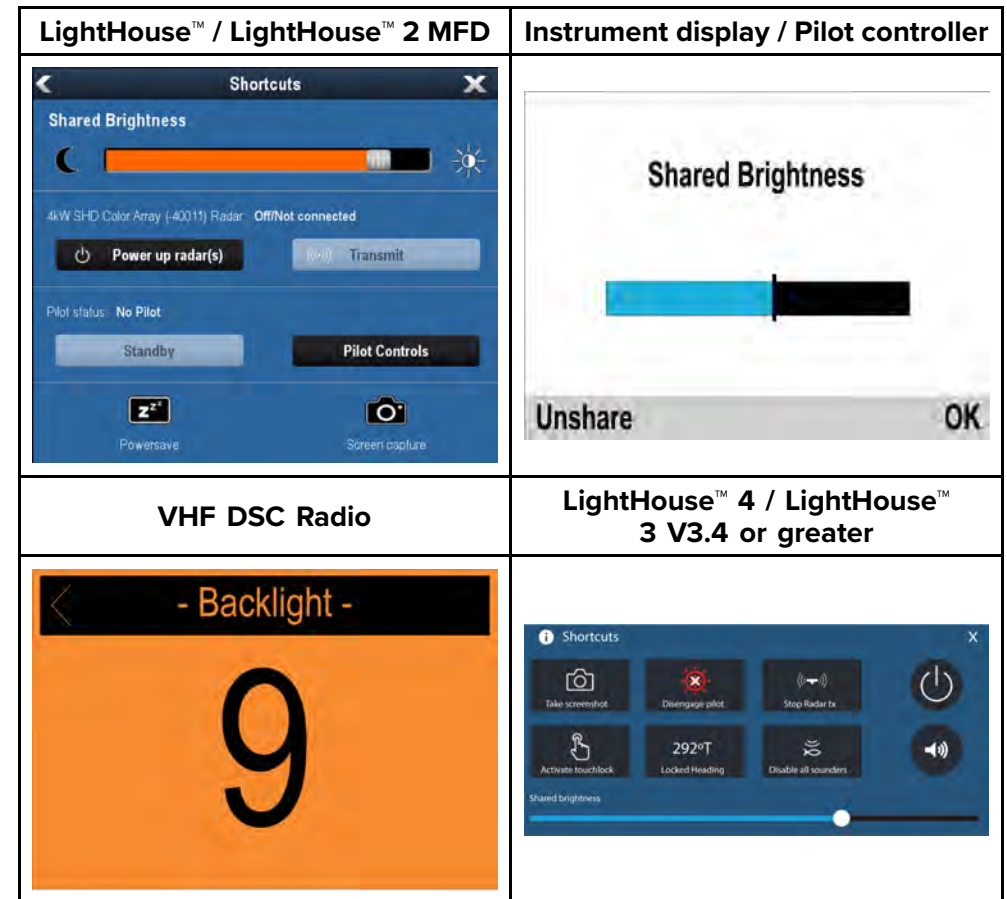

Multiple brightness groups can be configured. For example, these groups could be used to reflect the physical location of products on your vessel e.g.: helm and flybridge.

Shared brightness requires:

- all products to be compatible with the shared brightness function (see list of compatible products above).
- the **Shared brightness** setting set to On for all products in the brightness group.
- products to be assigned to network groups.
- all the products in each group to be synchronized.

Setting up shared brightness

Before setting up Shared brightness on your MFD, ensure that all displays that you want to use Shared brightness are switched on and set to the same Display group as your MFD.

1. Select **This display** from the **Settings** menu: **Homescreen > Settings > This display**.
2. Select **Display group**.
A list of available display groups is displayed.
3. Select the Display group that you want the MFD to be part of (Displays that have been installed next to each other should be in the same group).
4. Enable **Shared brightness** using the Toggle switch.
5. Select **Sync**.

'Shared brightness active' is displayed when complete.

Note:

Display group selection may impact Mercury SmartCraft integration. Refer to: [p.313 – Mercury SmartCraft integration helm grouping](#)

NMEA 0183 settings

NMEA 0183 devices can be connected to Axiom™ Pro, Axiom™ XL, eS Series, and gS Series MFDs using the NMEA 0183 wires on the supplied Power/Video/NMEA 0183 cable.

2 NMEA 0183 ports are available:

- **Port 1:** Input and output, 4,800 or 38,400 baud rate.
- **Port 2:** Input only, 4,800 or 38,400 baud rate.

The baud rate for each input port must be specified in the **NMEA set-up** menu (**Homescreen > Settings > Network > NMEA set-up**).

Note:

- For Port 1, both the input and output communicate at the same baud rate. For example, if you have one NMEA 0183 device connected to Port 1 INPUT, and another NMEA 0183 device connected to Port 1 OUTPUT, both NMEA devices must use the same baud rate.

NMEA 0183 settings


The following options are available from the **NMEA Set-up** menu.

| Menu item | Description | Options |
|---------------------------|--|--|
| NMEA Port 1 | Baud rate selection. | <ul style="list-style-type: none"> • 4,800 • 38,400 |
| NMEA input port 2 | Baud rate selection. | <ul style="list-style-type: none"> • 4,800 • 38,400 |
| Bridge heading | Bridge heading data from NMEA 0183 to NMEA 2000 / SeaTalkng® | <ul style="list-style-type: none"> • Yes • No |
| Transmission mode | <p>Switches between Single-ended and Differential transmission modes.</p> <p>The Differential transmission mode supports higher speeds, longer cable runs, and better data integrity. Differential mode works when connected to opto-isolated inputs, as specified by the NMEA 0183 standard.</p> <p>The Single-ended mode is required when sending a signal to a single-ended receiver device, such as a PC for example.</p> <p>Refer to the <i>NMEA 0400 Installation Standard</i> for wiring guidelines for the different transmission modes.</p> | <ul style="list-style-type: none"> • Single-ended • Differential |
| | | <p>Note: Only available on Axiom™ Pro and Axiom™ XL displays.</p> |
| Individual outputs | List of NMEA 0183 sentences for which the output can be disabled. | <ul style="list-style-type: none"> • Enabled • Disabled |

5.14 IP device user interface access

the user interface of connected, compatible IP (Internet protocol) devices such as IP cameras can be accessed from the MFD.

The IP device's user interface is accessed from the Network settings menu: **Homescreen > Settings > Network**.

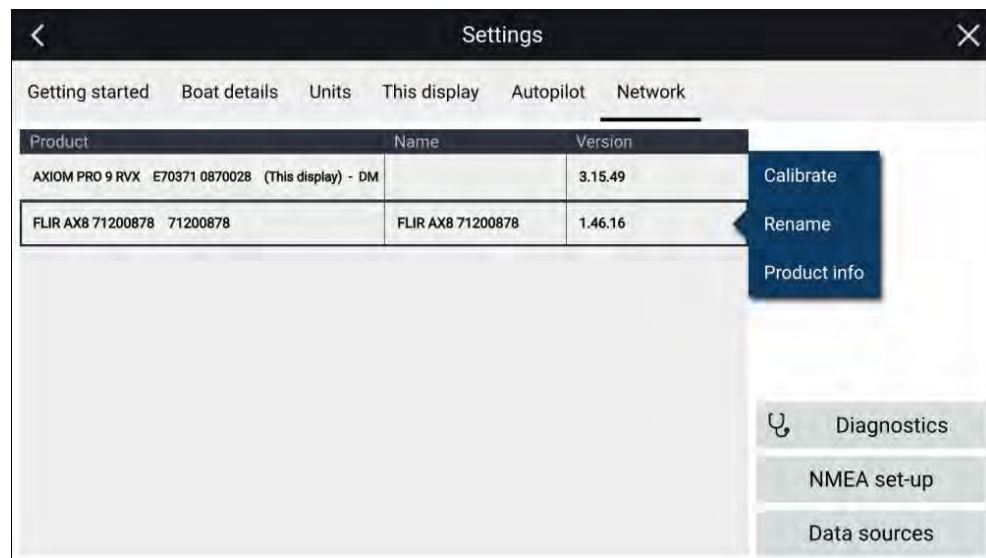

Select the device from the list to display the pop-over menu and then select **Calibrate**.

5.15 Connecting to a wireless display

Axiom™, Axiom™ Pro, and Axiom™ XL MFDs can be connected to a wireless display using an external dongle or a display that has built-in support. When connected the MFD's screen is mirrored on the wireless display.

1. Follow the instructions provided with your wireless display / dongle to set up that specific device.
2. On the MFD, select the display icon found under **Wireless display**: on the **This Display** tab of the **Settings** menu: (**Homescreen > This Display > Wireless Display**).

Your MFD will search for available wireless displays.



3. Select the display you want to use.
4. If your MFD has Wi-Fi Sharing enabled then a PIN number is displayed on the wireless display, input this pin number when requested by your MFD.
5. You may also be requested to allow the MFD to connect automatically in future, select **Yes** or **No** as appropriate on your wireless display. Your MFD screen will now be displayed on the select device.
6. To allow the wireless display to connect each time your MFD is powered on, enable **Connect on power up** from the pop-over options.



Note:

1. Don't forget to check your wireless display for any required confirmations / acknowledgements during the connection process.
2. Some non Miracast-certified devices may not be able to connect with Wi-Fi Sharing enabled, in this case disable Wi-Fi Sharing and try again.
3. If you experience connection issues, try disabling and enabling the wireless display feature on your display and MFD, or power cycle both devices.
4. Once connected / paired to a wireless display do not change your MFD's Wi-Fi Passphrase, as on certain devices a factory reset maybe required to re-establish a connection.

Disconnecting a wireless display

With a wireless display connection active:

1. Select Disconnect from the **This Display** tab: (**Homescreen > Settings > This Display > Wireless Display: > Disconnect**).

Unpairing a wireless display

With the wireless display connection active:

1. Select the connected display from the Wireless display menu: (**Homescreen > Settings > This Display > Wireless Display**).
2. Select the connected display from the list of available displays.
3. Select **Unpair** from the pop-over menu.

CHAPTER 6: AUTOPILOT CONTROL

CHAPTER CONTENTS

- 6.1 Commissioning - Evolution autopilot system — page 96
- 6.2 Autopilot control — page 101
- 6.3 Pilot sidebar — page 102
- 6.4 Pilot pop-up — page 103
- 6.5 Autopilot Control — Pilot set-up menu — page 104
- 6.6 Rudder damping levels and deadband angles — page 106

6.1 Commissioning - Evolution autopilot system

Commissioning pre-requisites

Before commissioning your autopilot system for the first time, check that the necessary processes have been carried out correctly.

Important:

You should read through and understand the entire commissioning instructions for your autopilot system before beginning the commissioning process.

Before commissioning, check the following:

- all autopilot system components have been installed in accordance with the installation instructions supplied with the system components.
- all autopilot system components have been updated to the latest available software revisions. Check the Raymarine website for available software updates: <http://www.raymarine.co.uk/software>
- a system schematic is available or has been created which includes all system components and required connections.
- the commissioning engineer is familiar with the vessel's hull type, drive type and steering system.

Commissioning steps

The required commissioning steps should be carried out in the correct order using the pilot controller display.

Note:

Commissioning must be performed using the Data master MFD.

1. Power-up all of the components that make up your autopilot system.
2. Select the relevant vessel hull type for your vessel.
3. Complete the dockside calibration process., using the **Dockside wizard**:
4. If the system does NOT include a rudder reference transducer then, specify the hard-over time.
5. Complete compass linearization.
6. If required, lock the compass.

Vessel hull type selection

The vessel hull type options are designed to provide optimum steering performance for typical vessel s.

It is important to complete the vessel hull type selection, prior to performing dockside calibration, as it forms a key part of the commissioning process. The vessel hull type options can be accessed at any time, when the autopilot is in Standby from the **Pilot set-up** menu: **Homescreen > Settings > Autopilot > Pilot set-up > Vessel Hull Type**.

The option that most closely matches your vessel's hull type and steering characteristics should be selected from the available hull types:

- **Power**
- **Power (slow turn)**
- **Power (fast turn)**
- **Sail**
- **Sail (Slow turn)**
- **Sail Catamaran**



Note:

It is important to be aware that steering forces (and therefore rate-of-turn) vary significantly depending on the combination of vessel hull type, steering system, and drive type. The available vessel hull type options are provided for guidance only. You may wish to experiment with the different vessel hull type options, as it might be possible to improve the steering performance of your vessel by selecting a different vessel hull type. When choosing a suitable vessel hull type, the emphasis should be on a safe and dependable steering response.

Using the Dockside wizard

The dockside calibration process must be completed before the autopilot system can be used for the first time. The Dockside wizard guides you through the steps required for dockside calibration.

The Dockside wizard contains different steps depending on whether the system includes rudder reference transducer:
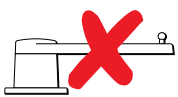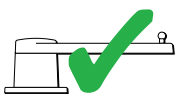
| | |
|---|---|
|  | <p>The following Dockside wizard procedures apply to vessels that do not have a rudder reference transducer:</p> <ol style="list-style-type: none"> 1. Drive Type selection. 2. Rudder Limit setting. 3. Hard-over time setting (Raymarine recommends that this information is specified once the dockside wizard and Rudder Drive check is complete, using the Hard Over Time menu option). 4. Rudder Drive check. |
|  | <p>The following Dockside wizard procedures only apply to vessels that include a rudder reference transducer:</p> <ol style="list-style-type: none"> 1. Drive Type selection 2. Rudder alignment (Align Rudder) 3. Rudder Limit 4. Rudder Drive check. |

To access the wizard, ensure the autopilot is in standby and then:

1. Select **Dockside Wizard** from the **Advanced settings** menu **Homescreen > Settings > Autopilot > Pilot set-up > Dockside wizard**.
2. Select **Continue** to initiate the dockside wizard and follow the onscreen instructions.

Selecting a drive type

Drive type selection is included in the dockside wizard.

With the **Drive Type** menu displayed:

1. Select your drive type.

The drive types available are:

- *Type 1 Linear*
- *Type 2 Linear*
- *Type 2 Hydraulic Linear*
- *Type 3 Hydraulic Linear*
- *I/O Stern*
- *Wheel Drive*

- *Tiller*
- *Sport Drive*
- *Verado*
- *Rotary Drive Type 1*
- *Rotary Drive Type 2*
- *Hydraulic Pump Type 1*
- *Hydraulic Pump Type 2*
- *Hydraulic Pump Type 3*

Important:


If your drive type is not listed, contact your Raymarine dealer for advice.

2. Select **Continue**.

Drive type selection is also available when the autopilot is in standby, from the **Advanced settings** menu: **Homescreen > Settings > Autopilot > Pilot set-up > Drive type**.

Aligning the rudder



For systems that have a rudder reference transducer fitted, Rudder alignment is included in the dockside wizard and comes after drive type selection. For systems without a rudder reference transducer fitted rudder alignment is not required.

| | |
|---|---|
|  | <ul style="list-style-type: none"> • The following procedure only applies to vessels with a rudder reference transducer. |
|---|---|

1. Select **Continue**.
2. Center the rudder and select **OK**.
3. Put the rudder all the way to port and press **OK**.
4. Put the rudder all the way to starboard and press **OK**.
5. Center the rudder and select **OK**.
6. Select **Continue** when the task complete message is displayed to progress to the rudder limit page.

Setting the rudder limit

Rudder limit setting is included in the dockside wizard and comes after rudder alignment or drive selection depending on whether a rudder reference transducer is fitted.
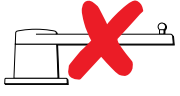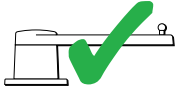
| | |
|---|--|
|  | <ul style="list-style-type: none">• For vessels without a rudder reference transducer• Rudder limit are set to 30 degrees and can be adjusted as required. |
|  | <ul style="list-style-type: none">• For vessels with a rudder reference transducer• The rudder alignment process establishes the rudder limit. The rudder limit will be displayed with a message confirming that the rudder limit has been updated.• If required, the limit can be adjusted. |

1. Ensure that the rudder limit is sufficient to prevent the steering mechanism impacting the end stops and placing the steering system under unnecessary load. If required adjust the limit by selecting the rudder limit value box.

Important:

It is recommended that the limit is set to approximately 5 degrees less than the maximum rudder angle.


2. Select **Continue** to move to the next step.

Note:

The rudder limit can be adjusted when the autopilot is in standby, from the **Pilot set-up** menu: **Homescreen > Settings > Autopilot > Pilot set-up > Rudder Limit**.

Hard over time

The hard over time setting can be specified as part of the Dockside wizard and comes after setting the rudder limit.
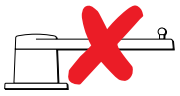
| | |
|---|--|
|  | <ul style="list-style-type: none">• The following information only applies to vessels without a rudder reference transducer. |
|---|--|

- If you already know the hard-over time for your vessel's steering system: enter this time in the Hard over time value box and select Continue.

- If you do NOT know the hard-over time for your vessel's steering system, select **Continue**, proceed with the Checking the rudder drive procedure and complete the Dockside wizard. Once the wizard is complete, proceed to the Setting the hard-over time instructions for information on how to calculate and set the hard-over time.

Setting the hard-over time

On vessels without a rudder reference transducer, it is important to set a Hard Over Time.

Before attempting to follow this procedure ensure you have read and understood the Rudder Check warning provided in this document.

To estimate your hard over time follow the steps below:

1. With the autopilot in **Standby**, manually turn the rudder / engine full to port. (For vessels with power steering the engine should be running when turning the rudder.)
2. Open the sidebar by swiping right from the left side of the screen.
3. Switch to the Pilot sidebar.
4. Engage **Auto** mode.
5. Press the **+10** button on the Pilot bar 9 times to ensure that the rudder moves hard over to starboard.
6. Count how many seconds it takes for the rudder to move from hard over port to hard over starboard. This is your hard over time.
7. Enter your hard over time in the. The hard over time setting can be accessed from the **Pilot set-up** menu: **Homescreen > Settings > Autopilot > Pilot set-up > Hard over time**.
8. After setting the hard over time, observe the autopilot's behavior and if required, make small adjustments to the Hard over time value until a satisfactory result it achieved.



Warning: Rudder check

If no rudder reference has been fitted you **MUST** ensure that adequate provision is made to prevent the steering mechanism from impacting the end stops.

Checking the rudder drive (rudder reference fitted)

As part of the dockside wizard, the system will check the drive connection. Once it has completed the check successfully, a message will appear asking if it is safe for the system to take the helm.

During this procedure the autopilot will move the rudder. Ensure it is safe to proceed before proceeding.



 
- The following procedure only applies to vessels with a rudder reference transducer.

1. Center and let go of the rudder.
2. Disengage any rudder drive clutch.
3. Select **Continue**.
4. Check it is safe to proceed and then select **OK**.
The autopilot will now automatically move the rudder.
5. Select **OK** when the rudder has moved to port.
6. Select **OK** when the rudder has moved to starboard.
7. Select **Continue** when the rudder has centered.
8. Dockside calibration is now complete, select **Continue**.

Checking the rudder drive (no rudder reference fitted)

As part of the dockside wizard, the system will check the drive connection. Once it has completed the check successfully, a message will appear asking if it is safe for the system to take the helm.

During this procedure the autopilot will move the rudder. Ensure it is safe to proceed before proceeding.



- The following information only applies to vessels without a rudder reference transducer.

1. Center and let go of the rudder.
2. Disengage any rudder drive clutch.
3. Select **Continue**.
4. Check it is safe to proceed and then select **OK**.
The autopilot will now automatically move the rudder.
5. You will be asked to confirm that the rudder has turned to port by selecting **YES** or **NO**.

6. Select **OK** if it is safe to engage the rudder in the opposite direction.
7. You will be asked to confirm the rudder turned to starboard by selecting **YES** or **NO**.
8. Dockside calibration is now complete, select **Continue**.

Note:

If you confirmed a “NO” response for the rudder movement to both port and starboard, the wizard will exit. It is possible that the steering system did not move the rudder in any direction, and it will be necessary to check the steering system before completing the Dockside wizard procedure again.

Important:


If you have not already done so, now set your Hard-over time using the following instructions: [Setting the hard-over time](#)

Compass linearization — Evolution autopilots

The EV sensor’s internal compass needs to compensate for local and the Earth’s magnetic fields. This is achieved using an automatic process known as linearization.

Initial linearization

When the EV sensor is first installed and powered-up (or after a factory reset or compass restart) linearization is required. When linearization is in progress bar is displayed in the Autopilot settings page: **Homescreen > Settings > Autopilot**.

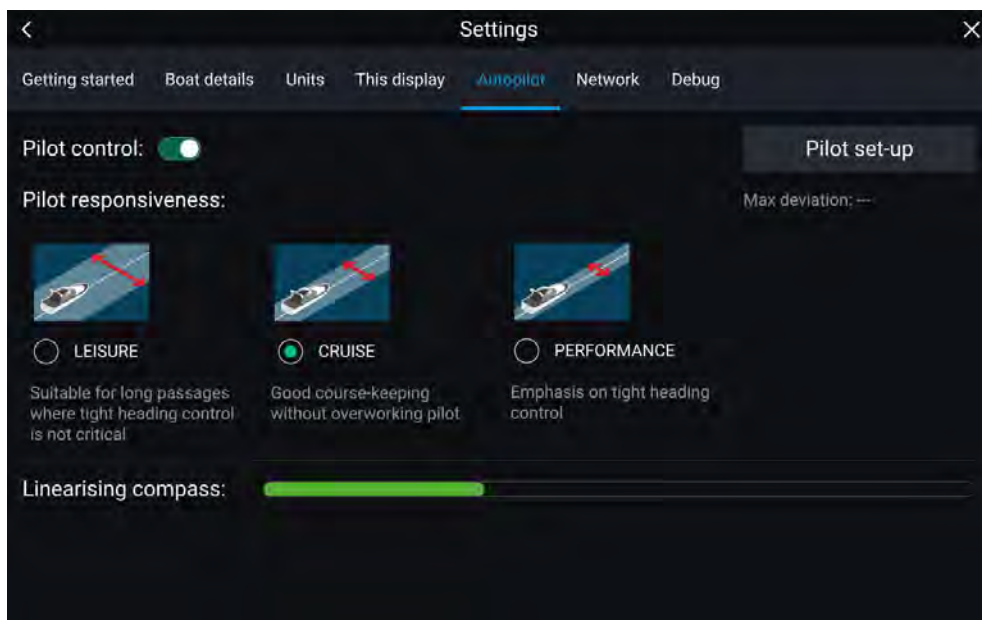

The linearization process will start automatically after your vessel has turned approximately 100° at a speed of between 3 –15 knots. Linearization requires no user input, however at least a 270° turn is required before linearization can complete. The progress bar will fill to indicate progress, the progress bar will turn Red if the process is paused or otherwise interrupted. Time it takes to complete the linearization will vary according to the characteristics of the vessel, the installation environment of the EV unit, and the levels of magnetic interference at the time of conducting the process. Sources of significant magnetic interference may increase the time required to complete the linearization process. Examples of such sources include:

- Marine pontoons
- Metal-hulled vessels
- Underwater cables

You can speed-up the linearization process by completing a full 360° turn (at a speed of 3 – 15 knots). You can also restart the linearization process at any time by selecting the **Restart Compass** from the Pilot set-up menu: **Homescreen > Settings > Autopilot > Pilot set-up**.

Once the initial linearization is completed the Maximum compass deviation value is displayed under the **Pilot set-up** button on the Autopilot settings page.

Compass deviation

If the reported deviation is 45° or higher, it is highly recommended that the EV sensor is moved and re-installed in a location which is subject to less magnetic interference.

Note:

If “- -” is displayed as the Deviation value, it means that linearization has not been successfully completed yet.

Check the compass heading data

As part of the autopilot system commissioning process, it is recommended that you check the compass heading value displayed, against a good known heading source on various headings.

Note:

Once the linearization process has completed, it is possible that the heading value may have a slight offset of 2 to 3 degrees. This is common where installation space is limited, and the EV sensor cannot be properly aligned to the vessel's longitudinal axis. In this case, it is possible to manually adjust the **Compass offset** value.

The compass offset can be adjusted from the Pilot set-up menu: **Homescreen > Settings > Autopilot > Pilot set-up > Compass offset**.

Important:

Do NOT rely on the reported heading until compass linearization and alignment is complete.

System monitoring and adaptation

To ensure optimum performance, after the initial linearization process is complete the EV continues to monitor and adapt the compass linearization to suit current conditions.

If the conditions for linearization are less than ideal, the automatic linearization process temporarily pauses until conditions improve again. The following conditions can cause the linearization process to temporarily pause:

- Boat speed < 3 knots.
- Boat speed > 15 knots.
- Rate-of-turn is too slow.
- Significant magnetic interference is present.

Compass lock

Once you are satisfied with the compass accuracy, you can lock the setting to prevent the system from completing a further automatic linearization in the future.

This feature is particularly useful for vessels in environments that are exposed to strong magnetic disturbances on a regular basis (such as offshore wind farms or very busy rivers, for example). In these situations it may be desirable to use the Compass lock feature to disable the continuous linearization process, as the magnetic interference may build a heading error over time.

Note: The compass lock may be released at any time, to allow the compass continual monitoring and adaptation to re-commence. This is particularly useful if planning a long voyage. The earth's magnetic field will change significantly from one geographical location to another, and the compass can continually compensate for the changes, ensuring you maintain accurate heading data throughout the voyage.

Locking the compass

Follow the steps below to lock the compass linearization.

From the Pilot set-up menu: **Homescreen > Settings > Autopilot > Pilot set-up.**


1. Select the **Compass Lock** toggle option so that it is enabled (Green)..

The compass linearization is now locked and automatic linearization will no longer be performed.

6.2 Autopilot control

Your MFD can be integrated with an Evolution autopilot system and act as the autopilot's controller. Please refer to the documentation supplied with your autopilot for details on installing and connecting your autopilot to your MFD.

Autopilot control from your MFD can be enabled and disabled from the **Autopilot** tab in the **Settings** menu: **Homescreen > Settings > Autopilot > Pilot control.**

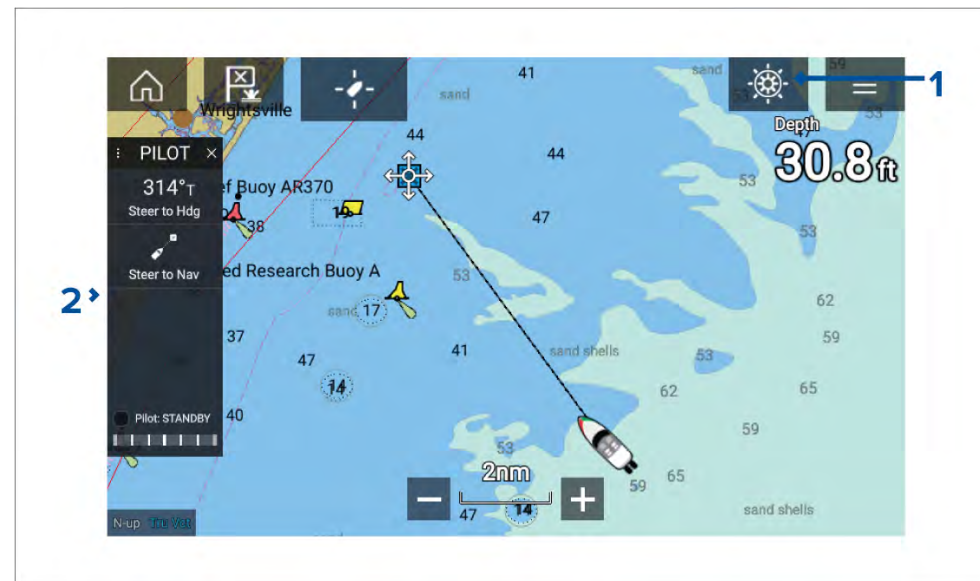

1. **Pilot icon** — With **Autopilot control** enabled, the Pilot icon is displayed onscreen; selecting the icon displays the Pilot sidebar. When the Autopilot is engaged the Pilot icon is replaced with the Disengage pilot icon.
2. **Pilot sidebar** — The Pilot sidebar provides controls and information relating to your autopilot system. With the Autopilot engaged the Pilot sidebar's content is expanded to provide further controls and information. The Pilot sidebar can be hidden by swiping the sidebar to the left. The sidebar can be displayed again by swiping from the left of the screen towards the center of the screen.

Engaging the autopilot — Locked heading

With Autopilot control enabled:

1. For Wheel and Tiller pilots, engage the mechanical drive by either engaging the wheel drive's clutch or attaching the pushrod onto the tiller pin.
2. Select the **Autopilot icon**.
The Pilot sidebar is displayed.
3. Select **Steer to Hdg**.
4. Select **Engage pilot**.

Engaging the autopilot — Navigation

With Autopilot control enabled:

1. For Wheel and Tiller pilots, engage the mechanical drive by either engaging the wheel drive's clutch or attaching the pushrod onto the tiller pin.
2. Initiate a Goto or Follow from the chart app.
3. Select the **Autopilot icon**.
The Pilot sidebar is displayed.
4. Select **Steer to Nav**.
5. Select either **Engage pilot** or if a cross track error exists then select **ALONG route leg** or **DIRECT from here**.

Selecting **ALONG route leg** will steer along the original track.


Selecting **DIRECT from here** will plot a new track from your current position to the destination.

Engaging and disengaging the autopilot - physical buttons

The process for engaging your autopilot using the physical buttons available on a RMK remote keypad or an Axiom Pro is shown below.

1. Press and hold the **Pilot** button to engage the autopilot in Locked heading mode.
2. Press the **Pilot** button again to disengage the autopilot.

Disengaging the autopilot

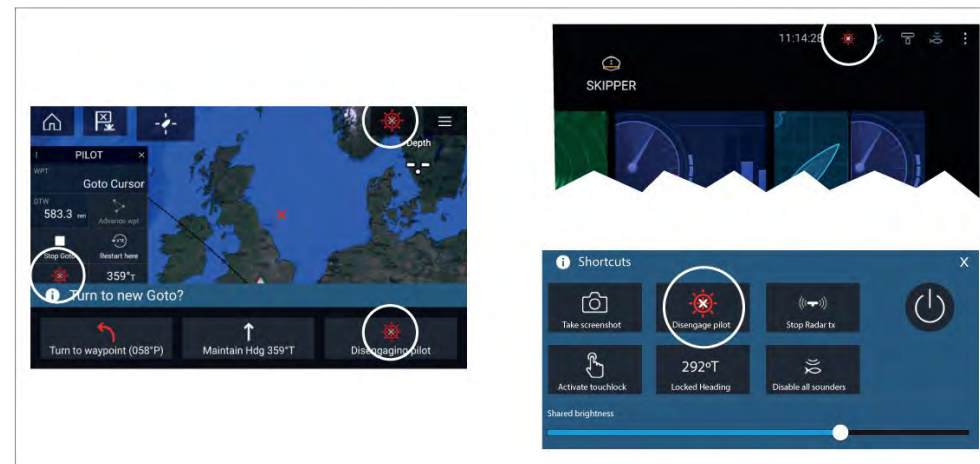

You can disengage your autopilot at any time by selecting the **Disengage pilot icon**.

The **Disengage pilot icon** is available in all apps. It is also available on the Pilot sidebar, in Pilot pop up messages, on the Homescreen and on the Shortcuts page.

6.3 Pilot sidebar

Depending on the state of your autopilot the following information and controls are available on the Pilot sidebar.



Note: The Pilot sidebar is controlled using the Touchscreen.

Pilot sidebar — Standby


| | |
|----|---|
| 1 | Sidebar selection Enables you to switch between Pilot and Data sidebars. |
| 2 | Close Closes the Pilot sidebar. |
| 3 | Steer to Hdg Enables you to engage the autopilot in locked heading (Auto) mode. |
| 4 | Steer to Nav Enables you to engage the autopilot in Navigation (Track) mode. |
| 5 | Pilot status Provides the status of the autopilot. |
| 6 | Rudder bar Provides visual indication of rudder position. |
| 7 | Heading Displays your autopilot's current locked heading. Selecting displays the Locked Heading adjustment pop-over. |
| 8 | -1° Selecting will adjust your locked heading by minus 1 degree. |
| 9 | +1° Selecting will adjust your locked heading by plus 1 degree. |
| 10 | -10° Selecting will adjust your locked heading by minus 10 degrees. |
| 11 | +10° Selecting will adjust your locked heading by plus 10 degrees. |
| 12 | Disengage Selecting will disengage your autopilot. |
| 13 | Steer to Nav Selecting will engage your autopilot in Navigation mode. |
| 14 | Pilot state Displays the current state / mode of your autopilot. |
| 15 | Destination Displays your current destination. |

| | |
|----|--|
| 16 | User customizable data Displays user customizable data. Select to customize data. |
| 17 | Advance wpt Selecting will advance your destination to the next waypoint in the current route. |
| 18 | Stop Route / Stop Goto Selecting will stop current navigation. |
| 19 | Restart here Selecting will restart the cross track error (XTE) at your current location. |
| 20 | Disengage Selecting will disengage your autopilot. |
| 21 | Steer to Hdg Selecting will switch your autopilot to Locked heading mode. |
| 22 | Pilot state Displays the current state / mode of your autopilot. |

6.4 Pilot pop-up


During active navigation, when you reach your current destination the Pilot pop-up is displayed.

Goto

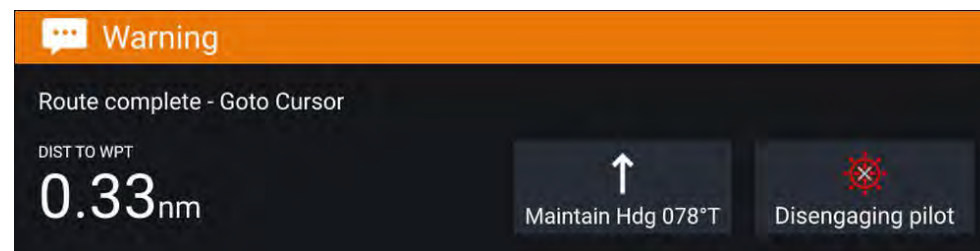

When performing a Goto the Pilot pop-up provides options to disengage the autopilot or to maintain the current course in Locked heading mode.

Follow

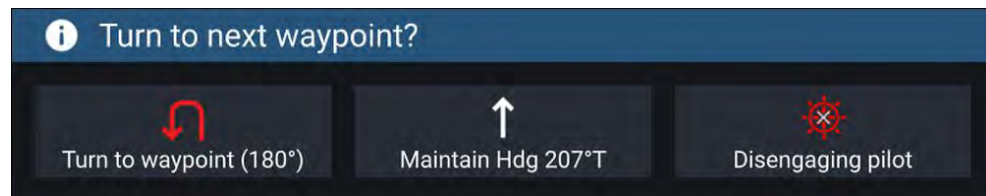

When following a Route the Pilot pop-up provides options to make the required turn to the next waypoint, disengage the autopilot or to maintain the current course in Locked heading mode.

6.5 Autopilot Control — Pilot set-up menu

| Menu item and description | Options |
|---|---|
| Vessel hull type Selecting the hull type that is the closest match for your vessel provides optimum steering performance. | <ul style="list-style-type: none"> • Sail • Sail (slow turn) • Sail Catamaran • Power • Power (slow turn) • Power (fast turn) |
| Drive type Selecting the drive type that matches your vessel's drive will provide optimum drive performance. | List of drives compatible with your ACU. |
| Compass offset Adjust the Compass offset so that your autopilot's heading matches the ship's compass. The display of autopilot heading data requires a second networked MFD or pilot controller. Compass offset will be adjusted automatically during the Align compass to GPS procedure . | <ul style="list-style-type: none"> • -10° to +10° • 0° (default) |

| Menu item and description | Options |
|--|--|
| Speed input ⁽¹⁾ Selects the source for speed data. | <ul style="list-style-type: none"> • Auto (default) • Water speed (STW) • SOG • Default cruise speed |
| Cruise speed ⁽¹⁾ Set the Cruise speed value to your vessel's typical cruising speed. | <ul style="list-style-type: none"> • 4.0kts to 60.0kts |
| Calibration lock The calibration lock is used to lock out specific calibration settings which if changed may require recommissioning of the autopilot system. If your system has been dealer installed then the lock may be turned on. | <ul style="list-style-type: none"> • On (default) • Off |
| Dockside wizard Dockside calibration must be carried out before using your autopilot for the first time. The Dockside wizard guides you through the dockside calibration process. The steps included in the dockside wizard are dependent on whether you have a rudder reference transducer fitted to your vessel. | <ul style="list-style-type: none"> • Drive type • Rudder limit • Align rudder • Hard over time • Rudder drive check |
| Restart compass Select to restart the compass linearization procedure. | <ul style="list-style-type: none"> • Start • Cancel • Disengage pilot |
| Compass lock Locks the compass linearization so that further automatic linearization is not performed. | <ul style="list-style-type: none"> • On • Off (default) |

| Menu item and description | Options |
|---|--|
| <p>Align compass to GPS ⁽¹⁾ Follow the onscreen instructions to align your compass with your GPS heading. If your system has a GPS connected to your data network (SeaTalk, SeaTalkng or NMEA), the autopilot is tuned to the GPS heading while you steer to a known magnetic heading. This step provides a rough alignment and minimizes the amount of compass fine tuning required. As part of the align to GPS process, the autopilot system will compare the average heading with the average COG (Course Over Ground) value reported by the source of GPS data, and set an offset value so that the heading matches the COG value provided by the GPS.</p> | <ul style="list-style-type: none"> • Start • Cancel • Disengage pilot |
| <p>Pilot factory reset Resets your autopilot's settings to factory default values.</p> | <ul style="list-style-type: none"> • Yes • No |
| <p>CCU debug level ⁽¹⁾ Sets a debug value for troubleshooting purposes. The debug level should only be set when requested by Technical Support as part of a troubleshooting process.</p> | <ul style="list-style-type: none"> • 0 to 63 |
| <p>ACU debug level ⁽¹⁾ Sets a debug value for troubleshooting purposes. The debug level should only be set when requested by Technical Support as part of a troubleshooting process.</p> | <ul style="list-style-type: none"> • 0 to 63 |
| <p>Rudder damping ⁽¹⁾ Rudder damping is used to prevent the autopilot from "hunting" maneuvers. Always use the lowest acceptable value. For more information, refer to: p.106 — Rudder damping levels and deadband angles</p> | <ul style="list-style-type: none"> • 1 to 9 • 3 (default) |
| <p>Auto turn angle ⁽¹⁾ Determines the amount of course change when performing an auto turn.</p> | <ul style="list-style-type: none"> • 10° to 125° • 90° (default) |
| <p>Power steering ⁽³⁾ Determines the behavior of the Rotary or Joystick.</p> | <ul style="list-style-type: none"> • Off (default) • Proportional • Bang Bang |

| Menu item and description | Options |
|--|---|
| <p>Reverse rudder ref ⁽³⁾ Inverts the rudder reference display graphic.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Motor phasing ⁽¹⁾ Switches the polarity of your drive motor. Use if your drive polarity is inverted.</p> | <ul style="list-style-type: none"> • A • B |
| <p>Rudder offset ⁽³⁾ Adjust to specify the rudder offset from amidships.</p> | <ul style="list-style-type: none"> • -10° to +10° • 30° (default) |
| <p>Rudder limit Specifies how far the rudder can move before hitting its end stops. The value should be set to approximately 5° less than your maximum rudder angle.</p> | <ul style="list-style-type: none"> • 10° to 50° • 30° (default) |
| <p>Hard over time Specifies the time it takes for the rudder to move from hard port to hard starboard or vice versa. The default value is determined by your Drive type selection.</p> | <ul style="list-style-type: none"> • 1 to 100.0 seconds |
| <p>Gybe inhibit ⁽²⁾ When set to Prevent Gybe the autopilot will prevent you from performing an Auto tack away from the wind.</p> | <ul style="list-style-type: none"> • Allow Gybe • Prevent Gybe |
| <p>Wind data type ⁽²⁾ Selects whether wind data is True or Apparent.</p> | <ul style="list-style-type: none"> • Apparent • True |
| <p>Wind shift alarm ⁽²⁾ Enables and disables the Wind shift alarm.</p> | <ul style="list-style-type: none"> • On • Off |

Note:

- (1) Option not available when **Calibration lock** is **On**.
- (2) Only available when Vessel hull type is set to a Sailing vessel.
- (3) Only available when a rudder reference transducer is connected.

6.6 Rudder damping levels and deadband angles

For autopilot systems which include a rudder angle reference sensor / transducer, rudder damping is used to prevent Evolution autopilot system over-activity, characterized by “hunting” maneuvers. A number of rudder damping levels are available to address this behavior. Rudder damping levels relate to “deadband angles”, and can be configured using your autopilot control head (e.g. p70s/p70Rs or MFD). A higher damping level is intended to eliminate pilot and helm over-activity.

Typically, the appropriate rudder damping level is the lowest acceptable value. However, it is important to be aware that the rudder damping scaling has been changed in recent versions of ACU units, which include newer processor and software versions (these units can be identified with an “A” appended to their SKU).

Important: The rudder damping levels can have a significant impact on your autopilot performance. If you are unsure as to how to adjust these settings to best suit your autopilot system, please refer to your dealer or Raymarine product support.

The following table lists the rudder damping levels and deadband angles that are available with both old and new versions of the ACU software:

| Rudder damping level | Existing Deadband angle | | New Deadband angle (ACU software version v3.11 onwards) |
|----------------------|-------------------------|---------|--|
| | ACU-100, 150, 200, 400 | ACU-300 | |
| 1 | 0.1° | 0.15° | 0.1° |
| 2 | 0.2° | 0.30° | 0.2° |
| 3 | 0.3° | 0.45° | 0.3° |
| 4 | 0.4° | 0.60° | 0.4° |
| 5 | 0.5° | 0.75° | 0.7° |
| 6 | 0.6° | 0.9° | 0.9° |
| 7 | 0.7° | 1.05° | 1.1° |

| Rudder damping level | Existing Deadband angle | | New Deadband angle (ACU software version v3.11 onwards) |
|----------------------|-------------------------|-------|--|
| | 0.8° | 1.20° | |
| 8 | 0.8° | 1.20° | 1.6° |
| 9 | 0.9° | 1.35° | 2.2° |

It’s important to check the rudder damping level currently configured on your autopilot control head, to ensure it matches your needs. The rudder damping value should be increased one level at a time until the autopilot stops hunting.

Adjusting the Rudder Damping level

Use the following menu path to adjust the Rudder Damping level:

1. **Homescreen > Settings > Autopilot > Advanced settings > Rudder Damping.**

CHAPTER 7: WAYPOINTS, ROUTES AND TRACKS

CHAPTER CONTENTS

- [7.1 Waypoints — page 108](#)
- [7.2 Routes — page 110](#)
- [7.3 Tracks — page 114](#)
- [7.4 Sharing Waypoints, Routes and Tracks — page 115](#)
- [7.5 Waypoint, routes and tracks capacity — page 116](#)


7.1 Waypoints

Waypoints are used to mark specific locations or points of interest. Waypoints can be used in the Chart, Radar and Fishfinder apps. Your MFD can store up to 10,000 waypoints which can be sorted into up to 200 waypoint groups.

You can navigate to a waypoint by selecting **Goto** from the Waypoint's context menu.

Placing a waypoint

Example — Placing a waypoint in the Chart app

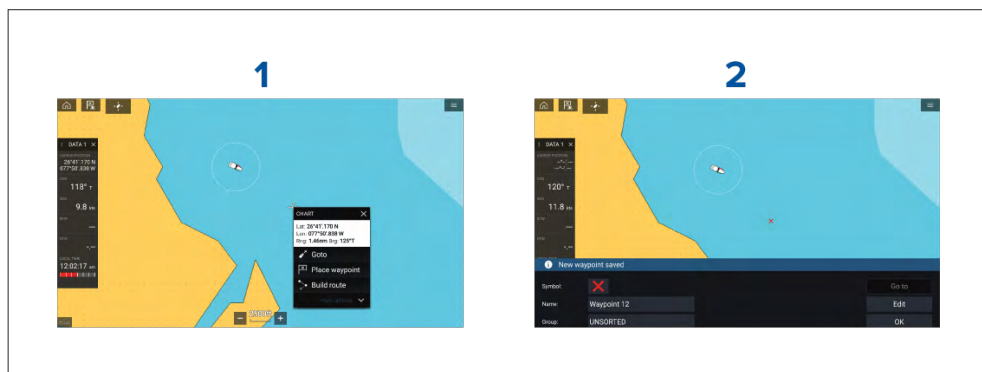

1. Select and hold on the desired location and select **Place waypoint** from the context menu..
2. Select **Edit** to edit the waypoint details, **Goto** to navigate to the Waypoint, or **OK** to return to normal operation.



To place a waypoint at your vessel's current location press the Waypoint/MOB icon or physical button.

You can also create a waypoint at a specific location / coordinates. For details refer to: [Placing a waypoint at a specified lat/long](#)

The the Boat activity is set to First responder you can also create a waypoint at a range and bearing from a specific location. For details refer to: [p.272 — Waypoint at Range and Bearing from location](#)

Placing a waypoint at a specified lat/long

You can place a waypoint at a specified latitude and longitude.

1. Select **New waypoint at lat/long** from the New page in the Chart app menu: **Menu > New > New waypoint at lat/long**
2. Enter the latitude and longitude for the waypoint.
3. Select **Save**.


Waypoint management

Waypoints are managed using the Waypoint list.

The Waypoint list can be accessed from the Homescreen and from the Chart app: **Homescreen > My data > Waypoints**, or **Chart app > Menu > Waypoints, routes, tracks > Waypoints**.

Waypoint list

The Waypoint list is sorted into groups. Selecting a group displays a list of all the waypoints included in that group.

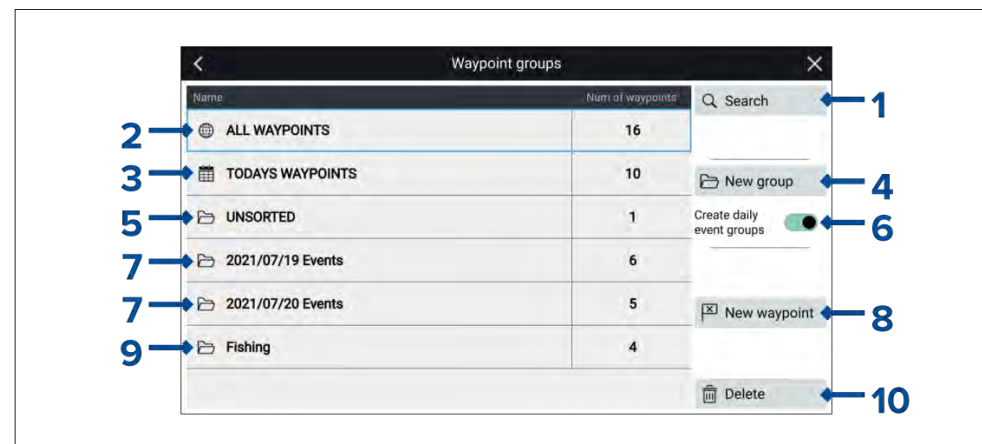


1. **Search** — search for waypoints by text or by symbol.
2. **ALL WAYPOINTS** — view a list of all waypoints.
3. **TODAYS WAYPOINTS** — view all waypoints created toady.
4. **New group** — create a new waypoint group.
5. **UNSORTED** — view all waypoints not assigned to a waypoint group.
6. **Create daily event groups** — when enabled waypoints are automatically saved by day into event groups.

- Event groups** — event groups are created automatically each day when **Create daily event groups** is enabled.
- New waypoint** — create a new waypoint at your vessel's current location.
- Waypoint group** — select to view a list all waypoints in the group.
- Delete** — select waypoints to be deleted.

Selecting a Waypoint group from the list displays a list of all waypoints in that group.

Group list

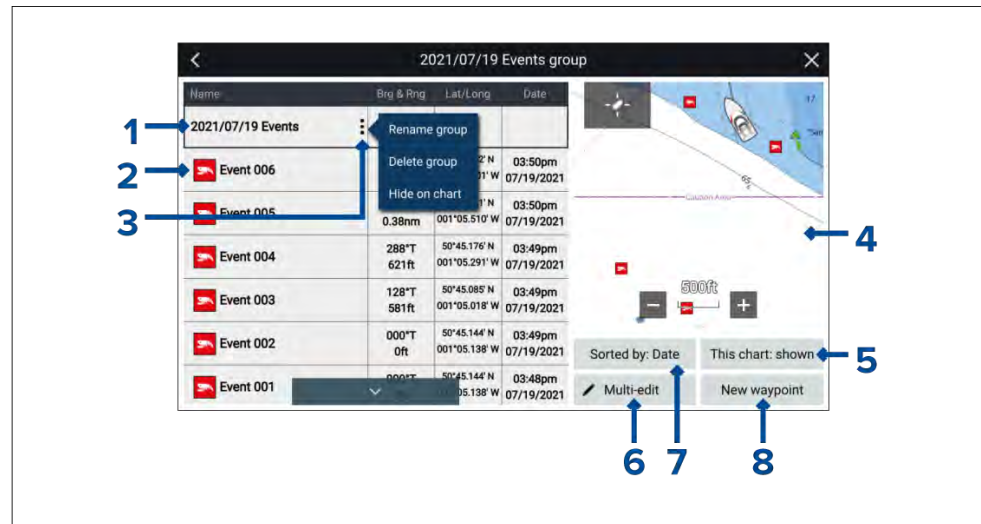

- Waypoint group / Event group** — name of the waypoint or event group.
- Waypoints** — list of waypoints in the group.
- Menu** — select to open the group pop-over menu. The following options are available:
 - Rename group** — rename the group
 - Delete group** — delete the group and all of its waypoints.
 - Hide on chart / Show on chart** — when the waypoint list is accessed via the Chart app this option allow you to show or hide the waypoints in the group. Hidden groups will not be displayed in the chart app.
- LiveView** — When accessed via the Chart app the LiveView pane is displayed. When a waypoint is selected the LiveView will show the selected waypoint ion the center of the LiveView pane.

- This chart: shown / This chart: hidden** — identifies whether the current group is shown or hidden in the Chart app. Selecting will switch between hidden and shown.
- Multi-edit** — change details of more than 1 waypoint in the group. When selected the options under the LiveView pane change and you can select the waypoints from the list that you want to edit. The following options are available:


- Select all** — selects all waypoints in the group.
- Delete selected** — deletes the selected waypoints.
- Change symbol** — changes the symbol used for the selected waypoints.
- Move to another group** — moves the selected waypoints to a different group.

- Sort by** — sort the waypoints in the group by either: **Name**, **Date**, **Range**, **Symbol** or **Comment**.
- New waypoint** — create a new waypoint at your vessel's current location.

Selecting a waypoint displays the pop-over menu, selecting View waypoint details from the pop-over menu displays details for that waypoint.

Waypoint details


When accessed via the Chart app the waypoint details page will include the LiveView pane.

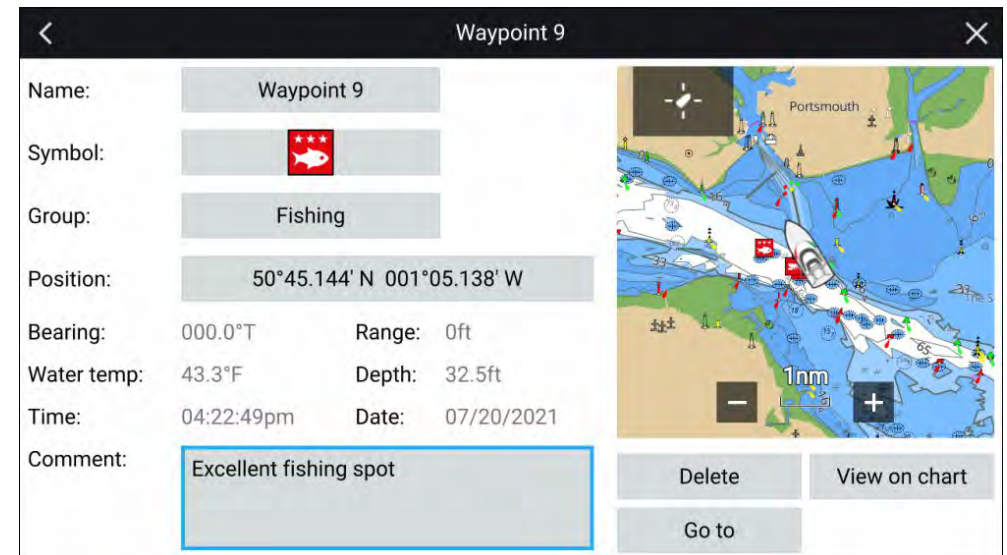

The waypoint's **Name**, **Symbol**, **Group**, **Position** and **Comment** can be customized by selecting the relevant field. Below the LiveView pane there are options to **Delete** the waypoint, set a **Go to**, or **View on chart**.

7.2 Routes


Routes are used to plan your journey in advance. You can plan your journey directly on your MFD, or at home using software capable of exporting Waypoints and Routes in standard .gpx format, such as Raymarine's Voyage Planner software.

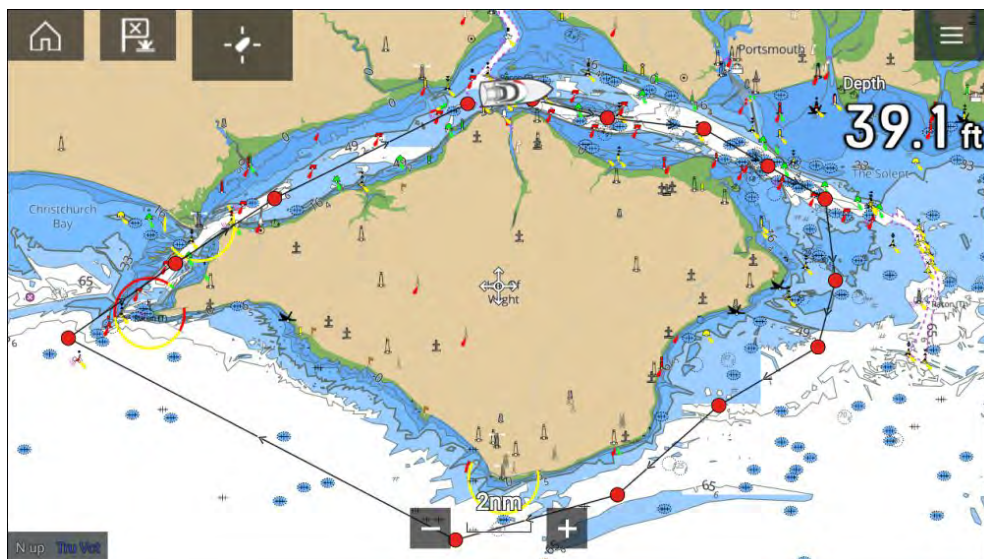

Routes consist of a number of waypoints. Your MFD can store up to 250 Routes, each Route consisting of up to 500 waypoints. The Route capacity limit is subject to your MFD's 10,000 Waypoint limit (for example, your MFD could store 20 Routes each containing 500 waypoints).

Creating a Route

Routes can be created on the MFD in the Chart app.

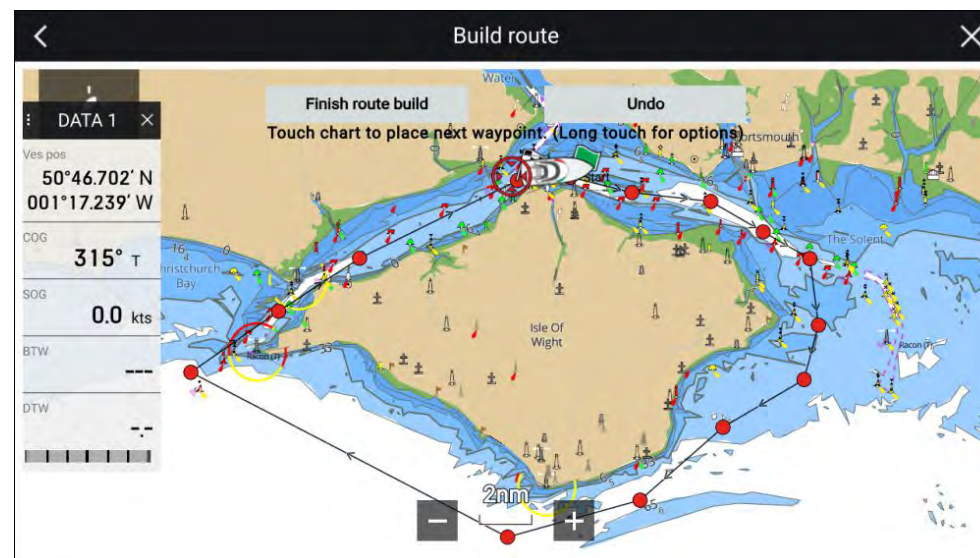

1. Select and hold on the location for the first waypoint.
2. Select **Build route** from the context menu.
3. Select the location for the second waypoint.
The 2 waypoints will be joined by a line, creating the first leg of your route.
4. Select the location for subsequent waypoints.

Important:

If you place a waypoint in the wrong location you can select **Undo** at any time to remove the last waypoint placed.

5. Check your Route will be safe to follow, you can move the waypoints in your route by dragging them to a new location.
6. When your Route is complete select **Finish route build**.

Use Autorouting during route creation

Whilst building a route you can use Autorouting to automatically add a route leg to a route you have already started to create. The Autorouting features require compatible cartography.


1. Press and hold anywhere on screen and select either **Autoroute to wpt** or **Autoroute to here**.

Selecting **Autoroute to wpt** will allow you to select a waypoint from your Waypoints list to include in your route, selecting **Autoroute to here** will create a route leg to the cursor's current position.

Once an Autoroute leg has been added you can select **Finish route build** or add further manual or autoroute route legs.

Autoroute

Autoroute is available when using compatible cartography. Autoroute allows you to build a route automatically between a point on the chart and your vessel.

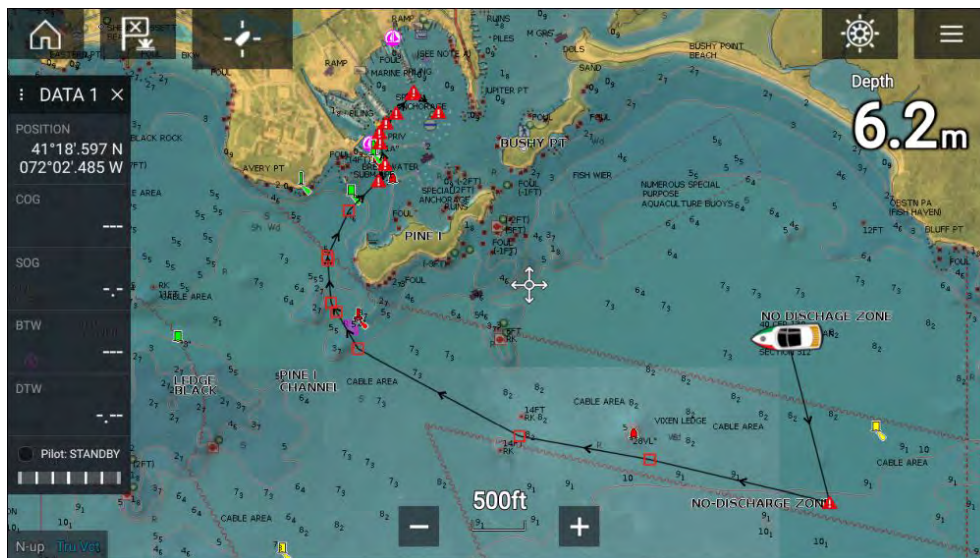

You can select any point on the Chart and from the Chart context menu select **Autoroute to here** or you can select **Autoroute to** from an existing waypoint's context menu to create a route automatically between your vessel and the chosen point.

The created route is generated by comparing data available on your cartography against the minimum safe distances specified in the **Boat details** menu: (**Homescreen > Settings > Boat details**).

Waypoints will not be placed in areas that conflict with your specified minimum safe distances. Caution symbols are used for waypoints that are near objects or restricted areas.

Never follow a route before checking each route leg is safe for your vessel.



Warning: Automatic route generation

- Do NOT rely on automatically generated routes to guarantee that the route is safe to navigate. You MUST review the suggested route carefully and where necessary edit the route before following it.
- If a waypoint within any automatically generated route is added or moved the Automatic route generation algorithm will NOT be used, extra care should be taken to ensure that the route leg and any moved waypoints are safe to navigate.

Caution: Easy Routing - Dredged areas

The C-MAP® Easy Routing feature will ignore some hazards in dredged areas. Easy Routing is intended for passage planning between harbors rather than within a harbor.



Warning: Traffic separation

Automatic route generation features do not adhere to the Traffic Separation Schemes identified in Rule 10 of the *International Regulations for Preventing Collisions at Sea 1972* as amended.

Raymarine® therefore recommends that you do NOT use Automatic route generation to create any part of a route which will cross traffic lanes or pass near to traffic separation lines. In these situations Automatic route generation MUST be switched Off and the route or route leg MUST be built manually, ensuring compliance to the rules laid out in the above regulations.



Warning: Minimum Safe Depth, Width and Height

Depending on cartography vendor, the **Minimum safe depth**, **Minimum safe width**, and **Minimum safe height** settings that you specify for your vessel will be used during automatic route generation. These settings will ensure that automatic routes are not generated in areas that are unsuitable for your vessel.

Minimum safe settings are user-defined calculations. As these calculations are outside of Raymarine's control, Raymarine will not be held liable for any damage, physical or otherwise, resulting from the use of the automatic route generation feature or the **Minimum safe depth**, **Minimum safe width** or **Minimum safe height** settings.

Autoroute - compatible cartography vendors

The Autoroute feature is compatible with the following cartography vendor features.

- Navionics® Autorouting.
- Navionics® Dock-to-dock
- C-MAP® Easy Routing

Differences between automatic route generation functions

There are important differences between the way different vendors handle automatic route generation.

Depth clearances (Tidal height)

- Navionics® Autorouting and Dock-to-dock avoids shallow areas based on the user defined **Minimum safe depth** setting plus an additional Navionics® safety margin. It assumes the lowest tide level, normally Lowest Astronomical Tide (LAT). The tide can be lower than LAT due to atmospheric effects such as high air pressure, wind direction, etc.
- C-MAP® Easy Routing assumes that there will be some tide. The user must apply their own safety margin as appropriate to current conditions. Route legs that cross areas shallower than the user defined **Minimum safe depth** setting are marked with hazard waypoint symbols, it is critical that these legs are checked to ensure that there is sufficient tide to avoid the hazard.

Width & Height clearances

- Navionics® Autorouting and Dock-to-dock does not use the user defined **Minimum safe width** or **Minimum safe height** settings when generating routes. Objects with width / height constraints are marked with hazard waypoint symbols, it is critical that these legs are checked to ensure that there is sufficient clearance to avoid the hazard.
- C-MAP® Easy Routing uses the user defined **Minimum safe width** and **Minimum safe height** settings to determine if sufficient clearance is available. The user must apply their own safety margin as appropriate to current conditions. The Height datum must be checked, as it could be Mean High Water Springs (MHWS) or Highest Astronomical Tide (HAT). In both cases the tide can be higher than the datum due to atmospheric effects such as high air pressure, wind direction, etc.

Reviewing an automatically generated route

Before following any route you must ensure that it is safe to do so.

Upon Route completion:

1. Range in on each route leg and waypoint that make up the Route.
2. Check either side of the route leg and around the waypoint for any possible obstructions.

Obstructions can be charted objects or restricted areas. Routes generated automatically should use the caution waypoint symbol in areas where there are possible obstructions.

3. Where obstructions exist move the necessary waypoints so that the waypoint and route leg is no longer obstructed.

Importing a route

You can import routes created in standard gpx format.

1. Save your route to a memory card.
2. Insert the memory card into your MFD.
3. Select Import from card from the Import/export page: **Homescreen > My data > Import/export > Import from card.**
4. Locate and select the gpx file that contains your Route.
The Route will be imported to your MFD.

Route management


Routes are managed using the Route list.

The Route list can be accessed from the Homescreen and from the Chart app:

- **Homescreen > My data > Routes**
- **Chart app > Menu > Waypoints, routes, tracks > Routes**

If the Route list is accessed from the Chart app menu, then the selected route is displayed in the live view pane on the right of the screen.

Route list

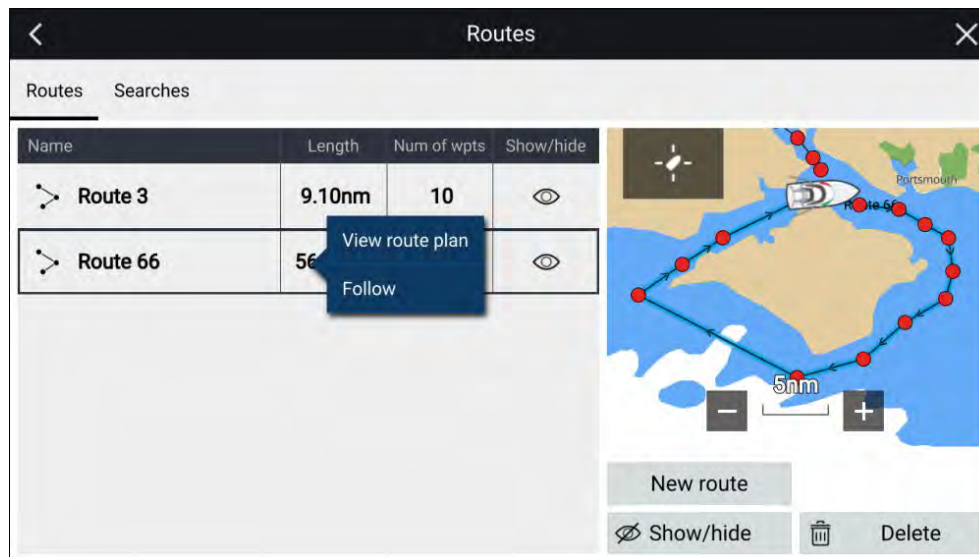


From the route list you can **Delete** routes, create a **New route** using existing waypoints or **Show/Hide** and existing route..

You can **Follow** a route or **View route plan** by selecting the relevant option from the Route pop-over menu.

Route plan

The route plan displays a list of all waypoints in the route and when accessed from the Chart app also includes a LiveView Chart pane showing the route's location.

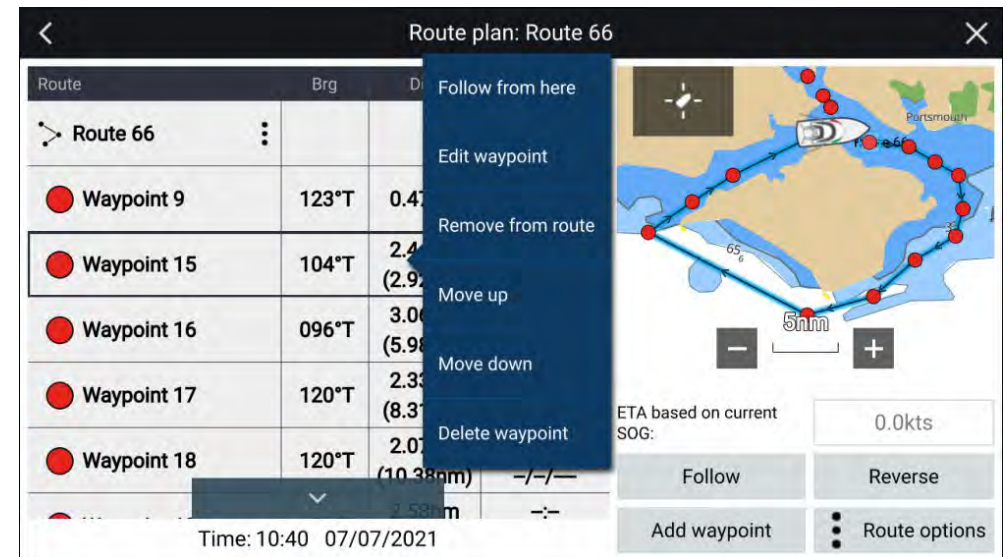

Selecting a waypoint from the list will open the pop-over menu . From the pop-over menu you can:


- **Follow from here** — Follow the route from the selected waypoint.
- **Edit waypoint** — edit the waypoints details.
- **Remove from route** — remove the waypoint from the route keeping the waypoint.
- **Move up** — move the waypoint up in the route list order.
- **Move down** — move the waypoint down I the route list order.
- **Delete waypoint** — delete the waypoint.

From the Route plan you can also :

- navigate the route by selecting **Follow**.
- change the route direction by selecting **Reverse**. Selecting **Reverse** will overwrite the original route, swapping the start and end waypoints so that the route can be followed in the opposite direction. You can revert the route to its previous direction by selection **Reverse** again.
- add an existing waypoint to the route by selecting **Add waypoint**.
- change route options by selecting **Route options**.

Route options

Route options can be accessed from the route plan list.

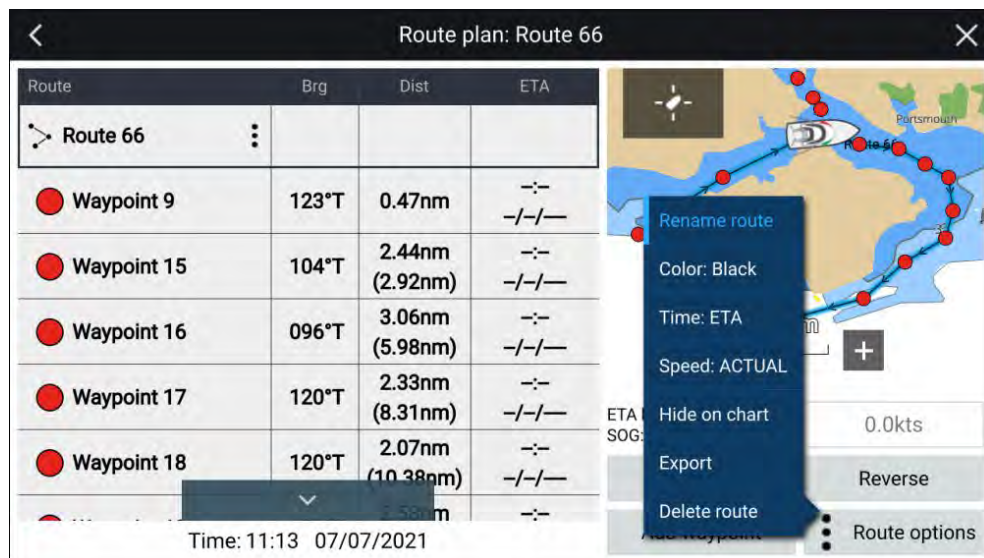

The following options are available:

- **Rename route** — rename the route.
- **Color** — change the color of the route.
- **Time** — switch between ETA (Estimated Time of Arrival) and TTG (Time To Go).
- **Speed** — switch between **Actual** (SOG) and **Planned**. When the speed is set to planned you can select a desired speed for navigating the route.
- **Hide/show on chart** — hide or show the selected route. When hidden the route will not be displayed in the Chart app but will still be accessible from the Route list.
- **Export** — export the route to a memory card.
- **Delete route** — delete the route.

7.3 Tracks


Tracks are used to record where you have been. Tracks are made up of track points that are created at regular time or distance intervals. You can store up to 15 tracks on your display, each track can contain up to 10,000 points.

When a track reaches 10,000 points it will be saved and if there is an unused track available a new track will be started automatically. If all tracks are used, then when the 15th track reaches 10,000 points track recording will stop and a notification will be displayed.

Tracks can be converted into routes so that they can be followed.

Creating a track

You can record your vessel's journey using Tracks.

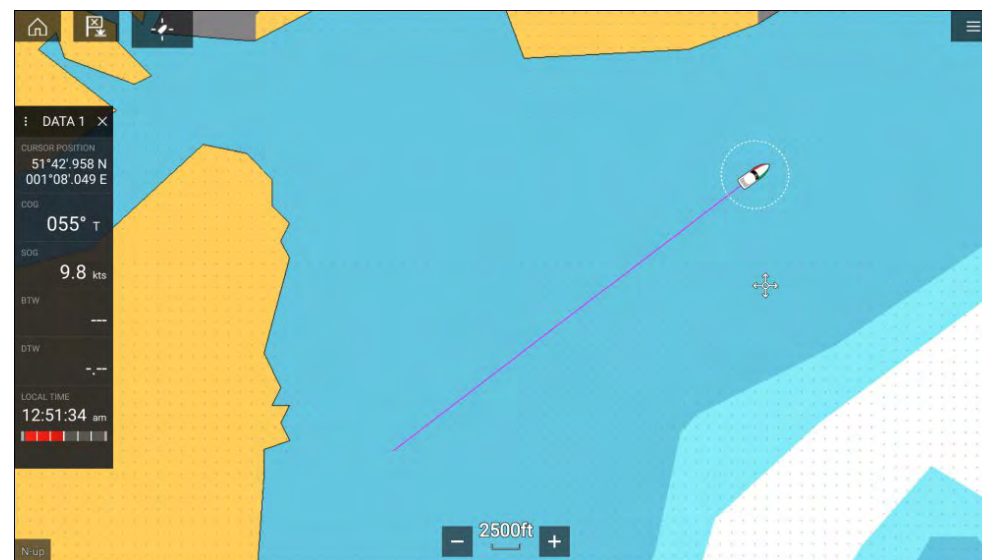

1. Select and hold on your vessel icon to display the vessel pop-over options.
2. Select **Start track**.
Your vessel's journey will now be recorded.
3. Select **Stop track** from the pop-over options when you have completed your track.
4. Select **Save** to save the track or **Delete** to remove the track.

You can also start a new track recording at anytime from the Chart menu: **Menu > New > Start a new track**. When using the Chart menu to start a track, if a track is already recording then it will be saved before the new track

is started. Once a Track is saved it can be converted to a Route so that the same passage may be followed again at a later date.

Converting a track to a route

From the Track list: **Menu > Waypoints, routes, tracks > Tracks**.

1. Select a track.
2. Select **Create route from track** from the pop-over options.
3. Select **OK**.

Track management

Tracks are managed using the Track list.

The Track list can be accessed from the Homescreen and from the Chart app: **Homescreen > My data > Tracks**, or **Chart app > Menu > Waypoints, routes, tracks > Tracks**.

If the Track list is accessed from the Chart app menu, then the selected track is displayed in a Chart pane on the right of the screen.

Track list



From the track list you can Start or Stop tracks recording, **Delete** a track or choose how tracks are recorded.

Track interval

The track interval determines the time period or distance between track points when recording a track. You can choose whether to record track points by Time, by Distance or set to Auto.

- In **Auto** the track interval is set automatically to minimize the track points used whilst maintaining the actual path taken.
- When set to **Time**, you can choose a specified time period between track points.
- When set to **Distance** you can choose a specified distance between track points.

Customize tracks

From the Track pop-over options you can:

- rename a track
- change track color
- create a route from a track
- delete a track
- hide/show the track in the Chart app.

7.4 Sharing Waypoints, Routes and Tracks

Waypoints, Routes and Tracks can be shared with other devices

- MFDs connected over SeaTalkhs® (RayNet) network will automatically share waypoints, routes and tracks. When created on 1 MFD it is automatically duplicated on other MFDs in the network.
- Waypoints, routes and tracks can be shared with other non-networked MFDs and compatible devices by exporting them to a memory card and then importing on the desired device. For details refer to: [p.75 – Import/export](#)

Note:

- When your MFD is configured using the First responder Boat activity Waypoints and Routes can be imported and exported over an NMEA 0183 connection and Imported over an NMEA 2000 / SeaTalkng® connection. For details refer to: [p.282 – Import and export Waypoints and Routes over NMEA networks](#)
- Waypoints, Routes and Tracks cannot be shared over wireless connections.

7.5 Waypoint, routes and tracks capacity

Waypoints, routes and tracks are subject to capacity limits. The capacity limits for LightHouse™ 3 MFDs is shown below

- **Waypoints** — Your MFD can store up to 10,000 waypoints which can be sorted into up to 200 waypoint groups
- **Routes** — Your MFD can store up to 250 routes, each route consisting of up to 500 waypoints. The route capacity limit is subject to your MFD's 10,000 Waypoint limit (for example, your MFD could store 20 routes each containing 500 waypoints)
- **Tracks** — Your MFD can store up to 15 tracks, each track can contain up to 10,000 points.

CHAPTER 8: SEARCH AND RESCUE PATTERNS (SARS)


CHAPTER CONTENTS

- 8.1 SAR (Search and Rescue) patterns — page 118
- 8.2 Sector search pattern — page 118
- 8.3 Expanding square search pattern — page 121
- 8.4 Creeping line / Parallel line search pattern — page 123

8.1 SAR (Search and Rescue) patterns

Attempting to search the water for an object can be challenging, due to the vastness of the ocean and the effects of tide. Additionally, the object you are searching for is not normally in its last known location.

SAR Patterns are routes that can help you find an object in the water. The pattern can be modified and can take the effects of the tide into account, providing a more accurate and consistent route to search. SAR Patterns can be created on your MFD in the **Chart app**.

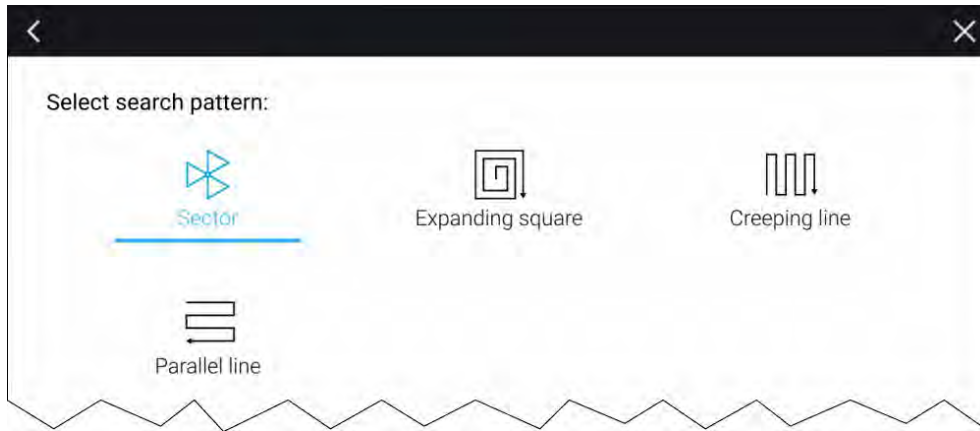

Access search pattern options: **Chart app > Menu > New > Search patterns**.

The available Search Patterns are:

- Sector Search
- Expanding square
- Creeping line
- Parallel Line


Once a search pattern is created it is saved as a Route and can be managed and navigated in the same manner as any other saved Route. For more information refer to: [7.2 Routes](#)

When the MFD is configured using the 'First responder' boating activity profile SAR patterns can be received over STEDS messaging. For more information refer to: [20.12 SAR pattern receipt](#)

8.2 Sector search pattern


The Sector Search pattern is made up of 9 legs, with the 3rd, 6th and 9th leg running past the datum (the Track Spacing will change depending on whether you are with or against the drift).

Note: As the Search patterns take in to account drift, the resulting Route may not resemble the patterns shown.

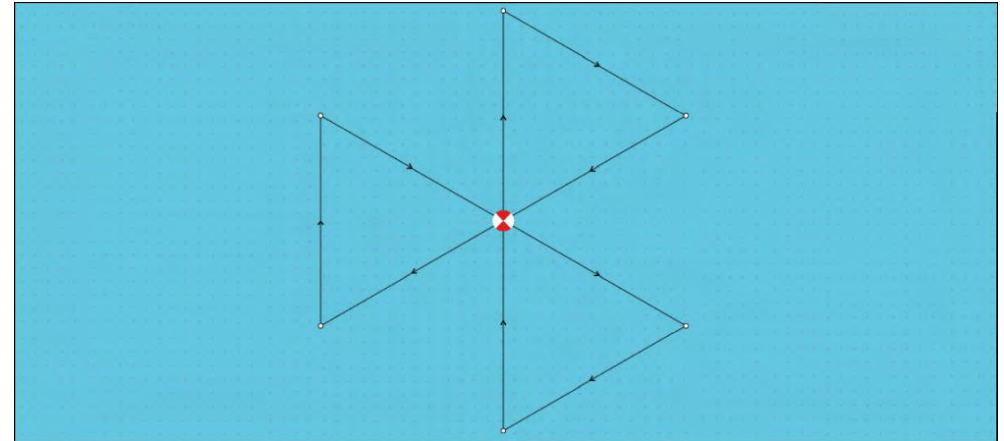

Creating a sector search pattern

To create a Sector Search pattern follow the steps below:

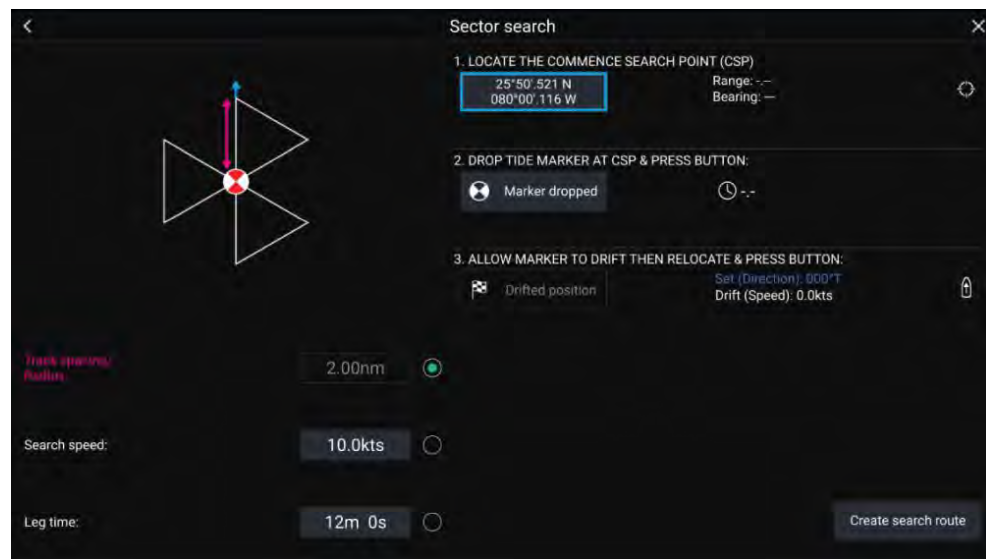


1. Select **Sector Search** from the **Search Pattern** options: **Chart app > Menu > Navigate > Search patterns**
2. **Set Commence Search Point (CSP)**
 - i. Manually input the **CSP** coordinates; a **Range** and **Bearing** are displayed to direct your vessel towards it.
 - ii. Alternatively, set the **CSP** as your vessel's current location by selecting the ⁽¹⁾ **CSP Shortcut** button.
3. **Set Drift**
 - i. Drop the **Datum Marker** in the water and select **Marker dropped**.
 - ii. Wait for the **Datum Marker** to drift through the water.
 - iii. Return to the **Datum Marker** in the new location and select **Drift position** to calculate the **Set (Direction)** and **Drift (Speed)**.
 - iv. Alternatively, you can use your vessel's **Heading** and **SOG** to define the set and drift by selecting the ⁽²⁾ **Set / Drift shortcut** icon.
4. **Set Track spacing / Radius, Search Speed, and Leg time**

[All 3 variables are dependent on each other. One variable is always the product of the other two.]

- i. Select one of the variables by selecting the ⁽³⁾ **Output** icon.

- ii. The selected variable will then be calculated as a result of changes made to the other two variables.


| Variable | Maximum Value |
|------------------------|--------------------------|
| Track spacing / Radius | 5 nm / 5 sm / 5 Km |
| Search Speed | 40 Kts / 46 Mph / 74 Kph |
| Leg Time | 59m 59s |

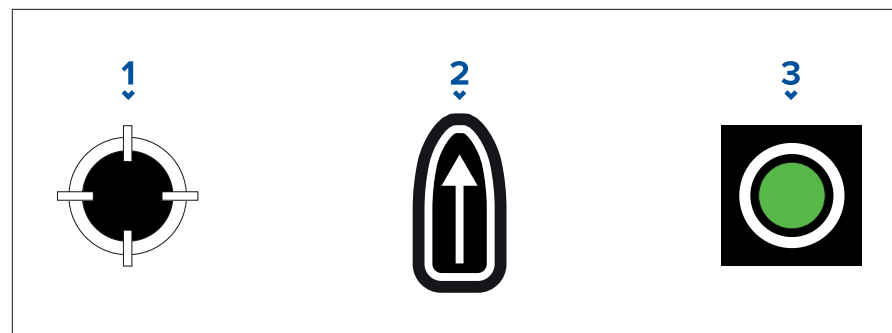

1. **CSP Shortcut**
2. **Set / Drift Shortcut**
3. **Output**
5. **Create search route**

[After all the above steps have been completed you can create your SAR pattern.]

- i. To create a search pattern, select the **Create search route** button in the bottom right of the screen.
- ii. The creation page will display your SAR pattern data and its location on the Chart app.

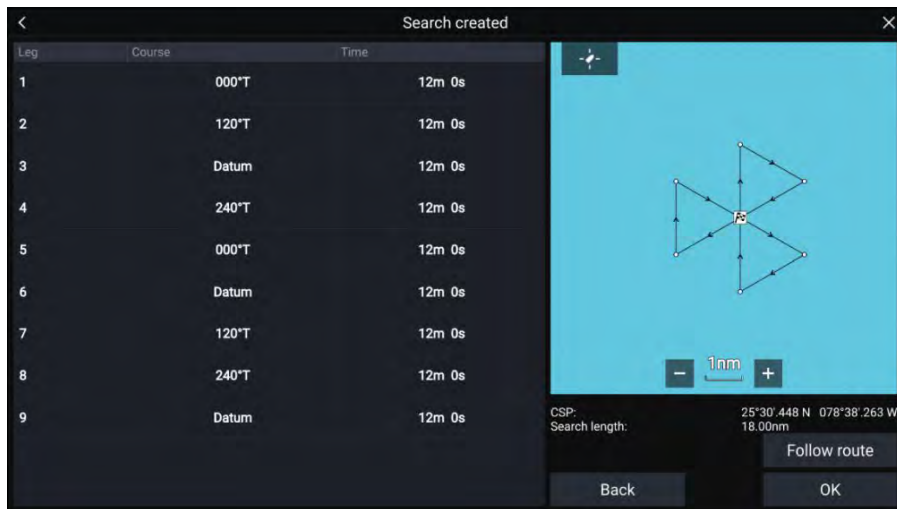

- iii. Select **Follow Route** to overlay the pattern on the **Chart app** and automatically follow the route.
- iv. Alternatively, select **OK** to overlay the pattern on the **Chart app** without following it.

Drift effects on sector search patterns

As the search patterns account for drift the resulting **Route** may not resemble the pattern shown above.


| Example | Drift |
|---------|---------------------------------|
| | Direction: 0° Speed: 0 Kts |
| | Direction: 45° Speed: 0 Kts |
| | Direction: 0° Speed: 0.5 Kts |
| | Direction: 0° Speed: 1 Kts |

8.3 Expanding square search pattern

The Expanding Square search pattern is an outwards spiralling square pattern, and is particularly suited to very detailed and methodical searches.


Note:

The Search patterns take drift into account, and therefore the resulting route may not resemble the patterns shown.

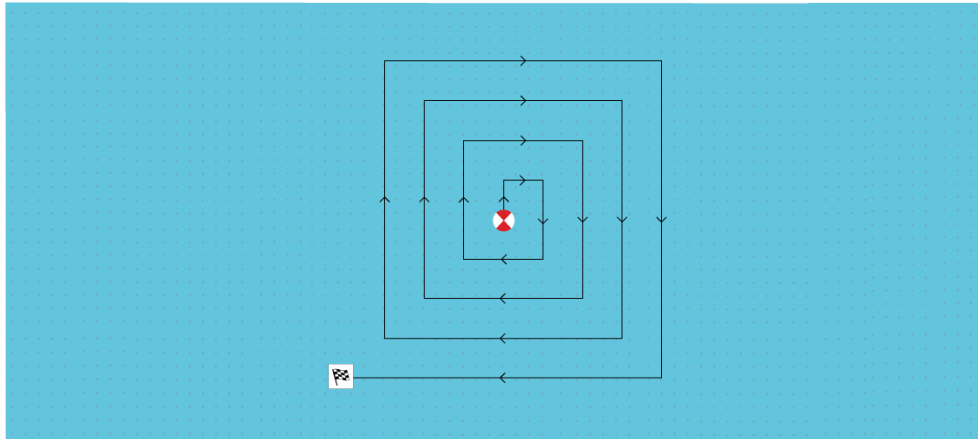

Creating an expanding square search pattern

To create an Expanding Square search pattern follow the steps below:

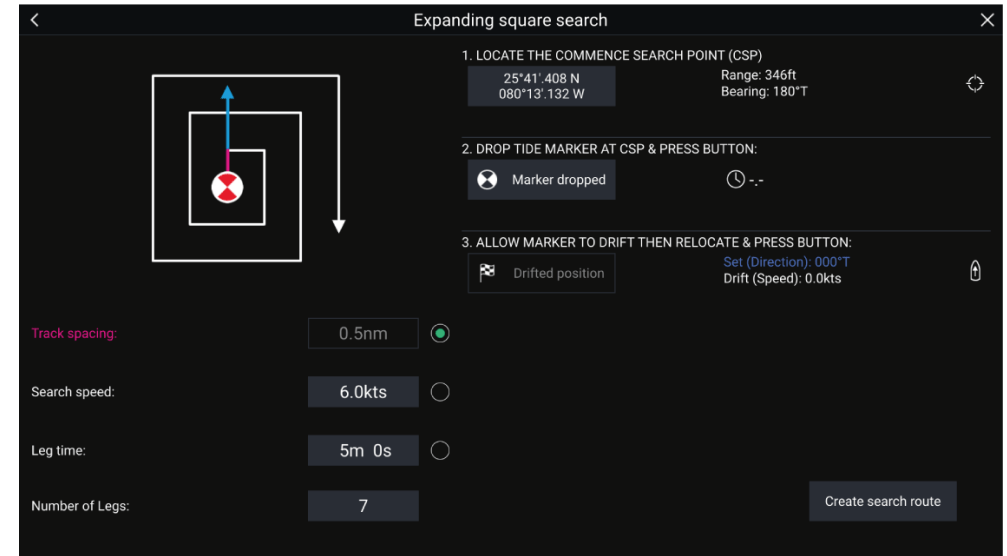


1. Select **Expanding Square** from the **Search Pattern** options: **Chart app > Menu > Navigate > Search patterns**
2. **Set Commence Search Point (CSP)**
 - i. Manually input the **CSP** coordinates; a **Range** and **Bearing** are displayed to direct your vessel towards it.
 - ii. Alternatively, set the **CSP** as your vessel's current location by selecting the ⁽¹⁾ **CSP Shortcut** button.
3. **Set Drift**
 - i. Drop the **Datum Marker** in the water and select **Marker dropped**.
 - ii. Wait for the **Datum Marker** to drift through the water.
 - iii. Return to the **Datum Marker** in the new location and select **Drift position** to calculate the **Set (Direction)** and **Drift (Speed)**.
 - iv. Alternatively, you can use your vessel's **Heading** and **SOG** to define the set and drift by selecting the ⁽²⁾ **Set / Drift shortcut** icon.
4. **Set Track spacing / Radius, Search Speed, and Leg time**

[All 3 variables are dependent on each other. One variable is always the product of the other two.]

- i. Select one of the variables by selecting the ⁽³⁾ **Output** icon.

- ii. The selected variable will then be calculated as a result of changes made to the other two variables.


| Variable | Maximum Value |
|------------------------|--------------------------|
| Track spacing / Radius | 5 nm / 5 sm / 5 Km |
| Search Speed | 40 Kts / 46 Mph / 74 Kph |
| Leg Time | 59m 59s |

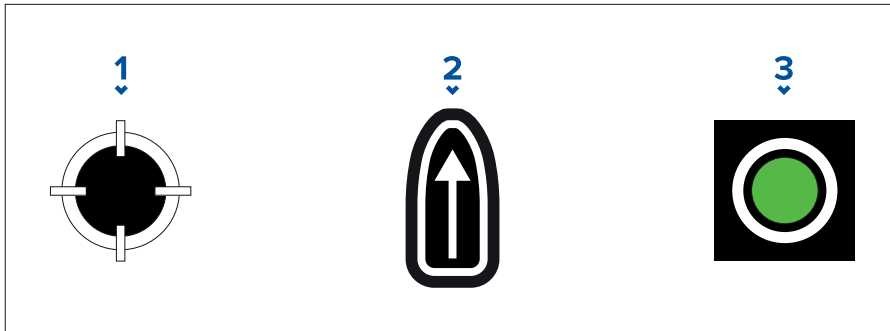

1. **CSP Shortcut**
2. **Set / Drift Shortcut**
3. **Output**
5. **Set the number of legs**
 - i. Select the number of legs for your expanding square search pattern.
6. **Create search route**

[After all the above steps have been completed you can create your SAR pattern.]



- i. To create a search pattern, select **Create search route** in the bottom right of the screen.
- ii. The creation page will display your SAR pattern data and its location in the Chart app.


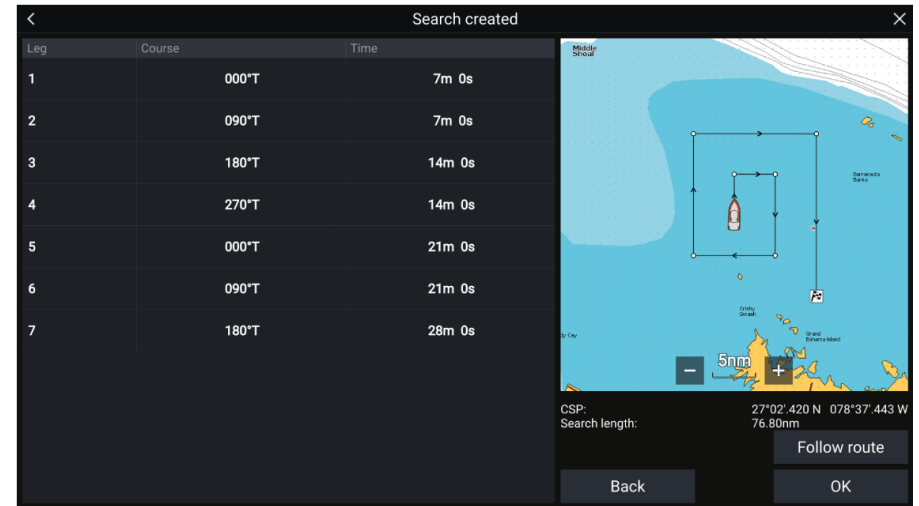


- iii. Select **Follow Route** to overlay the pattern on the Chart app and automatically follow the route.
- iv. Alternatively, select **OK** to overlay the pattern on the Chart app without following it.

Drift effects on expanding square search patterns

As the search patterns account for drift the resulting **Route** may not resemble the pattern shown above.

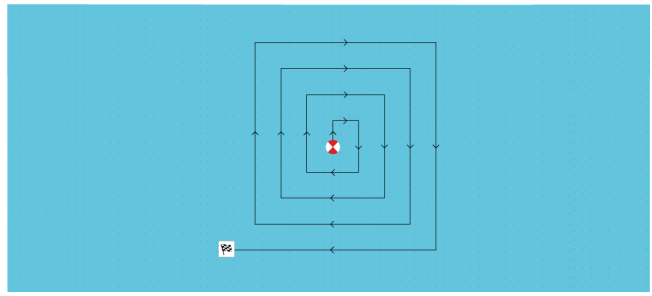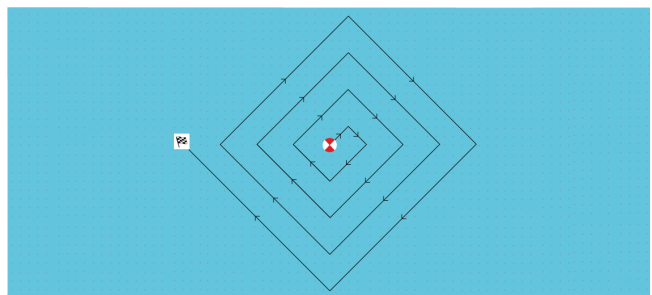
| Example | Drift |
|---|--------------------------------|
|  | Direction: 0° Speed: 0 Kts |
|  | Direction: 45° Speed: 0 Kts |
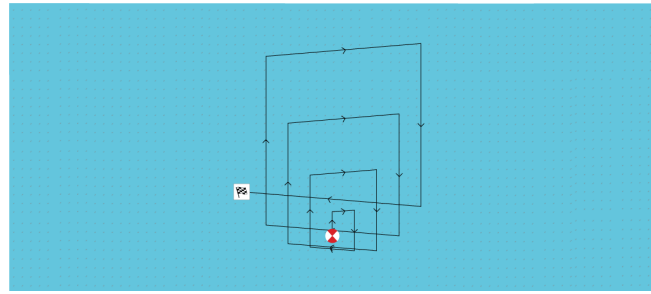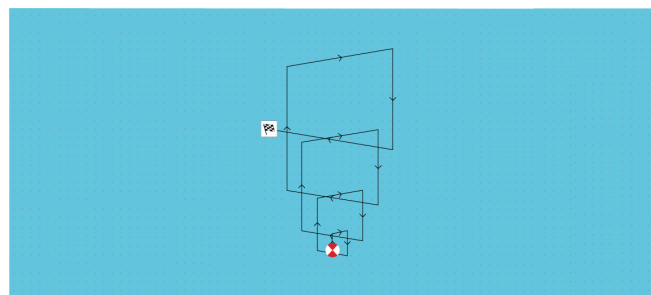
| Example | Drift |
|---|---------------------------------|
|  | Direction: 0° Speed: 0.5 Kts |
|  | Direction: 0° Speed: 1 Kts |

8.4 Creeping line / Parallel line search pattern


The **Creeping / Parallel Line search pattern** covers a rectangular area. The area is searched either by starting at one end of the search area (Creeping), which provides greater coverage of one end but will take time to cover the whole area, or by searching the area lengthways (Parallel). This provides reasonable coverage of the area quickly.

The Creeping Line search should be used when there is a logical end of the search area to start your search from.

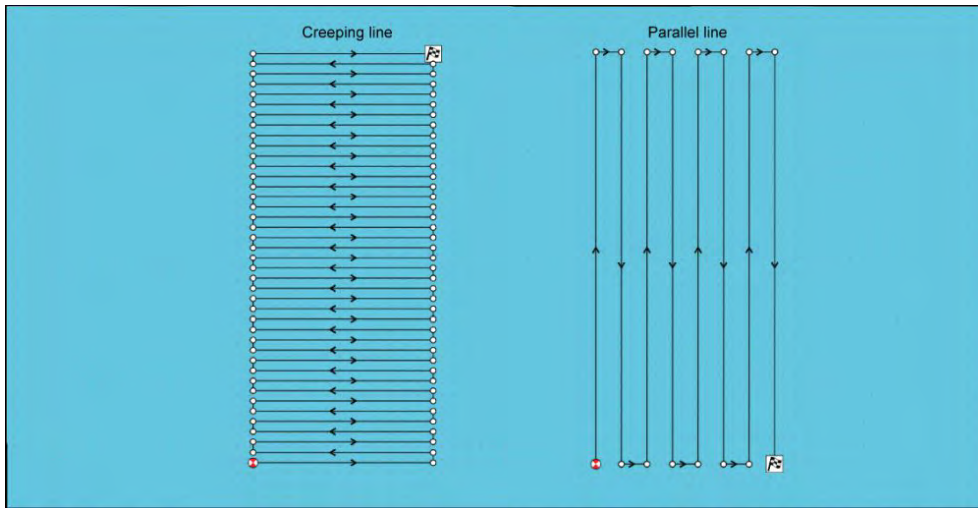

Creating a Creeping line / Parallel line search pattern


To create a Creeping line / Parallel line search pattern follow the steps below:

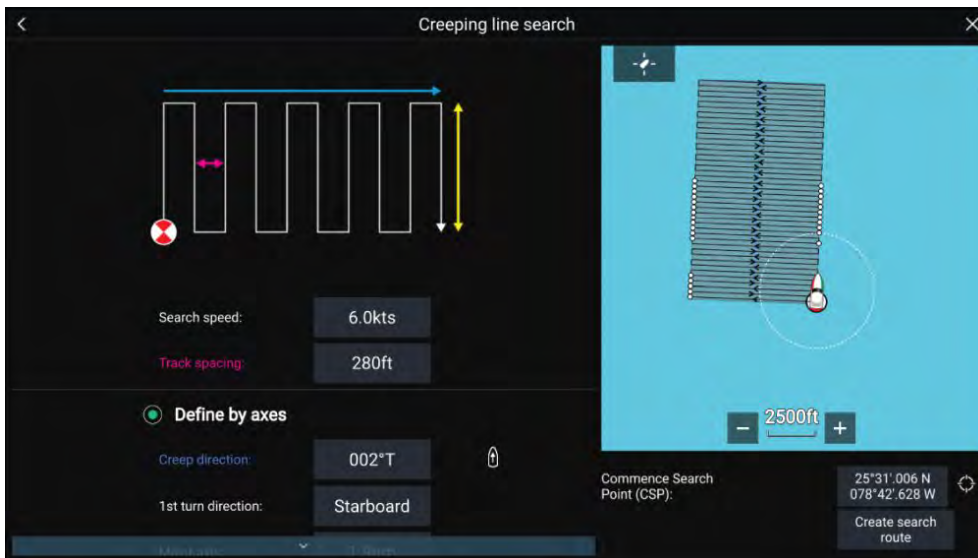

1. Select either **Creeping line** or **Parallel line** from the **Search Pattern** options: **Chart app > Menu > Navigate > Search patterns**
2. **Set Commence Search Point (CSP)**
 - i. Manually input the **CSP** coordinates.

- ii. Alternatively, set the **CSP** as your vessel's current location by pressing the ⁽¹⁾ **CSP Shortcut** button.
3. **Set Search Speed, and Track Spacing**
 - i. Select and edit each variable.
 4. **Define Search Rectangle (Define by axes)**
 - i. Define the rectangle's dimensions by using the **Major axis** and **Minor axis** boxes.
 - ii. Set the **Creep / Parallel direction** manually or set it as your Vessel's heading by using the ⁽²⁾ **Shortcut** button.
 - iii. Set the 1st turn direction by selecting **Port** or **Starboard**.

| Variable | Maximum Value |
|------------------------|--------------------------|
| Track spacing / Radius | 5 nm / 5 sm / 5 Km |
| Search Speed | 40 Kts / 46 Mph / 74 Kph |
| Major / Minor Axis | 20 nm / 23 sm / 37 Km |

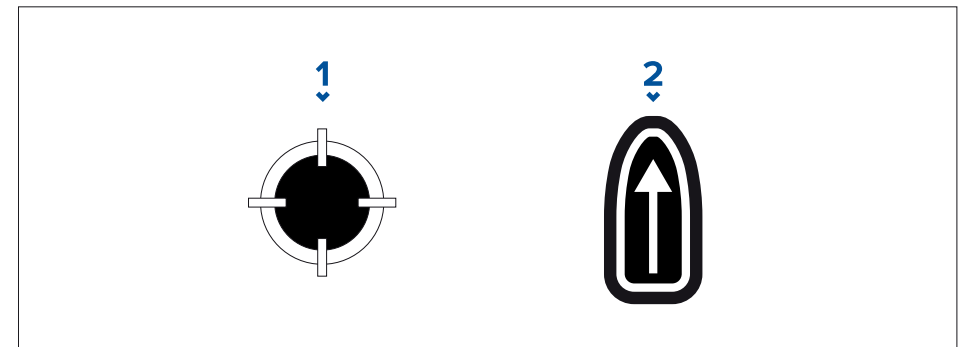

1. **CSP Shortcut**
 2. **Creep / Parallel Direction Shortcut**
5. **Define Search Rectangle (Define by corner points)**

[If you would prefer not to define the search rectangle dimensions using the major and minor axis, the rectangle can be defined by setting the coordinates of each corner point instead]:

- i. Enter the coordinates of each corner point 1–4.

Note:

- The corner coordinates need to form a rectangle. If the coordinates are not suitable then you will not be able to create the search route.
- The CSP must be on one of the sides of the search pattern.
- For a Creeping Line search pattern the CSP must be located along one of the longer sides.
- For a Parallel Line search pattern the CSP must be located along one of the shorter sides.
- The CSP must be on a bearing of between 85° to 95° (i.e. right angle $\pm 5^\circ$) from the previous side.
- The CSP should be half a track width from the corner point.

CHAPTER 9: CHART APP - GENERAL

CHAPTER CONTENTS

- 9.1 Chart app chapters — page 127
- 9.2 Chart app overview — page 127
- 9.3 Cartography overview — page 133
- 9.4 LightHouse charts — page 135
- 9.5 S-63 Encrypted Charts — page 137
- 9.6 Navigation — page 141
- 9.7 Depths and contours — page 143
- 9.8 Target tracking — page 146
- 9.9 Collision avoidance — page 152
- 9.10 Target intercept — page 160
- 9.11 RealBathy™ — page 160
- 9.12 Reeds almanac — page 162
- 9.13 Find nearest — page 162
- 9.14 Measure — page 163
- 9.15 ClearCruise™ Augmented Reality — page 164
- 9.16 UAV Chart integration — page 166
- 9.17 SonarChart™ Live — page 166
- 9.18 Chart settings menu — page 167

9.1 Chart app chapters

This document includes a chart app chapter for each of the available chart modes. This chapter includes a general overview of the available features and settings of the chart app.

To view details about chart mode specific features and settings refer to the relevant chart app chapter:

- [p.176 – Chart app - Simple mode](#)
- [p.178 – Chart app - Detailed mode](#)
- [p.180 – Chart app - Fishing chart mode](#)
- [p.183 – Chart app - Anchor mode](#)
- [p.201 – Chart app – Weather mode](#)
- [p.215 – Chart app - Tides mode](#)
- [p.187 – Chart app - Racing mode](#)
- [p.196 – Chart app - Fish mapping mode](#)

9.2 Chart app overview

The chart app displays a representation of your vessel in relation to land masses and other charted objects, which enables you to plan and navigate to your desired destination. The Chart app requires a GNSS (GPS) position fix in order to display your vessel at the correct location on a world map. For the chart app to recognise vessel direction a heading sensor is recommended. If heading data is not available then stable Course Over Ground (COG) may be used.

The chart app uses chart modes to configure the chart screen and settings for the relevant activity. For details on available chart modes refer to:

[p.129 – Chart modes](#)


If a settings option you are looking for is not available try changing chart mode.

For each instance of the chart app you can select which chart mode and which electronic cartography you want to use. The selection will be saved and persist over a power cycle.

The chart app can be displayed in both fullscreen and splitscreen app pages. App pages may consist of up to 4 instances of the chart app.

It is recommended that if you are underway and using chart modes that are not suitable for navigation that you create a split screen app page and use the chart app in detailed chart mode as one of the apps.



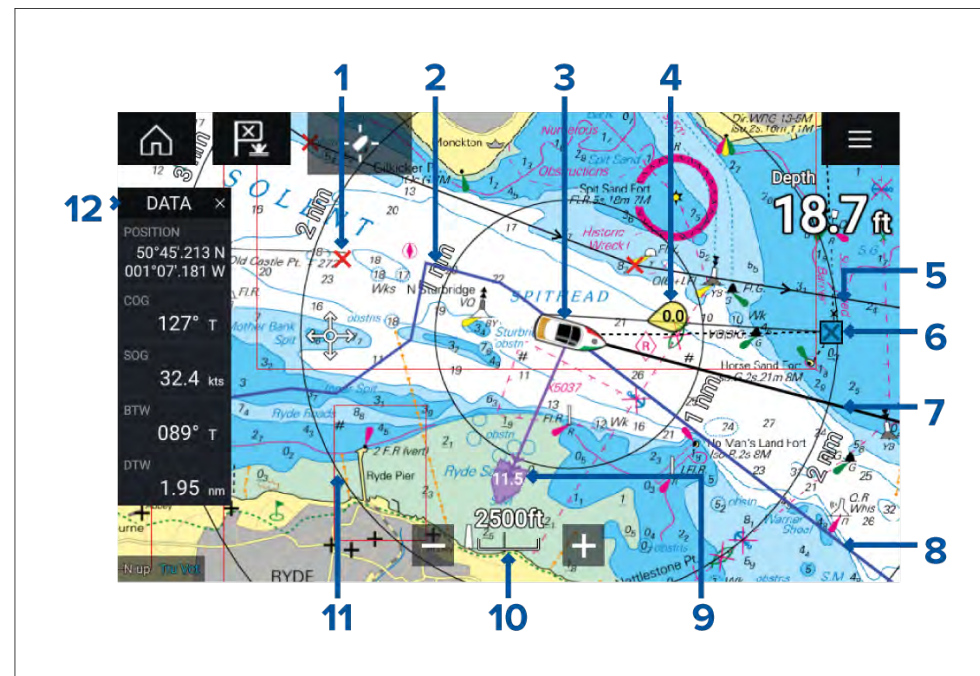

Below is an overview of features available in the chart app when using the default Detailed chart mode.:



| | | | |
|---|---|---|--|
| 1 | Waypoint Use waypoints to mark specific locations or points of interest. | 2 | Track You can record the passage your vessel takes using Tracks. |
| 3 | Vessel icon This icon represents your vessel, only displayed when a GNSS (GPS) position fix is available. The icon will be a black dot if no Heading is available). | 4 | Wind indicator Provides indication of wind direction and speed (Wind transducer required). |

| | | | |
|----|---|----|--|
| 5 | Route You can plan your route in advance by creating a Route using Waypoints to mark each route leg. | 6 | Destination waypoint During a Goto, this is the current destination waypoint. |
| 7 | Heading line If Heading data is available, a Heading vector for your vessel can be displayed. | 8 | COG line If COG data is available, you can display a COG vector for your vessel. |
| 9 | Tide indicator Provides tide Set and Drift indicators. Requires the following data: COG, Heading, SOG, and STW (Speed Through Water). | 10 | Chart range Identifies the scale for the displayed Chart range. |
| 11 | Range rings Provides a distance indication around your vessel at set intervals. | 12 | Sidebar The Sidebar contains system data that can be viewed in all apps. |

Chart app controls

| Icon | Description | Action |
|---|----------------|--|
|  | Home icon | Takes you to the Homescreen |
|  | Waypoint / MOB | Place waypoint / hold down to activate Man overboard (MOB) alarm |
|  | Pilot icon | Opens and closes the Pilot Sidebar |
|  | Menu icon | Opens the app menu |




| Icon | Description | Action |
|---|-------------|--|
|  | Find vessel | Centers your vessel onscreen. |
|  | Range In | Decreases the range/distance displayed onscreen. |
|  | Range Out | Increases the range/distance displayed onscreen. |


Chart ranging and panning

You can change the range displayed in the Chart app using the onscreen Range controls or by using the pinch-to-zoom multi-touch gesture.

You can pan the chart area by swiping your finger across the chart.

Chart app context menu

Context menus provide context sensitive menu options.

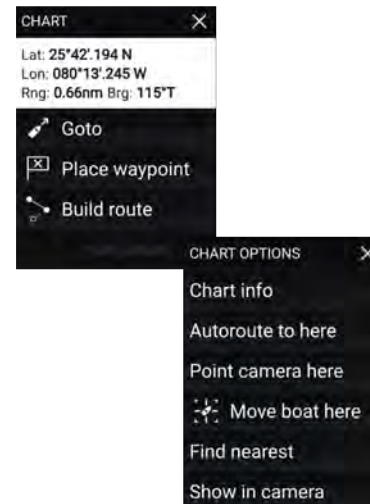


- Context menus are accessed in the Chart app by pressing and holding on a location or object.
- The context menu provides Latitude, longitude, range and bearing details for the selected location or object.
- The context menu provides quick access to relevant settings or features.
- Select **More options** to display further options.

Note:

The **Move boat here** option is only available in Demo/simulator mode.

Selecting a chart card

You can use LightHouse™ charts and compatible Navionics and C-MAP electronic charts. The electronic chart cards must be inserted into the MFD's MicroSD card reader (or the card reader of an MFD on the same network).

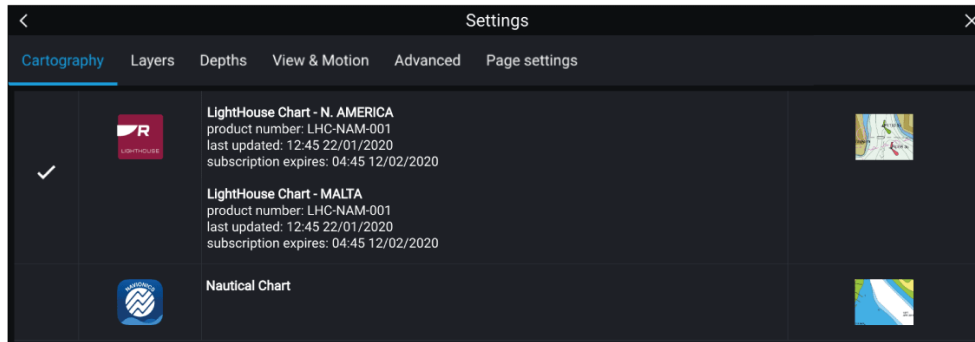

From the Chart app menu:

1. Select the **Settings** (“cogs”) icon.
2. Select the cartography that you want to use from the Cartography tab.

You may choose a different chart for each instance of the Chart app, accessed from the Homescreen. Cartography selection will persist until changed.


Note:

If no chart cards are detected on your MFD network the **Chart app** will default to Lighthouse Chart cartography.


Chart modes

The Chart app provides preset modes that can be used to quickly set up the Chart app for your intended use.

To change Chart mode select the required mode from the app menu.

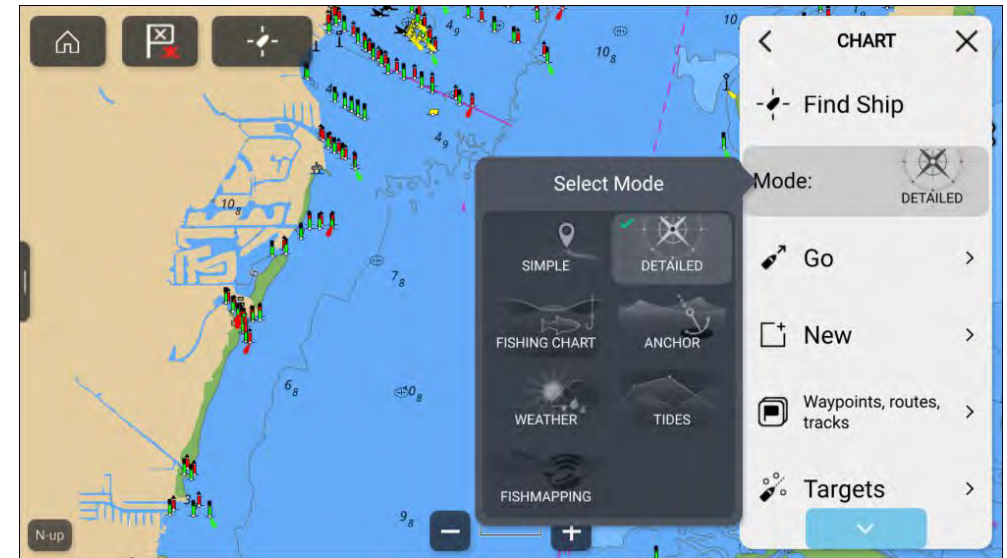

The following chart modes are available:

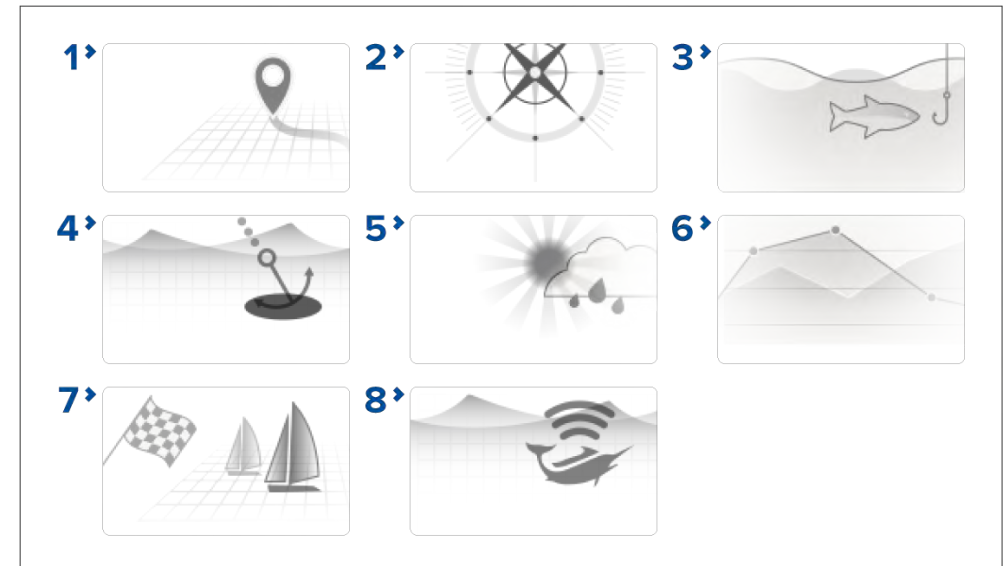


1. **SIMPLE** mode — In Simple mode, chart detail is suppressed to provide a clearer, simpler view for navigation and only navigation related menu options are available. Settings changes are not saved. For details refer to: [p.176 — Chart app - Simple mode](#)

2. **DETAILED** — Detailed is the default mode. Full chart detail and menu options are available. Settings changes are saved to the user profile in use. For details refer to: [p.178 — Chart app - Detailed mode](#)
3. **FISHING CHART** — Fishing mode optimizes the chart app for Fishing and if supported by your selected cartography, displays more detailed contour lines. Full menu options are available. Settings changes are saved to the user profile in use. For details refer to: [p.180 — Chart app - Fishing chart mode](#)
4. **ANCHOR** — Anchor mode optimizes the chart app for anchoring and provides access to the anchoring wizard so that the anchor drag alarm parameters can be configured. Full menu options are available. in Anchor mode and any settings changes are saved to the user profile in use. For details refer to: [p.183 — Chart app - Anchor mode](#)
5. **WEATHER** — Weather mode allows you to overlay weather data directly on the chart and view animated weather graphics or read weather reports. Settings changes are saved to the user profile in use. Weather mode is available when the MFD is connected to a SR150 or SR200 Sirius receiver. and requires a SiriusXM weather subscription. For details refer to: [p.201 — Chart app – Weather mode](#)
6. **TIDES** — In tides mode, tide station and current station icons are replaced with graphics representing tide and current conditions. Animation controls are displayed that enable playback of tide and current predictions over a 24 hour period. For details refer to: [p.215 — Chart app - Tides mode](#)
7. **RACING** — Racing mode optimizes the chart app for Race Sailing. Racing mode is available when the MFD is configured using the Sailing boat activity. In racing mode the race start line and race timer options are available from the menu, allowing you to create a start line and countdown timer which can help optimize your racing start. For details refer to: [p.187 — Chart app - Racing mode](#)
8. **FISHMAPPING** — Fish mapping mode enables you to overlay fish mapping layers and fish types directly on the chart. Settings changes are saved to the user profile in use Fish mapping mode is available when the MFD is connected to an SR200 Sirius receiver and requires a SiriusXM fish mapping subscription. For details refer to: [p.196 — Chart app - Fish mapping mode](#)

Vessel details

The vessel details pop-over provides access to vessel-related settings.

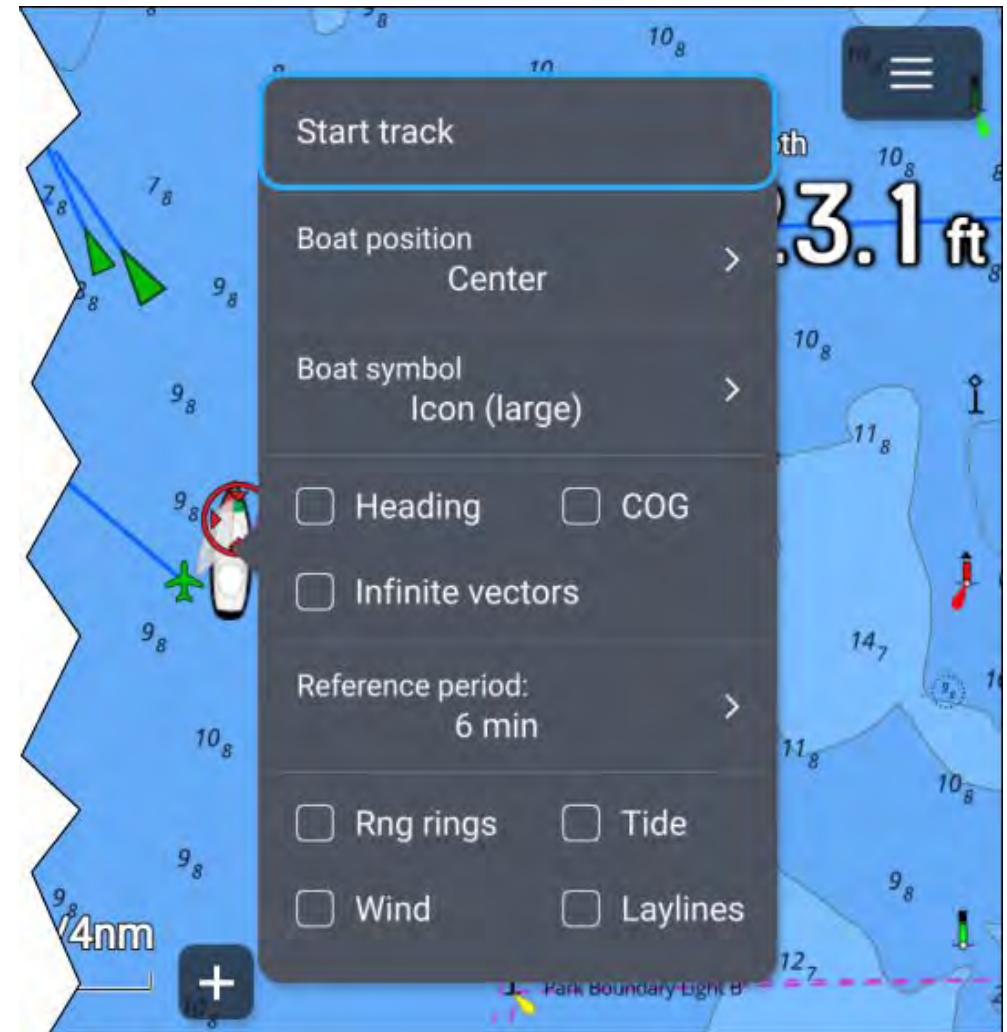

From the vessel details pop-over you can:

- Start or stop recording a track by selecting **Start/track / Stop track**.
- Change the vessel symbol's position by selecting a **Boat position** option.
- Change the symbol used to represent your vessel by selecting a **Boat symbol** option.

- Show or hide vessel heading vector line by ticking or unticking the **Heading** tick box. By default the heading vector length is determined using STW (Speed Through Water) received from a speed transducer, you can use SOG instead by enabling the **Use SOG for hdg vector length** from the **Advanced settings** menu: **Menu > Settings > Advanced**.
- Show or hide vessel COG vector line by ticking or unticking the **COG** tick box.
- Use infinite or reference period line length for vectors by ticking or unticking the **Infinite vectors** tick box.
- Set the length of vectors when not using **Infinite vectors** by selecting a **Reference period** option. Vector length is measured in minutes and shows your expected position after the selected time has elapsed.
- Show or hide range rings around your vessel by ticking or unticking the **Rng rings** tick box.
- Show or hide the tide vector graphic by ticking or unticking the **Tide** tick box.
- Show or hide the wind vector graphic by ticking or unticking the **Wind** tick box.
- Show or hide layline graphics by ticking or unticking the **Laylines** tick box. The Laylines option is only available when your MFD has been configured using the **Sailing** boat activity.

Note:

In simple mode, weather mode and fishmapping mode the only option available is **Start/track / Stop track**.

Chart mode specific behavior

Depending on chart mode some options are enabled by default:

- Tides mode — Heading, COG and Tide.
- Anchor mode — COG, Tide and Wind.
- Racing mode — Heading, COG, Tide, Wind and Laylines.
- Detailed mode — Laylines when your MFD has been configured using the **Sailing** boat activity.

Vessel detail option changes are saved for each chart mode in the current chart app instance.


Object selection and information

Charted objects, available on your cartography can be selected and object information can be viewed.



When you select an object the cursor will change to the Object cursor.


Cursor info boxes enabled

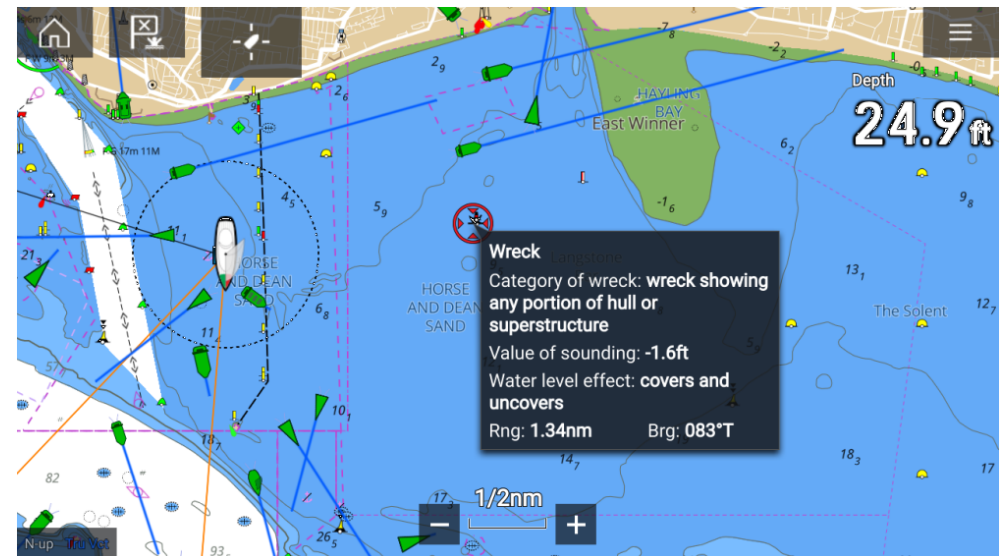

If the Cursor info box setting is enabled then when an object is selected an information pop-up is displayed. Selecting the pop-up will display a full screen information page.

The **Cursor info boxes** setting is accessed from the Advanced setting tab: **Menu > Settings > Advanced > Cursor info boxes**:

Full chart information

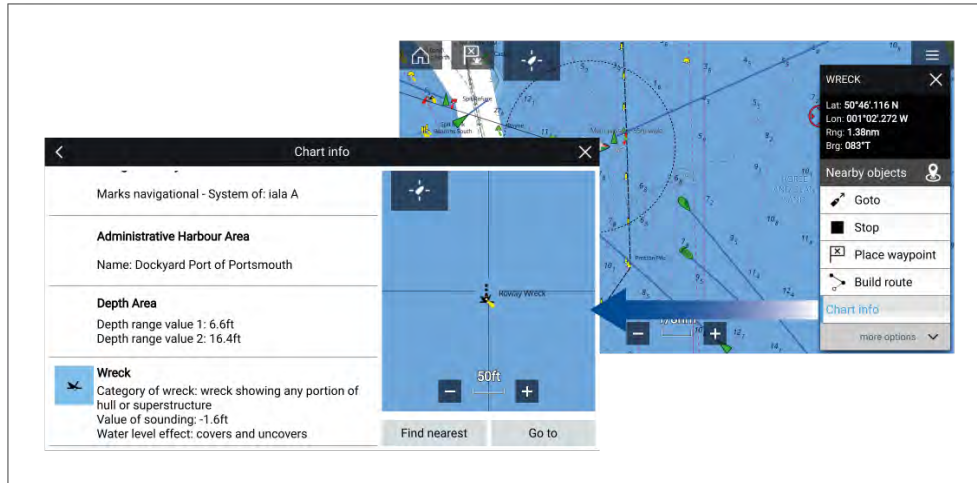


Selecting and holding on the object will display the object context menu.

Selecting **Chart info** will display the chart information page.

Layers

Layers are additional data views that can be overlaid (superimposed) on the Chart app. Types of layer include: aerial photographs, AIS targets, Radar image, range rings, tide graphs, weather Radar and crowd-sourced content.

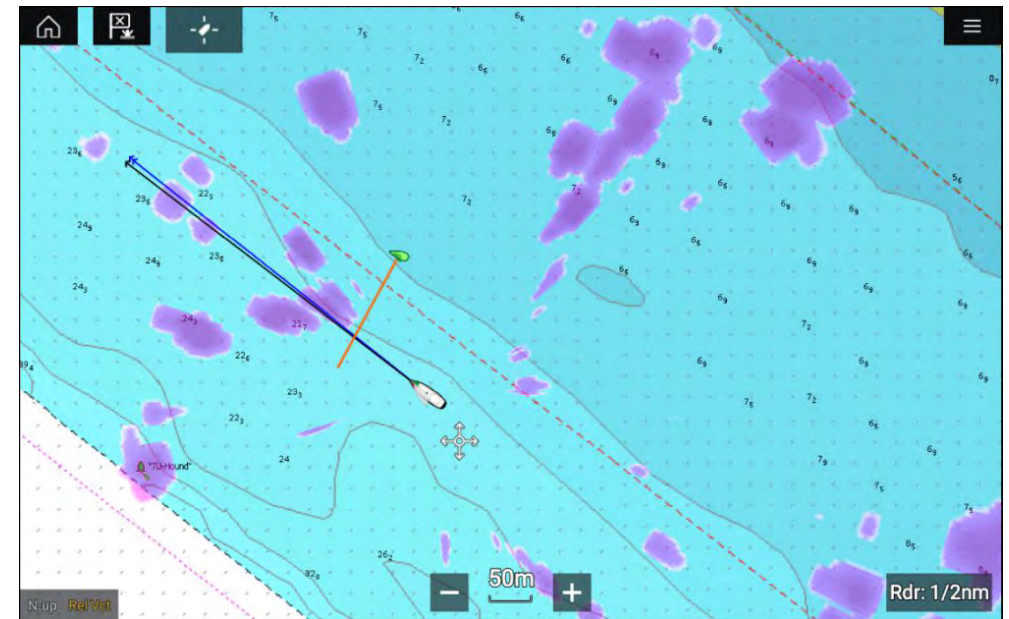

The Layers tab in the Chart app Settings menu provides controls for the Chart layers: **Menu > Settings > Layers**.

View and motion

The view and motion tab allows you to control how the chart is displayed in relation to your vessel.

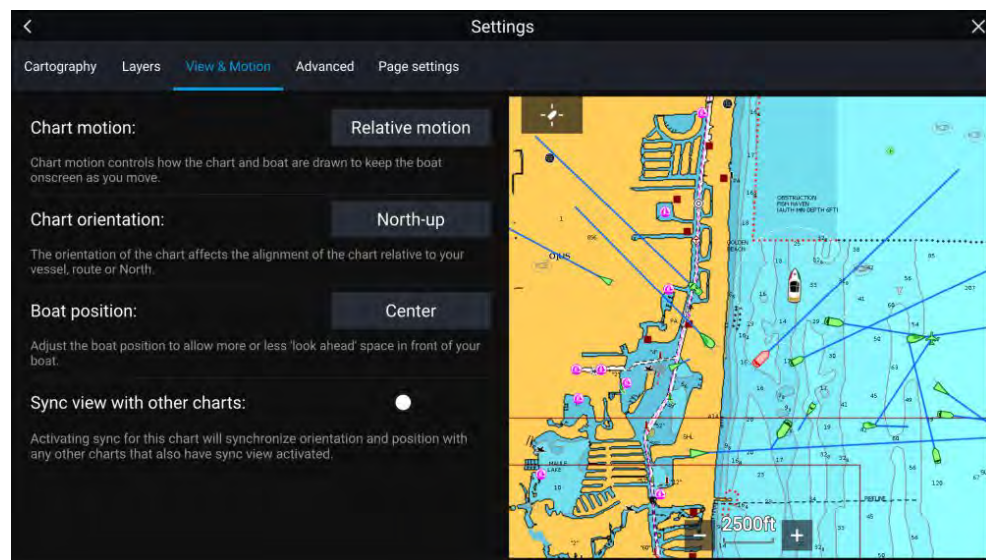


Chart motion

Chart motion controls how the chart and boat are drawn to keep the boat onscreen as you move.

Chart orientation

The orientation of the chart affects the alignment of the chart relative to your vessel, route or North.

Boat position

Adjust the boat position to allow more or less 'look ahead' space in front of your boat.

Sync view with other charts

Synchronize the orientation and position of all charts that have this setting enabled.

Camera tracking

When connected to a compatible Pan and Tilt Thermal camera you can track targets or point your camera at a specific target or area.

2 options are available for camera tracking:

- **Point camera here** — Points the camera at a specific point onscreen, the camera will remain pointed at this area regardless of your own vessel's course.
- **Track with camera** — Tracks a selected target regardless of your own vessel's or target's course.

Camera tracking options are available from the Context menu in the Chart and Radar apps: **Context menu > more options > Point camera here**, or **Context menu > more options > Track with camera**.

Automatic tracking

You can use the Camera app settings to configure automatic tracking for AIS, Radar and MoB targets: **Camera app > Menu > Settings > Camera motion > AUTO TRACKING**

9.3 Cartography overview

The Chart app includes a basic world base map. To use the Chart app for navigation purposes, compatible, detailed Electronic Navigational Charts (ENC) or Raster Navigational Charts (RNC) are required.

- **Raster Navigational Chart (RNC)** — A Raster chart is a digital image of a paper chart, and therefore the available information is limited to the information available on the equivalent paper chart.
- **Electronic Navigational Chart (ENC)** — ENCs are Vector based charts and include information that is not available on paper or Raster charts. Objects and features on Vector charts can be selected to obtain information that otherwise would not be readily available. Chart objects and features can also be enabled and disabled, or customized.

Note:

- The level of detail and features available on charts vary depending on vendor, chart type, subscription level and geographic region. Prior to purchasing charts, check the vendor's website to establish what level of detail is available on the charts you want to purchase.
- The information relating to available chart detail and settings in this manual should be treated as guidance only, as it is subject to change, which is not under Raymarine's control.

The Chart app range scale will affect the level of detail shown onscreen. Generally, more detail is available at lower ranges. The chart scale in use is indicated by the scale indicator, the value displayed is the distance that the range scale line represents onscreen.

You can remove and insert chart cards at any time. The MFD will automatically detect compatible chart cards and you will be asked if you want to change your current selection.

For chart card selection details, refer to: [p.168 — Cartography settings menu](#)

Different cartography types can be viewed simultaneously using an app page that includes multiple instances of the Chart app.

End-User License Agreements (EULAs)

The EULAs for third-party electronic charts are available via the following links:

- **LightHouse charts:** — [LightHouse Navigation Charts EULA 84231-3-EN.pdf](#)
- **Navionics charts:** <https://www.navionics.com/usa/la>
- **C-MAP charts:** <https://www.c-map.com/legal/terms-and-conditions-eula>

Supported cartography vendors

You MFD supports cartography from the vendors listed below.



1. Next generation LightHouse™ charts
2. Retired LightHouse™ vector, raster and NC2 charts
3. S-63 encrypted charts
4. Navionics charts
5. C-Map

Refer to the Raymarine website for the latest list of available LightHouse™ charts www.raymarine.com/marine-charts/

To check the currently supported Navionics charts please visit www.navionics.com or www.navionics.it

To check the currently supported C-MAP® chart please visit: www.c-map.com

3rd party raster charts

Raster navigational charts from the 3rd party vendors listed below are supported.

Note:

Raster charts are created by scanning paper charts, each segment of the paper chart is turned into a digital image. The detail available on raster charts is limited to the detail on the paper chart it was created from. Raster charts do not offer dynamic content that is typically available on vector based electronic charts.

- **Standard mapping** — USA only.(For details visit: <https://www.standard-map.com/>)
- **CMOR Mapping** — USA only.(For details visit: <https://www.cmormapping.com/>)
- **Strike Lines Charts** — USA only.(For details visit: <https://strikelines.com/>)
- **Imray** — (For details visit <https://www.imray.com/>)

Note:

For assistance using these charts refer to the chart vendor.

Caution: Care of chart and memory cards

To avoid irreparable damage to and / or loss of data from chart and memory cards:

- Ensure that chart and memory cards are fitted the correct way around. DO NOT try to force a card into position.
- DO NOT use a metallic instrument such as a screwdriver or pliers to insert or remove a chart or memory card.
- Ensure correct memory card ejection procedure is carried out before removing the chart or memory card from the card reader.

9.4 LightHouse charts

LightHouse™ charts is the brand name for Raymarine’s electronic navigational charts. LightHouse™ charts can include a premium subscription which adds new and enhanced features.

Note:

Legacy LightHouse™ Vector, Raster and NC2 charts have now been discontinued and can no longer be downloaded or updated.

New LightHouse™ charts come with a free 1 year subscription to LightHouse™ Premium. The premium subscription unlocks data-rich points of interest (POI), high-resolution satellite aerial overlays and regular chart updates. After the free subscription ends the premium features can be continued for an annual fee.


LightHouse™ charts can be purchased from Raymarine dealers, as either a pre-loaded chart card or a blank chart card that includes a voucher that can be redeemed from the chart store.

To find out more about available regions and latest features visit the LightHouse™ charts store: <https://chartstore.raymarine.com/lighthouse-charts>

LightHouse Chart Store

LightHouse™ charts can be purchased from the LightHouse™ Chart Store, which can be accessed from a personal computer (PC) or from a mobile device via the RayConnect app.

You must have a Chart Store account and be logged in to the account before you can purchase charts in the Chart Store. This account can be created during the checkout process if required.

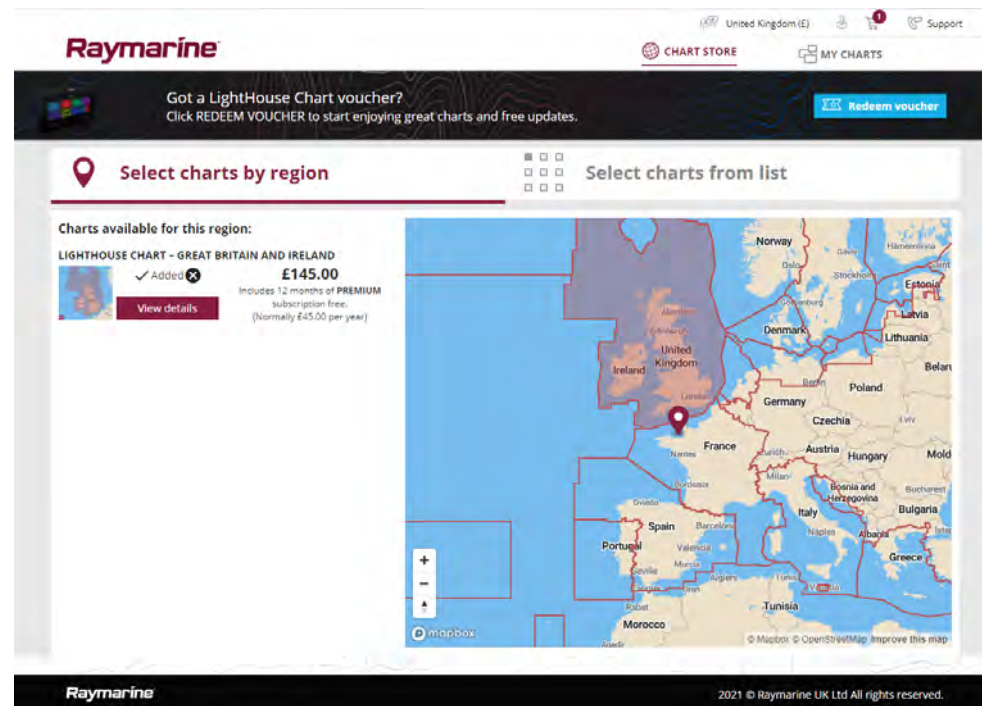

Pre-loaded LightHouse Chart Cards

LightHouse™ charts are also available pre-loaded on MicroSD cards. Simply insert the card into your MFD’s card reader to start using.

Note:

New regions are added all the time, check with your local Raymarine dealer for the latest available regions.

- **R70794** — LightHouse™ Charts Preloaded North America.
- **R70794-AUS** — LightHouse™ Charts Preloaded Australia.

- **R70794–DEN** — LightHouse™ Charts Preloaded North Denmark
- **R70794–FIN** — LightHouse™ Charts Preloaded Finland.
- **R70794–FRA** — LightHouse™ Charts Preloaded France.
- **R70794–GER** — LightHouse™ Charts Preloaded Germany.
- **R70794–IGB** — LightHouse™ Charts Preloaded Ireland & Great Britain.
- **R70794–ITA** — LightHouse™ Charts Preloaded Italy.
- **R70794–NED** — LightHouse™ Charts Preloaded Netherlands.
- **R70794–NOR** — LightHouse™ Charts Preloaded Norway.
- **R70794–SWE** — LightHouse™ Charts Preloaded Sweden.
- **R70795** — Blank 32 GB download chart card with voucher code for any 2 regions.
- **R70838** — Blank 32 GB MicroSD card for LightHouse™ Charts.

Redeeming chart voucher

If you have purchased a download chart card with a voucher code then the voucher is redeemed from the LightHouse™ chart store.

1. Go to the LightHouse™ chart store: <https://chartstore.raymarine.com/light-house-charts>
2. Click **Redeem**.
3. Create a new account, or login to your existing account.
4. Enter your voucher code and click **Submit**.
5. Click **View charts** from the voucher accepted page.
6. Select the required region.
7. If your voucher entitles you to a second region click **Pick 2nd chart** and then select your second region.
8. Click **Done**.

Your selected region(s) will now be available in **MY CHARTS**.

Downloading charts from My Charts

Once redeemed charts can be downloaded from the MY Charts area of the LightHouse™ charts store.

1. Log in to your account.
2. Go to the **MY CHARTS** area.
3. Expand the Download options for the region(s) you want to download.
4. If updates are available click **Get latest data**.

5. If you have a valid Premium subscription add the **Streets & POI** and **Aerial photos** that you want to include.

*When adding **Streets & Points of Interest** and **Aerial photos** you can create up to 5 area boxes for each feature per purchased region. Follow the onscreen instructions to define each area of coverage.*

6. Click **Download**.
7. If you have more than 1 region you can group them together by selecting the relevant grouping option.

Grouping allows you to minimize download file size, by grouping up to 3 regions, from the same continent together.

8. Check the SD card requirements.

Important:

A blank chart card purchased from a Raymarine dealer will already be in the correct format.

9. Click **CONTINUE**.
10. Check unique ID file.

Important:

A blank chart card purchased from a Raymarine dealer will already include the unique ID file.

11. Click **CONTINUE**.
12. Check 'LightHouse_charts' folder

Important:

A blank chart card purchased from a Raymarine dealer will already include the 'LightHouse_charts' folder.

13. Click **CONTINUE**.
14. Click **Browse to file** and locate the Lighthouse_id.txt file in the root directory of the chart card.
15. Click **CONTINUE**.
The download package will now be prepared and downloaded to your computer.

Note:

- Depending on files size and connection speed the package preparation and download may take some time, click **receive email notification** to get an email when the package is ready to be downloaded.
- If the download does not start automatically once the package has been prepared click **Download**.

16. Locate the downloaded file and copy to the Lighthouse_charts folder on your SD card.

Important:

Ensure that the folder contains only 1 file.

17. The memory card can now be inserted into your MFD.

9.5 S-63 Encrypted Charts

S-63 is an International Hydrographic Organization (IHO) standard for encrypting, securing and compressing electronic navigational chart (ENC) data. When correctly configured with a valid S-63 MFD activation file your MFD can utilize S-63 Encrypted Charts.

Advantages of using S-63 encrypted charts:

- Assured authenticity of chart data.
- Regular updates.

For more information refer to: <https://iho.int/en/>

S-63 Encrypted Charts installation process

Unlike electronic cartography from other vendors, S-63 Encrypted Charts require you to complete an installation procedure.

Note:

The recommended installation process requires up to 3 memory cards, and your MFD requires more than one available card reader slot. For MFDs that have only one internal card reader slot, an external card reader such as the RCR-SDUSB or RCR-2 is required.

1. MFD hardware activation. Refer to: [p.137 – Obtaining an S-63 MFD activation file](#)
2. Copy user permit(s) file from MFD. Refer to: [p.138 – Copying user permit file\(s\) to memory card](#)
3. Purchase and download charts (requires user permit file). Refer to: [p.138 – Purchasing S-63 Encrypted Charts](#)
4. Install base cell files and cell permits file. Refer to: [p.139 – Installing base cells and cell permits](#)
5. Install Cumulative update files and if received, new cell permits file. Refer to: [p.139 – Installing cumulative updates](#)

Important:

- The memory card that the charts are installed on must be present in the MFD's card reader for the installed charts to be used.
- After installation, it is recommended that the memory cards containing the base cells and cumulative updates are kept onboard your vessel so that if the need arises they can be reinstalled easily.

Obtaining an S-63 MFD activation file

An S-63 MFD activation file must be installed on your MFD to display and enable the use of S-63 Encrypted Charts on your MFD. Without the S-63 MFD activation file installed S-63 chart selection and related settings will not be available.


Note:

An S-63 MFD activation file will be required for each MFD you want to be able to view S-63 encrypted charts on. S-63 encrypted charts are not shared with other MFD's on the same network.

1. Identify your MFD's product name, product number and serial number.

*The required information can be found on the **Getting started** tab of the Settings menu: **Homescreen > Settings > Getting started.**, or from the product label.*

Example

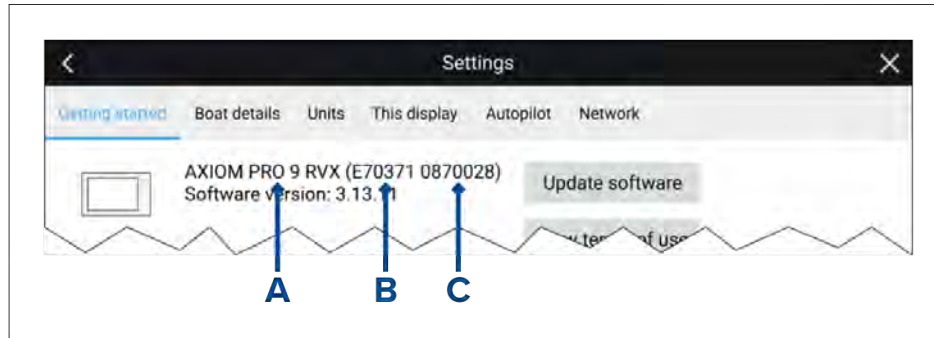

- **A** — Product name
 - **B** — Product number
 - **C** — Serial number
2. Contact your Raymarine dealer or Raymarine technical support and supply them with the above information to obtain an S-63 MFD activation file. You will be sent an S-63 MFD activation file specific for your MFD.
 3. Copy the received file to a blank / empty MicroSD card.
 4. Insert the MicroSD card into the memory card reader slot of your MFD. After a few seconds the MFD will detect and install the file. A notification is displayed onscreen when the installation is completed successfully. The MFD will now be able to select S–63 Encrypted Charts and display them in the Chart app. Related settings will also be available.

Scheme administrator certificate

S-63 Encrypted Charts require a valid scheme administrator (SA) certificate. A current SA certificate is provided with the LightHouse™ 3 and LightHouse™ 4 operating systems. Access to the SA certificate is provided when the S-63 MFD activation file is installed on your MFD.

The installed SA certificate is valid for a predetermined period of time after which it will expire. It is also possible for the IHO to issue a new certificate for security reasons.

When the SA Certificate expires an ‘SSE-22’ notification is displayed on your MFD and the SA certificate will require updating before you can update or buy new S-63 Encrypted Charts.

If the scheme administrator issues a new certificate then an ‘SSE-06’ notification is displayed on your MFD and the SA certificate will require updating before you can update or buy new S-63 Encrypted Charts.

Updated SA certificate can be obtained from the IHO website: <https://iho.int/en/>. Currently available on the following page: <https://iho.int/en/enc-data-protection>

You can replace the SA Certificate installed on your MFD from the SA certificate tab: **Chart app > Menu > Settings > Cartography > S-63 Settings > SA security certificate > Update SA security certificate.**

Copying user permit file(s) to memory card

When purchasing S–63 Encrypted Charts the vendor will require the user permit file(s) for the MFDs you want to use the charts on.

1. Insert a MicroSD card into your MFD’s card reader.
2. Open the **Cartography** settings tab in the Chart app: **Chart app > Menu > Settings > Cartography.**
3. Select **S-63 Settings.**
4. Select the **User permit** tab.
5. Select **Save user permits to a file.**
6. Select the card slot that you inserted the memory card into.
7. Select **OK** on the confirmation dialog.
8. Safely eject the memory card from your display using the Shortcuts page **Eject SD card** option.

The S-63 user permit file must be sent to the chart vendor during the purchase process.

Purchasing S-63 Encrypted Charts

The process below describes a typical purchasing procedure; however, each vendor’s process may differ slightly.

1. Create an account on the vendor’s website.
2. Login to the account.
3. Select the chart regions you wish to purchase.
4. Send your MFD’s user permits file to the chart vendor (this may be part of the checkout process).
5. Download the Cells permits file.
6. Download the Base cell file (this is typically a compressed ‘zip’ file).
7. Download the Cumulative update file (this is typically a compressed ‘zip’ file).

Important:

S-63 Encrypted Charts are locked to the MFD specified in the user permit file that you supplied to the chart vendor. If you have purchased charts for multiple MFDs (i.e. you supplied user permits to more than one MFD), you must ensure that you split the received cell permit files between the MFDs accordingly.

Installing base cells and cell permits

When purchasing S-63 Encrypted Charts for the first time and as part of regular updates base cells and cell permits require installation before they can be used. The base cell files contain the cartographic data and the cell permits are used to authorize the use of the base cell files.

Typically the base cell files and their related cell permits are updated twice a year.

Note:

- Base cell files and the cell permits file must be installed before any available cumulative update files.
- It is recommended that base cell files, cumulative update files and the resulting installed chart files are all stored on separate memory cards, e.g.:
 - Card 1 = Base cell files and the cell permits file.
 - Card 2 = Cumulative update files and if applicable the cell permits file.
 - Card 3 = Installed charts (location that base cell files, cell permits file and cumulative update files are installed).

Note:

If you receive 'SSE' messages during the base cell installation, proceed with the cumulative update installation and this should resolve the errors. If errors persist after the cumulative update installation contact Raymarine product support for resolution..

1. Unzip the downloaded base cell file, using the 'Extract all' option of your PC's zip file application.

This ensures that the base cell files are created within a folder named the same as the original zip file.

2. Copy the folder and all contents to the root directory of your memory card.
3. Copy the received cell permits file to the root directory of the same memory card.
4. Insert the memory card into your MFD's card reader.
5. Open the Chart app's **Cartography** selection tab: **Chart app > Menu > Settings > Cartography**.
6. Select **Update S-63 charts**.
7. Select the card reader that contains the base cell files and cell permits file.

The card will be scanned for valid files and permits, this process can take some time. Once complete a list of available chart cells is displayed.

8. Select **Select all**, or select individual cells.
9. Select **Update selected charts** to install all base cells.
10. Select the card reader slot where you want the files to be installed.

Important:

The same 'Installed charts' card and memory card slot **MUST** be used to install and update base cell files and cumulative update files.

11. Wait for the installation to complete.

A progress bar is displayed as the base cells are installed.

12. Select **OK** on the successfully imported notification.

Note:

The installation process will create and store chart data in 2 folders on your memory card: 'senc' and 'seapilot', Overwriting, deleting or altering these folders or data within them will render your charts inoperable.

Installing cumulative updates

When purchasing S-63 Encrypted Charts for the first time and as part of regular updates any available cumulative updates require installation. The cumulative update files contain updated cartographic data.

Typically cumulative update files are made available fortnightly on the vendor's web server.

Note:

- Cumulative update files should be installed after the installation of base cell files.
- If a new cell permits file is received, this must be installed with the cumulative update.
- It is recommended that base cell files, cumulative update files and the resulting installed chart files are all stored on separate memory cards, e.g.:
 - Card 1 = Base cell and the cell permits file.
 - Card 2 = Cumulative update files and if applicable the new cell permits file.
 - Card 3 = Installed charts (location that base cell files, cell permits file and cumulative update files are installed).

Important:

If your chart vendor does not supply cumulative update files then updates must be installed separately and in release date order.

1. Unzip the downloaded cumulative update file, using the 'Extract all' option of your PC's zip file application.

This ensures that the cumulative update files are created within a folder named the same as the original zip file.

2. Copy the folder and all contents to the root directory of your memory card.
3. If required, copy the new cell permits file to the root directory of the same memory card.
4. Insert the memory card into your MFD's card reader.
5. Open the Chart app's **Cartography** selection tab: **Chart app > Menu > Settings > Cartography**.
6. Select **Update S-63 charts**.
7. Select the card reader that contains the cumulative update files and if applicable, the new cell permits file.

The card will be scanned for updates, this process can take some time. Once complete the list of installed base cells is displayed and any cells that have updates available will be automatically selected.

8. Select **Update selected charts** to install all base cells.
9. Select the card reader slot where you want the files to be installed.

Important:

The same 'Installed charts' card and memory card slot **MUST** be used to install and update base cell files and cumulative update files.

10. Wait for the installation to complete.

A progress bar is displayed as the base cells are installed.

11. Select **OK** on the successfully imported notification.

Note:

The installation process will create and store chart data in 2 folders on your 'Installed charts' memory card: 'senc' and 'seapilot', Overwriting, deleting or altering these folders or data within them will render your charts inoperable.

Note:

If errors persist after the installation of cumulative update files contact Raymarine product support for resolution..

**Warning: Expired S-63 Encrypted Charts**

S-63 Encrypted Chart cells expire after a set period of time. Once expired the charts must not be used for navigation. You will be notified onscreen of the expiration. The charts must be updated before they can be used for navigation.

S-63 Encrypted Chart settings

With the S-63 MFD activation file installed the S-63 Encrypted Charts related settings are available on the Cartography settings tab.


- **Update S-63 charts** — This option is used to decrypt your purchased S-63 Encrypted Chart data so that they can be displayed on the MFD.
- **View installed S-63 charts** — View a table of all currently installed chart cells
- **S-63 settings** — Access the following S-63 related settings:

- **SD card** — Choose external storage location used for the Installed charts.
- **User permit** — View and save user permits to file,
- **SA security certificate** — View and update installed SA certificate.

9.6 Navigation

Navigating to a waypoint or point of interest

You can perform a “Goto” to a Waypoint or specific location.

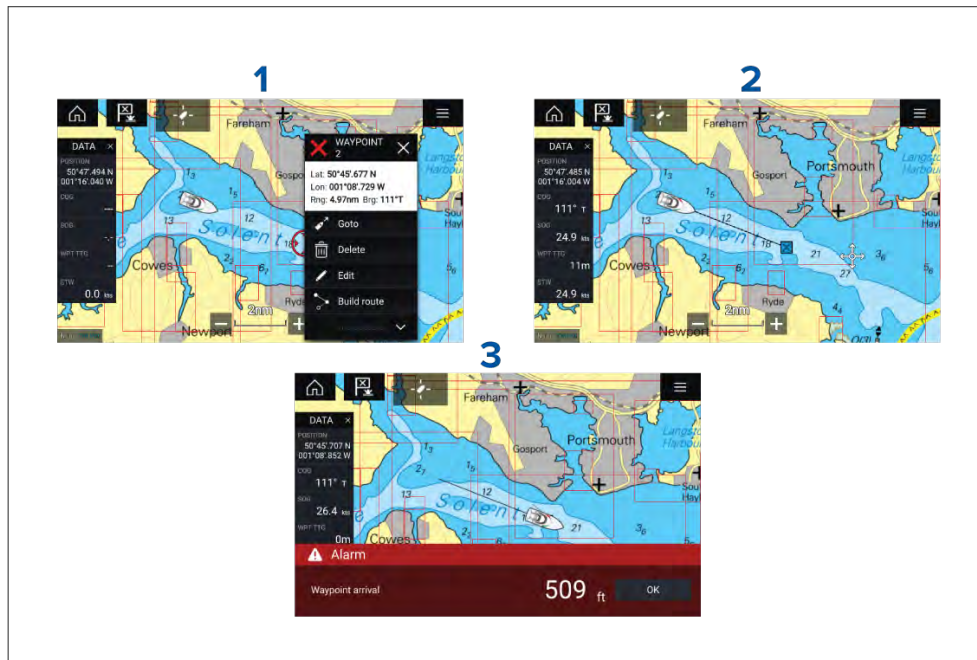

1. Select and hold on the waypoint or point of interest and select **Goto** from the context menu.

*You can stop the **Goto** at any time by selecting and holding anywhere in the Chart app and choosing **Stop**, or selecting another **Goto**.*

2. The Chart app will begin navigation, if required physically engage your autopilot.

3. An alarm will sound when you reach the waypoint.

You can also perform a Goto from the **Go** menu: **Menu > Go > Waypoint** or **Menu > Go > Lat/long**.

For more information on waypoints and waypoint management refer to: [Chapter 7 Waypoints, Routes and Tracks](#)

Restarting cross track error (XTE)

A cross track error (XTE) occurs when your actual route diverges from your original planned route. Restarting XTE plots a new course directly from your current position to your destination, rather than continuing to follow the original planned route.

1. Select **Restart XTE** from the **Navigation** menu: **Menu > Navigation > Restart XTE**.


Following routes

Once a route is created or imported on your MFD it can be followed.

Routes can be followed from the starting waypoint to the finish waypoint or you can start to follow a route from any of its waypoints. Routes can also be reversed so that they can be followed in reverse waypoint order (i.e.: from the original finish waypoint to the starting waypoint).

Following a Route from the start

You can start active navigation / follow a route from its starting waypoint by following the steps below.

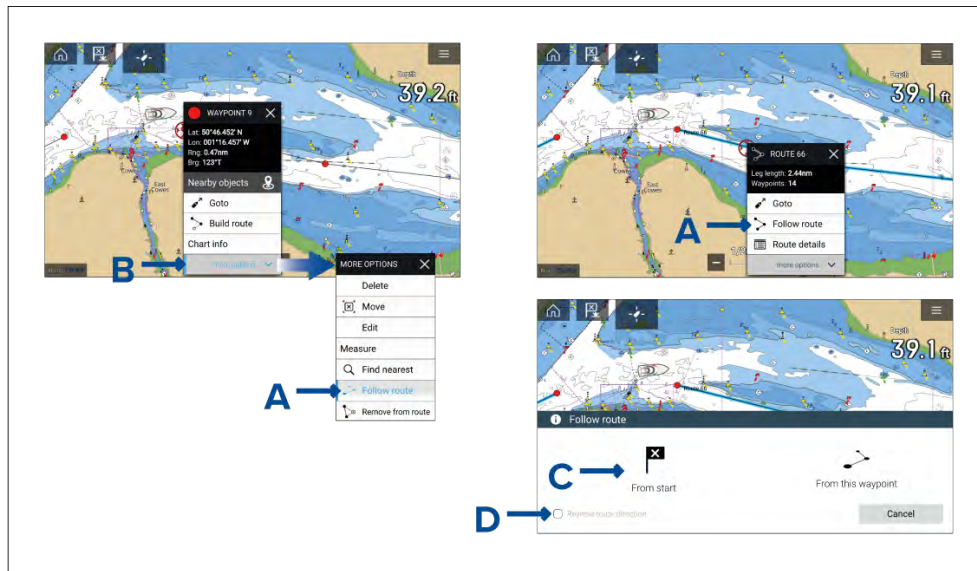

With the route displayed in the Chart app:

1. Select and hold on any waypoint or route leg (line drawn between the Route's waypoints) of the route you want to follow.
The waypoint or route context menu is displayed.
2. Select **Follow Route** (shown in A above) from the context menu.

*If you selected a waypoint rather than a route leg then you will need to select **more options** (shown in B above) first to display the **Follow route** option.*

3. If you selected the starting waypoint then active navigation will commence, otherwise select **From start** (shown in C above) from the Follow route dialog.

Note:

- If you want to reverse the route place a tick in the **Reverse route direction** tick box (shown in D above) before selecting **From start**.
- If the waypoint is in more than 1 route then the Route list will be displayed so that you can choose which route you want to follow.
- You can also start following a route from the Route list. Refer to: [p.113 – Route management](#)

Following a Route from the next waypoint

You can start active navigation / follow a route starting from any waypoint within the route by following the steps below.

With the Route displayed in the Chart app:

1. Select and hold on any waypoint (excluding the starting waypoint) or route leg (line drawn between the Route's waypoints) of the route you want to follow.
The waypoint or route context menu is displayed.
2. Select **Follow Route** from the context menu.

*If you selected a waypoint rather than a route leg then you will need to select **more options** first to display the **Follow route** option.*


3. Select the **From this waypoint** or **From next waypoint** option from the Follow route dialog.

Note:

- If you want to reverse the route place a tick in the **Reverse route direction** tick box
- If the waypoint is in more than 1 route then the Route list will be displayed so that you can choose which route you want to follow.
- You can also start following a route from any waypoint within the route from the Route plan list. Refer to: [p.113 – Route management](#)

Route highlighting

When a route is selected or being followed, the route will be highlighted onscreen.

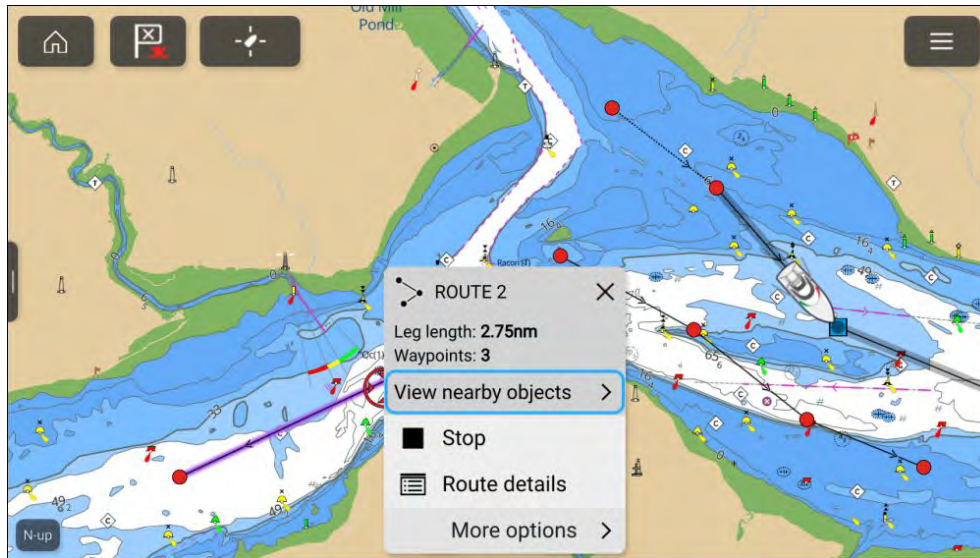

- **Followed route** — A route currently being followed has the current route leg and future route legs highlighted. The highlighting is dynamic, with highlighting removed from route legs already completed.
- **Selected route** — When you select a route onscreen with the cursor, the route is highlighted to distinguish the selected route from other routes which may be present onscreen.

9.7 Depths and contours

Depth soundings

Water depth measurements displayed on charts are called Depth soundings.

Usually Depth soundings are shown using major and minor units, with minor units being smaller and subscript e.g.: Depending on units of measure '1₅' would mean 1.5 metres, 1 Fathom and 5 feet or 1.5 feet.

Raster charts


On Raster charts the units of measure the used for Depth soundings is fixed. The display of Depth soundings is also fixed and will only change depending on Chart app range scale.

Vector charts

On Vector charts Depth soundings will use the units of measure specified for depth in the MFD's settings: **Homescreen > Settings > Units > Depth units:**

Depth sounding values appear differently onscreen:

Example LightHouse™ Charts Depth soundings

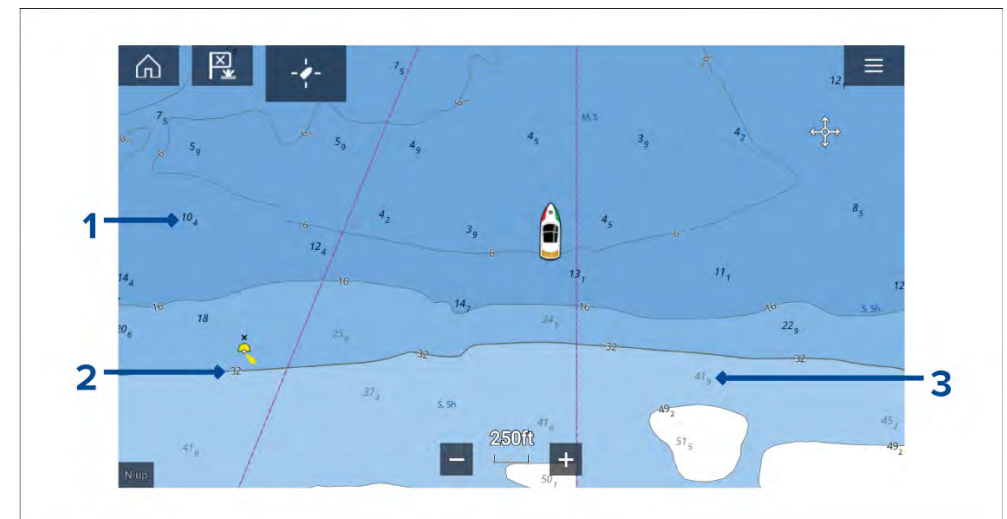

1. **Bold depth soundings** — Depth soundings displayed in Bold reflect depths shallower than the specified Safety contour depth.
2. **White outlined depth soundings** — Depth soundings displayed with a white outline 'Haloed' are reflect a depth contour.
3. **Gray depth soundings** — Depth soundings displayed in Gray reflect depths deeper than the specified Safety contour depth.

On Vector charts Depth soundings can be customized from the **Depths** settings menu: **Menu > Settings > Depths > Show soundings.**

The following Depth soundings options are available:

- **None** — No Depth soundings are displayed unless they are linked to a depth contour.

- **Manual** — Depth soundings are only shown from zero to the depth specified in the **Zero to:** option.
- **All** — All Depth soundings are displayed.

When **Show soundings** is set to **All** all depth soundings will be displayed.

Depth contours

Depth contours, also known as bathymetric contours or depth curves, are lines drawn on cartography that connect points of equal depth creating a visualization of underwater bottom structure. Contours use color fills to indicate depth in relation to other contours.

Raster charts

On Raster charts, depth contours are fixed and are always displayed.

Vector charts

On Vector charts, depth contours can be customized from the **Depths** settings menu: **Menu > Settings > Depths > Show contours..**

Depth contours include Depth soundings. The Depth contour soundings are differentiated from other Depth soundings by using a white outline.


The following Depth contour options are available:

- **None** — No Depth contour lines or depth contour soundings are displayed.
- **Manual** — Depth contours are only shown from zero to the depth specified in the **Zero to:** option.
- **All** — All Depth contours are displayed.

Note:

The Depth contours option does not affect the contour fill color.

Example LightHouse™ Charts Depth contours

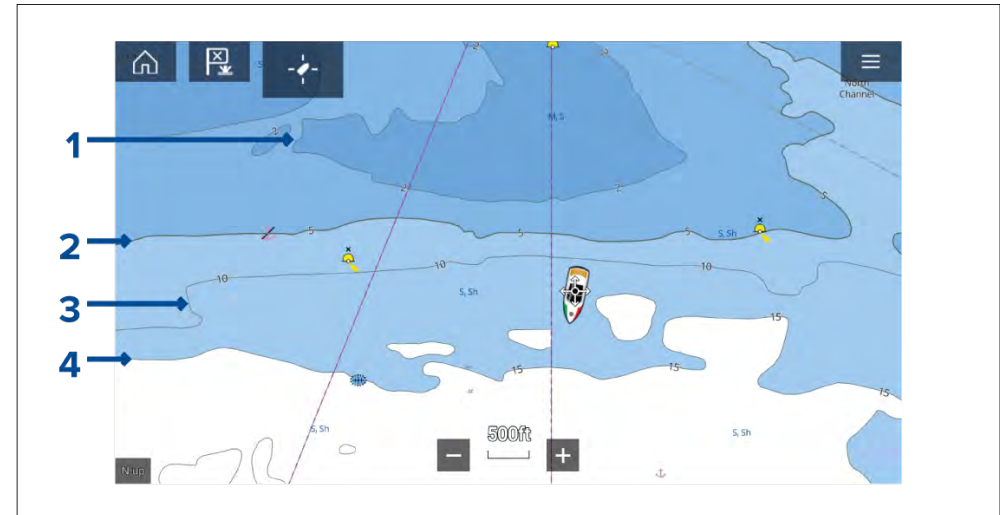

1. **Shallow contour** — Depths from zero to the depth specified in the **Shallow contour** setting will be within the Shallow contour. By default, the Shallow contour uses the darkest shade of blue.
2. **Safety contour** — Depths from the **Shallow contour** to the depth specified in the **Safety contour** setting will be within the Safety contour. The Safety contour uses a thicker line than other contour lines and is colored using a medium shade of blue.

Important: The Safety contour should be set to the same value as your vessel's **Minimum safe depth** and should be used to identify areas where you should not take your vessel.

3. **Depth contour** — All Depth contours consist of a line and depth soundings that appear along the line.
4. **Deep contour** — Depths from the **Safety contour** to the depth specified in the **Deep contour** setting will be within the Deep contour. By default, the Deep contour uses the lightest shade of blue. By default, depths greater than the Deep contour will be colored white.

Shallow contour, Safety contour and Deep contour values can be customized from the **Depths** settings menu: **Menu > Settings > Depths.**

Depth gradient

By default, the color gradient used for depth contours is **Dark to Light**, as described in the example above. If required, the **Depth gradient** can be changed to **Light to Dark**, which will invert the colors so that white is used for the Shallow contour, and the darkest shade of blue is used for depths deeper than the Deep contour value.

The Depth gradient can be changed from the **Depths** settings menu: **Menu > Settings > Depths**.


Note:

Charts from different cartography vendors will handle depth contours differently.

Navionics depth contours

When using Navionics® charts depth contours are automatically colored using a blue color gradient with the shallowest contour using the darkest shade and the deepest using white.

Example Navionics® Charts Depth contours

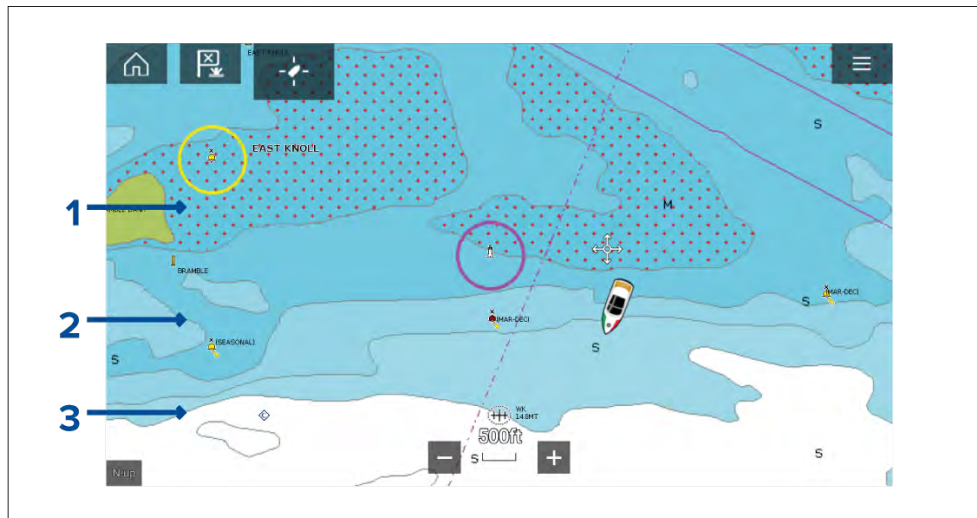

1. **Shallow area** — When the **Shallow area** feature is enabled all depths from zero to the depth specified in the **Zero to:** setting will use red cross hatching to identify shallow areas.
2. **Depth contour** — All depth contours are identified using a line and a blue color fill gradient.

3. **Deep contour** — All depths deeper than the depth specified in the **Deep contour:** setting is colored white by default.

Deep water color


The color used for the Deep contour can be set to either white or blue. When set to blue the Deep water contour will use the lightest shade of blue.

The depth contour settings can be accessed from the **Depths** settings menu: **Menu > Settings > Depths**.

C-MAP depth contours

When using C-MAP® charts depth contours are automatically colored using a blue color gradient with the shallowest contour using the darkest shade and the deepest using white.

Example C-MAP® Charts Depth contours

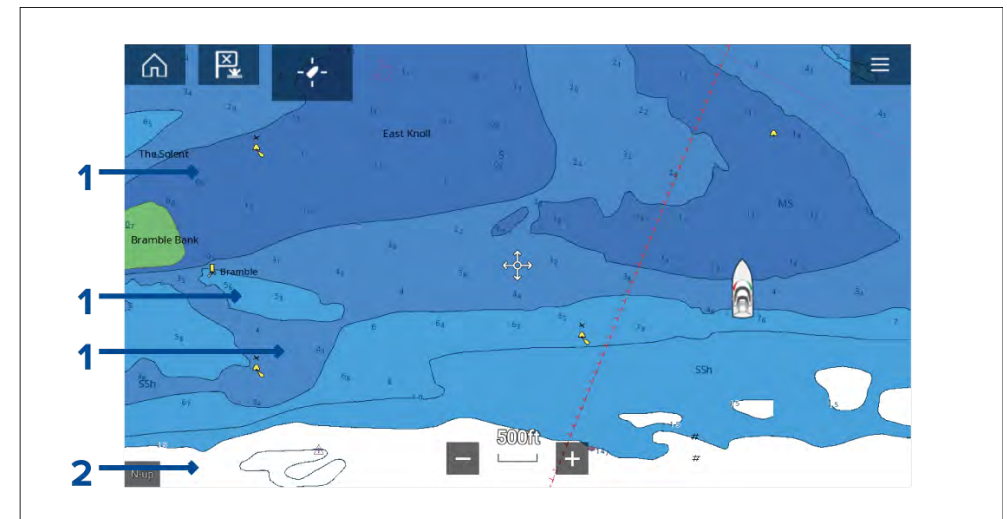

1. **Depth contours** — All depth contours are identified using a line and a blue color fill.
2. **Deep contour** — All depths deeper than the depth specified in the **Deep contour:** setting is colored white by default.

Deep water color

The color used for the Deep contour can be set to either white or blue. When set to blue the color fill shading is switched so that the Deep water contour will use the darkest shade of blue and the blue fill will get lighter the shallower the contour.

The depth contour settings can be accessed from the **Depths** settings menu: **Menu > Settings > Depths** .

9.8 Target tracking

The MFD is able to track and display various types of targets to improve situational awareness and collision avoidance. The types of targets which can be tracked are dependent on connected hardware and MFD configuration.

The following types of targets can be tracked:

- **AIS targets** — When a compatible AIS receiver or AIS transceiver is connected AIS targets can be tracked. For details on AIS targets refer to: [AIS targets](#)
- **Radar targets** — When a compatible Radar scanner is connected Radar targets can be tracked. For details on Radar targets refer to: [Radar settings](#)

Targets that are being tracked are displayed onscreen in the Chart app and Radar app using representative icons and are listed in relevant target lists.

The target lists can be accessed by selecting **Targets** from the Radar app and Chart app menu: **Menu > Targets** , and then selecting the relevant tab.

First responder specific target tracking

The following targets can only be tracked when the MFD has been configured using the First responder boating activity during the initial MFD start up wizard:

- **DSC targets** — Vessels sending out a DSC distress call can be tracked. For details on DSC targets, refer to: [p.273 — DSC targets](#)
- **Intel targets** — Targets can be created manually by entering the target's position, course and speed. Intel targets can be tracked. For details on Intel targets, refer to: [p.272 — Intel targets](#)
- **TOIs** — Targets can be designated as “Targets Of Interest” (TOI). For details on TOIs, refer to: [p.275 — Target Of Interest \(TOI\)](#)







AIS target tracking

AIS targets

AIS icons are used to identify AIS targets onscreen.

By default the following icons are used:

AIS icons







| | | | |
|--|-------------------------|--|--------------------------------------|
|  | Vessel |  | SART (Search and Rescue Transponder) |
|  | Land-based station |  | ATON |
|  | SAR (Search and Rescue) |  | Virtual ATON |

You can enable enhanced AIS target icons from the **AIS Settings** menu: **Menu > Targets > AIS Settings > Enhanced AIS targets** or the **Advanced settings** menu: **Menu > Settings > Advanced > Enhanced AIS targets**. When Enhanced AIS targets is enabled the Enhanced AIS icons are used.


Related links:

- [p.179 — Detailed mode main menu](#)
- [p.181 — Fishing chart mode main menu](#)
- [p.188 — Racing mode main menu](#)

Enhanced AIS icons







| | | | |
|---|---|---|--------------|
|  | Sailing Vessel |  | Commercial |
|  | High speed vessel / Wing In Ground vessel |  | Cargo vessel |
|  | Passenger vessel |  | Other |

Enhanced AIS icons are scaled or outlined according to the reported size of the vessel, as shown below:

| | | | |
|---|-----------------------------------|--|--|
|  | Relative length (Gray outline) | | |
|---|-----------------------------------|--|--|

The status of an AIS target can be shown using different colors, outlines and flashing as shown below:

AIS target status

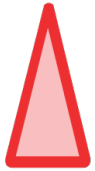
| | | | |
|---|-----------------------------------|---|---|
|  | Lost (No border, crossed through) |  | Uncertain (Dashed outline) |
|  | Buddy (Yellow fill) |  | Dangerous and Uncertain (Dashed outline and Flashes Red) |
|  | Dangerous (Flashes Red) |  | ATON off position (Red border) |

Note:

When the MFD is configured as 'First responder' and is connected to STEDs compatible AIS hardware, Blue Force AIS icons are used to identify other STEDs equipped vessels. For details refer to: [p.278 – Blue Force Tracking](#)

AIS target information

Vessels with AIS transceivers can broadcast programmed vessel information, which can be displayed in the Chart app.

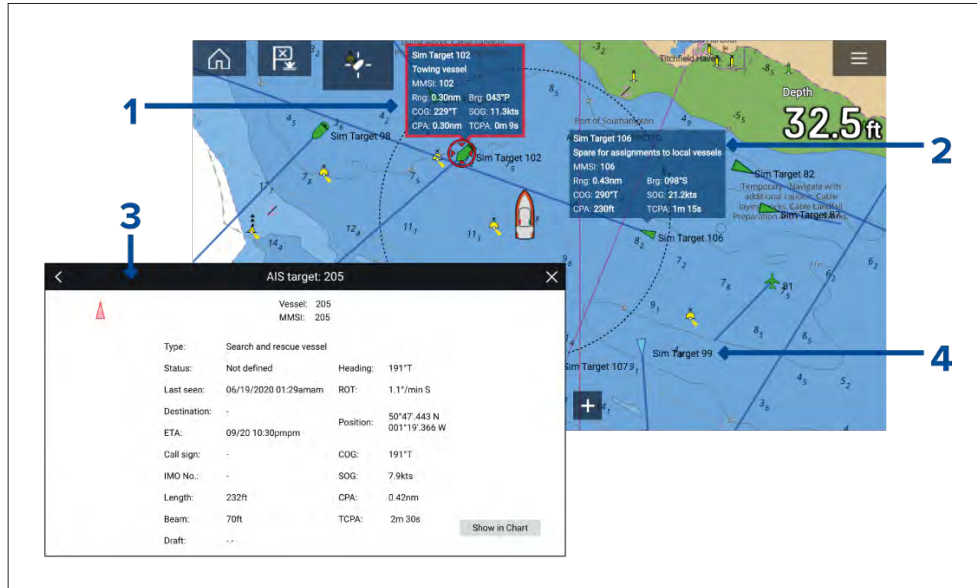

1. Selecting an AIS target icon in the Chart app will display an Infobox containing AIS identification and position information. The Infobox will close automatically after approximately 5 seconds.
2. The Infobox can be switched on and off for individual targets from the AIS target context menu. When switched on, the Infobox is always displayed for the selected target.
3. Full AIS data can be viewed by selecting **View AIS data** from the AIS target context menu, or by selecting a target from the target list and selecting **View full target data** from the pop-over menu.
4. The AIS target name can be displayed next to the target icon. AIS names can be switched on and off from the **AIS Settings** menu: **Menu > Targets > AIS Settings > AIS names**.

Accessing target options

Target specific options are available for targets that are currently being tracked. The target options can be accessed from the target's context menu and from the Pop-over options in the relevant target list. The options available are dependent on the type of target.

To access a target's context menu:

- Press and hold on the target onscreen, or
- Highlight the target onscreen using the **Direction controls** and press the **OK** button.

To access the target list Pop-over menu:

- Select the target in the relevant target list, or
- Highlight the target in the list using the **Direction controls** and press the **OK** button.

AIS target options

The following options are available for AIS targets.

- **View full target data** — View fullscreen page displaying all available AIS data.
- **Add as buddy** — Add the target as a buddy. The Buddy feature enables you to add AIS-equipped friends and regular contacts as 'buddies'. Buddy vessels will be displayed onscreen and in the target list using the Yellow AIS buddy icon. When assigning an AIS target as a buddy you can customize the name that is used for the target vessel. The following additional Target list Pop-over options are available for buddy vessels:
 - **Remove as buddy** — The target will revert to using normal AIS target icon.
 - **Edit buddy name** — Change the Name of the buddy target.
- **Intercept** — Initiates a Target interception. For details see: [p.160 — Target intercept](#)


AIS target list

The target list identifies: Target name, Range and Bearing from your vessel. Where relevant, CPA (Closest point of approach) and TCPA (Time to Closest Point of Approach) values will also be displayed.

The AIS targets list can be accessed from the Targets menu in the Radar app and Chart app: **Menu > Targets > AIS**

The target list is sorted by target proximity to your vessel with the closest target appearing at the top of the list. The list will automatically update as targets become closer or farther away.

Selecting a target from the list highlights the selected target in the LiveView app pane on the right of the page and opens the Pop-over menu.

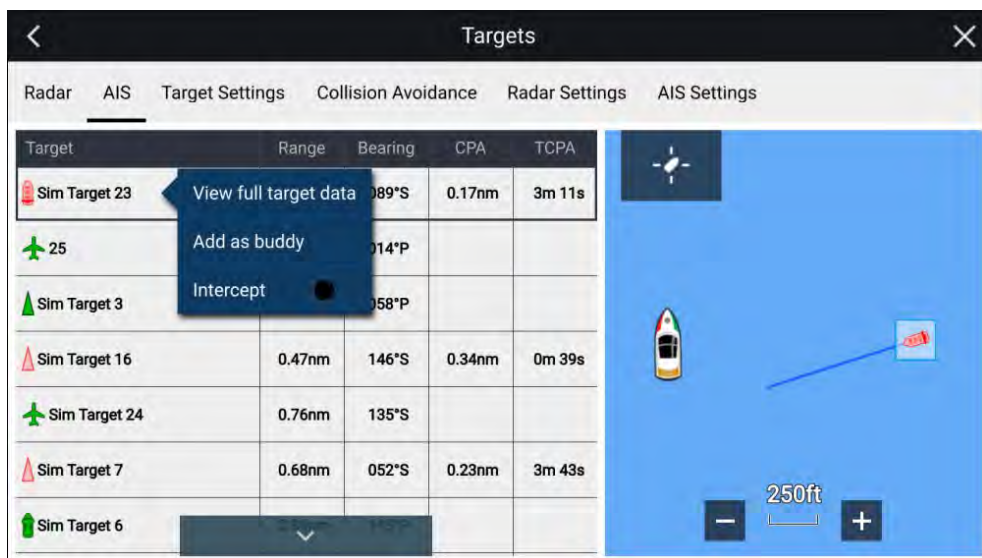

AIS settings menu

You can configure AIS target settings from the **AIS Settings** menu: **Menu > Targets > AIS Settings**.

The following options are available:







- **Show AIS targets in chart / Show AIS targets in Radar** — Enables and disables display of AIS targets in the Chart app / Radar app.
- **Enhanced AIS targets** — Enables and disables the display of enhanced AIS target icons.
- **AIS names** — When enabled, AIS target names are permanently displayed next to AIS target icons.
- **Show these AIS types** — Enables selection of the types of AIS target that will be displayed. Available AIS types:
 - All
 - Dangerous
 - Buddies
- **Hide static targets** — When enabled, AIS targets travelling under 2 knots will not be displayed, unless it is or becomes dangerous.
- **Silent mode (don't transmit my position)** — When enabled, your vessel's AIS transceiver will not transmit your position or details to other AIS equipped vessels.

Radar target tracking

Radar targets

Radar target symbols are used to identify Radar targets onscreen.

Radar targets are displayed in the Radar app and when Radar overlay is enabled (**Chart app > Menu > Targets > Radar settings > RADAR OVERLAY > Show radar overlay**) they are also displayed in the Chart app.
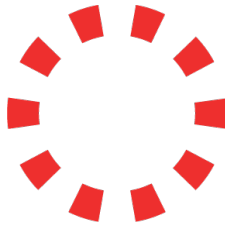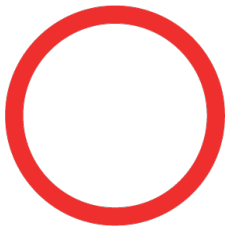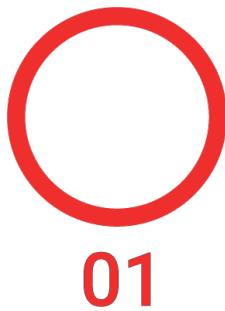
| | | | |
|--|---|--|--|
|  | Acquiring target (manual) — Thin dashed Green circle |  | Acquired target (manual) — Green circle with Target ID |
|  | Acquiring target (auto) — Thick dashed Red circle, flashes until acknowledged |  | Unacknowledged acquired target (auto) — Red circle, flashes until acknowledged |
|  | Dangerous target — Red circle with Target ID, flashes until acknowledged |  | Lost target (Target not detected for 4 Radar scans) — Gray circle with Red cross through |

Once acquired the target's COG (Course Over Ground) and SOG (Speed Over Ground) can be displayed below the target ID.

The Target info is colored Blue if COG and SOG values are True or Orange if values are Relative. Target info will turn Red if the target becomes dangerous.

Acquiring a target manually

To acquire a Radar target manually using MARPA (Mini Automatic Radar Plotting Aid) follow the steps below.

With the Radar overlay enabled:

1. Select the object / target.
The context menu is displayed.
2. Select **more options**.
3. Select **Acquire target**.
Once acquired the target will be tracked.

Accessing target options

Target specific options are available for targets that are currently being tracked. The target options can be accessed from the target's context menu and from the Pop-over options in the relevant target list. The options available are dependent on the type of target.

To access a target's context menu:

- Press and hold on the target onscreen, or
- Highlight the target onscreen using the **Direction controls** and press the **OK** button.

To access the target list Pop-over menu:

- Select the target in the relevant target list, or
- Highlight the target in the list using the **Direction controls** and press the **OK** button.

Radar target options

The following options are available for Radar targets.

- **Cancel target** — Cancels the Radar target. Once cancelled the target symbol will no longer be displayed onscreen or be listed in the target list.

Note: Cancelled targets will not be tracked and will not trigger the dangerous target alarm.

- **Show CPA** — Determines when CPA graphics are displayed onscreen
The following options are available:
 - Auto — CPA graphic is displayed if the target becomes dangerous (based on the Dangerous target alarm settings).

- On — CPA graphic is displayed if there is an interception point between your vessel's current course and the target's.
- Off — CPA graphic is not displayed for the target.

Note: CPA graphics are only displayed in the Radar app. The **Show CPA** option is not available in the Chart app.

- **Target info** — Enables and disables display of the target's Course (COG) and speed (SOG) onscreen.
- **Intercept** — Set target interception. For details see: [p.160 — Target intercept](#)

Radar target list


The target list identifies: Target number, Range and Bearing from your vessel. Where relevant, CPA (Closest point of approach) and TCPA (Time to Closest Point of Approach) values will also be displayed.

The Radar target list can be accessed from the Targets menu in the Radar app and Chart app: **Menu > Targets > Radar**.

The Radar target list can be sorted by either Number or Range by selecting the **Sorted By** option located at the bottom of the LiveView pane:

- Number — List sorted by Target number so that the first detected target appears at the top of the list.
- Range — List sorted by proximity to your vessel with the closest target appearing at the top of the list. The list will automatically update as targets become closer or farther away.

Selecting a target from the list highlights the selected target in the LiveView app pane on the right of the page and opens the Pop-over menu.

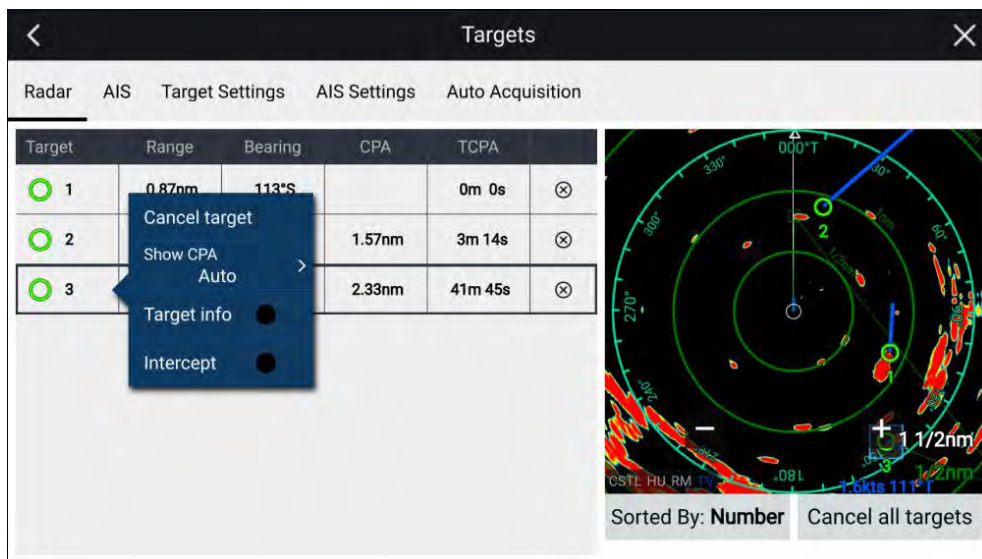

Radar targets can be cancelled individually by selecting the 'X' next to the target's details in the list, or you can cancel all targets by selecting **Cancel all targets**.

Radar settings

When the Radar layer is enabled in the Chart app you can configure the **Radar settings** from the **Targets** menu: **Menu > Targets > Radar settings**.

The following options are available:

- **Radar selection** — When more than 1 Radar scanner is connected you can choose which Radar to use for the Radar layer in the Chart app.
- **Transmit** — Start the Radar scanner transmitting or put it in Standby.
- **Dual range** — Enables and disables dual range on compatible Radar scanners.
- **Channel** — When Dual range is active, you can switch between channel 1 and 2.
- **Sync radar range with chart** — Enables and disables the synchronization of Chart app range with all Radar app instances on the same app page.

Note: The current range is synchronized when the setting is enabled. Subsequent range changes in either the selected Chart app instance or any Radar app instance on the same app page will be synchronized.

- **Show Radar overlay** — Enables and disables the Radar layer in the Chart app.
- **Visibility** — Determines the percentage visibility (opacity) of the Radar layer.
- **Palette** — The Radar overlay can be displayed in the following colors:
 - Full Color (256 colors)
 - Purple
 - Black
 - Red

Note: When 'Full color' is selected, approaching objects are displayed in Pink.

- **Show sector blanking limits** — Enables and disables blank sectors on compatible radar scanners. For more information on blank sectors refer to [19.13 Blank sectors](#)
- **DOPPLER** — Enables and disables Doppler on compatible radar scanners. For more information on Doppler refer to [19.12 Doppler Radar overview](#)


Note: If 'Full color' is selected for the Radar overlay palette, approaching targets will appear Pink instead of Red.

- **Use COG when no Heading data available** — Enables use of the Radar layer when Heading data is not available.
- **Range** — Determines the range used for the Radar layer.

Target vector settings

Target vectors show the predicted future path of the target.

Target vector settings can be accessed from the **Targets** setting menu: **Menu > Targets > Target settings**.

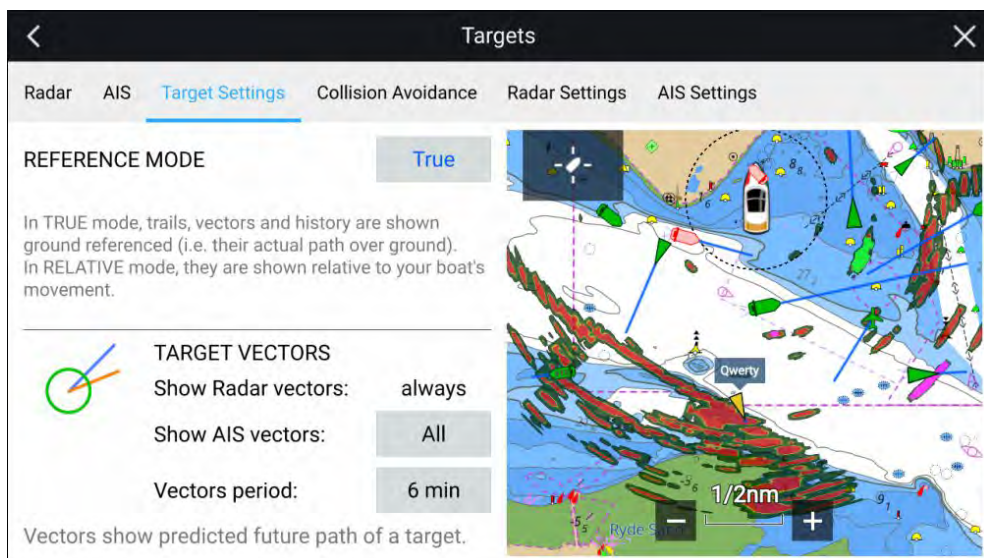

The reference mode for vectors can be set to **True** or **Relative**.

- In **True** reference mode, trails, vectors and history are shown ground referenced (i.e. their actual path over ground).
- In **Relative** reference mode, trails, vectors and history are shown relative to your vessel's movement.

Vectors are always displayed for Radar targets. Vectors for AIS targets can be set using the **Show AIS vectors** option. The available options are:

- **All** — vectors are displayed for all AIS targets.
- **Manual** — vectors only displayed when enabled individually for each target using the target context menu.

The length of the vector identifies where the target will be after the time specified in **Vector period** has passed.

9.9 Collision avoidance

In addition to target tracking specific collision avoidance features are available to improve awareness for the potential of collisions.

The specific collision avoidance features are:


- Dangerous targets alarm. Refer to: [p.152 — Dangerous targets alarm](#)
- Radar guard zones. Refer to: [p.258 — Guard zone alarms](#)

- Predicted areas of danger. Refer to: [p.153 — Predicted areas of danger](#)
- LightHouse chart obstruction alarm. Refer to: [p.158 — Obstruction alarm \(legacy LightHouse charts\)](#)

Dangerous targets alarm

Use the Dangerous targets alarm to notify you if a Radar target or AIS target will reach a specified distance from your vessel within a specified time.

The Dangerous targets alarm settings can be accessed from the **Collision Avoidance** menu: **Menu > Targets > Collision Avoidance**.

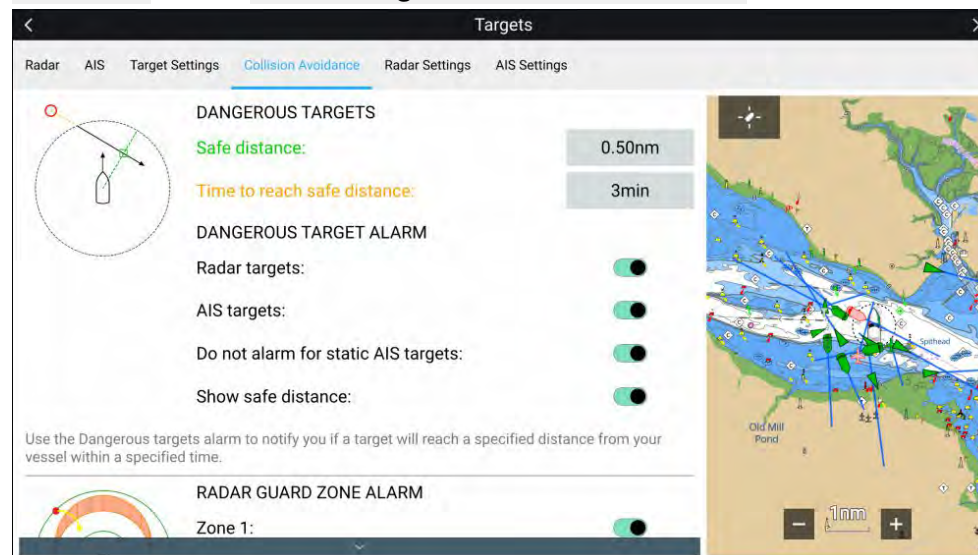

To set up the Dangerous targets alarm, adjust the **Safe distance** to the desired value and then select a **Time to reach safe distance**. The alarm will be triggered if a tracked target will reach the specified Safe distance from your vessel within the time period selected.

The following additional options are available for the dangerous targets alarm:

- **Radar targets** — Enables Radar targets to be included in the dangerous targets alarm. If this setting is disabled Radar targets will not trigger the dangerous targets alarm.
- **AIS targets** — Enables AIS targets to be included in the dangerous targets alarm. If this setting is disabled AIS targets will not trigger the dangerous targets alarm.
- **Do not alarm for static AIS targets** — Enables ability to ignore AIS targets that are considered static (travelling under 2 Knots). Static targets that

become dangerous will still be identified onscreen but will not trigger the dangerous targets alarm.

- **Show safe distance** — Enables display of a safe distance circle around your vessel.

Predicted areas of danger

The Predicted areas of danger feature tracks Radar targets and AIS targets in relation to your own vessel's Course Over Ground (COG) and Speed Over Ground (SOG).

If your paths are predicted to cross, an Interception line is displayed between your vessel and the target. Additionally, Interception zones are displayed to indicate where there is an increased risk of collision. The Interception line and the Interception zones are based on your current course and speed and the target's current course and speed, and they can help you determine whether you should change course and / or speed to avoid a potential collision.

The graphics automatically refresh when the MFD receives new position data from the target.


Important:

The Collision Avoidance feature is a graphical aid only, provided to help increase user awareness of the potential for collision. It is vital to have a good understanding of the *International Regulations for Preventing Collisions at Sea (IRPCS / COLREGS)*, to ensure all actions taken are in accordance with the IRPCS. Important concepts to understand in relation to Collision Avoidance include (but are not limited to): Risk assessment; Right of Way; Restricted visibility; interpreting lights and shapes; interpreting sound and light signals. In the event of conflict, the IRPCS regulations must take precedence. For more information on IRPCS / COLREGS, refer to: [IRPCS](#)



Moving target graphics


Moving target graphics are used for targets moving at a speed greater than 2 kts.

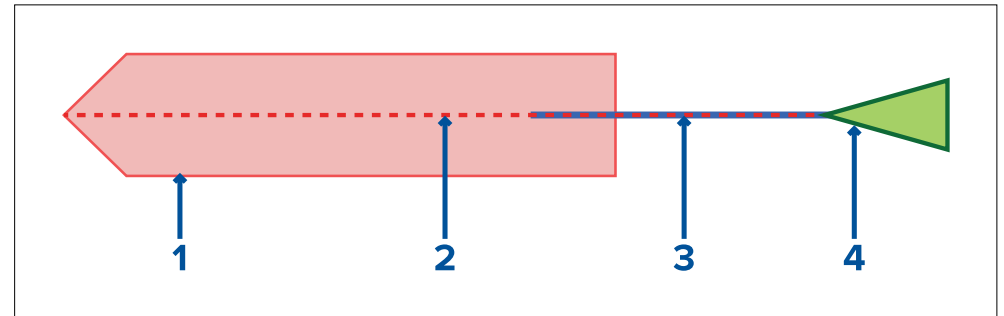

1. Interception zone (Predicted area based on target's last reported position)
2. Interception line
3. Target COG line
4. AIS Target (Last received position)

Stationary Target graphics

Stationary target graphics are used for targets moving at a speed less than 2 kts.

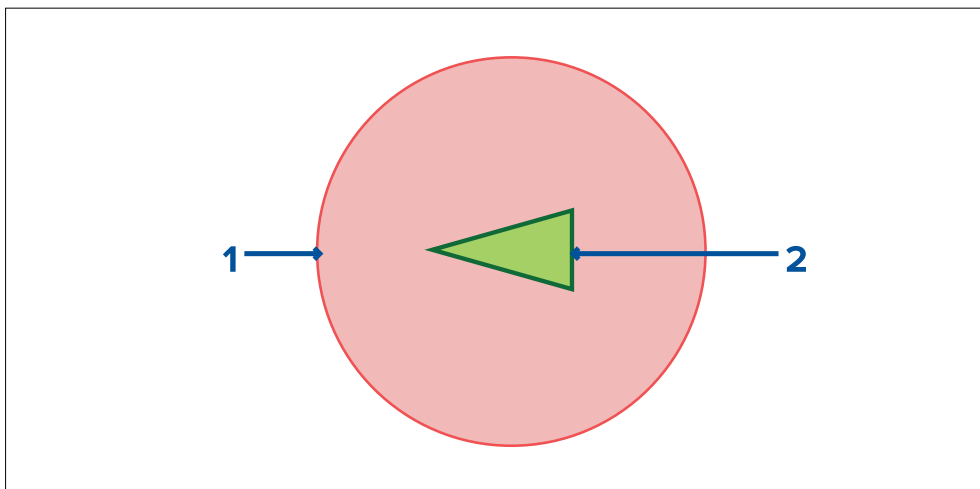

1. Interception zone (Predicted area based on target's last reported position)
2. Stationary AIS Target (Last received position)

Important:


You must still maintain a permanent watch for:

- Vessels that are not equipped with AIS or AIS-equipped vessels that are not currently transmitting their position, as these targets will not be displayed in the Chart application.
- AIS-equipped vessels reporting an inaccurate GPS position, your own vessel's GPS accuracy, or AIS targets with delayed location updates. These situations will cause your vessel's position and / or AIS target positions to be displayed inaccurately in the Chart application.
- Objects not detected by your Radar scanner.

Predicted areas of danger settings

The Predicted areas of danger feature can be enabled for AIS targets and Radar targets in the Chart app.

Chart app > Menu > Targets > Collision Avoidance

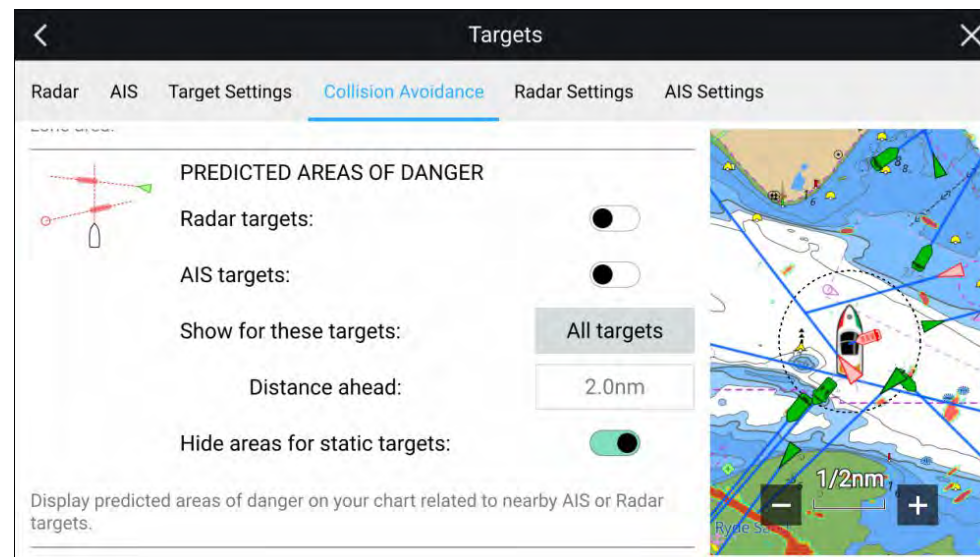

In the **Collision Avoidance** menu you can change the settings to determine which types of target (i.e. AIS and Radar) will have an Interception zone:

- **Radar targets** — Enables and disables Predicted area of danger graphics for detected Radar targets.
- **AIS targets** — Enables and disables Predicted area of danger graphics for AIS targets.
- **Show for these targets** — Determines when Predicted area of danger graphics are displayed. Graphics can be displayed for:
 - **All targets** — all targets onscreen.
 - **Targets crossing my course** — only targets which are predicted to cross your vessel's path
- **Distance ahead** — Changes the distance ahead of your vessel that the Interception line is drawn (only available with **Targets crossing my course** selected). The distance can be set to a value between 0.5 nm to 5.0 nm.
- **Hide areas for static targets** — Enables and disables graphics for Static targets, targets travelling less than 2.0 kts will NOT have Predicted area of danger zones.

Collision scenarios


There are 3 potential scenarios the Predicted areas of danger feature can warn you about:

- Own vessel moving faster than target

- Target moving faster than own vessel
- Both targets moving at similar speed


Example scenario 1 – Own vessel moving faster than target vessel

Note: These scenarios are examples provided for guidance only.

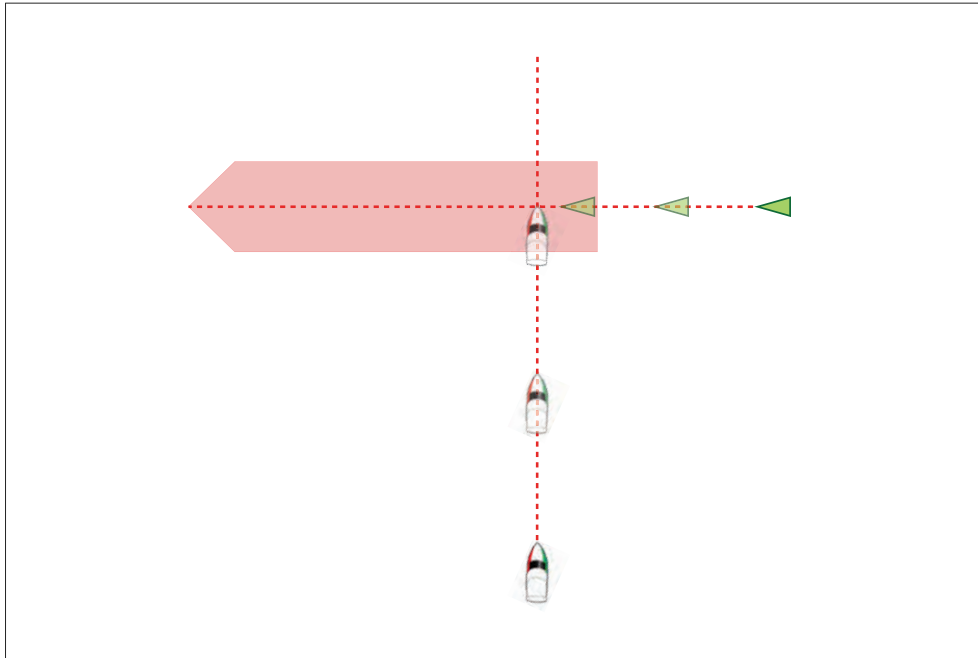


In the example above the vessel's COG will cross with the target's COG within the Interception zone, which could cause a collision. You should alter course and / or speed to avoid the potential collision.

Scenario 1 Course change examples

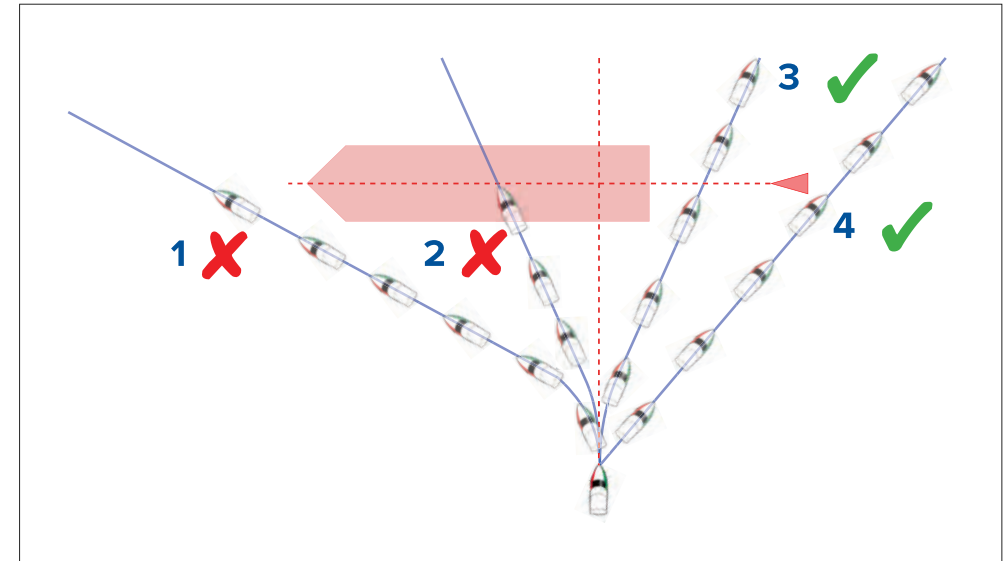

1. Course alteration to pass ahead of the Interception zone [**Not recommended**] – **Proceed with caution**, there is always an inherent risk when passing in front of other vessels.
2. Course alteration to pass ahead of the target vessel [**Not recommended**] – This manoeuvre is not recommended as your vessel will still cross through the target's Interception zone.
3. Course alteration to pass astern of the target vessel and its Interception zone – This manoeuvre alters your vessel's course so that it does not come into contact with the target's Interception zone and passes astern of the target.
4. Course alteration to pass clear astern of the target vessel and its Interception zone. This is the preferred manoeuvre as it correctly alters your vessel's course so that it is clear of the target's Interception zone and passes safely astern of the target. This manoeuvre also clearly indicates to the target vessel your actual change of course.

Figure 2. Scenario 1 Speed change examples

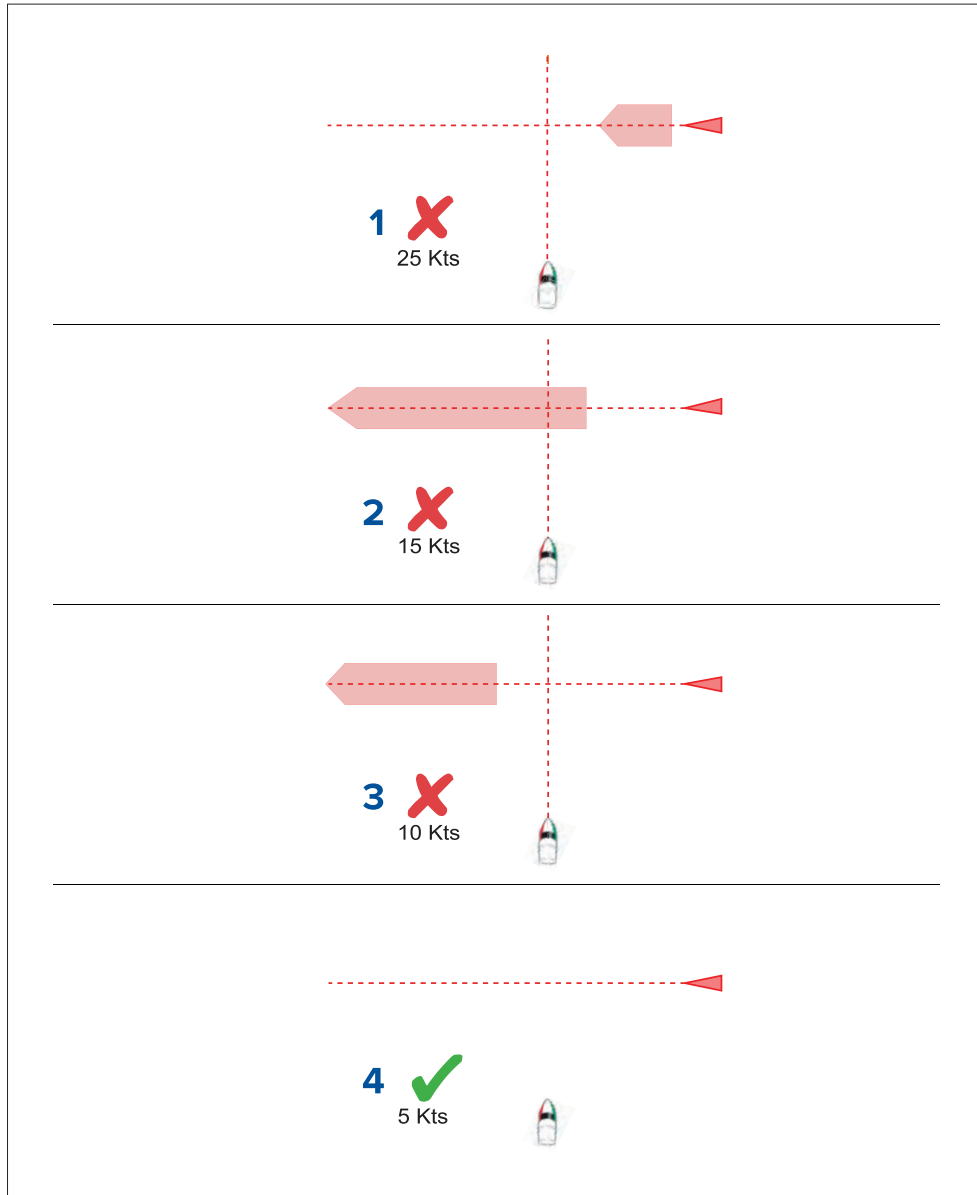

1. ⁽¹⁾**Speeding up [Not recommended]** — Increasing vessel speed to pass ahead of the target vessel. **Proceed with caution**, there is always an inherent risk when passing in front of other vessels.

2. **No speed change [Not recommended]** — Not changing speed or course is not an option as it can result in a collision.
3. **Slowing down [Not recommended]** — Slowing down a sufficient amount will allow the target vessel to pass ahead of your vessel.
4. ⁽²⁾**Slowing down** — Slowing down more than a sufficient amount will allow the target vessel to pass safely ahead of your vessel.


Note:

- ⁽¹⁾ In this example the paths will still cross within the **Intercept distance**, so the graphics are still displayed.
- ⁽²⁾ In this example the paths will no longer cross within the **Intercept distance**, so the graphics are not displayed.

Example scenario 2 — Target vessel moving faster than your vessel

Note: These scenarios are examples provided for guidance only.

In certain situations, when the target vessel is travelling faster than your vessel, there may be more than one opportunity for your paths to cross within the **Intercept distance**. If this is the case then a second Interception zone is displayed.

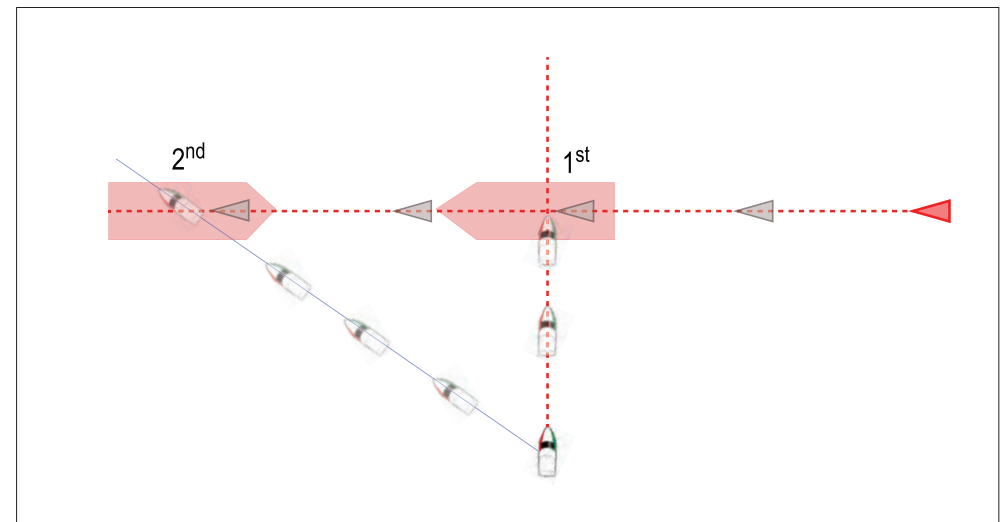


1. 1st — The first Interception zone (displayed closest to the target vessel) represents a bow-to-bow collision.

- 2nd — The second Interception zone (displayed farthest from the target vessel) represents the target vessel running you down from behind.


When altering course and speed, both Interception zones must be avoided.

Scenario 2 Course change examples

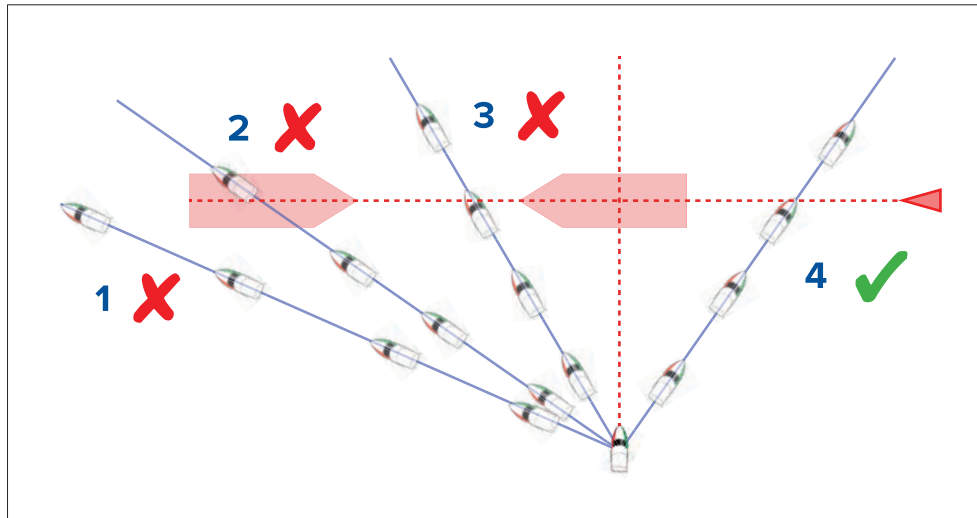

1. Course alteration to pass ahead of the Interception zone [**Not recommended**] — As the target vessel is moving faster than your vessel you will pass astern of the target.
2. Course alteration to pass ahead of the first Interception zone [**Not recommended**] — Although this course alteration is sufficient to avoid a potential bow-to-bow collision, it has created a second Interception zone where the target may now run you down from behind.
3. Course alteration to pass between the 2 Interception zones [**Not recommended**] — Although this may seem like the quickest option, **proceed with caution**, as the gap between the 2 Interception zones can close quickly, especially when your vessel slows down.
4. Course alteration to clear astern of the target vessel and its Interception zone. This would be the preferred manoeuvre as it correctly alters your vessel's course so that it is clear of the target's Interception zone, and passes safely astern of the target. This manoeuvre also clearly indicates to the target vessel your change of course.

Figure 2. Scenario 2 Speed change examples

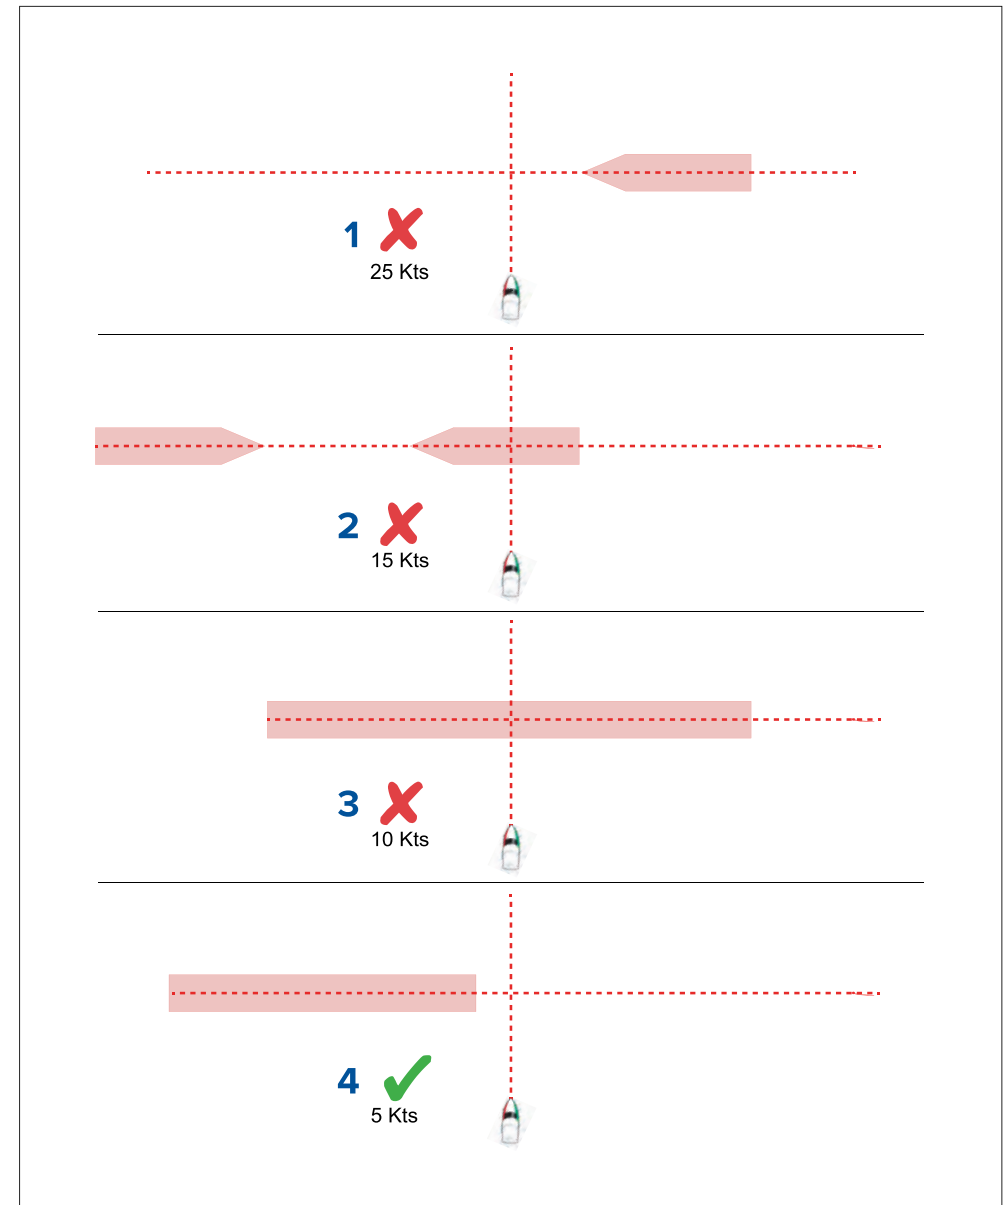

1. **Speeding up [Not recommended]** — Increasing vessel speed to pass ahead of the target vessel. **Proceed with caution**, there is always an inherent risk when passing in front of other vessels.

2. **No change [Not recommended]** — Not changing speed or course may result in a collision.
3. **Slowing down [Not recommended]** — Slowing down slightly may result in the 2 Interception zones closing up or merging into a single zone.
4. **Slowing down** — Slowing down a sufficient amount will allow the target vessel to pass safely ahead of your vessel, avoiding the Interception zone(s).

Example scenario 3 — Both vessels travelling at the same speed

Note: These scenarios are examples provided for guidance only.

Course change

When both vessels are travelling at the same speed, course alterations should be made in accordance with the guidance provided in examples 1 and 2.

Speed change

When both vessels are travelling at the same speed, altering your speed will change the collision scenario to one of the scenarios detailed in examples 1 and 2.

Obstruction alarm (legacy LightHouse charts)

The Obstruction alarm provides a warning if a charted object, charted depth contour or charted height clearance is detected that conflicts with the MFD's configured **Safety depth** and / or **Safety height** settings.

Note:

- The Obstruction alarm requires Legacy LightHouse™ vector charts as the alarm's **Cartography source**.
- Object depths, depth contours and clearance heights are based on the cartography in use.
- If an obstruction is not present in the specified **Cartography source** it will not trigger the alarm.



When the Obstructions alarm is triggered an alarm notification is displayed and an audible beep is sounded on the MFD. From the onscreen notification you can acknowledge the alarm by selecting **OK**, or edit the alarm parameters by selecting **Edit**.

Obstruction alarm parameters

The Obstruction alarm parameters must be configured from the **Alarm manager** before it can be used: **Homescreen > Alarms > Settings > LightHouse chart obstructions**.

The following options must be configured for correct operation:

- **LightHouse chart obstructions** — Enables and disables the obstruction alarm.
- **Indication only** — Enables and disables the warning notification dialog (Audible beep and Red detection zone outline only).
- **Cartography source:** — Choose the appropriate (legacy) LightHouse chart for your region.
- **Safety depth** — Specifies the minimum safe depth for your vessel. The Chart app's **Safe contour** depth value is synchronized with the Safety depth value.
- **Safety height** — Specifies the minimum height for your vessel.
- **Obstruction warning ahead** — Specifies how much time in advance of reaching the obstruction the alarm will be triggered. This means the faster your vessel speed is, the farther ahead the detection zone will be drawn.
- **Minimum obstruction distance** — Refers to the distance from your vessel boundary to the (virtual) obstruction detection zone around the vessel. This parameter specifies the minimum distance from your vessel to the obstruction detection zone, in 4 directions: port, starboard, aft and (when motionless), fore. The obstruction detection zone is displayed in the Chart app as an oblong shape around your vessel, and turns Red when an obstruction is detected.

Obstruction alarm detection zone

If a Chart app instance is opened that uses the same legacy LightHouse™ charts cartography as the Obstruction alarm's **Cartography source**, then a detection zone is drawn around the vessel icon. The detection zone outline turns Red when the Obstruction alarm is triggered.



1. When there is no obstruction present, the detection zone outline is colored black until an obstruction is detected.
2. When the charted depth is the same depth as, or less than the specified safety depth, the Obstruction alarm is triggered.
3. When the charted object is the same depth as, or less than the specified safety depth, the Obstruction alarm is triggered.


Once the Obstruction alarm has been configured, the alarm parameters can be modified from the **Collision avoidance** menu tab in the Chart app: **Chart app > Menu > Targets > Collision Avoidance > LightHouse obstruction alarm**.

Note:

- You will not be able to use the Obstruction alarm if the **Cartography source** has not been set in the Alarms manager.
- Obstructions may not be displayed at all Chart app ranges, so you may need to Range in to see the object that triggered the Obstruction alarm.

LightHouse charts dangerous objects

When using LightHouse™ charts or Legacy LightHouse™ vector charts objects deemed as dangerous are highlighted using a purple octagon symbol with an 'x' in the center.

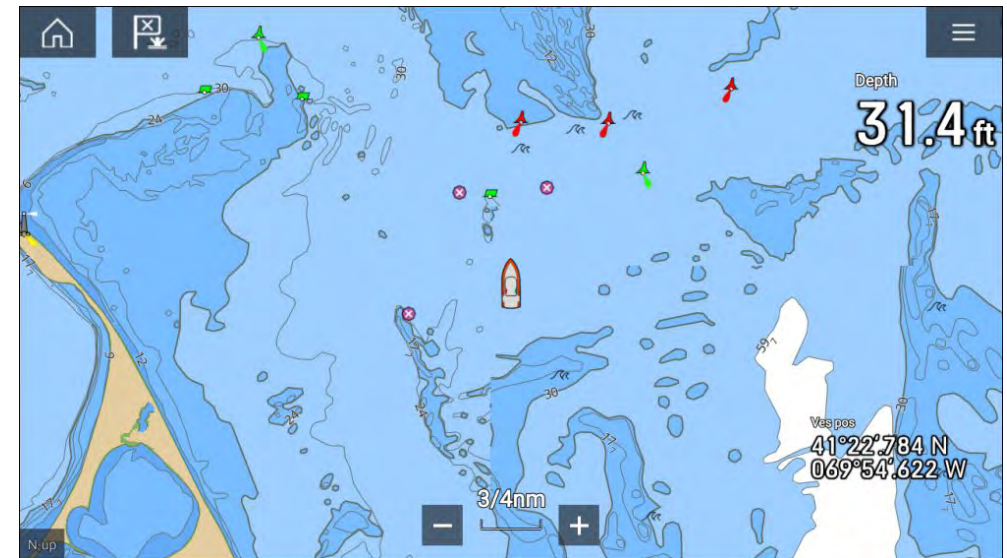

Objects such as wrecks, that are in the Deep contour that are shallower than the depth specified in the Safety contour will be highlighted using the Danger symbol.

Height restrictions such as bridges, are always highlighted using the Danger symbol.

Note:

When using Legacy LightHouse™ vector charts the display of Danger highlight symbols can be enabled and disabled from the Chart app's **Advanced** menu tab: **Menu > Settings > Advanced > Danger highlights**.

9.10 Target intercept

The **Intercept** feature can be used to help rendezvous with friends or for Pilot boats and the Coastguard to intercept vessels that are to be boarded.




To use the **Intercept** feature, select and hold the target icon until the menu is displayed, then select **Intercept**. The Chart app will automatically plot a direct course to a point where your vessel and the target will cross (intercept). An interception mark is placed at a predicted point where both your vessel and the target will cross.

Important:

When performing an individual interception, you are placing your vessel on a collision course with the target vessel. It WILL be necessary to change to a parallel course to prevent a collision.

Pre-requisites:

- It is vital to have a good understanding of the *International Regulations for Preventing Collisions at Sea* (IRPCS / COLREGS), to ensure all actions taken are in accordance with the IRPCS. For more information on IRPCS / COLREGS, refer to: [IRPCS](#)
- You must be familiar with the AIS feature.
- You must have a thorough understanding of the Target interception feature and its implications before attempting to use it in a real life scenario.

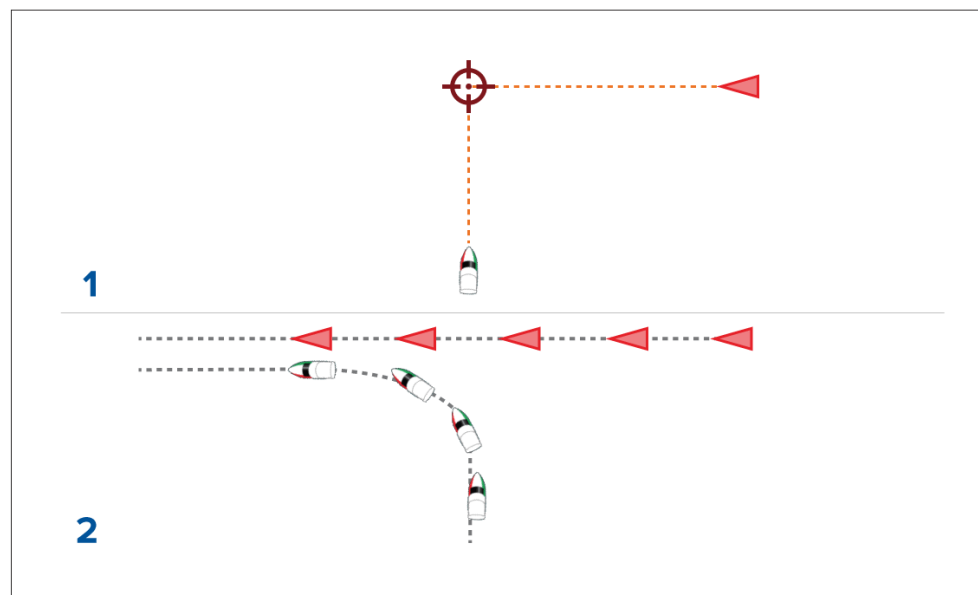


1. Initial Target interception graphics.
2. Actual vessel movements to perform the rendezvous.

9.11 RealBathy™

You can create precise personal bathymetric charts in realtime using Raymarine's RealBathy™ feature.


When using the RealBathy™ feature, new contour lines are drawn in realtime on the screen based on your transducer's depth readings. Color shading is used to reflect depth, with the darkest shades signifying the shallowest area. The sonar data is recorded to the inserted memory card.

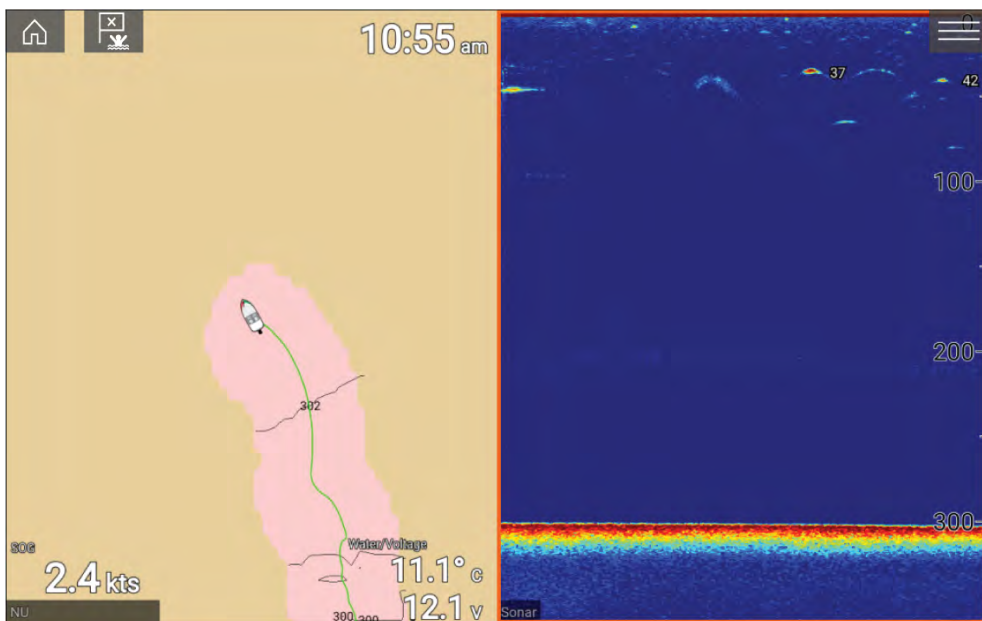

Requirements

The Realbathy feature requires the following:

- LightHouse™ vector based charts, that include tide station information for the location you wish to survey.
- MicroSD card with sufficient free space to record depth and bathymetry data.
- You must ascertain the distance above the bottom face of your depth transducer to the waterline, as shown in the following illustration:

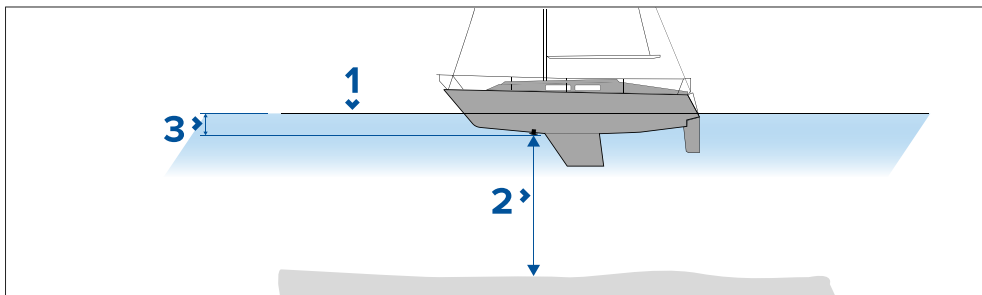

1. Waterline.
2. Water depth below transducer face.

3. Distance above the bottom face of your depth transducer to the waterline.

Setting up and creating RealBathy contours

Important:

- You will need to know the distance above the bottom face of your transducer to the waterline.
- For tidal environments, ensure you have LightHouse™ NC2 cartography that includes tide station information for your location.

From the chart app.

1. Insert your LightHouse™ NC2 chart card into the display's card reader.
2. Select your LightHouse™ chart card as your cartography for the chart app.

For details on choosing your cartography refer to: [Selecting a chart card](#)

3. Enter the distance above the bottom face of your transducer to the waterline in the **Waterline to tdcr**: setting field.
4. Enable the **RealBathy** toggle switch, located in the **Depths** menu: **Menu > Depths**
5. Select the relevant **Height correction** option:
 - **None** — No corrections are made.
 - **Tidal** — Uses nearby tide station data to correct height. When **Tidal** is selected a tidal station search is performed and a list of available stations is displayed. Select the closest tide station to your location.
 - **Lake level** — User specified value using the water level marker for your location.

Note:

To ensure accurate contour depths it is recommended that:

- in tidal environments (for example, seas and oceans) you use LightHouse™ NC2 cartography that includes tide station information and select the tide station closest to your location;
- in fresh water environments (for example, lakes), select **Lake level** in the **Height correction**: field and then enter the current reading from the water level marker for your location into the field located under the height correction option.

6. Adjust the **Visibility:** setting to the desired transparency.

100% provides full visibility of the RealBathy contours; as the percentage decreases the chart detail behind the RealBathy contours becomes more visible.

7. Select the required **Density:** setting.

Steep drop-offs can result in overlapping contour lines; lowering the density in these situations provides a clearer view.


9.12 Reeds almanac

The Reeds almanac is available on Raymarine LightHouse charts.

The Reeds almanac covers Portugal, Spain, France, Germany, Netherlands, Denmark, Ireland/Great Britain.

Reeds marinas are only available in Ireland / Great Britain.

The Reeds symbols are displayed in the Chart app when the **Streets & POI** layer is enabled: **Chart app > Menu > Settings > Layers > Street & POI.**

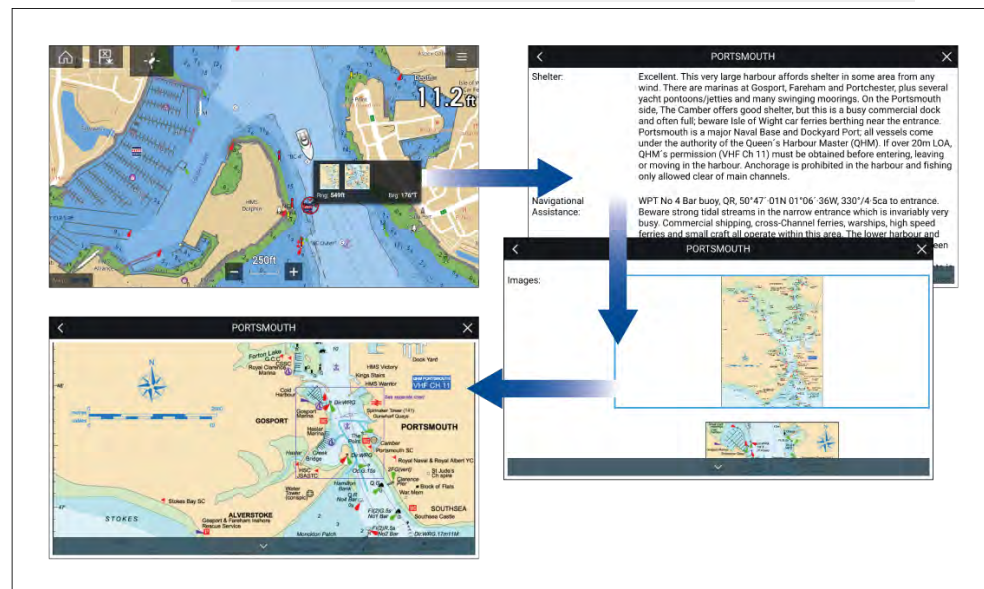

Selecting a Reeds symbol will display a pop-up with brief details. Selecting the pop-up displays the full details and any related images. Selecting images will open the image fullscreen

9.13 Find nearest


The Find nearest feature allows you to select a target or location and search for nearby objects or places.

Note:

- The level of detail available on charts is dependent on vendor, chart type, subscription level and geographic region. Prior to purchasing charts check the vendor's website to establish what level of detail is available on the charts you want to purchase.
- The information relating to available chart detail and settings in this manual should be treated as guidance only as it is subject to change that is not under Raymarine's control.

When an object is selected, the **Nearby objects** option is available from the object context menu.


Object selection find nearest

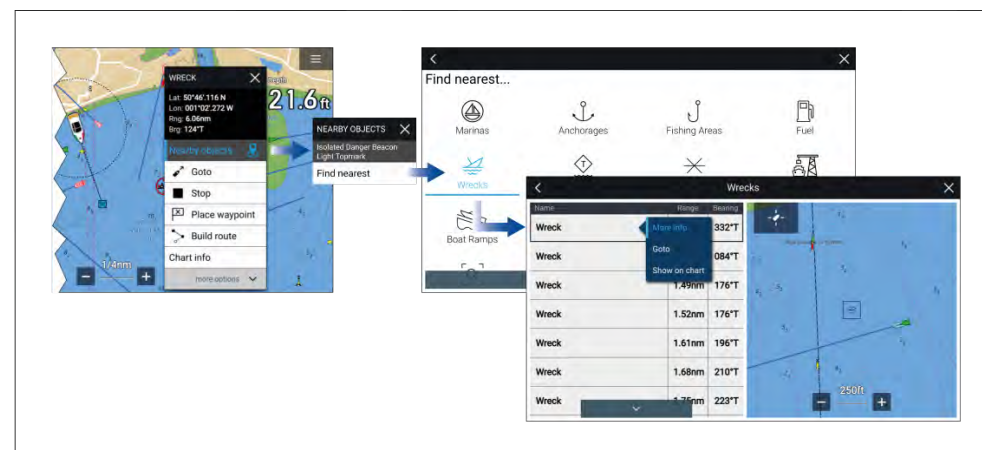

Selecting **Nearby objects** and then **Find Nearest** will display the Find nearest options page where you can select the type of place or object you want to search for.

Selecting an option will display a list of all nearby objects for that type. The list is sorted by an object's proximity to the selected location. However, the Range and Bearing displayed is relative to your vessel's position.

Location selection find nearest

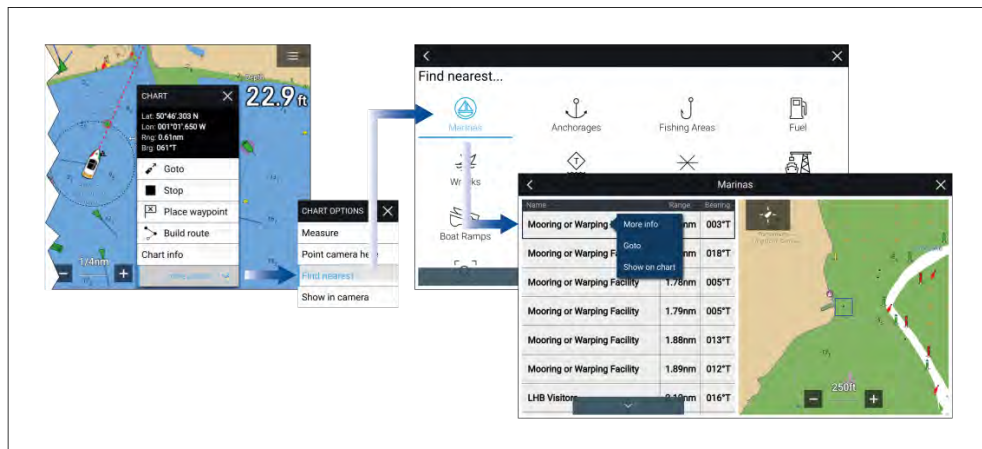

Pressing and holding on a location will open the Chart context menu, selecting **more options** and then **Find nearest** will display the Find nearest options page where you can select the type of place or object you want to search for.

Selecting an option will display a list of all nearby objects for that type. The list is sorted by an object's proximity to the selected location. However, the Range and Bearing displayed is relative to your vessel's position.

Find nearest options

Note:

Legacy LightHouse Charts refers to retired LightHouse vector, raster and NC2 Charts.

The options available on the find nearest page depend on the cartography type you are using:

- **Marinas** (LightHouse Charts, Navionics and C-Map)
- **Anchorages** (LightHouse Charts)
- **Fishing Areas** (LightHouse Charts)
- **Fuel** (LightHouse Charts)
- **Wrecks** (LightHouse Charts, Legacy LightHouse Charts, Navionics and C-Map)
- **Tides** (Legacy LightHouse Charts, Navionics and C-Map)
- **Currents** (Legacy LightHouse Charts, Navionics and C-Map)

- **Lakes** (Navionics and C-Map)
- **Obstructions** (LightHouse Charts, Legacy LightHouse Charts, Navionics and C-Map)
- **Ports/Services** (LightHouse Charts, Navionics and C-Map)
- **Boat Ramps** (LightHouse Charts)
- **Food & Drink** (LightHouse Charts)
- **Toilets** (LightHouse Charts)
- **Beach/Swim/Recreation** (LightHouse Charts)
- **Search for port** (LightHouse Charts, Legacy LightHouse Charts, Navionics, C-Map)
- **Small Craft Facility** (Legacy LightHouse Charts)
- **Harbor Facility** (Legacy LightHouse Charts)
- **Businesses** (Navionics)
- **Point of interest** (C-Map)
- **Outdoor Recreational Areas (ORA)** (C-Map)
- **ORA Services** (C-Map)

List options

From the list of found objects or places the following pop-over options are available for each item in the list:


- View more information about the object by selecting **More info**.
- Navigate to the selected object by selecting **Goto**.
- Create an automatic route to the selected object by selecting **Autoroute to**, if available.
- Display the selected object in the Chart app by selecting **Show on chart**.

When an item from the list is selected the **LiveView** on the right of the screen will highlight and zoom to the selected object.

9.14 Measure

The Measure feature can be used to measure distances from your vessel or distances between 2 points.

The measure feature is available from the Chart context menu: **Context menu > more options > Measure**.

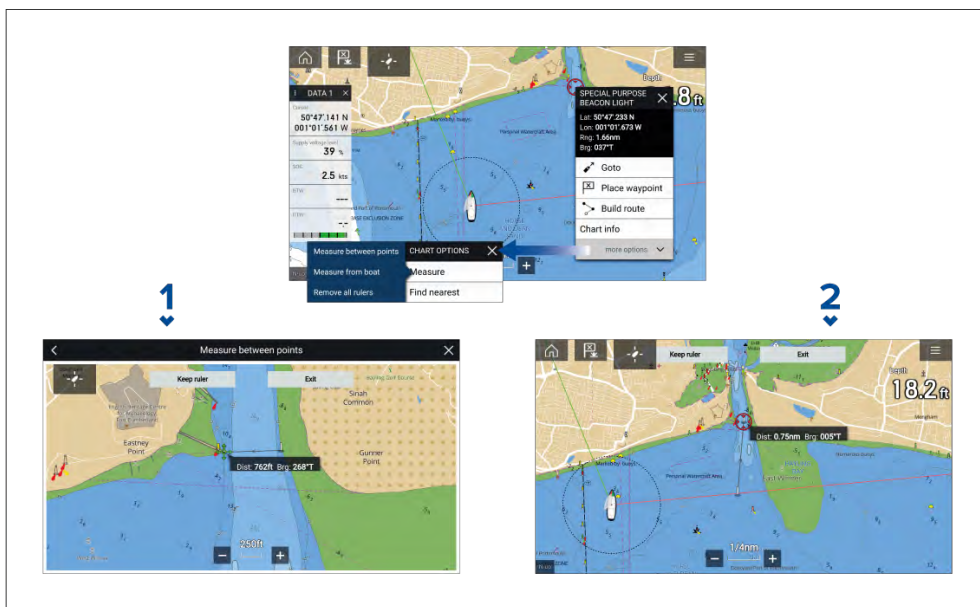

1. Point to point ruler.
2. Vessel to point ruler.

Multiple rulers can be created and displayed simultaneously.

Measuring vessel to point

To measure the distance and bearing of a location from your vessel's location follow the steps below.

1. Select (press and hold) on the required location.
The context menu is displayed.
2. Select **more options**.
3. Select **Measure**.
4. Select **Measure form boat** from the pop-over options.

A ruler line is drawn on the screen from your vessel's location to the cursor's location. The distance and bearing from your vessel is also displayed in an information box.

5. If you would like to keep the ruler line select **Keep ruler** from the top of the screen.

The ruler will be permanently displayed onscreen, the vessel end of the ruler will move with your vessel updating distance and bearing as you travel.

6. If you do not want to keep the ruler select **Exit** from the top of the screen and select **Discard** from the confirmation dialog.

Measuring point to point

To measure the distance between 2 points and bearing to the first point follow the steps below.

1. Select (press and hold) any location on the screen.
The context menu is displayed.
2. Select **more options**.
3. Select **Measure**.
4. Select **Measure between points** from the pop-over options.
5. Select the location for the first point.
6. Select the location for the second point.
7. If you would like to keep the ruler line select **Keep ruler** from the top of the screen.
The ruler will be permanently displayed onscreen.
8. If you do not want to keep the ruler select **Exit** from the top of the screen and select **Discard** from the confirmation dialog.

Deleting rulers

You can delete individual rulers or all rulers at the same time.

1. Select (press and hold) on a ruler point.
2. Select **Delete ruler** from the context menu.


Alternatively you can delete all rulers by selecting **Remove all rulers** from the context menu.

9.15 ClearCruise™ Augmented Reality

The Chart app has additional Augmented Reality features, which are available when an AR200 and a compatible IP camera are connected.

Augmented Reality features must also be enabled and configured in the Video app.

With the Augmented Reality features enabled, the AIS Target, Waypoint and Chart Object data available in the Chart app will also be available in the video app, where the data will be overlaid onto the live video feed.

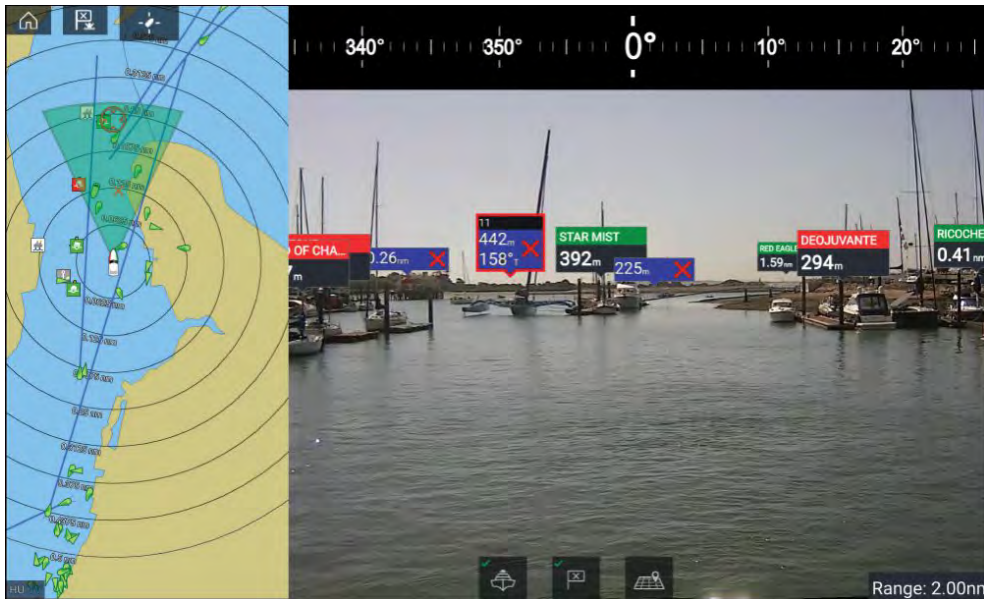

For further information on ClearCruise™ Augmented Reality, refer to [p.331 – ClearCruise™ features](#)

Field of View

The Field of View (FOV) cone acts as a range indicator to illustrate the area of coverage of the camera with respect to displaying chart objects in the Video app as part of the ClearCruise™ Augmented Reality features.

Chart objects that are within the scope of the displayed FOV cone will be displayed in the Video app as “flags”. For more information on flags, refer to [p.337 – Augmented Reality flags](#)

The area of coverage of the FOV cone is determined by:


- The camera’s horizontal Field of View (FOV). This setting can be adjusted in the Video app: **Video settings > Camera Setup tab.**
- The Augmented Reality Range Limit. For more information refer to [p.340 – Range limit](#). You can also manually specify the maximum range limit; refer to [p.339 – ClearCruise settings \(Augmented Reality\)](#) for more information. When you adjust this setting, the FOV cone in the Chart app will change accordingly.



The FOV cone can be enabled/disabled in the Chart app settings: **Menu > Settings > Layers.**

9.16 UAV Chart integration

When a compatible UAV with a GNSS (GPS) position fix is connected to your MFD, a UAV icon representing the position of the UAV is displayed in the Chart app.

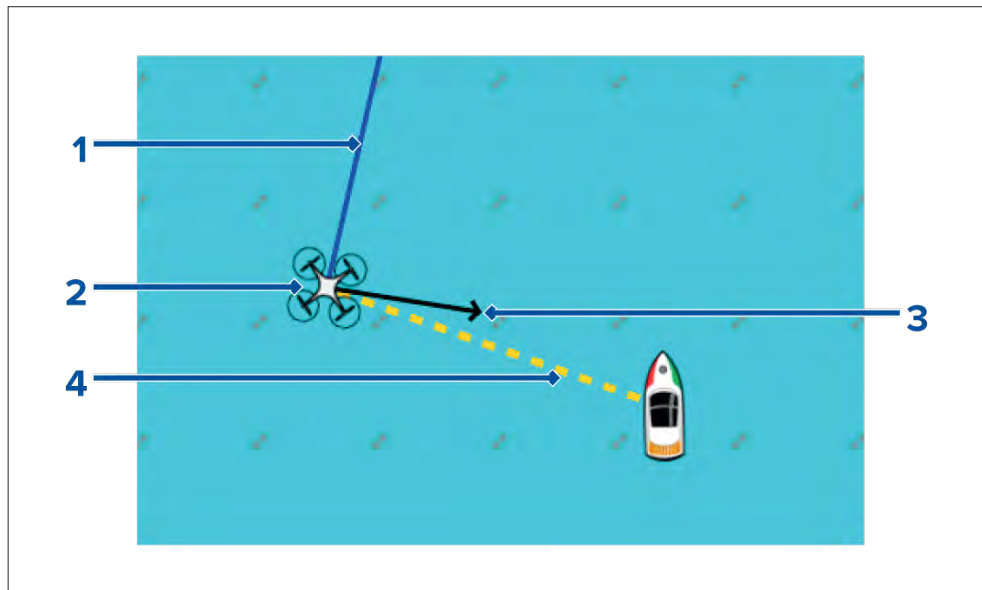

| | |
|---|--|
| 1 | <p>UAV COG</p> <p>The direction of the Blue line indicates the UAV's current Course Over Ground (COG). The length of the line indicates the UAV's predicted position when the specified vector Reference period has passed.</p> <p>The Vector Reference period can be adjusted from the vessel icon's context menu.</p> |
| 2 | <p>UAV Icon</p> <p>Displayed when the UAV option is enabled in the Chart app settings, and your UAV has a GNSS (GPS) position fix.</p> |
| 3 | <p>Camera heading</p> <p>The Black Camera heading arrow is fixed to provide an indication of the direction the UAV's camera is pointing towards.</p> |
| 4 | <p>Line to vessel</p> <p>The Yellow dotted line represents the angle of the UAV's position relative to your vessel.</p> |

Showing or hiding the UAV icon

The UAV icon is displayed by default in the Chart app. The icon can be hidden if required.

From the Chart app menu:

1. Select **Settings**.
2. Select the **Layers** tab.
3. Select the **UAV**: toggle switch.
 - Selecting the UAV toggle switch will make the UAV icon visible (on) or invisible (off).

Performing a UAV Goto

When your UAV is in flight you can select a location or object in the Chart app and perform a **UAV Goto** (your UAV will fly to the selected location or object and hover).

1. Select a location or object in the Chart app.
 - The Chart context menu is displayed.
2. Select **More**.
3. Select **UAV Goto**.
 - A UAV waypoint marker is placed to signify the UAV's destination and the UAV will fly to that location.

You can stop a UAV Goto at anytime by selecting the Red **Cancel UAV Goto** that is displayed onscreen in the UAV app, when a UAV Goto is active. Cancelling a UAV Goto will stop the Goto action and the UAV will hover in its current location.

A UAV Goto can be cancelled at any time by selecting **Stop UAV Goto** from the Chart context menu.

9.17 SonarChart™ Live

You can create personal bathymetry charts using your depth transducer and the SonarChart™ Live feature, available with compatible Navionics® electronic cartography cards.

Note: Before using SonarChart™ Live ensure you have correctly configured your transducer depth settings.

When using SonarChart™ Live, new contour lines are drawn in real time on the screen based on your transducer's depth readings. Color shading is used to reflect depth, with dark red signifying the shallowest area. The sonar data is recorded to your cartography card and is shared with Navionics when you update your chart card online.

Tide correction

SonarChart™ Live records the actual readings from your depth transducer under current tide / water level conditions. You can enable automatic adjustment of depth readings based on normalized low tide / low water level depth data taken from a nearby Tide station.

Enabling SonarChart Live

To enable creation of real time SonarChart™ Live bathymetry lines:

With your transducer depth settings correctly configured and compatible cartography selected:

1. Select the **Depth** tab from the Chart app settings menu: **Chart app > Menu > Settings > Depth**.
2. Enable **Sonar logging**.
3. Enable **SonarChart Live**.
4. Select the **Visibility** setting field, and adjust to your preferred value.
5. If required, enable **Tide correction**.

9.18 Chart settings menu

The chart settings menu is organized into tabs with settings and options appearing under the relevant tab. The settings available in the chart settings menu are dependent on chart mode and the cartography in use.

Note:

- The level of detail available on charts is dependent on vendor, chart type, subscription level and geographic region. Prior to purchasing charts check the vendor's website to establish what level of detail is available on the charts you want to purchase.
- The information relating to available chart detail and settings in this manual should be treated as guidance only as it is subject to change that is not under Raymarine's control.

The following settings tabs are available:

- **Cartography** — For details refer to: [p.168 — Cartography settings menu](#)
- **Layers** — For details refer to: [p.168 — Layers settings menu](#)
- **Depth** — For details refer to: [p.171 — Depth settings menu](#)
- **View & Motion** — For details refer to: [p.173 — View & motion settings menu](#)
- **Advanced** — For details refer to: [p.174 — Advanced settings menu](#)
- **Page settings** — For details refer to: [p.175 — Page settings menu](#)

Weather mode specific settings menus

The following settings menus are only available in weather mode

- **Weather** — For details refer to: [p.211 — Weather settings menu](#)
- **Subscription** — For details refer to: [p.211 — Weather subscription](#)

Fish mapping mode specific settings menus

The following settings menu are only available in fish mapping mode

- **Fish Mapping** — For details refer to: [p.200 — Fish mapping subscription](#)


Racing mode specific settings menus

The following settings menus are only available in racing mode

- **Laylines** — For details refer to: [p.189 — Laylines settings menu](#)

Cartography settings menu

The cartography settings menu provides settings and details relating to your electronic charts.

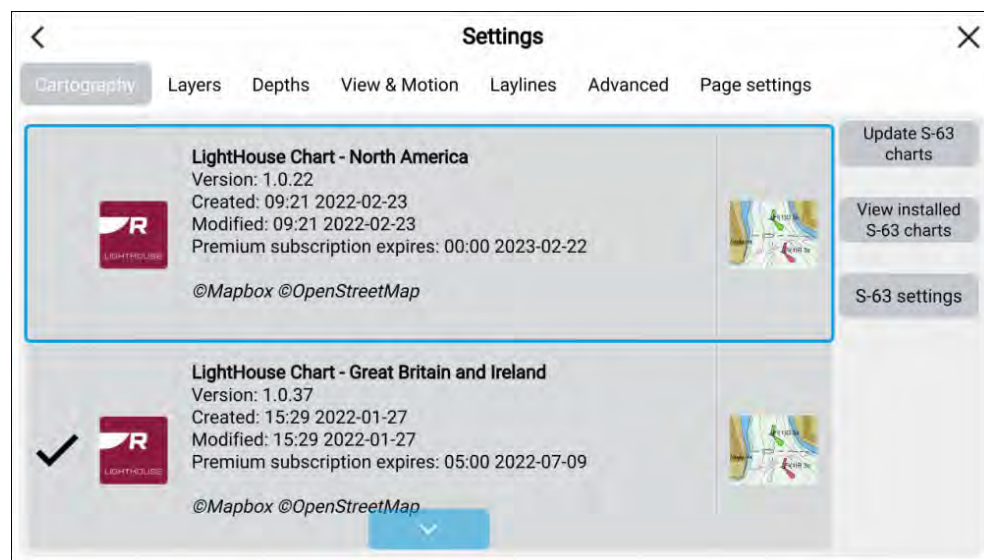

The cartography settings menu provides details of available electronic charts and allows you to select which electronic charts are used in the current chart app instance.

For details about electronic charts and which charts are compatible with your MFD refer to: [p.133 – Cartography overview](#)

The cartography settings menu also provides settings for S-63 encrypted charts. For details refer to: [p.137 – S-63 Encrypted Charts](#)

Related links:

- [p.133 – Cartography overview](#)
- [p.177 – Simple mode settings menus](#)
- [p.179 – Detailed mode settings menus](#)
- [p.182 – Fishing chart mode settings menus](#)
- [p.186 – Anchor mode settings menus](#)
- [p.195 – Racing mode settings menus](#)
- [p.200 – Fish mapping mode settings menus](#)
- [p.211 – Weather mode settings menus](#)
- [p.220 – Tides mode settings menus](#)

Layers settings menu

The layers setting menu contains settings related to the level of cartographic detail, cartography style and available layers that can be overlaid onscreen. The options that are available depend on the cartography in use and the hardware connected to your MFD's network (e.g.: Radar scanner AIS receiver etc.)

| Menu item and description | Options |
|---|---|
| <p>Chart detail: Allows you to select the level of detail displayed onscreen for vector based cartography. This setting is available when using LightHouse™, Legacy LightHouse™, C-MAP® and Navionics® charts.</p> | <ul style="list-style-type: none"> • Low • Medium • High |
| <p>Chart Object Size Adjust the display size of chart objects. This setting is available when using LightHouse™ charts and S-63 charts.</p> | Slider bar control. |
| <p>Day color palette When enabled, Bright sun provides a darker color palette in the Chart app which is more easily readable in bright sunlight. This setting is available when using LightHouse™ charts.</p> | <ul style="list-style-type: none"> • On • Off |

| Menu item and description | Options |
|--|---|
| <p>Chart style Switches between chart presentation styles. This setting is available when using LightHouse™ charts.</p> | <ul style="list-style-type: none"> • Leisure • Government |
| <p>AIS Enables and disables the display of AIS targets in the Chart app.</p> <p>Note: AIS hardware is required.</p> <p>This setting is always available and not dependent on the charts in use.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Radar Enables and disables the display of a Radar overlay in the Chart app.</p> <p>Note: Radar hardware is required.</p> <p>This setting is always available and not dependent on the cartography in use.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Range rings Enables and disables the display of Radar style range rings in the Chart app. This setting is always available and not dependent on the cartography in use.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>FOV: Enables and disables the ClearCruise™ Augmented Reality (AR) camera's field of view (FOV) overlay in the Chart app.</p> <p>Note: ClearCruise enabled camera is required.</p> <p>This setting is always available and not dependent on the charts in use.</p> | <ul style="list-style-type: none"> • On • Off |

| Menu item and description | Options |
|--|---|
| <p>Weather Radar Enables Weather Radar precipitation data overlay in the Chart app.</p> <p>Note: Only available when connected to a compatible SiriusXM weather receiver with a valid subscription.</p> <p>This setting is always available and not dependent on the charts in use.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Tides Enables and disables display of Tide and Current graphics at tide and current stations. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Streets & POI Enables and disables the display of enhanced street details and point of interest in the Chart app. This setting is available when using LightHouse™ charts with a valid premium subscription.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>UAV Displays the UAV icon, the UAV heading (camera direction), UAV COG and a line between the UAV and your vessel. This setting is always available and not dependent on the charts in use.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>AIS PAD Enables the collision avoidance interception zone layer for AIS targets. Only available when the AIS layer is enabled.</p> <p>Note: For more information about the collision avoidance feature refer to p.153 — Predicted areas of danger</p> <p>This setting is always available and not dependent on the charts in use.</p> | <ul style="list-style-type: none"> • On • Off |

| Menu item and description | Options |
|---|---|
| <p>Radar PAD Enables the collision avoidance interception zone layer for Radar targets. Only available when the Radar layer is enabled.</p> <hr/> <p>Note: For more information about the collision avoidance feature, refer to p.153 — Predicted areas of danger</p> <p>This setting is always available and not dependent on the charts in use.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Aerial overlay Enables and disables display of a photographic aerial overlay. This setting is available when using LightHouse™ and C-MAP® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Navionics overlays Enables and disables the display of a photographic aerial overlay when using .Navionics® charts.</p> | <ul style="list-style-type: none"> • None • Satellite • Relief Shading • SonarChart Shading |
| <p>Visibility Allows you to select the transparency of the aerial overlay layer. This setting is available when using LightHouse™, Navionics® and C-MAP® charts.</p> | <ul style="list-style-type: none"> • 0% to 100% |
| <p>Coverage Allows you to select the coverage of the aerial overlay. This setting is available when using LightHouse™ and Navionics® charts.</p> <hr/> <p>Note: (1) Navionics® charts only.</p> | <ul style="list-style-type: none"> • Land • Land and sea • (1)Land and shallow |

| Menu item and description | Options |
|---|---|
| <p>SIRIUS XM In Fishing chart mode when using a SiriusXM receiver with a valid subscription, layer options will be available. For details, refer to: p.182 — SiriusXM layer options</p> | |
| <p>EasyView Enables and disables the magnification of useful icons and text, making them easier to read. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Community edits Enables and disables the display of crowd-sourced data. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>High res bathy Enables and disables the display of High Resolution Bathymetry charts, which provide improved bottom detail, contours and structure. This setting is available when using C-MAP® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Sports fishing Allows you to display easy-to-use information pages about fishing locations including fish type, size, depth, and reef and bottom composition. This setting is available when using C-MAP® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Marine protected areas Allows clear identification of areas where commercial and recreational fishing is prohibited or restricted. This setting is available when using C-MAP® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Fishing AOI Enables and disables the display of Fishing AOIs (Areas Of Interest). This setting is available when using LightHouse™ and C-MAP® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>ActiveCaptain Enables and disables the display of crowd-sourced data. This setting is available when using C-MAP® charts.</p> | <ul style="list-style-type: none"> • On • Off |

Related links:

- [p.179 – Detailed mode settings menus](#)
- [p.182 – Fishing chart mode settings menus](#)
- [p.186 – Anchor mode settings menus](#)
- [p.195 – Racing mode settings menus](#)

Depth settings menu

The depth settings menu contains depth contour related settings.

| Menu item and description | Options |
|---|---|
| Show soundings Enables and disables the display of depth soundings on the chart. When set to Manual , depth soundings will be shown from Zero to the maximum depth you specify. This setting is not available for Raster charts | <ul style="list-style-type: none"> • None • Manual • All |
| Show contours Enables and disables the display of depth contours on the chart. When set to Manual, contours will be shown from zero to the maximum depth you specify. This setting is available when using LightHouse™, C-MAP® and Navionics® vector charts. | <ul style="list-style-type: none"> • None • Manual • All |
| Shallow contour Determines the depth at which the Shallow contour is displayed. The Shallow contour cannot be set to a value greater than the Safe contour or Deep contour value. This setting is available when using LightHouse™, legacy LightHouse™ and S-63 vector charts. | Numeric depth value |
| Safe contour Determines the depth at which the Safe contour is displayed. The Safe contour cannot be set to a value that is less than the Shallow contour or greater than the Deep contour. This setting is available when using LightHouse™, legacy LightHouse™ and S-63 vectors charts. | Numeric depth value |

| Menu item and description | Options |
|--|--|
| Shallow area Enables and disables identification of areas deemed to be shallow. When enabled, a red hatched area is displayed in areas shallower than the depth specified in the Zero to field. This setting is available when using Navionics® charts. | <ul style="list-style-type: none"> • On • Off |
| Deep contour: Determines the depth at which the deep contour is shown. E.g. if you set this to a value of 30 meters, any water with a depth greater than 30 meters will be displayed as a deep contour. This setting is not available for Raster charts. | Numeric depth value |
| Depth gradient Allows you to specify the gradient shade between shallow and deep. This setting is available when using LightHouse™ and legacy LightHouse™ vector charts. | <ul style="list-style-type: none"> • Dark to light • Light to dark |
| Deep water color Allows you to specify the color that will be used to display Deep water. This setting is available when using C-MAP® and Navionics® charts. | <ul style="list-style-type: none"> • White • Blue |
| Record depth data Enables depth and position data to be recorded to a MicroSD memory card. This setting is available when using LightHouse™ and legacy LightHouse™ vector charts. | <ul style="list-style-type: none"> • On • Off |
| Waterline to tdc Enter the distance between the waterline and your depth transducer. This setting is available when using LightHouse™ and legacy LightHouse™ vector charts. | Numeric depth value |

| Menu item and description | Options |
|--|--|
| <p>Save to When a suitable MicroSD card has been inserted, the free space available for recording depth data and RealBathy is displayed. This setting is available when using LightHouse™ and legacy LightHouse™ vector charts.</p> | <ul style="list-style-type: none"> • SD1 • SD2 |
| <p>RealBathy Displays on the chart previously recorded RealBathy™ data saved to a MicroSD memory card. This setting is available when using LightHouse™ and legacy LightHouse™ vector charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Visibility Determines the transparency of the RealBathy data displayed onscreen. This setting is available when using LightHouse™ and legacy LightHouse™ vector charts.</p> | <ul style="list-style-type: none"> • 0% to 100% |
| <p>Height correction Determines the level of height correction applied to RealBathy and depth data. This setting is available when using LightHouse™ and legacy LightHouse™ vector charts.</p> | <ul style="list-style-type: none"> • None • Tidal • Lake level |
| <p>Density Selects the density of available depth contours. This setting is available when using LightHouse™ and legacy LightHouse™ vector charts.</p> | <ul style="list-style-type: none"> • Low • Medium • High • Very high |
| <p>Sonar logging Allows logging of depth and position data to your Navionics chart card. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>SonarChart Live Enables and disables the Navionics SonarChart Live feature, which enables the realtime creation and display of high resolution bathymetry charts. When set to History, historical sonar chart live data is displayed. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • On • Off • History |

| Menu item and description | Options |
|---|--|
| <p>Visibility Determines the level of transparency used when displaying SonarChart data. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • 0% to 100% |
| <p>Tide correction Enables sonar logging depth measurements to be offset by tide height data from nearby tide stations. Tide correction will be disabled when viewing historical SonarChart Live data. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Shallow depth shading Enables and disables the identification of areas deemed to be shallow. When set to On, a red hatched area is displayed in areas shallower than the specified depth. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Density Determines the density of available depth contours. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • Very high • High • Medium • Low |
| <p>Fishing Zone You can set up a Fishing Range by enabling Fishing Zone and specifying a minimum and maximum depth. Areas on the chart that are between these depths will be colored White; areas outside of these depths will be colored Blue. This setting is available when using Navionics® charts.</p> | <ul style="list-style-type: none"> • On • Off |

Related links:

- [p.179 — Detailed mode settings menus](#)
- [p.182 — Fishing chart mode settings menus](#)
- [p.186 — Anchor mode settings menus](#)
- [p.195 — Racing mode settings menus](#)

View & motion settings menu

The view and motion settings menu contains settings that allow you to control how the chart is displayed in relation to your vessel.

| Menu item and description | Options |
|---|--|
| <p>Chart motion</p> <p>Relative motion In Relative motion mode the vessel icon remains fixed onscreen and the chart area moves relative to your position. In this mode you can adjust your vessel's fixed position using the Boat position setting.</p> <p>True motion In True motion mode the chart is fixed and your vessel icon moves around the chart. As your vessel's position reaches the edge of the screen, the chart is redrawn to reveal the area in front of your vessel.</p> <p>Auto range In Auto range the largest possible scale is maintained that will display both your vessel and the destination / target waypoint simultaneously.</p> | <ul style="list-style-type: none"> • Relative motion • True motion • Auto range |
| <p>Chart orientation</p> <p>North-up In North-up the top of the screen always points towards north. As your vessel's heading changes, the vessel icon rotates accordingly.</p> <p>Head-up In Head-up the top of the screen always points towards your vessel's current heading, and as your heading changes the chart rotates accordingly.</p> <p>Course-up In Course-up the top of the screen always points towards your destination, and as your destination changes the chart rotates accordingly.</p> | <ul style="list-style-type: none"> • North-up • Head-up • Course-up |

| Menu item and description | Options |
|--|---|
| <p>Boat position The boat position determines the position of your vessel icon onscreen. The default is Center but you can adjust this to provide a greater distance in front of your vessel. Your boat position can only be changed when Chart motion is set to Relative motion.</p> | <ul style="list-style-type: none"> • Center • Partial offset • Full offset |
| <p>Sync view with other charts: All charts with Sync turned On will synchronize orientation and position.</p> | <ul style="list-style-type: none"> • On • Off |

Related links:

- [p.179 — Detailed mode settings menus](#)
- [p.182 — Fishing chart mode settings menus](#)
- [p.186 — Anchor mode settings menus](#)
- [p.200 — Fish mapping mode settings menus](#)
- [p.195 — Racing mode settings menus](#)

Advanced settings menu

The advanced setting men contains advanced settings related to the chart apps user interface, which cartographic objects are displayed and the chart and data appearance.

| Menu item and description | Options |
|---|--|
| <p>Chart orientation</p> <p>North-up In North-up the top of the screen always points towards north. As your vessel's heading changes, the vessel icon rotates accordingly.</p> <p>Head-up In Head-up the top of the screen always points towards your vessel's current heading, and as your heading changes the chart rotates accordingly.</p> <p>Course-up In Course-up the top of the screen always points towards your destination, and as your destination changes the chart rotates accordingly.</p> | <ul style="list-style-type: none"> • North-up • Head-up • Course-up |
| <p>Enhanced AIS targets Switches between using standard and enhanced AIS targets.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Auto find ship When enabled the Chart app will automatically center to your vessel after 30 seconds.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Use Radar without heading data Enables use of Radar overlay without Heading data.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Use SOG for hdg vector length Enables you to use SOG data to determine the length of the vessel heading vector instead of STW (Speed Through Water).</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Cursor info boxes Allows display of information pop-ups for targets and objects.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Tide animation interval Allows you to select the time interval used for the Tide and Current animations in Tides mode.</p> | <ul style="list-style-type: none"> • 15 minutes to 2 hours in 15 minute steps. |

| Menu item and description | Options |
|---|---|
| <p>Cartographic objects Enables and disables the display of cartographic objects. The settings available are dependent on the cartography in use.</p> <p>Note:</p> <ul style="list-style-type: none"> • (1) Available on Navionics®, C-MAP® and Legacy LightHouse™ charts. • (2) Available on all charts. • (3) Available on Navionics®, C-MAP®, Legacy LightHouse™ and LightHouse™ charts. • (4) Available on Navionics®, C-MAP®, Legacy LightHouse™, LightHouse™ and S-63 charts. • (5) Available on Navionics® and C-MAP® charts. • (6) This setting is always available and not dependent on the cartography in use. • (7) Available on Navionics® charts. • (8) Available on S-63 Encrypted Charts | <ul style="list-style-type: none"> • Navigation marks (1) • Navigation mark symbols (1) • Rocks (2) • Light sectors (1) • Routing systems (3) • Caution areas (1) • Marine features (3) • Land features (4) • Business services (5) • Panoramic photos (5) • Roads (6) • Colored seabed areas (7) • Buoy names (8) • Light desc (8) |

| Menu item and description | Options |
|--|---|
| <p>Chart appearance Allows you to change the appearance of the Chart app. The settings available are dependent on the cartography in use.</p> <hr/> <p>Note:</p> <ul style="list-style-type: none"> • (1) Available on Navionics® charts • (2) Available on Navionics® and LightHouse™ charts. • (3) Available on Navionics®, C-MAP® and LightHouse™ charts. • (4) This setting is always available and not dependent on the cartography in use. • (5) Available on Navionics®, C-MAP®, Legacy LightHouse™ and LightHouse™ charts. • (6) Available on C-MAP® and LightHouse™ charts. • (7) Available on Navionics® and C-MAP® charts. | <ul style="list-style-type: none"> • 2D shading (1) • Aerial overlay (2) • Aerial overlay opacity (3) • Relief shading (1) • Grid (4) • Chart text (4) • Chart boundaries (5) • Text/symbol size (6) • Deep water color (7) • Community edits (1) |
| <p>My data appearance You can change how your User data appears in the Chart app. This setting is always available and not dependent on the cartography in use.</p> | <ul style="list-style-type: none"> • Waypoints names • Route names • Track names • Route width • Track width • Vector width • Vector length |

Related links:

- [p.177 — Simple mode settings menus](#)
- [p.179 — Detailed mode settings menus](#)
- [p.182 — Fishing chart mode settings menus](#)
- [p.186 — Anchor mode settings menus](#)
- [p.195 — Racing mode settings menus](#)
- [p.200 — Fish mapping mode settings menus](#)
- [p.211 — Weather mode settings menus](#)
- [p.220 — Tides mode settings menus](#)

Page settings menu

The page settings menu contains settings related to page layout.

The following options are available:

- **Data Overlays** — Enables configuration of Data overlays, which overlay key information from connected sensors onto the Chart, Radar, Sonar and Camera apps.
- **Edit split ratio** — Enables you to customize the position of the partitions in splitscreen app pages. For example, 50/50, 70/30 etc.

Related links:

- [p.29 — Data overlays](#)
- [p.177 — Simple mode settings menus](#)
- [p.179 — Detailed mode settings menus](#)
- [p.182 — Fishing chart mode settings menus](#)
- [p.186 — Anchor mode settings menus](#)
- [p.195 — Racing mode settings menus](#)
- [p.200 — Fish mapping mode settings menus](#)
- [p.211 — Weather mode settings menus](#)
- [p.220 — Tides mode settings menus](#)

CHAPTER 10: CHART APP - SIMPLE MODE

CHAPTER CONTENTS


- [10.1 Simple mode — page 177](#)
- [10.2 Simple mode main menu — page 177](#)
- [10.3 Simple mode settings menus — page 177](#)

10.1 Simple mode

Simple mode includes limited features and settings to simplify the chart app. Simple view is provided to give a basic awareness of your position.

Note:

Simple mode should NOT be used for navigation. Contours and soundings used are hidden in simple mode.

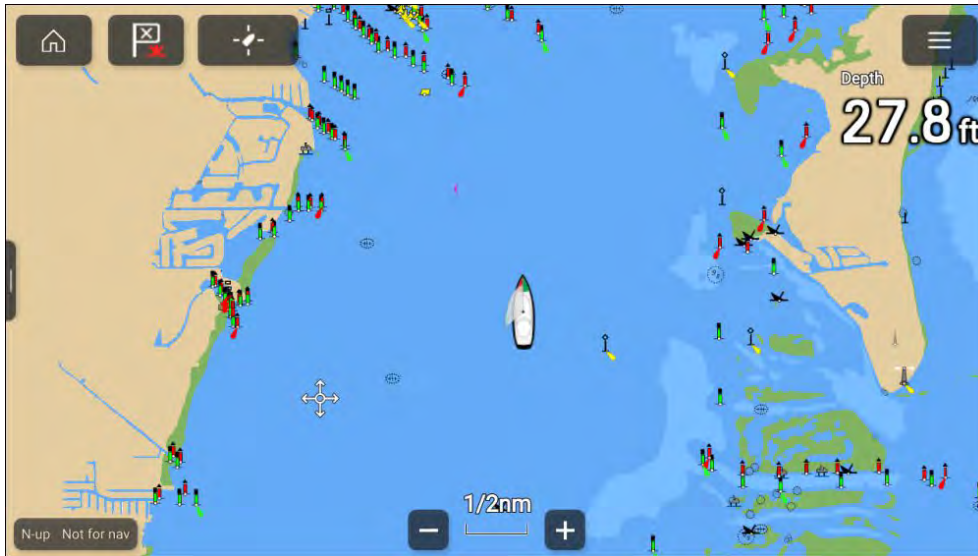

10.2 Simple mode main menu

Simple mode includes limited menu items. Active navigation and target tracking menus such as **Targets** and **New** are not available.

The following options are available from the main menu:

- **Find ship** — The find ship icon will be available in the main menu and as an onscreen icon anytime that your vessel is not centred in the chart app.
- **Mode** — Chart app mode can be changed at anytime by selecting a mode. For details of available chart modes refer to: [p.129 — Chart modes](#)
- **Go** — Provides options to start active navigation.
- **Settings** — Provides access the chart app settings menu. For details refer to: [p.177 — Simple mode settings menus](#)

10.3 Simple mode settings menus

The following settings menus are available in simple mode:

- **Cartography** — For details refer to: [p.168 — Cartography settings menu](#)
- **Advanced** — The advanced menu will have reduced options. For details refer to: [p.174 — Advanced settings menu](#)
- **Page settings** — For details refer to: [p.175 — Page settings menu](#)


CHAPTER 11: CHART APP - DETAILED MODE

CHAPTER CONTENTS

- [11.1 Detailed mode — page 179](#)
- [11.2 Detailed mode main menu — page 179](#)
- [11.3 Detailed mode settings menus — page 179](#)

11.1 Detailed mode

Detailed mode is the primary mode that should be used for navigation. Full active navigation and target tracking features are available and navigational contours, soundings and objects will be displayed onscreen when using appropriate cartography.

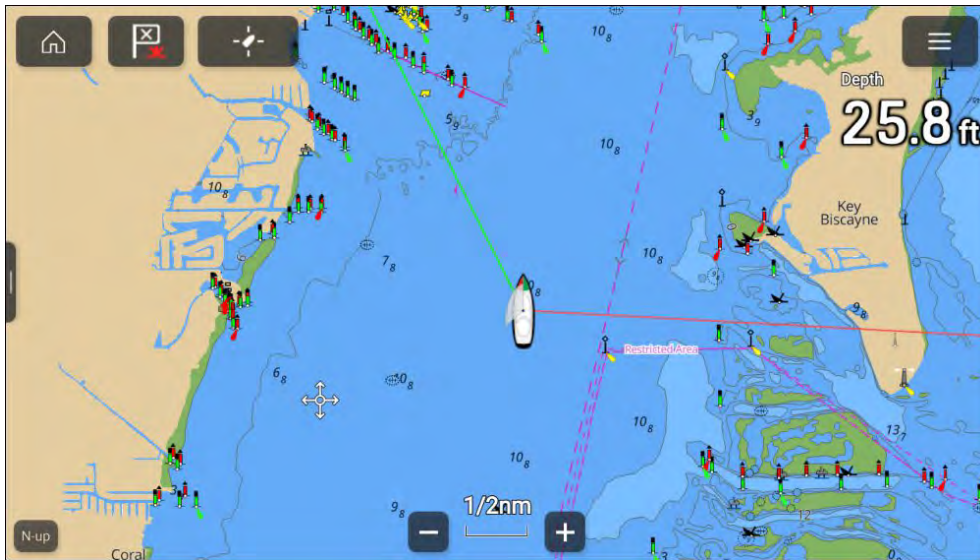

11.2 Detailed mode main menu

Detailed mode includes the relevant menu items for safe navigation.

The following options are available from the main menu:

- **Find ship** — The find ship icon will be available in the main menu and as an onscreen icon anytime that your vessel is not centred in the chart app.
- **Mode** — Chart app mode can be changed at anytime by selecting a mode. For details of available chart modes refer to: [p.129 — Chart modes](#)
- **Go** — Provides options to start active navigation.
- **New** — Provides options to create new waypoints, routes, tracks and search patterns.
- **Waypoints, routes, track** — Opens the **My data** menu to allow access to waypoints, routes and tracks lists. For details refer to: [p.73 — My data](#)

- **Targets** — Provides access to target tracking options. For details refer to: [p.146 — Target tracking](#)
- **Settings** — Provides access the chart app settings menu. For details refer to: [p.179 — Detailed mode settings menus](#)

11.3 Detailed mode settings menus

The following settings menus are available in detailed mode:

- **Cartography** — For details refer to: [p.168 — Cartography settings menu](#)
- **Layers** — For details refer to: [p.168 — Layers settings menu](#)
- **Depth** — For details refer to: [p.171 — Depth settings menu](#)
- **View & Motion** — For details refer to: [p.173 — View & motion settings menu](#)
- **Laylines** — The laylines settings menu will be available when the MFD's boating activity is set to **Sailing**. For details refer to: [p.189 — Laylines settings menu](#)
- **Advanced** — For details refer to: [p.174 — Advanced settings menu](#)
- **Page settings** — For details refer to: [p.175 — Page settings menu](#)

CHAPTER 12: CHART APP - FISHING CHART MODE

CHAPTER CONTENTS


- 12.1 Fishing chart mode — page 181
- 12.2 Fishing chart mode main menu — page 181
- 12.3 Fishing intel menu — page 181
- 12.4 SiriusXM layer options — page 182
- 12.5 Fishing chart mode settings menus — page 182

12.1 Fishing chart mode

Fishing chart mode optimizes the chart app for fishing. When using supported cartography fishing chart mode will switch to use fishing cartography which provides enhanced bathymetric contours that are not shown in other chart modes.

Important:

It is not recommended that fishing chart mode is used for navigation.

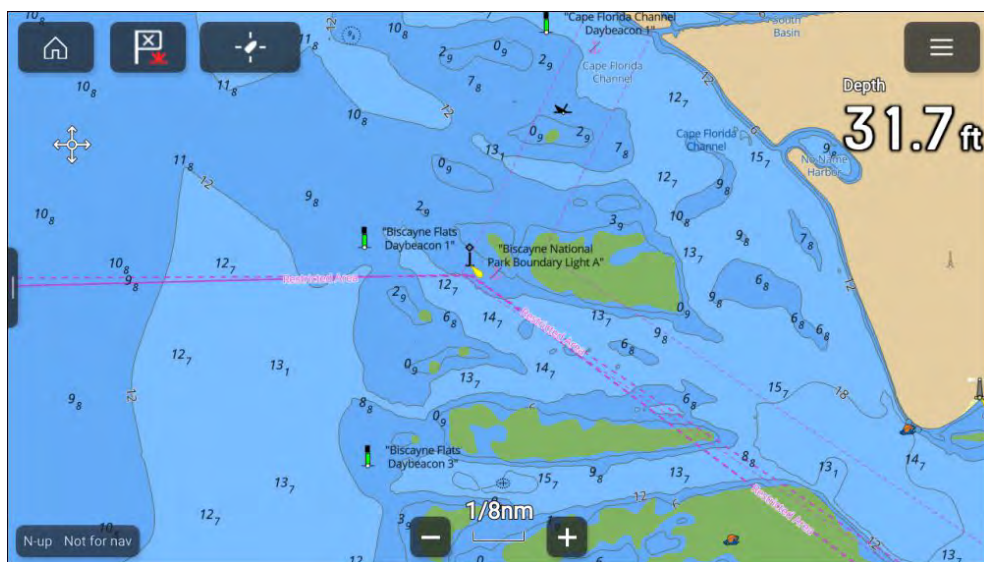

When connected to a compatible SiriusXM receiver the **Fishing intel** menu is available which provides access to fishing recommendations and fish mapping layers options. For details refer to: [p.181 – Fishing intel menu](#)

12.2 Fishing chart mode main menu

Fishing chart mode includes menu items related to fishing and navigation. The following options are available from the main menu:

- **Find ship** — The find ship icon will be available in the main menu and as an onscreen icon anytime that your vessel is not centred in the chart app.
- **Mode** — Chart app mode can be changed at anytime by selecting a mode. For details of available chart modes refer to: [p.129 – Chart modes](#)

- **Go** — Provides options to start active navigation.
- **New** — Provides options to create new waypoints, routes, tracks and search patterns.
- **Waypoints, routes, track** — Opens the **My data** menu to allow access to waypoints, routes and tracks lists. For details refer to: [p.73 – My data](#)
- **Targets** — Provides access to target tracking options. For details refer to: [p.146 – Target tracking](#)
- **Fishing intel** — Provides access to SiriusXM fish mapping options. For details refer to: [p.181 – Fishing intel menu](#)
- **Settings** — Provides access the chart app settings menu. For details refer to: [p.182 – Fishing chart mode settings menus](#)

12.3 Fishing intel menu

The **Fishing intel** menu provides access to SiriusXM options.

The following fish mapping options are available:

- **Fish Mapping Layers** — For details of available fish mapping layers refer to: [p.199 – Fish mapping layers](#)
- **Fishing Recommendations** — For details of available fishing recommendation layers refer to: [p.198 – Fishing recommendations](#)
- **SST** (Sea surface temperature)

Sea surface temperature menu

SiriusXM sea surface temperature layer options are available from the **Fishing intel** menu: **Menu > Fishing intel > SST**.



The layer can be enabled and disabled and the transparency can be adjusted using the **Visibility** control.

12.4 SiriusXM layer options

In fishing chart mode SiriusXM related layer options are grouped together in the **Layers** settings menu.

The following options are available:

- **Weather Radar** — Enables and disables the Sirius weather radar layer.
- **Weather visibility** — Determines the transparency of the weather radar layer.
- **Sea surface temps** — Enables and disables the Sirius sea surface temperature layer.
- **SST visibility** — Determines the transparency of the sea surface temperature layer.
- **Fish Mapping** — Selecting **Configure** opens the **Fishing intel** menu.
- **Show legend** — Enabled and disables display of the fish mapping legend onscreen.

12.5 Fishing chart mode settings menus

The following settings menus are available in fish chart mode:

- **Cartography** — For details refer to: [p.168 — Cartography settings menu](#)
- **Layers** — For details refer to: [p.168 — Layers settings menu](#)
- **Depth** — For details refer to: [p.171 — Depth settings menu](#)
- **View & Motion** — For details refer to: [p.173 — View & motion settings menu](#)
- **Advanced** — For details refer to: [p.174 — Advanced settings menu](#)
- **Page settings** — For details refer to: [p.175 — Page settings menu](#)

CHAPTER 13: CHART APP - ANCHOR MODE

CHAPTER CONTENTS

- [13.1 Anchor mode — page 184](#)
- [13.2 Anchor mode main menu — page 185](#)
- [13.3 Setting up the anchor drag alarm — page 185](#)
- [13.4 Anchor mode settings menus — page 186](#)

13.1 Anchor mode

Anchor mode should be used when your vessel is at anchor. Anchor mode uses your vessel's GNSS (GPS) position to record your location when your anchor hits the bottom. Anchor mode will calculate if your vessel has dragged its anchor from its original location, based on specified values and then trigger the Anchor drag alarm. To activate the anchor drag alarm the Anchoring wizard must be completed.

Note:

Anchor mode does not take into account effects that tide may have on chain length or depth values.

Before Anchor mode can be used the system requires the following details:


- GNSS (GPS) position — via a connected receiver.
- Depth — via a connected transducer.
- Length of your vessel (bow to stern)— value specified in **Boat length** field.
- GNSS (GPS) receiver distance from vessel's bow — value specified in **Bow to GPS** field.

Boat length and **Bow to GPS** can be set in the **Boat details** settings tab: **Homescreen > Settings > Boat details**. If the values have not been set then you will be prompted to enter them when activating **Anchor mode** for the first time.

Note:

If depth data and position data are not available you will not be able to start the anchoring wizard.

Anchor mode uses the following data, measurements and calculations:

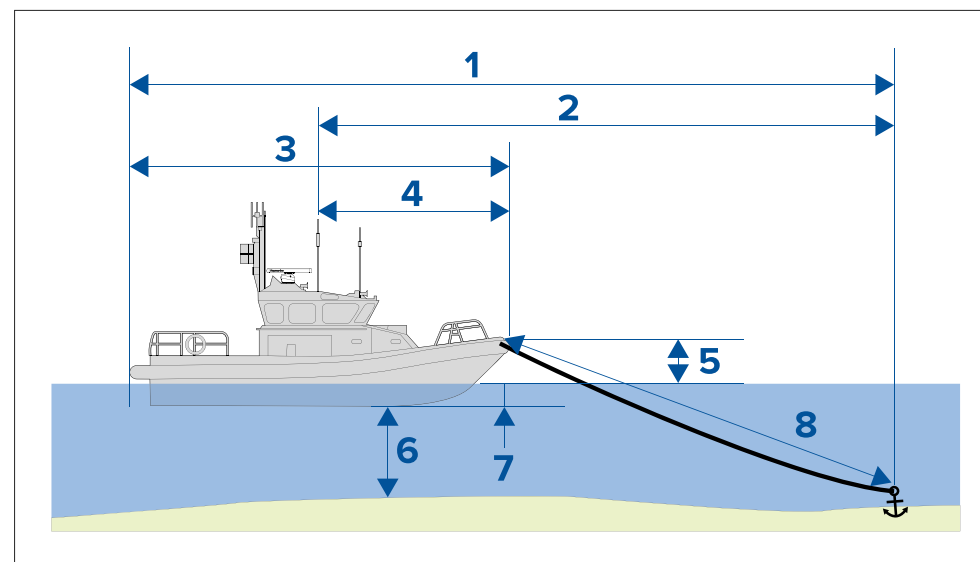

1. **Maximum swing radius** — calculation determined using Boat length, Bow to GPS distance, Chain length and Depth.
2. **Drag limit** — calculation determined using Maximum swing radius, Boat length and Bow to GPS distance.
3. **Boat length** — user defined measurement.
4. **Bow to GPS** — user defined measurement.
5. **Waterline to deck** — 1 meter is add to the calculation to allow for the distance from the waterline to the deck.
6. **Depth** — data received from depth transducer.
7. **Depth offset** — the specified depth offset is added to the calculation. The depth offset is based on your transducer settings (Zero if **Below transducer** is selected, positive value if **Below waterline** is selected and negative value if **Below keel** is selected.) Refer to: [p.230 — Depth offset](#)
8. **Chain length** — default calculation based on 4 times depth. Chain length can be altered manually to specify actual chain length.

The anchor drag alarm is triggered if your GNSS (GPS) receiver passes the distance from the original anchor position by the specified drag limit distance.

When anchor mode is active a track of your vessels movements will be recorded and representative graphics will be displayed onscreen in the chart app.

13.2 Anchor mode main menu

Anchor mode includes menu items related to the anchoring feature. Active navigation and target tracking menus such as **Targets**, **Go** and **New** are not available.

The following options are available from the main menu:


- **Find ship** — The find ship icon will be available in the main menu and as an onscreen icon anytime that your vessel is not centred in the chart app.
- **Mode** — Chart app mode can be changed at anytime by selecting a mode. For details of available chart modes refer to: [p.129 — Chart modes](#)
- **Start anchoring** — For details refer to: [p.185 — Setting up the anchor drag alarm](#)
- **Raise anchor** — Available when anchoring mode is active. Selecting will cancel anchoring.
- **Chain length** — Available when anchoring mode is active. Selecting allows you to adjust your chain length.
- **Settings** — Provides access the chart app settings menu. For details refer to: [p.186 — Anchor mode settings menus](#)

13.3 Setting up the anchor drag alarm

To set up the anchor drag alarm using the anchoring wizard follow the steps below.

1. Select a suitable location to anchor your vessel.
2. Select **ANCHOR** mode from the Chart app menu.
3. If prompted enter your **Boat length** and **Bow to GPS** distances and select **OK**.
4. Select the **Start anchoring wizard** button located on the center of the screen.


The anchoring wizard page 1 is displayed:

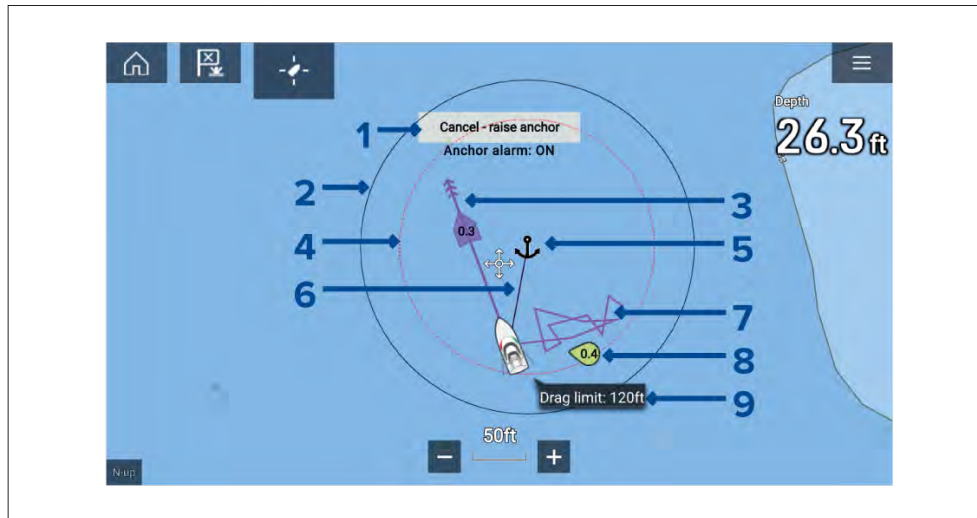

1. **Cancel — raise anchor** — selecting this button will cancel the anchor alarm. The status of the alarm is shown below the button.
2. **Max swing radius circle** — a circle with a solid black outline is placed around the anchor icon which represent the maximum swing radius.
3. **Tide vector** — Tide set and drift vector graphic.
4. **Anchor position** — an anchor icon is placed at the GPS position your vessel was located when Drop anchor was selected in the Anchoring wizard.
5. **Drag limit circle** — a circle with a dashed red outline is placed around the anchor icon which represents the drag limit. The Anchor drag alarm is triggered when your vessel's GNSS (GPS) receivers passes this line.
6. **Anchor chain** — a line is drawn between the anchor icon and the vessel icon to represent the anchor chain.
7. **Track line** — whilst the anchor alarm is active a track line will be recorded to show where your vessel has been.

Note: If a track is already being recorded when anchor mode is activated the current track is stopped and saved, once anchor mode is deactivated a new track will start recording automatically.

8. **Wind vector** — Wind speed and direction vector graphic
9. **Drag limit value** — Drag limit distance from anchor.

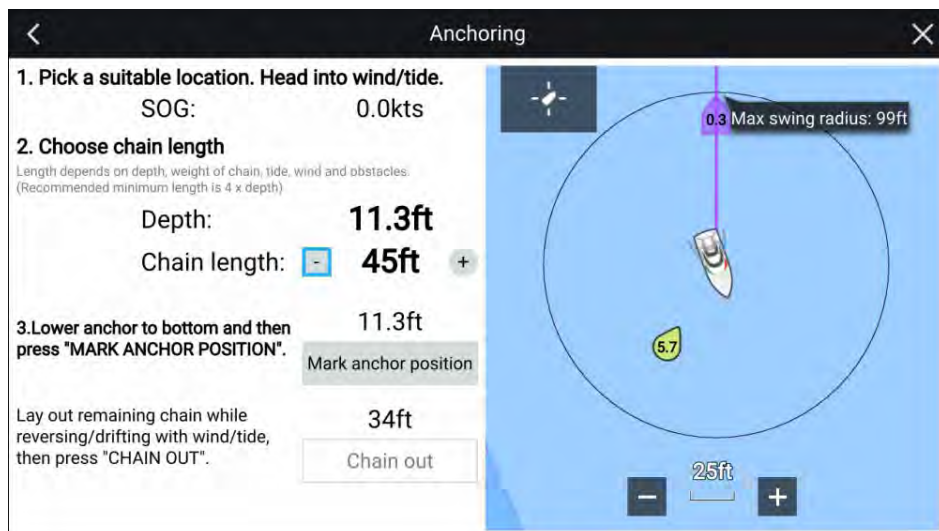


- Based on the initial **Max swing radius** shown in the live view pane, ensure the location is suitable and that no obstacle could come into contact with your vessel as it drifts.
- Head your vessel into the wind/tide.
- If required, manually adjust the chain length using the **Plus** and **Minus** buttons.

By default the chain length is 4 times the water depth.

- Lower your vessel's anchor.
- Once the anchor hits the bottom select **Mark anchor position**.
- Layout you remaining chain length while reversing / drifting with the wind/tide.
- Select **Chain out**.

The anchoring wizard page 2 is displayed:

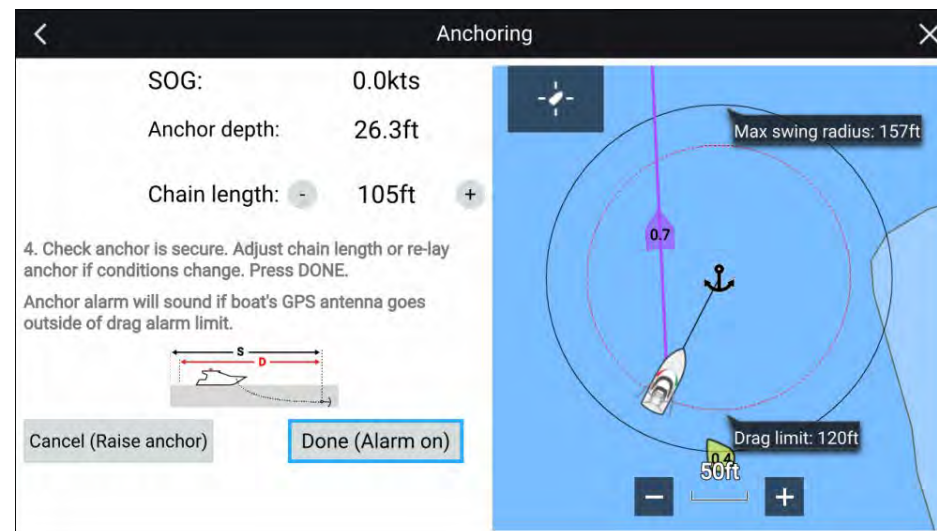

- Check that the anchor is secure. If conditions have changed adjust the chain length or re-lay the anchor as appropriate.
- Select **Done (Alarm on)**.
- The Anchor drag alarm will be triggered if the vessel's antenna drifts outside of the specified Drag limit.

Once the Anchor drag alarm is active it can be cancelled at anytime by selecting **Cancel – raise anchor** from the Chart app screen or Raise anchor from the Alarms manager: **Homescreen > Alarms > Settings > Anchor Drag > Raise anchor**.

13.4 Anchor mode settings menus

The following settings menus are available in anchor mode:

- Cartography** — For details refer to: [p.168 – Cartography settings menu](#)
- Layers** — For details refer to: [p.168 – Layers settings menu](#)
- Depth** — For details refer to: [p.171 – Depth settings menu](#)
- View & Motion** — For details refer to: [p.173 – View & motion settings menu](#)
- Advanced** — For details refer to: [p.174 – Advanced settings menu](#)
- Page settings** — For details refer to: [p.175 – Page settings menu](#)

CHAPTER 14: CHART APP - RACING MODE

CHAPTER CONTENTS

- 14.1 Racing mode main menu — page 188
- 14.2 Laylines — page 188
- 14.3 Race Start Line (SmartStart) and Race Timer — page 192
- 14.4 Racing mode settings menus — page 195

14.1 Racing mode main menu

Racing mode includes menu items related to sailing and race sailing.

The following options are available from the main menu:

- **Find ship** — The find ship icon will be available in the main menu and as an onscreen icon anytime that your vessel is not centred in the chart app.
- **Mode** — Chart app mode can be changed at anytime by selecting a mode. For details of available chart modes refer to: [p.129 — Chart modes](#)
- **Go** — Provides options to start active navigation.
- **New** — Provides options to create new waypoints, routes, tracks and search patterns.
- **Race timer** — For details refer to: [p.192 — Race Start Line \(SmartStart\) and Race Timer](#)
- **Race start line** — For details refer to: [p.192 — Race Start Line \(SmartStart\) and Race Timer](#)
- **Waypoints, routes, track** — Opens the **My data** menu to allow access to waypoints, routes and tracks lists. For details refer to: [p.73 — My data](#)
- **Targets** — Provides access to target tracking options. For details refer to: [p.146 — Target tracking](#)
- **Settings** — Provides access the chart app settings menu. For details refer to: [p.195 — Racing mode settings menus](#)

14.2 Laylines

Laylines are used in sailing to show how far the vessel must sail on the current tack in order to make a target waypoint after tacking, given present wind conditions.

When a layline is used to calculate the route to a waypoint, it will take into account a number of factors to provide a better alternative course, compared to simply navigating in a straight line to a waypoint.


The reason why laylines are a more efficient way to sail to a specific point is because they're based on True Wind Direction (TWD) and either: a) fixed upwind / downwind sailing angles, or b) the use of polars to reflect the

performance of your particular vessel. In this respect, sailing along laylines maximizes your Velocity Made Good (VMG) to windward. Another reason why laylines are more accurate is because they can also be configured to account for tidal current, as well as the leeway of your vessel.

To ensure the layline calculations are as accurate as possible, it's important to ensure that the following settings are correctly configured:

- **Boat details (specifically those relating to sailing):** **Homescreen > Settings > Boat details**
- **Laylines settings:** **Chart app > Menu > Settings > Laylines**

For more information on these settings, refer to: [p.84 — Boat details](#) and [p.189 — Laylines settings menu](#)

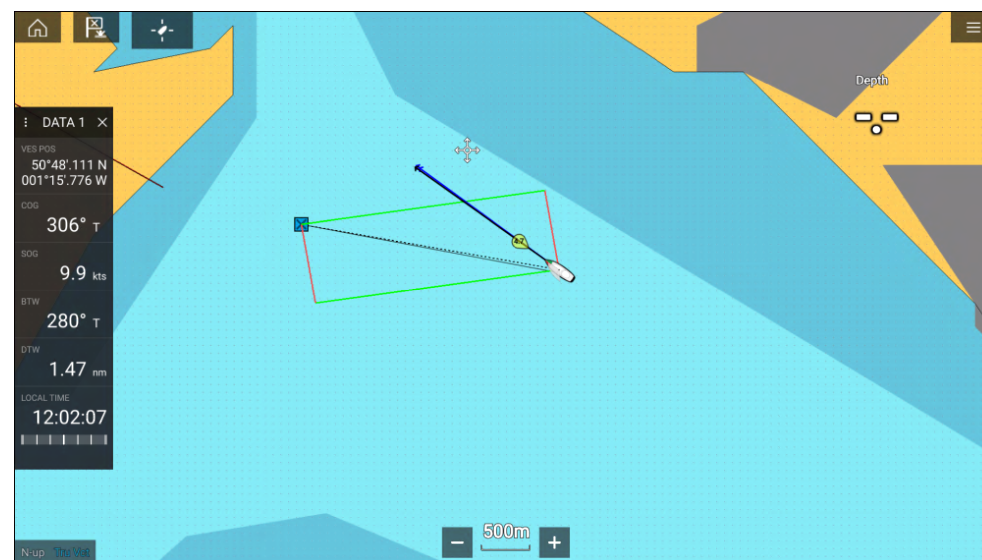


Note:

You should not steer your vessel so that its heading points exactly along the layline. Instead try to align your Course Over Ground (COG) with the visual laylines, as well as using the information displayed on the Sailing page in the **Dashboard app** to help you steer to your optimum wind angle. Your vessel should then travel along the layline, under the effects of tide and leeway.

Sailing data page

Sailing data and dials are available for display alongside laylines to help indicate which direction to turn in order to maximise your VMG to windward.

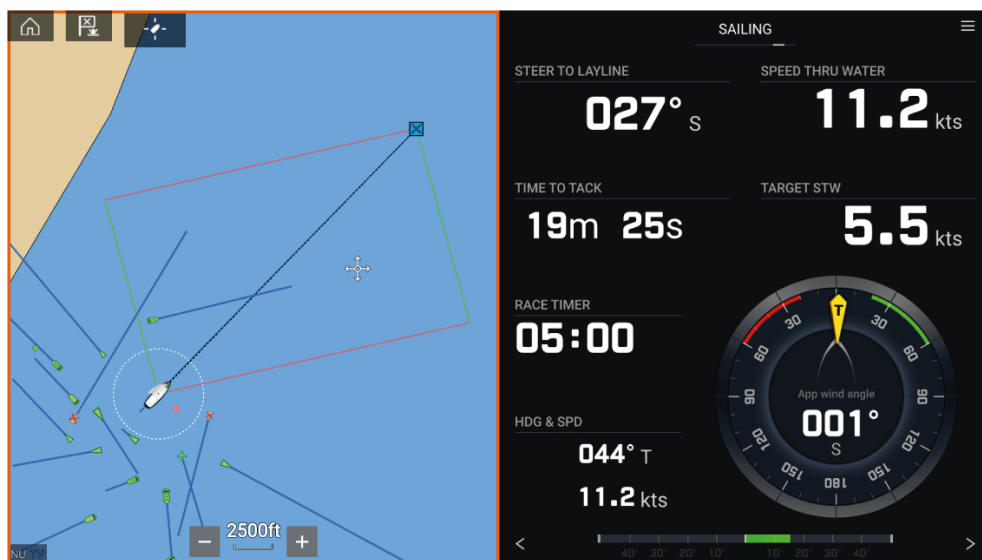

Sailing dials can be displayed in the **Dashboard app** by selecting the Sailing default data page. For more information on customizing the Sailing data page, refer to [Chapter 21 Dashboard app](#)

Laylines — system requirements


To use the Laylines feature, your system must meet the following conditions:

- The **Boating Activity** setting must be set to **Sailing** during the MFD Startup Wizard procedure. For more information on how to configure the **Boating Activity** settings, refer to: [26.3 Getting started](#)
- The following data must be present on the MFD network:
 - Wind
 - Speed Through Water (STW)
 - GPS
 - Heading

Enabling Laylines

The Laylines feature can be enabled from the Laylines settings page in the **Chart app**.

Chart app > Menu > Settings > Laylines

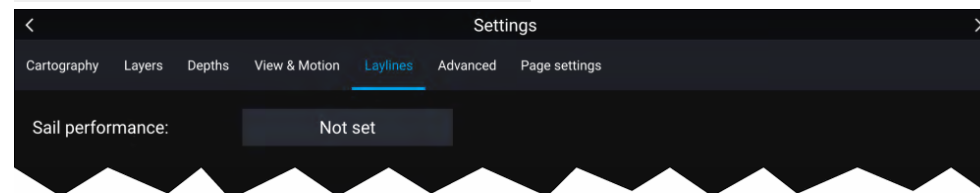

From this page you can select the Layline Sail Performance profile:

- Fixed, or
- Polar

With the relevant Sail Performance profile selected, laylines will be displayed automatically in the Chart app.

Laylines settings menu

The following settings are available from the laylines settings menu:

| Menu item and description | Options |
|--|---|
| <p>Sail Performance Allows you to select a profile that determines the preferred level of sailing performance when using laylines. The laylines feature is only available when the profile is set to Fixed Angles or Polars.</p> <ul style="list-style-type: none"> • Not set — laylines are disabled. • Fixed Angles — laylines are created based on specified Upwind and Downwind angles. These angles are set by default to 45° and 140° respectively and can be configured in the menu. • Polars — laylines will be created using a polar table available on your MFD. You can select the relevant polar table using the Polar menu item, described below. | <ul style="list-style-type: none"> • Not set • Fixed • Polar |
| <p>(Fixed angle) Upwind angle</p> <ul style="list-style-type: none"> • Set the upwind angle for layline calculations. | <ul style="list-style-type: none"> • 15° to 70° • 45° (default) |

| Menu item and description | Options |
|--|--|
| (Fixed angle) Downwind angle <ul style="list-style-type: none"> Set the downwind angle for layline calculations. | <ul style="list-style-type: none"> 125° to 175° 140° (default) |
| (Polar) Polar <ul style="list-style-type: none"> Select the Polar table that will define your layline calculation. Selecting a vessel's make and model that most closely matches your own vessel will provide better calculations and more accurate laylines to follow when sailing. If your vessel's make and model are not listed, submit the polar data for your vessel to: polars@raymarine.com so it can be included in the next software release. | <ul style="list-style-type: none"> List of available Polar tables |
| Display Layines on this chart <ul style="list-style-type: none"> Display or hide laylines on the current Chart app instance. | <ul style="list-style-type: none"> On Off |
| Adjust for tides <ul style="list-style-type: none"> Adjust the laylines to take into account tidal flow. | <ul style="list-style-type: none"> On Off |
| Boat type <ul style="list-style-type: none"> Set your vessel's boat type to provide more accurate leeway calculation. | <ul style="list-style-type: none"> List of available Boat types |
| Show wind shifts <ul style="list-style-type: none"> Display the minimum and maximum waypoint laylines, based on the varying True Wind Direction (TWD) over the last specified period. | <ul style="list-style-type: none"> On Off |

| Menu item and description | Options |
|---|--|
| (Wind shifts) Time Period <ul style="list-style-type: none"> Set the specified time period for wind shifts. | <ul style="list-style-type: none"> 3 min 6 min (default) 12 min 30 min 60 min |
| (Wind shifts) Reset <ul style="list-style-type: none"> Reset the recorded time of historical wind shifts back to 0. | <ul style="list-style-type: none"> Reset |

Related links:

- [p.179 — Detailed mode settings menus](#)
- [p.195 — Racing mode settings menus](#)


Displaying and interpreting laylines

Once laylines are enabled and correctly configured in the **Laylines** tab in the Chart app Settings, they will start rendering on the Chart display as your vessel is underway.

Laylines are displayed as a parallelogram under the following conditions:


- The vessel is under active navigation towards a **Waypoint** or **Goto**.
- A tack is required to meet an active **Waypoint** or **Goto**.
- The direct distance to the destination point is less than 150 nm from your vessel.

When the destination point is **upwind** the laylines will be displayed in a parallelogram formation, with green and red laylines showing the port and starboard tacks, as shown below:

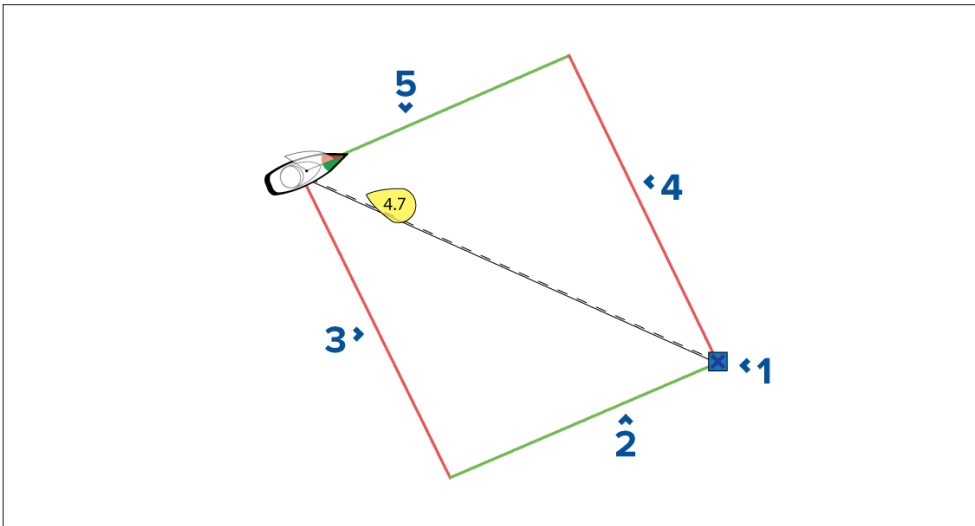

1. Destination
2. Starboard destination layline
3. Port vessel layline
4. Port destination layline
5. Starboard vessel layline


When the destination point is **downwind** the laylines will be displayed as an orange parallelogram formation, adjusted for gybing, as shown below:

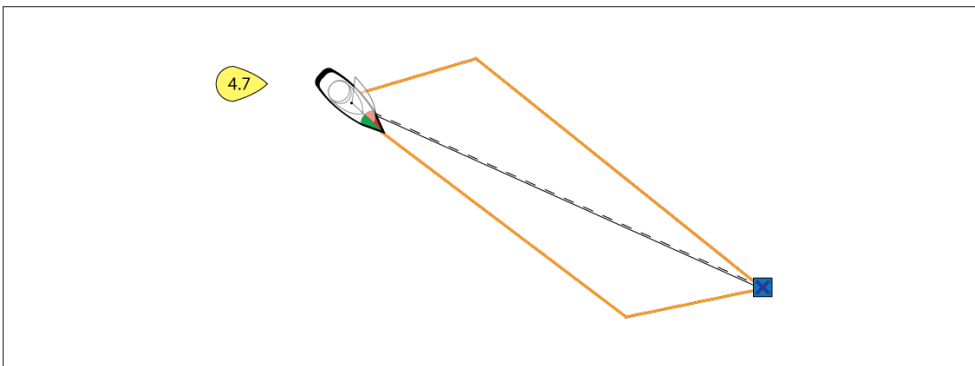

Displaying wind shift data

As True Wind Direction (TWD) is constantly changing, the position of the laylines changes over time. These changes are shown as lighter colored shaded triangles which represent the variation of TWD over a specified time period.

- With TWD holding at the high end of its range of variation, the vessel can tack to starboard and will lay the windward or leeward mark as it enters the shaded area. However, if TWD shifts back towards the lower end of its range of variation, the vessel will fall short of the layline and may have to perform extra tacks to reach the waypoint.
- With TWD holding at the low end of its range of variation, the vessel can tack to starboard and will only lay the windward or leeward mark when it reaches the end of the shaded area. However, if TWD shifts back towards the high end of its range of variation, the vessel will overstand the windward or leeward mark and may need to travel farther to reach the waypoint.
- Depending on the situation, the normal course of action would be to tack when the vessel is halfway through the shaded area. However this may not be the shortest or quickest route.

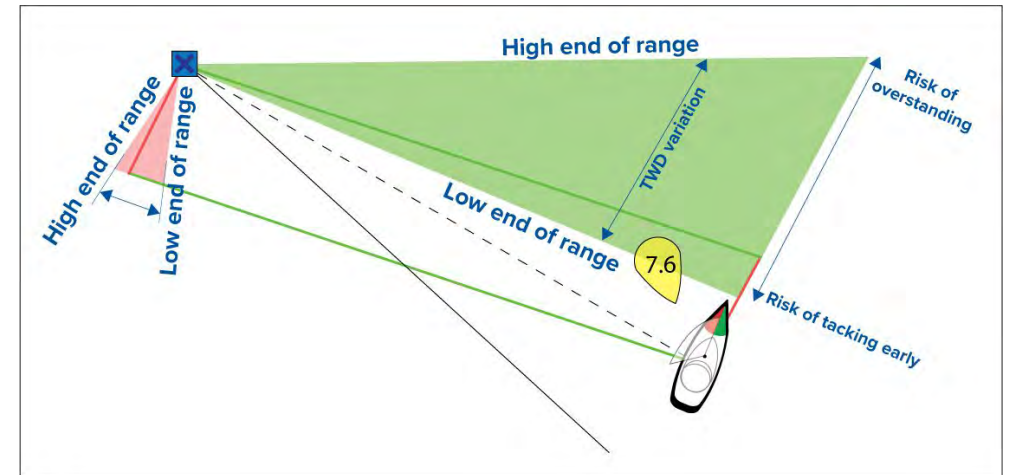

Wind shift data options are available from the **Laylines** settings page:

Chart app > Settings > Laylines



- **Show wind shifts** — Toggle wind shifts ON / OFF
- **Time Period** — Select the time period that you want the wind shift data to cover
- **Reset** — Reset the recorded wind shift data

14.3 Race Start Line (SmartStart) and Race Timer

The Race Start Line and Race Timer features can help you achieve a better racing start. The features assist you in approaching the race start line at the optimum speed, angle and time.

The basic concept of an effective race start is to guide your vessel and tune the sail configuration in an optimum way to ensure you are approaching the start line at the very last moment with full power. In race sailing, the countdown to this last moment is known as “Time to Burn”.

The race start line features help you to do this by providing a visual indication of the position of the race line on the Chart, as well as key data, including race timer, distance to start line, line bias, and Time to Burn. These features can also be used in conjunction with Laylines to further assist you in optimizing your approach to the start line. When the Race Start Line, Race Timer and Laylines are active, Laylines will visually protrude from the race start line’s port and starboard ends to help guide your vessel on an optimum course to the start line.


For more information on Laylines, refer to: [p.188 — Laylines](#)

The Race Start Line and Race Timer data is displayed in 2 different places:

- **In the Chart app’s Sidebar** — When the Chart app is in Racing mode, you can swipe from the left of the screen to display a sidebar showing the key race start information.
- **In the Dashboard app** — The dedicated Race Start page displays key race start information, including an apparent wind sailing dial, race timer, distance to start line, line bias, Time to Burn, and more. For more information, refer to: [p.298 — Race Start data items](#)

Note:

- The Race Start Line and Race Timer features require that the Chart app is set to Racing mode, accessible from the Chart app Menu.
- The Race Start Line and Race Timer sync to all MFDs on the network and can be interacted with on all MFDs on the network.
- Race Start Line and Race Timer options are available via the Sidebar when the Chart app is in Racing mode.

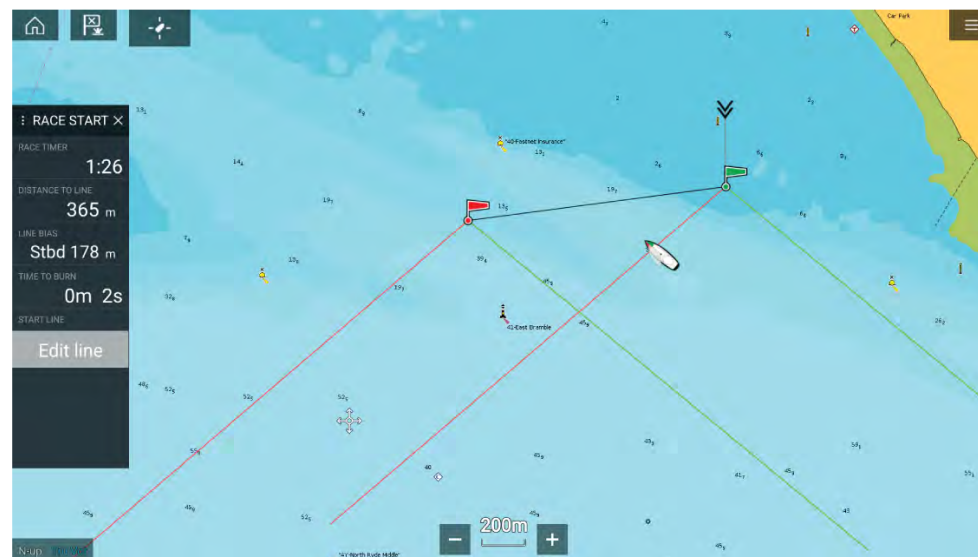

Creating the Race Start Line

A Race Start Line can be created by placing port and starboard end points.

The end points can be created by:

- Placing them anywhere on the Chart app — or for greater accuracy — placing them using existing chart waypoints and chart objects (e.g. Buoys).
- Pinging your vessel’s current location, using GPS position data.


Once both end points have been entered, the race start line will be drawn between the two points.

Placing the Race Start Line

Race Start Line end points can be placed anywhere on the Chart app. You can use waypoints or chart objects to place Race Start Line end points at specific coordinates.

To place an end point on a waypoint or chart object:

1. Select the waypoint or chart object to display the context menu.
2. Select **Set start line**.
3. Select **Port end** or **Starboard end**.
4. Repeat for the alternate end.

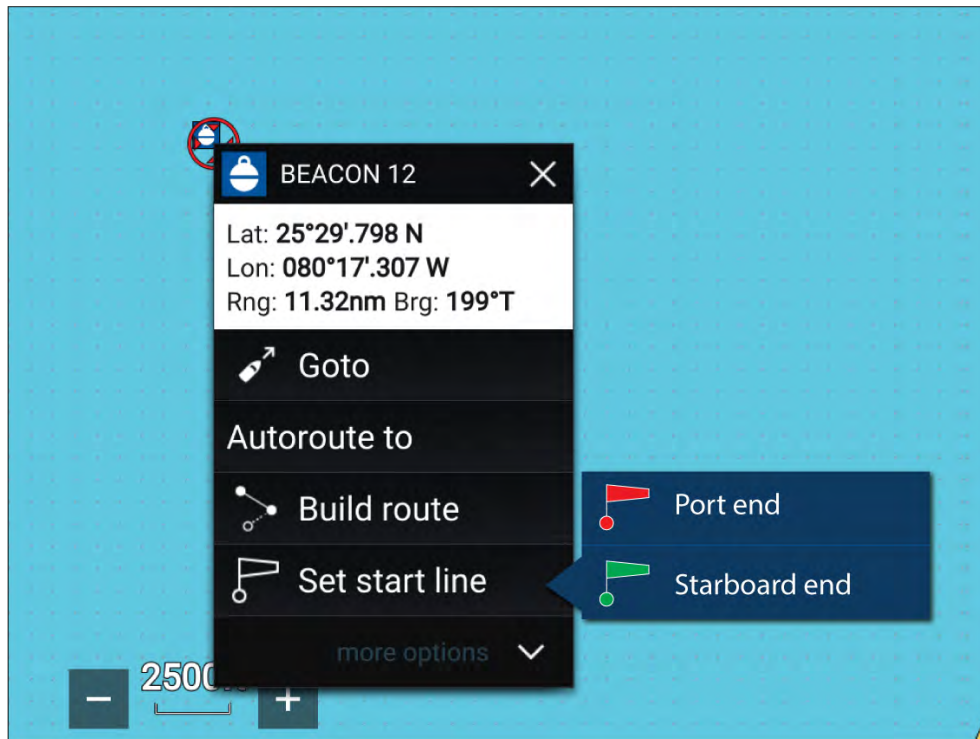


Pinging the Race Start Line

You can use your vessel's location to ping each end of the Race Start Line.

When your vessel is at the end point:

1. Open the menu.
2. Select **Race start line**.
3. Select either **Ping Port end** or **Ping Stbd (Starboard) end**.

4. Repeat for the alternate end.

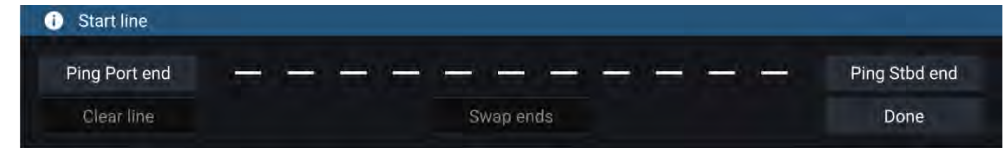

Important:

Pinging the Race Start Line ends will use your GPS location (from an internal or external GPS receiver). When pinging the end points, it is important to compensate for the distance between your vessel's bow and the GPS location.

To increase the accuracy of start line placement:

1. Approach an end point from the same direction you will be traveling when starting the race.
2. Align your vessel so it is perpendicular to the end point.
3. When the bow of your vessel reaches the end point, ping the location.
4. Repeat for the alternate end, ensuring your vessel remains perpendicular to the line.



Editing and clearing the Race Start Line

The Race Start Line can be edited and deleted.

To edit the Race Start Line:

1. Select the line or end points on the chart app.

2. Select **Edit line**.
From here you can choose to swap the positions of the Port and Starboard end points, re-ping them to your vessel's current position, or clear the start line.
3. Select **Done** to save changes.

Starting the Race Timer

A Race Timer is available to count down until race start.

To start the Race Timer:

1. Open the menu.
2. Select **Race Timer**.
3. Select **Timer duration** to set the countdown time (default is 5 minutes).
4. Select **Start** to begin the countdown.

Important: The Race Timer can be set from 1 minute to 30 minutes.

5. You can change the countdown time as well as stop and reset the timer by reopening the Race Timer options menu.

Note:


The Race Timer can also be operated from the Dashboard app Race Start Page.

Race laylines

When the Race Start Line, Race Timer and Laylines are active, laylines will protrude from the race start line's port and starboard ends to help guide your vessel on an optimum course to the start line. A Favoured End Marker will also appear on the end point that provides a more competitive start. For more information on laylines refer to [14.2 Laylines](#)

The start line will appear differently depending on whether it is an upwind or downwind start:

- Upwind starts will show red and green laylines as well as a Favoured End Marker on the end point closer to the True Wind Direction (TWD).
- Downwind starts will show orange laylines as well as a Favoured End Marker on the end point farther from the True Wind Direction (TWD).

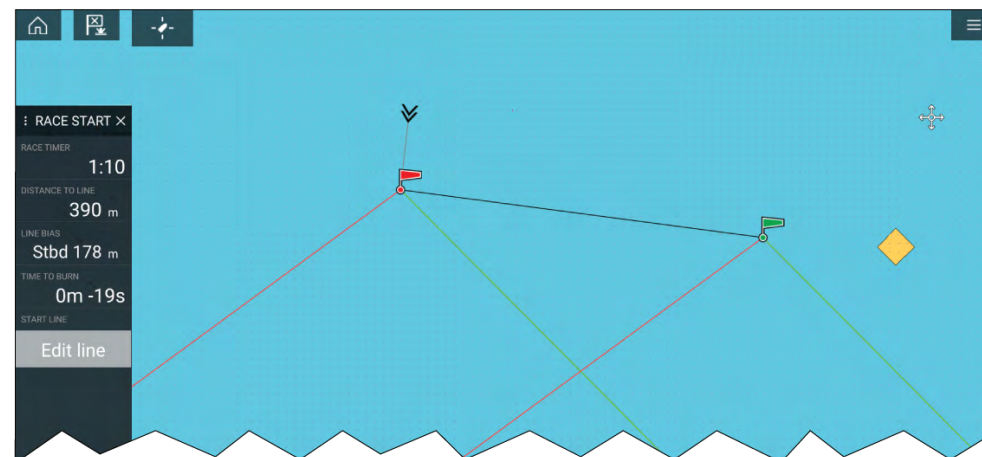

Race sidebar

Race Start Line and Race Timer information and options are available via the Sidebar when it is set to Race Start mode.

| Menu item and description | Options |
|--|---|
| <p>Race Timer Displays the countdown time until race start. When the timer reaches 0 it will begin to count up, indicating how long it has been since race start.</p> | <p>Before Start</p> <ul style="list-style-type: none"> • Start • Timer duration <p>During Countdown</p> <ul style="list-style-type: none"> • Sync nearest minute • Up 1 minute • Down 1 minute • Stop & reset <p>When Counting Up</p> <ul style="list-style-type: none"> • Stop & reset |
| <p>Distance To Line Displays how far your vessel is from any point of the start line.</p> | N/A |

| Menu item and description | Options |
|---|--|
| <p>Line Bias Displays how much closer or further away the favoured endpoint is to the wind in comparison to the other endpoint.</p> | N/A |
| <p>Time To Burn Displays how much time you have before you need to navigate towards the start line. A negative value is shown if you are predicted to be running behind and will not be at the start line at race start.</p> <ul style="list-style-type: none"> • If you are using polars for sail performance then speed from the polar diagram is used as the assumed starting speed through water. • If you are using fixed angles or have nothing set then you can manually set the expected speed or use your current speed by opening the race start line context menu (long pressing the start line). | N/A |
| <p>Edit Line Allows you to edit the end points of the start line or clear it. You can ping the port or starboard end points to your current location as well as swap them.</p> | <ul style="list-style-type: none"> • Ping Port end • Ping Stbd (starboard) end • Swap ends • Clear • Done |

- **Layers** — For details refer to: [p.168 — Layers settings menu](#)
- **Depth** — For details refer to: [p.171 — Depth settings menu](#)
- **View & Motion** — For details refer to: [p.173 — View & motion settings menu](#)
- **Laylines** — For details refer to: [p.189 — Laylines settings menu](#)
- **Advanced** — For details refer to: [p.174 — Advanced settings menu](#)
- **Page settings** — For details refer to: [p.175 — Page settings menu](#)

Dashboard

New race start data items are available in the dashboard app. These can be customized and displayed alongside the Race Start Line and Race Timer features. For more information refer to [Race Start data items](#)

14.4 Racing mode settings menus

The following settings menus are available in racing mode:

- **Cartography** — For details refer to: [p.168 — Cartography settings menu](#)

CHAPTER 15: CHART APP - FISH MAPPING MODE

CHAPTER CONTENTS

- [15.1 Fish mapping mode — page 197](#)
- [15.2 Fish mapping mode main menu — page 198](#)
- [15.3 Fishing recommendations — page 198](#)
- [15.4 Fish mapping layers — page 199](#)
- [15.5 Layer / fish type identification — page 199](#)
- [15.6 Limiting data display limits — page 200](#)
- [15.7 Fish mapping subscription — page 200](#)
- [15.8 Fish mapping mode settings menus — page 200](#)

15.1 Fish mapping mode


Fish mapping mode is a chart mode that enables you to utilize Sirius XM fishing data in the Chart app. When compatible hardware (e.g.: SR200) is detected, fish mapping mode will be available. Fish mapping mode requires a valid SiriusXM subscription. To find out more about fish mapping data and subscriptions visit the SiriusXM website: <https://siriusxmcommunications.com/fishmapping/#features>

Fish mapping mode overlays fishing layers and fishing recommendation locations on the Chart app.

Important:

- Use of fish mapping mode is subject to acceptance of the disclaimer that is displayed when fish mapping mode is activated. Please read and ensure you understand the disclaimer's conditions.
- Fish mapping mode should NOT be used for navigation. **Contours used for safe navigation and related markings and objects are hidden in fish mapping mode.** Active navigation controls and menus are also not available.
- Fish mapping data is only available in North America and its coastal waters.

To enter fish mapping mode, open the Chart app menu, select **Mode:**, and then select the fish mapping icon.

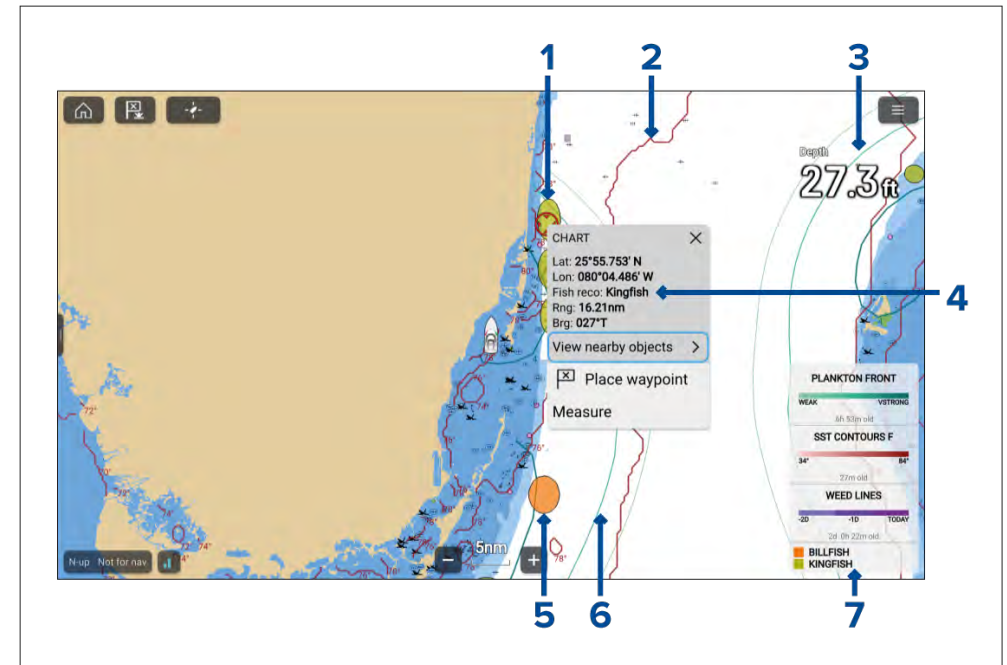

1. Example fishing recommendation — Kingfish location.
2. Example fishing layer — SST contour front.
3. Fishing layer example — Plankton front, weak contour.
4. Example context menu — Fishing recommendation.
5. Example fishing recommendation — Billfish location.
6. Fishing layer example — Plankton front, very strong contour.
7. Fish mapping legend.

Fishing mapping layers and Fishing recommendation layers are also available in the Chart app's Fishing chart mode.

Activating your SiriusXM receiver

Your MFD is compatible with the SR150 and SR200 SiriusXM receivers. Your receiver must be activated before you can use fish mapping mode on your MFD.

The following information is required to activate your SiriusXM receiver:

- Electronic Serial Number (ESN) — The ESN is printed on the product label located on the underside of your SiriusXM receiver. You can also access

the ESN from the **Fish mapping** settings menus in the chart app: (**Menu > Settings > Fish mapping > Receiver ESN**).

- Current billing information (if you already have a valid subscription).
- Desired subscription package.
- 1. Obtain your SiriusXM receiver's ESN.
- 2. Visit the Sirius Marine Weather website: SiriusXM fish mapping website: <https://siriusxmcommunications.com/fishmapping/#features>, and choose a subscription package.
- 3. Follow the **“Activate Now”** link to activate your receiver online. Alternatively, call 1-844-342-0665.

Once your SiriusXM receiver is activated fish mapping mode will be available in the chart app menu.

15.2 Fish mapping mode main menu

Fish mapping mode includes menu items related to fish mapping. Active navigation and target tracking menus such as **Targets**, **Go** and **New** are not available.

The following options are available from the main menu:

- **Find ship** — The find ship icon will be available in the main menu and as an onscreen icon anytime that your vessel is not centered in the Chart app.
- **Mode** — Chart app mode can be changed at anytime by selecting a mode. For details of available chart modes, refer to: [p.129 — Chart modes](#)
- **Waypoints, routes, track** — Opens the **My data** menu to allow access to waypoints, routes and track lists. For details refer to: [p.73 — My data](#)
- **Fishing recommendations** — Allows you to select which specific fish type layers you want to display. For details refer to: [p.198 — Fishing recommendations](#)
- **Fish mapping layers** — Allows you to select which fishing data layers you want to display. For details refer to: [p.199 — Fish mapping layers](#)
- **Data display limits** — Allows you to restrict the display data limits for certain fish mapping layers. For details refer to: [p.200 — Limiting data display limits](#)
- **Animate weed lines** — Animates the weed line layer.
- **Show legend** — Displays an onscreen legend for currently enabled layers.


- **Settings** — Provides access to the Chart app settings menu. For details refer to: [p.200 — Fish mapping mode settings menu](#)

You can check when fishing data was last received / updated from the **Fish Mapping** settings menu: **Menu > Settings > Fish Mapping**.

15.3 Fishing recommendations

Fishing recommendations enable you to view recommended locations that currently have ideal conditions for finding specific fish types. If conditions are not ideal for a selected species then no recommendation will be displayed.

The following fish types can be enabled and disabled from the **Fishing Recommendations** menu:

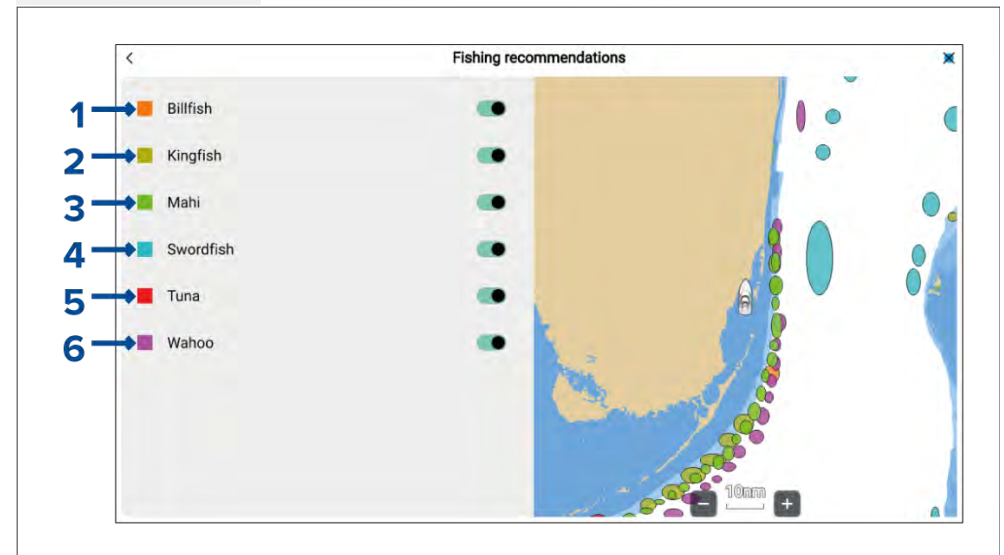


1. **Billfish**
2. **Kingfish**
3. **Mahi**
4. **Swordfish**
5. **Tuna**
6. **Wahoo**

Fishing recommendations are also available in Fishing chart mode. Refer to: Fishing intel menu: [p.181 — Fishing intel menu](#)

15.4 Fish mapping layers

The fish mapping layers allow you to overlay fishing data in the chart app to help you identify locations where conditions are suitable to find fish.

The following fish mapping layers can be enabled and disabled from the **Fish mapping layers** menu:

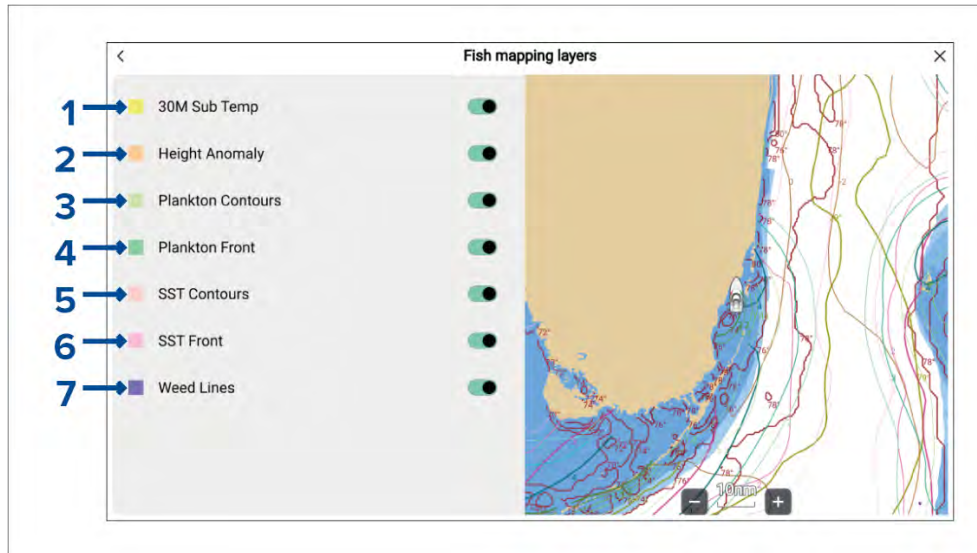

1. **30M Sub Temp** (30 metre subsurface sea temperatures) — View contour lines for below the surface temperature range.
2. **Height Anomaly** (Sea surface height anomaly) — View contour lines for locations where the sea surface height is different than the surrounding area. The anomalies show where fronts, eddies, upwellings and downwellings are located.
3. **Plankton Contours** (Plankton concentration contours) — View contour lines for areas of plankton concentration to help identify favorable conditions.
4. **Plankton Front** (Plankton front strength) — View contour lines for areas of strong plankton concentration bordering areas with relatively low or no plankton.
5. **SST Contours** (Sea surface temperature contours) — View contour lines for sea surface temperatures.


6. **SST Front** (Sea surface temperature front strength) — View contour lines for areas where there is significant temperature changes that create distinct boundaries between bodies of water.
7. **Weed Lines** — View contour lines for locations where floating algae/plants have been sighted recently or are most likely to be forming. The weed lines contour can be animated using the **Animate weed lines** option in the main menu. The weed line animation can cover a period of up to 3 days (i.e.: today and up to 2 previous days).

Color gradients are used to identify the concentration or strength of the relevant contour e.g.: a darker color for plankton contours indicates a higher concentration of plankton in that area. The legend shows the color gradients used and what they represent.

Fish mapping layers are also available in Fishing chart mode. Refer to: Fishing intel menu: [p.181 – Fishing intel menu](#)

15.5 Layer / fish type identification

The available layers and fish types are identified by different colors.

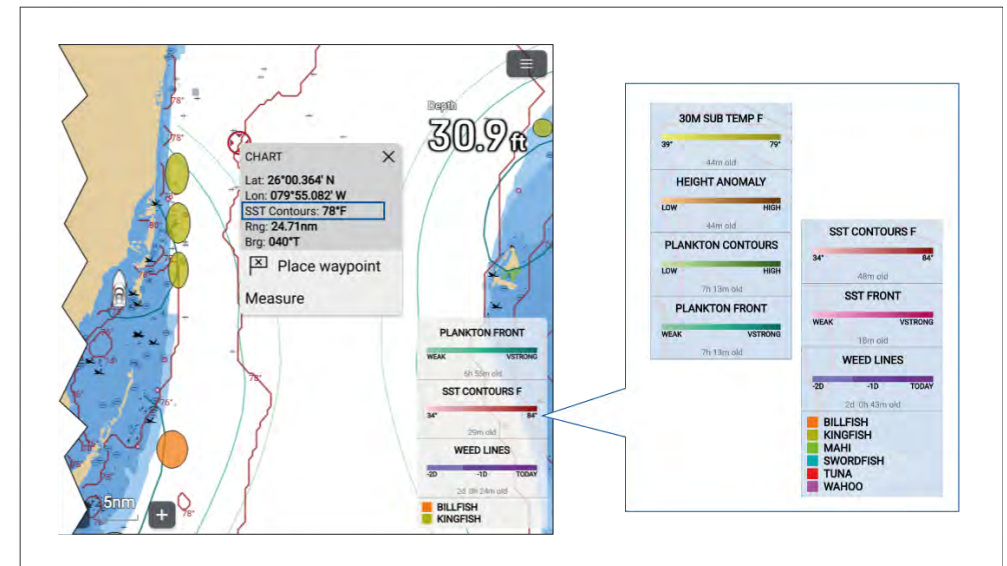


A legend identifying which layers and fish types are currently enabled can be displayed onscreen using the **Show Legend** option from the Chart app menu. When several layers/fish types are enabled, you can scroll the legend to see all enabled items.

Layers and fish types can also be selected in the Chart app, and the context menu will identify which layer or fish type has been selected.

15.6 Limiting data display limits

By default the displayed data limits will cover the full range of received data. Upper and lower limits can be specified manually for SST contour, 30M sub surface sea temperature and height anomaly layers.

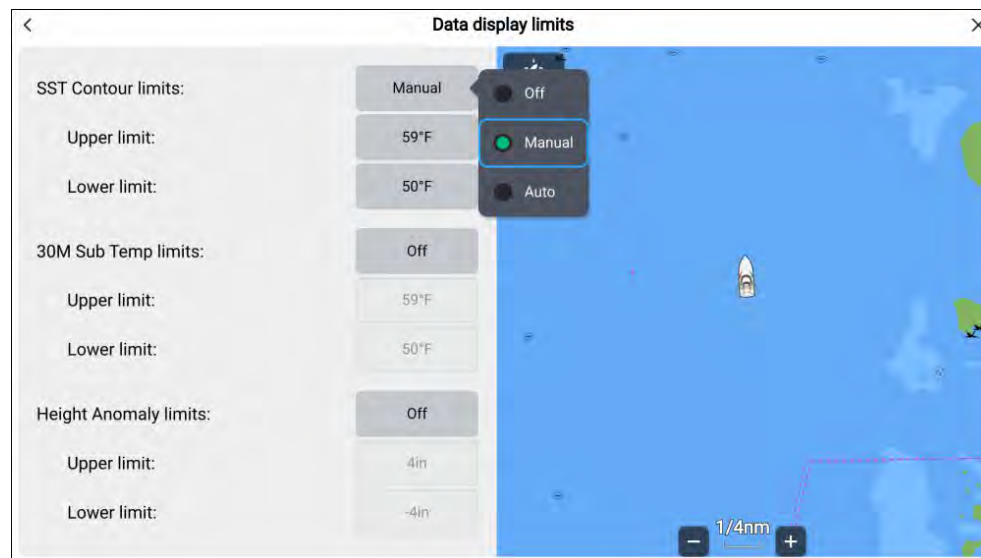

1. Select **Data display limits** from the Chart app menu.
2. Select the relevant option field, either **SST Contour limits**, **30M Sub Temp Limits** or **Height Anomaly Limits**.
3. Select **Manual** from the pop-over options.
4. Adjust the **Upper limit** and **Lower limit** fields as required.

The **Manual** option will limit the displayed data to the specified range. Setting a data limit option to **Auto** will filter the data according to the data limits received by your Sirius receiver.

You can revert to displaying the full range of received data by switching the option to **Off**.

When manual limits are applied '(Limits ON)' indication is displayed against the layer in the legend and in the status area at the bottom left of the chart app.

15.7 Fish mapping subscription

You can check your subscription status and data reception from the **Fish mapping** settings menu: **Menu > Settings > Fish mapping**.



The fish mapping settings menu lists the data types that have been received, and also provides the date and time it was received and last updated.

You can also check your subscription status, and the Sirius receiver's ESN and signal strength.

15.8 Fish mapping mode settings menus

The following settings menus are available in fish mapping mode:

- **Cartography** — For details refer to: [p.168 — Cartography settings menu](#)
- **View & Motion** — For details refer to: [p.173 — View & motion settings menu](#)
- **Fish Mapping** — For details refer to: [p.200 — Fish mapping subscription](#)
- **Advanced** — For details refer to: [p.174 — Advanced settings menu](#)
- **Page settings** — For details refer to: [p.175 — Page settings menu](#)

CHAPTER 16: CHART APP – WEATHER MODE

CHAPTER CONTENTS

- 16.1 Weather mode — page 202
- 16.2 Weather mode main menu — page 202
- 16.3 Activating your SiriusXM receiver — page 203
- 16.4 Weather layers — page 203
- 16.5 Animated weather — page 204
- 16.6 Weather radar layer — page 205
- 16.7 Cities and Surface observation stations layers — page 206
- 16.8 Cloud top and Lightning layers — page 206
- 16.9 Sea surface temperature and Surface pressure layers — page 207
- 16.10 Storm cast and Storm tracks layers — page 208
- 16.11 Wind and Watchbox layers — page 209
- 16.12 Wave direction, wave height and wave period layers — page 210
- 16.13 Weather mode settings menus — page 211
- 16.14 Weather settings menu — page 211
- 16.15 Weather subscription — page 211
- 16.16 Glossary of weather terms — page 213

16.1 Weather mode


Weather mode allows you to track weather systems in relation to your vessel by overlaying live, historical and forecasted weather data directly on the chart. In weather mode you can also view animated weather graphics and read weather reports. Weather mode is available in the chart app if you have a compatible Sirius weather receiver and valid subscription. Switching the chart app to weather mode allows you to overlay weather data and information from your weather receiver.

Important:

- Use of weather mode is subject to acceptance of the disclaimer that is displayed when weather mode is activated. Please read and ensure you understand the disclaimer's conditions.
- Weather mode should NOT be used for navigation. Contours used for safe navigation and related markings and objects are hidden in weather mode. Active navigation controls and menus are also not available.
- Weather data is only available in North America and its coastal waters.

To enter weather mode, open the chart app menu, select **Mode:** and then select the weather icon.

In weather mode the **Chart orientation** is fixed in **North-Up** mode.

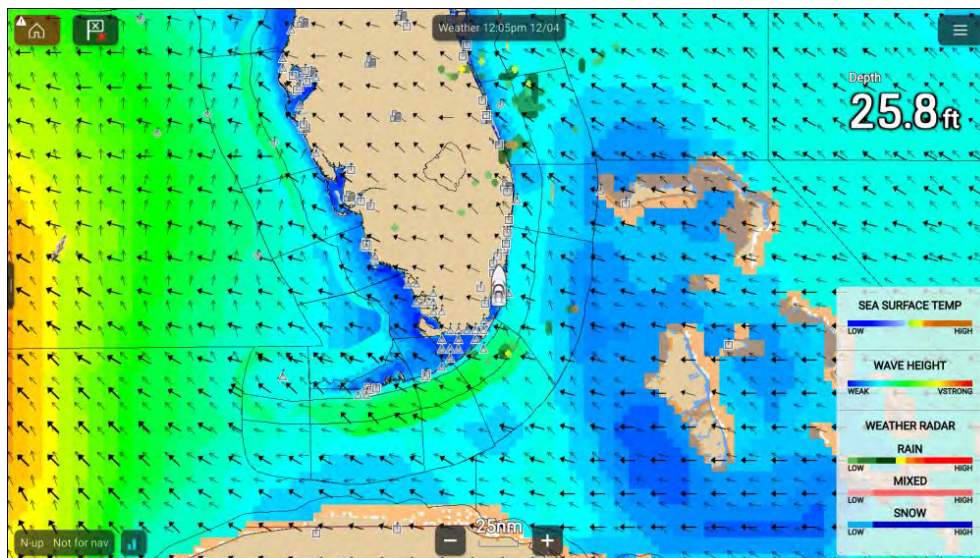


Weather symbols are organized into layers, accessible from the chart menu: **Menu > Weather layers**. Each layer can be enabled and disabled independently. For details refer to: [p.203 – Weather layers](#)

Weather mode context menu

The Weather mode context menu provides the standard lat/lon and range and bearing information relative to your vessel. The context menu also provides access to weather-related data.

Selecting an area onscreen will open the context menu.

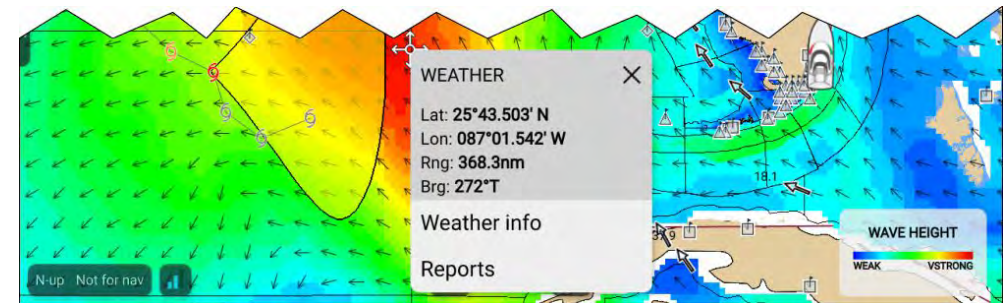

The context menu provides access to the following reports:

- **Weather info** — always available.
- **Reports** — always available.
- **Watchbox data** — available when selecting a watchbox area.
- **Storm cast data** — available when selecting a storm cast arrow.
- **Storm data** — available when selecting a storm track symbol.
- **Forecast for....** — available when selecting a city symbol.

16.2 Weather mode main menu

Weather mode includes menu items related to weather data. Active navigation and target tracking menus such as **Targets**, **Go** and **New** are not available.

The following options are available from the main menu:

- **Find ship** — The find ship icon will be available in the main menu and as an onscreen icon anytime that your vessel is not centred in the chart app.
- **Mode** — Chart app mode can be changed at anytime by selecting a mode. For details of available chart modes refer to: [p.129 – Chart modes](#)

- **Weather layers** — Allows you to select the weather layers that you want to display. For details refer to: [p.203 — Weather layers](#)
- **Data display limits** — Allows you to restrict the display data limits for the sea surface temperature layer.
- **Reports** — Displays text based weather reports for your vessel current location.
- **Animate weather** — Activates weather animation mode. For details refer to: [p.204 — Animated weather](#)
- **Show legend** — Displays an onscreen legend for currently enabled layers.
- **Settings** — Provides access the chart app settings menu.. For details refer to: [p.211 — Weather mode settings menus](#)

You can check when fishing data was last received / updated from the **Subscription** settings menu: **Menu > Settings > Subscription**.

16.3 Activating your SiriusXM receiver

Your MFD is compatible with the SR150 and SR200 SiriusXM receivers. Your receiver must be activated before you can use weather mode on your MFD.


The following information is required to activate your SiriusXM receiver:

- Electronic Serial Number (ESN) — The ESN is printed on the product label located on the underside of your SiriusXM receiver. You can also access the ESN from the **Weather** settings menu in the chart app: (**Menu > Settings > Subscription > Receiver ESN**).
 - Current billing information (if you already have a valid subscription).
 - Desired subscription package.
1. Obtain your SiriusXM receiver's ESN.
 2. Visit the Sirius Marine Weather website: <http://www.siriusxm.com/sxmarine>, and choose a subscription package.
 3. Follow the "Activate Now" link to activate your receiver online. Alternatively, call 1-855-796-9847.

Once your SiriusXM receiver is activated weather mode will be available in the chart app menu.

SR200 diagnostics mode

The SR200 diagnostic mode can be accessed from the audio settings menu from the master MFD on the network. The diagnostics mode should be referred to when liaising with Sirius product support.

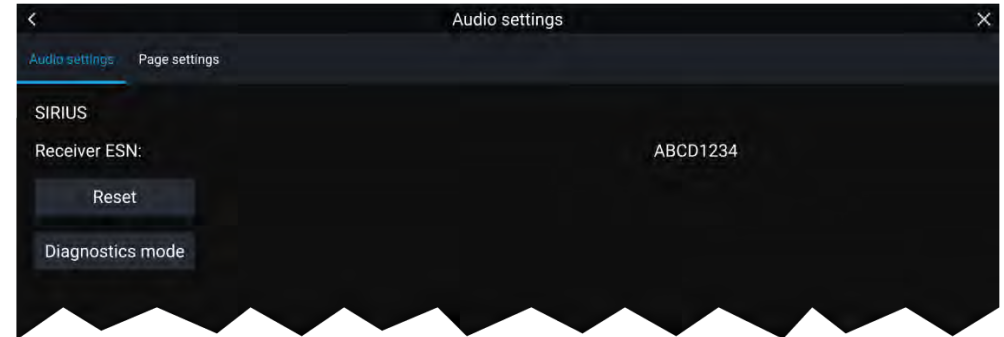

1. Reset — Performs a factory reset and power cycle of the SR200.
2. Diagnostics mode — Displays the SR200's diagnostic information.

16.4 Weather layers

The weather layers can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers**.

The following weather layers are available in weather mode:

- **Weather radar** — For details refer to: [p.205 — Weather radar layer](#)
- **Cities** — For details refer to: [p.206 — Cities and Surface observation stations layers](#)
- **Cloud top** — For details refer to: [p.206 — Cloud top and Lightning layers](#)
- **Lightning** — For details refer to: [p.206 — Cloud top and Lightning layers](#)
- **Sea surface temperature** — For details refer to: [p.207 — Sea surface temperature and Surface pressure layers](#)
- **Storm cast** — For details refer to: [p.208 — Storm cast and Storm tracks layers](#)
- **Storm tracks** — For details refer to: [p.208 — Storm cast and Storm tracks layers](#)


- **Surface pressure** — For details refer to: [p.207 — Sea surface temperature and Surface pressure layers](#)
- **Surface observation stations** — For details refer to: [p.206 — Cities and Surface observation stations layers](#)
- **Wind** — For details refer to: [p.209 — Wind and Watchbox layers](#)
- **Watchbox** — For details refer to: [p.209 — Wind and Watchbox layers](#)
- **Wave height** — For details refer to: [p.210 — Wave direction, wave height and wave period layers](#)
- **Wave period** — For details refer to: [p.210 — Wave direction, wave height and wave period layers](#)
- **Wave direction** — For details refer to: [p.210 — Wave direction, wave height and wave period layers](#)

16.5 Animated weather

In weather mode you can play weather animations of historical weather radar data and forecasted wind, wave and surface pressure data.

Weather animations can be accessed in weather mode by selecting **Animate weather** from the menu.

When animate weather is selected the player controls and symbols representing weather layers are displayed.

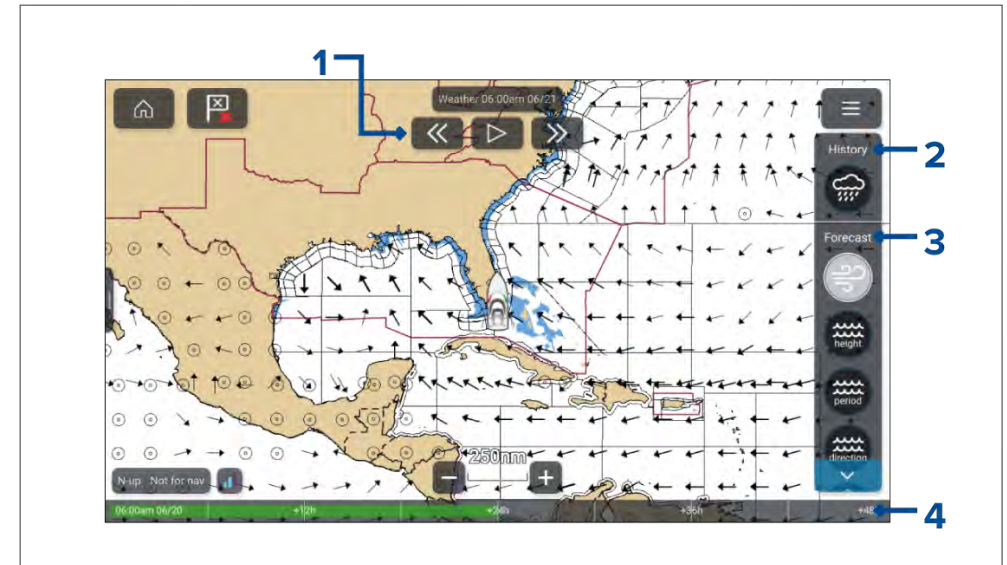

1. Player controls.
2. Historical data animation is available for the weather radar layer.
3. Forecasted data animation is available for wind, wave and surface pressure layers.
4. Animation progress bar.

Animated weather layers

Animations are available for the following layers: Selecting a symbol will display the animation for that layer.




1. **Weather radar** — Historical precipitation data for the previous 2 hours can be played.
2. **Wind** — Offshore wind forecast for up to 48 hours. High resolution coastal and inland wind forecast for up to 24 hours.
3. **Wave height** — Offshore wave height forecast for up to 48 hours. High resolution coastal wave height forecast for up to 24 hours. Great Lakes wave height forecast for up to 24 hours.
4. **Wave period** — Offshore wave period forecast for up to 48 hours. Great Lakes wave period forecast for up to 24 hours.
5. **Wave direction** — Offshore wave direction forecast for up to 48 hours. Great Lakes wave direction forecast for up to 24 hours.
6. **Surface pressure** — Surface pressure forecast for up to 48 hours.

To exit animations open the **Menu**.

16.6 Weather radar layer

With the weather radar layer enabled a color coded radar image is displayed. This image shows a complete view of any precipitation across North America, including the type and intensity. Rain, mixed and snow use different color scales to identify intensity. A legend is available that can be displayed

onscreen to aid identification of intensity. The images are displayed as pixels on screen and the resolution of this feature is 2 km per pixel. Coverage includes the Continental US, Canada, and portions of Mexico/Caribbean.

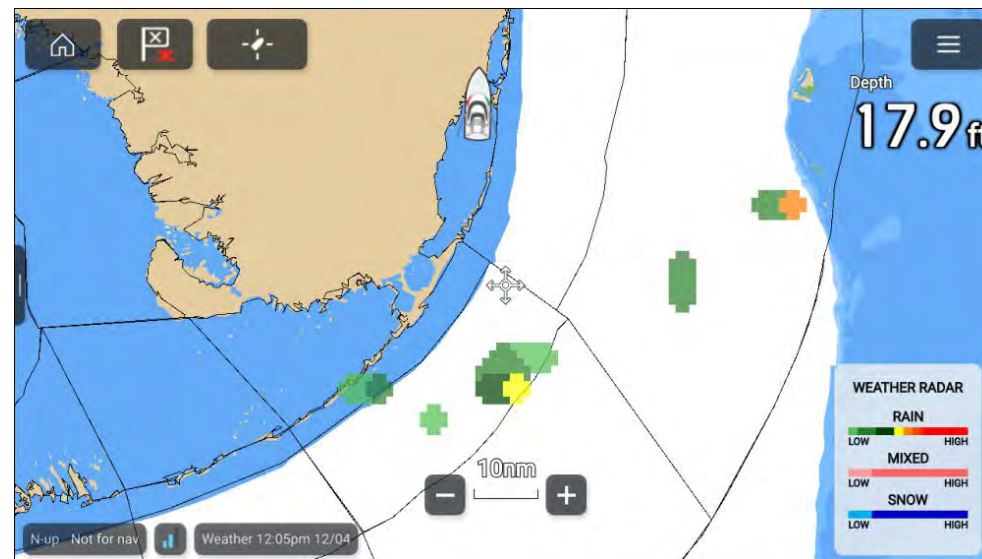


The legend can be enabled from the main menu: **Menu > Show legend**.

The weather radar layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Weather radar**.


When the weather radar layer is enabled the transparency of the layer can be adjusted using the **Visibility** setting: **Menu > Weather layers > Weather radar > Visibility**.

16.7 Cities and Surface observation stations layers

The Cities layer and Surface observation stations layer display symbols which represent the location of cities and surface observation stations respectively. The symbols used for surface observation stations also identify the type of station.

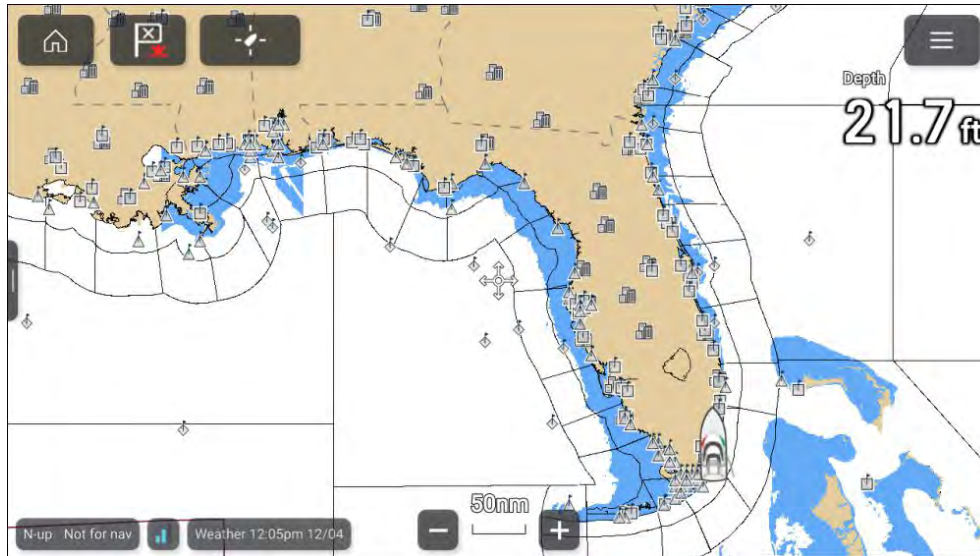

City forecasts are available from the context menu when a City is selected.

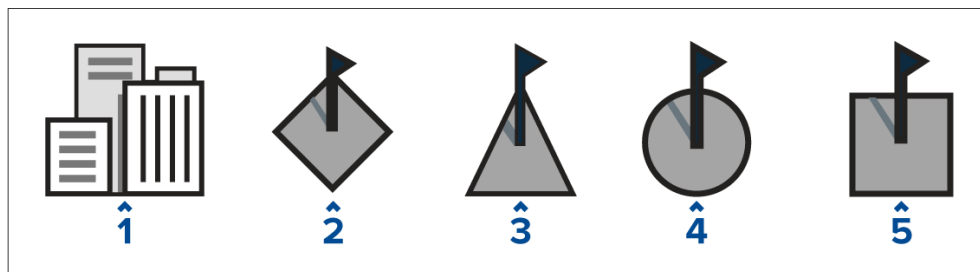


1. City
2. Buoy station
3. CMAN station (Coastal-marine automated network)
4. WSI station (Weather services international)
5. METAR station (METeoro logical Aerodrome Reports)

The cities layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Cities**.

The surface observation stations layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Surface observation stations**.

16.8 Cloud top and Lightning layers

The cloud top layer provides a satellite image of current cloud coverage and the lightning layer provides symbols to show the location of recent lightning strikes.

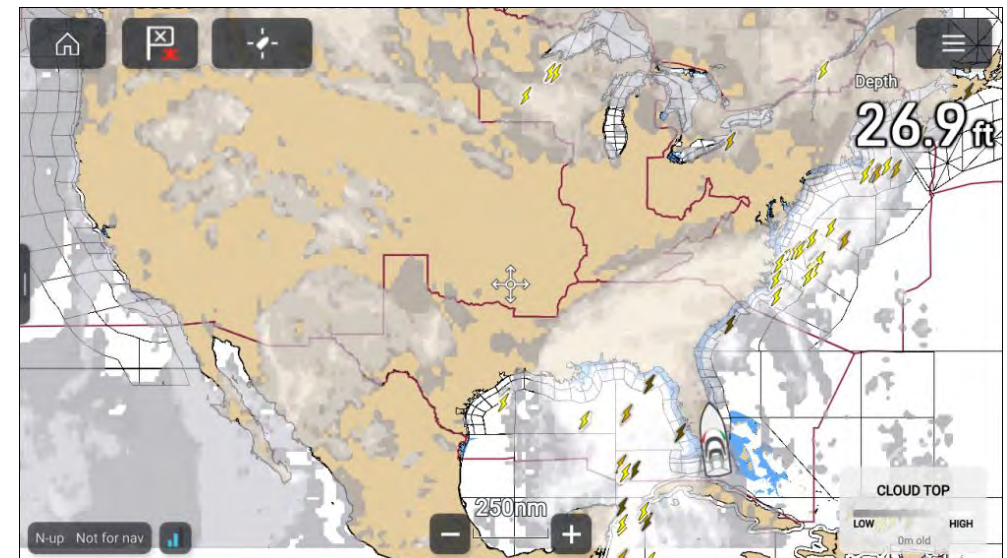

Cloud tops




Cloud tops use Gray shading to identify cloud top height. The shading changes at 5,000 feet increments, from Dark Gray to White. Clouds lower than 5,000 feet are not displayed. A legend is available that can be displayed onscreen to aid identification of cloud top heights.

The legend can be enabled from the main menu: **Menu > Show legend**.

The cloud tops layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Cloud tops**.

Lightning

The shade of the lightning symbols represent the time the lightning strike was detected.


| | | |
|---|---|---|
|  |  |  |
| 0 to 5 minutes ago | 5 to 10 minutes ago | 10 to 15 minutes ago |

The lightning layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Lightning**.

16.9 Sea surface temperature and Surface pressure layers

The Sea surface temperature layer uses color coding to identify water temperature. A legend is available that can be displayed onscreen to aid identification of sea surface temperature. The Surface pressure layer uses standard pressure patterns and isobars to identify surface pressure.

The legend can be enabled from the main menu: **Menu > Show legend**.

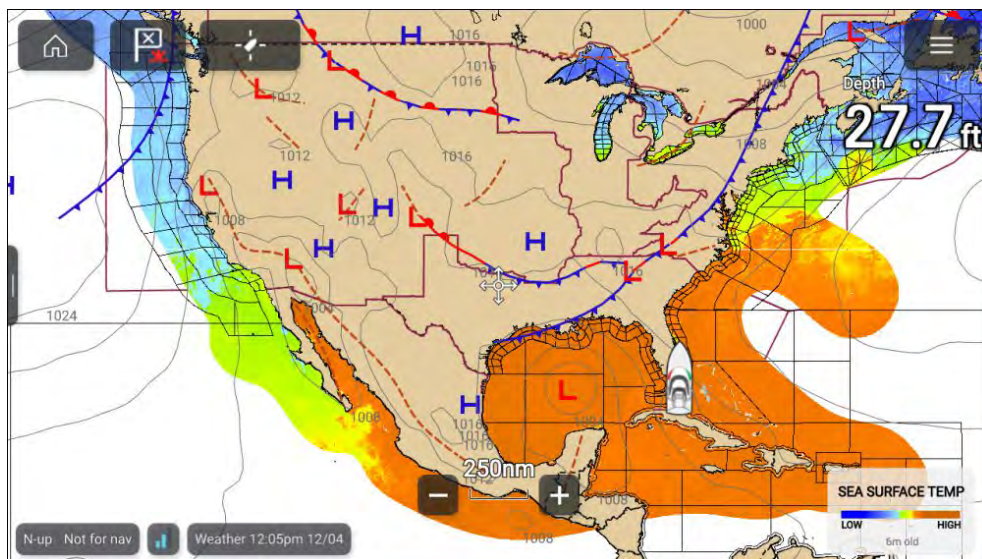






The sea surface temperature layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Sea surface temperature**.




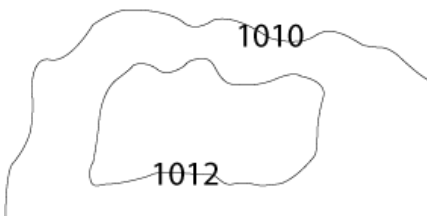
When the sea surface temperature layer is enabled the transparency of the layer can be adjusted using the **Visibility** setting: **Menu > Weather layers > Sea surface temperature > Visibility**.

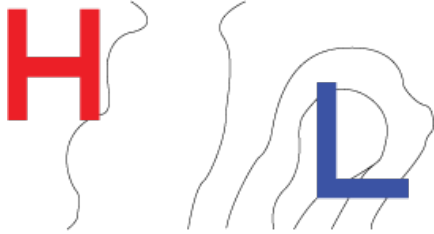The Surface pressure layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Surface pressure**.

Surface pressure patterns


The Surface pressure layer uses standard meteorological patterns to represent surface pressure conditions.

| Symbol | Description |
|---|------------------------------------|
|  | High / low pressure (Blue and Red) |
|  | Warm front (Red) |
|  | Cold front (Blue) |
|  | Occluded front (Purple) |
|  | Stationary front (Red-Blue) |

| Symbol | Description |
|---|-------------------|
|  | Trough (Brown) |
|  | Squall line (Red) |
|  | Dry line (Red) |
|  | Isobars (Gray) |


16.10 Storm cast and Storm tracks layers

The storm cast layer displays arrows that identifies a storm's direction and speed. The storm tracks layer identifies a storm's historic, current and forecasted path. Associated wind fields are also shown for the storm's current location.

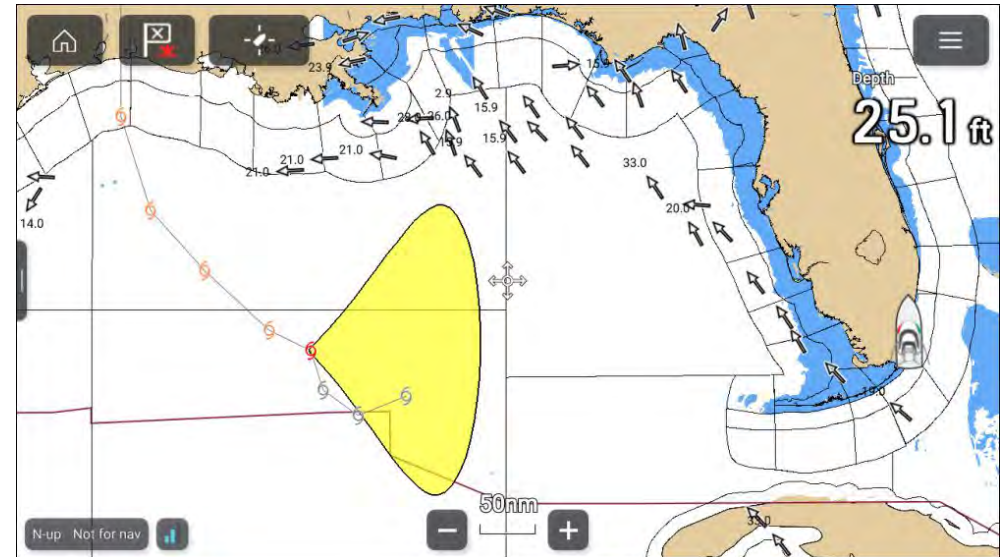

Storm track symbols

Storm track symbols identify the type and time period of the storm.

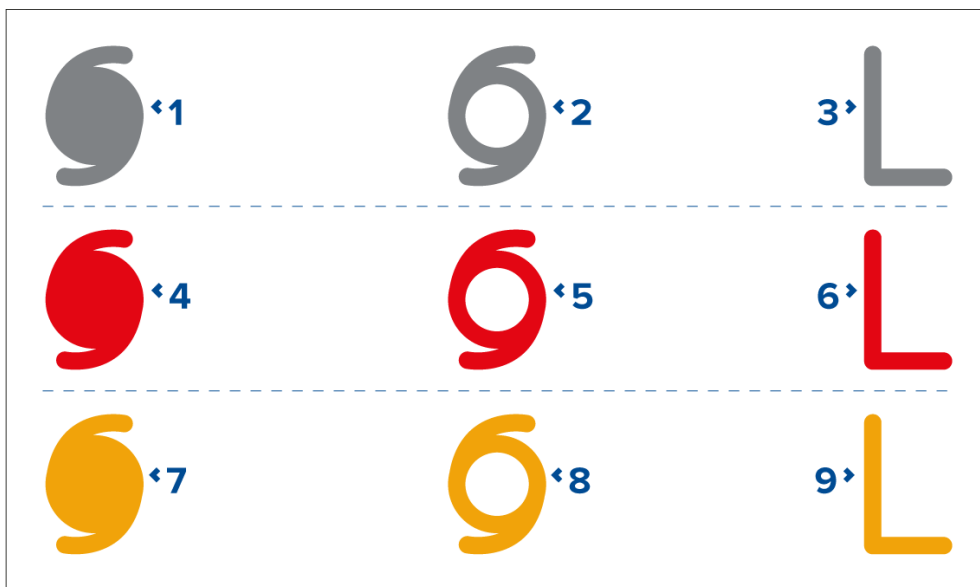

- **1, 2** and **3** represent historical data.
- **4, 5** and **6** represent current data.
- **7, 8** and **9** represent forecast data.
- **1, 4** and **7** represent a hurricane (category 1 to 5).
- **2, 5** and **8** represent a tropical storm.
- **3, 6** and **9** represent a tropical disturbance, tropical depression.

Storm data is available from the context menu when a symbol is selected.

Surface wind fields (wind radii) are shown using colored shape representing the wind field area and speed.


- **Pink** — wind speed = 64 knots or greater.
- **Orange** — wind speed = 50 knots or greater.
- **Yellow** — wind speed = 34 knots or greater.

The storm cast layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Storm cast**.

The storm tracks layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Storm tracks**.

16.11 Wind and Watchbox layers

The wind layer uses arrows or barbs to identify wind direction and speed. The watchbox layer uses red polygons to identify areas where severe weather is occurring or forecast within a specified range.

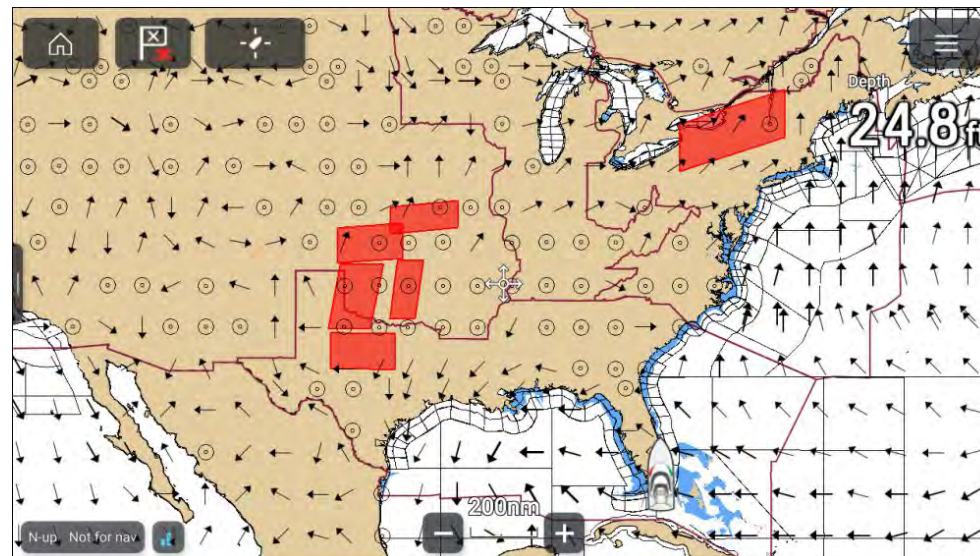


Wind arrows

The direction of the arrows indicates the wind direction and the size of the arrow indicates wind speed, the larger the arrow the greater the wind speed. Where conditions are calm a circular symbol is used.

Wind barbs

Wind barbs identify wind direction and speed.

Barbs provide a more accurate speed identification than arrows.

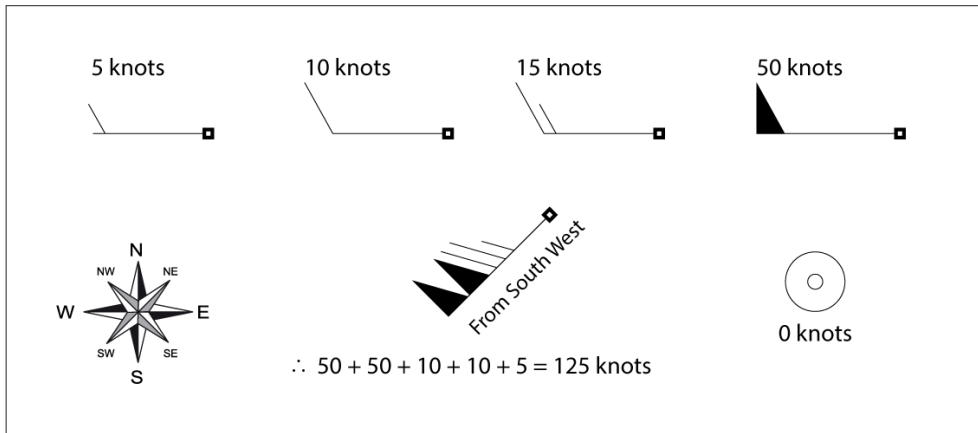

Adding the half barbs, full barbs and flags together provides wind speed. The direction the barbs point towards indicates where the wind is coming from.

- Half barbs = 5 knots
- Full barbs = 10 knots
- Flag = 50 knots

The wind layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Wind**.

You can switch between using **Arrows** or **Barbs** for wind data from the **Weather settings** menu: **Menu > Settings > Weather > Wind symbol**.

Watchbox

The watchbox layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Watchbox**.

When the watchbox layer is enabled you can select a watchbox area onscreen and view the details by selecting **Watchbox data** from the context menu.

Watchbox alerts

Watchbox alerts are alert notifications that are displayed onscreen if a tornado or thunderstorm alert is received. Watchbox alerts can be enabled and disabled from the **Weather settings** menu: **Menu > Settings > Weather > Watchbox alerts**.


You can specify the range from your vessel that will trigger an alerts using the Watchbox range setting: **Menu > Settings > Weather > Watchbox range**.

16.12 Wave direction, wave height and wave period layers

The wave direction layer uses arrows to identify the direction waves are travelling. The wave height layer uses color coding to identify the height of waves, the wave period layer also uses color coding to identify the gap between waves. A legend is available that can be displayed onscreen to aid identification of wave height and wave period.

The legend can be enabled from the main menu: **Menu > Show legend**.


Wave direction and wave height

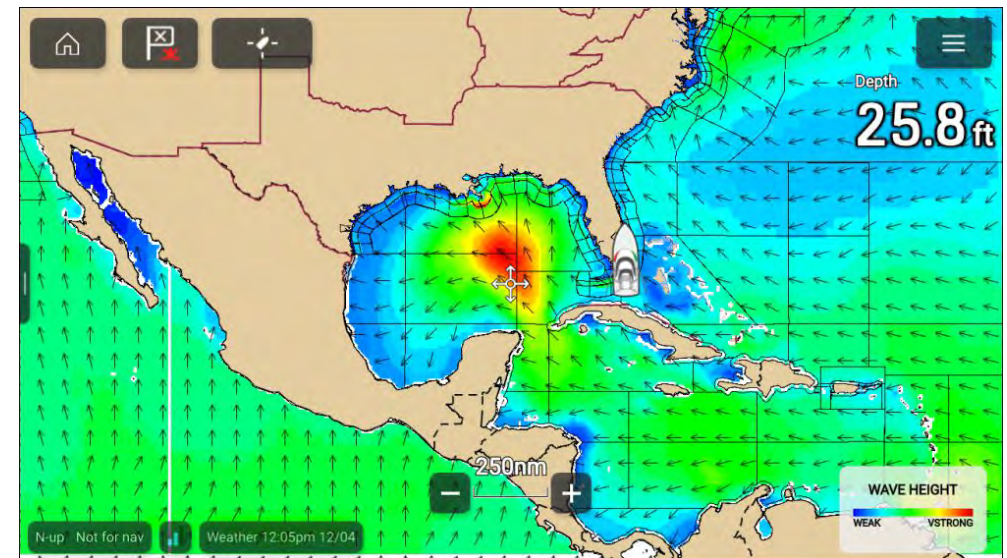

The wave direction layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Wave direction**.

The wave height layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Wave height**.

Wave period

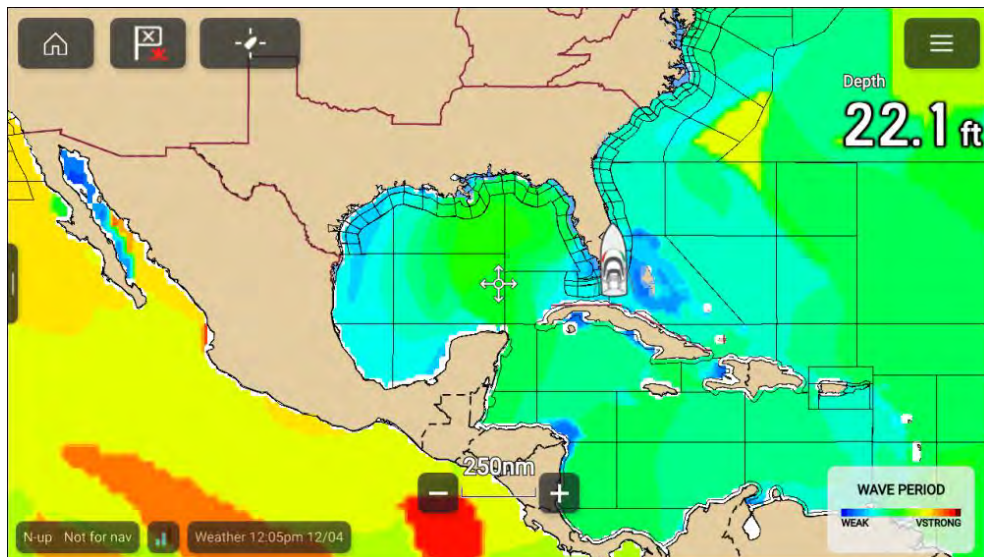

The wave period layer can be enabled and disabled from the **Weather layers** menu: **Menu > Weather layers > Wave period**.

16.13 Weather mode settings menus

The following settings menus are available in weather mode:

- **Cartography** — For details refer to: [p.168 — Cartography settings menu](#)
- **Weather** — For details refer to: [p.211 — Weather settings menu](#)
- **Subscription** — For details refer to: [p.211 — Weather subscription](#)
- **Advanced** — For details refer to: [p.174 — Advanced settings menu](#)
- **Page settings** — For details refer to: [p.175 — Page settings menu](#)

16.14 Weather settings menu

The weather setting menu contains setting related to SiriusXM weather receiver data.

| Menu item and description | Description |
|--|---|
| Wind symbol Determines whether Arrows or Barbs are used for Wind direction graphics in Weather mode. | <ul style="list-style-type: none"> • Arrows • Barbs |
| Marine zone boundaries Determines whether marine boundaries are shown in Weather mode. | <ul style="list-style-type: none"> • On • Off |
| Watchbox alerts Enables and disables Watchbox alerts. | <ul style="list-style-type: none"> • On • Off |
| Watchbox range Determines the range from your vessel that Watchbox alerts are displayed | <ul style="list-style-type: none"> • 10nm • 50nm • 150nm • 300nm • 500nm |

16.15 Weather subscription

You can check your Sirius subscription status and data receipt from the **Subscription** settings menu: **Menu > Settings > Subscription**.

| Data Type | Updated | Received | Receiver ESN: Simulator |
|--|---------------|------------------|------------------------------|
| High Res Forecast Winds Direction (14) | 06/20 12:00pm | 01/21/2013 09:12 | Signal strength: [Bar Chart] |
| High Res Forecast Winds Magitude (13) | 06/20 12:00pm | 01/21/2013 09:12 | Weather: Subscribed |
| Lightning (34) | 06/20 12:55pm | 4 mins ago | |
| Low Res Forecast Winds Direction (12) | 06/20 06:00am | 01/21/2013 09:10 | |

The subscription settings menu will list the data types that have been received and provide the date and time it was received and last updated.

You can also check your subscription status, your receiver's ESN and your receiver's signal strength.

16.16 Glossary of weather terms

| Term | Definition |
|---------------|---|
| Cold front | The boundary between two different air masses where cold air pushes warm air out of the way and brings colder weather. |
| Cyclone | A large area of low atmospheric pressure, characterized by inward spiralling winds. A “low” also called a “depression”. Also the name used for a hurricane in the Indian Ocean and Western Pacific. |
| Depression | An area of low pressure. Also called a cyclone. |
| Dry line | A region where there is a strong gradient in dew point temperatures. It is often found in a region where strong thunderstorms develop. |
| Forecast | Something that tells us what the weather is probably going to be like. |
| Front | The boundary between two masses of air with different temperatures (i.e. a mass of cold air and a mass of warm air). |
| High | Also known as an 'anticyclone' an area of high atmospheric pressure with a system of winds rotating outwards. This usually means dry weather. It is the opposite of a 'low'. |
| High Pressure | A mass of air that presses down strongly on the surface of the Earth because it is being cooled and is therefore more dense. |
| Hurricane | <p>A violent, spiralling storm that forms over the Atlantic Ocean, with winds over 120 kph. Such storms usually have a lifespan of several days. Also known as a typhoon or tropical cyclone. There are 5 levels of hurricane:</p> <ul style="list-style-type: none"> • Category 1— Winds 74–95 mph (64–82 kt or 119–153 km/hr). Storm surge generally 4–5 ft above normal. No real damage to building structures. Damage primarily to unanchored mobile homes, shrubbery, and trees. Some damage to poorly constructed signs. Also, some coastal road flooding and minor pier damage. • Category 2 — Winds 96–110 mph (83–95 kt or 154–177 km/hr). Storm surge generally 6–8 feet above normal. Some roofing material, door, and window damage of buildings. Considerable damage to shrubbery and trees with some trees blown down. Considerable damage to mobile homes, poorly constructed signs, and piers. Coastal and low lying escape routes flood 2–4 hours before arrival of the hurricane centre Small craft in unprotected anchorages break moorings. • Category 3 — Winds 111–130 mph (96–113 kt or 178–209 km/hr). Storm surge generally 9–12 ft above normal. Some structural damage to small residences and utility buildings with a minor amount of curtain wall failures. Damage to shrubbery and trees with foliage blown off trees and large trees blown down. Mobile homes and poorly constructed signs are destroyed. Low lying escape routes are cut by rising water 3–5 hours before arrival of the centre of the hurricane. Flooding near the coast destroys smaller structures with larger structures damaged by battering from floating debris. Terrain continuously lower than 5 ft above mean sea level may be flooded inland 8 miles (13 km) or more. Evacuation of low lying residences with several blocks of the shoreline may be required. • Category 4 — Winds 131–155 mph (114–135 kt or 210–249 km/hr). Storm surge generally 13–18 ft above normal. More extensive curtain wall failures with some complete roof structure failures on small residences. Shrubs, trees, and all signs are blown down. Complete destruction of mobile homes. Extensive damage to doors and windows. Low lying escape routes may be cut by rising water 3–5 hours before arrival of the centre of the hurricane. Major damage to lower floors of structures near the shore. Terrain lower than 10 ft above sea level may be flooded requiring massive evacuation of residential areas as far inland as 6 miles (10 km). • Category 5 — Winds greater than 155 mph (135 kt or 249 km/hr). Storm surge generally greater than 18 ft above normal. Complete roof failure on many residences and industrial buildings. Some complete building failures with small utility buildings blown over or |

| Term | Definition |
|---------------------|--|
| | away. All shrubs, trees, and signs blown down. Complete destruction of mobile homes. Severe and extensive window and door damage. Low lying escape routes are cut by rising water 3–5 hours before arrival of the centre of the hurricane. Major damage to lower floors of all structures located less than 15 ft above sea level and within 500 yards of the shoreline. Massive evacuation of residential areas on low ground within 5–10 miles (8–16 km) of the shoreline may be required. |
| Isobar | A line on a weather map linking areas with equal air pressure. |
| Lightning | Discharge of static electricity in the atmosphere, usually between the ground and a storm cloud. |
| Low | Also called a 'depression' this region of low pressure can mean wet weather. |
| Low Pressure | A mass of air that presses down only weakly on the surface of the Earth's surface as it is warmed and it therefore less dense. |
| Millibar | A unit used to measure atmospheric pressure. |
| Occluded Front | An area where warm air is pushed upwards as a cold front overtakes a warm front and pushes underneath it. |
| Precipitation | Moisture that is released from the atmosphere as rain, drizzle, hail, sleet or snow, as well as dew and fog. |
| Pressure Centre | A region of high or low pressure. |
| Squall line | A non-frontal band, or line, of thunderstorms. |
| Super typhoon | A typhoon that reaches maximum sustained 1 minute surface winds of at least 65 m/s (130 kt, 150 mph). This is the equivalent of a strong category 4 or 5 hurricane in the Atlantic basin or a category 5 severe tropical cyclone in the Australian basin. |
| Tornado | A funnel shaped whirlwind which extends to the ground from storm clouds. |
| Tropical cyclone | A low pressure system that generally forms in the tropics. The cyclone is accompanied by thunderstorms and, in the Northern Hemisphere, a counterclockwise circulation of winds near the earth's surface. |
| Tropical depression | An organized system of clouds and thunderstorms with a defined surface circulation and maximum sustained winds of 38 mph (33 kt) or less. |
| Tropical storm | An organized system of strong thunderstorms with a defined surface circulation and maximum sustained winds of 39–73 mph (34–63 kt). |
| Tropics | An area on the Earth's surface that lies between 30° north and 30° south of the equator. |
| Trough | An elongated area of relatively low atmospheric pressure, usually extending from the centre of a low pressure region. |
| Typhoon | The name for a tropical storm originating in the Pacific Ocean, usually the China Sea. They are basically the same as the hurricanes of the Atlantic Ocean and the cyclones of the Bay of Bengal. |
| Wave cyclone | A storm or low pressure centre that moves along a front. |
| Wave period | The period is the time gap between successive waves and the longer the period the faster the waves travel. |

CHAPTER 17: CHART APP - TIDES MODE

CHAPTER CONTENTS


- 17.1 Tides mode — page 216
- 17.2 Tides mode main menu — page 216
- 17.3 Using animation controls — page 217
- 17.4 Setting a specific date for animations — page 217
- 17.5 Tide station information — page 217
- 17.6 LightHouse charts dynamic tide graphic — page 218
- 17.7 Navionics dynamic tide graphic — page 218
- 17.8 Current station information — page 218
- 17.9 LightHouse Charts dynamic current graphic — page 219
- 17.10 C-Map dynamic current graphic — page 219
- 17.11 Navionics dynamic current graphic — page 219
- 17.12 Displaying tide or current graphs — page 220
- 17.13 Tides mode settings menus — page 220

17.1 Tides mode

In Tides mode the Tides animation control is displayed onscreen and the Tide station and Current station symbols in the Chart app are replaced with dynamic graphics which identify Tide and Current conditions. You can use the animation controls to play Tide and Current predictions for a 24 hour period. The own vessel Tide vector is also enabled in Tides mode.

Note:

- The Tides mode is only available if you have cartography that provides the Tides and Current data. Refer to your cartography provider for more information.
- The Tides mode requires accurate date information, usually taken from the GNSS (GPS) position data available to your MFD. Alternatively, you can input a specific date manually.

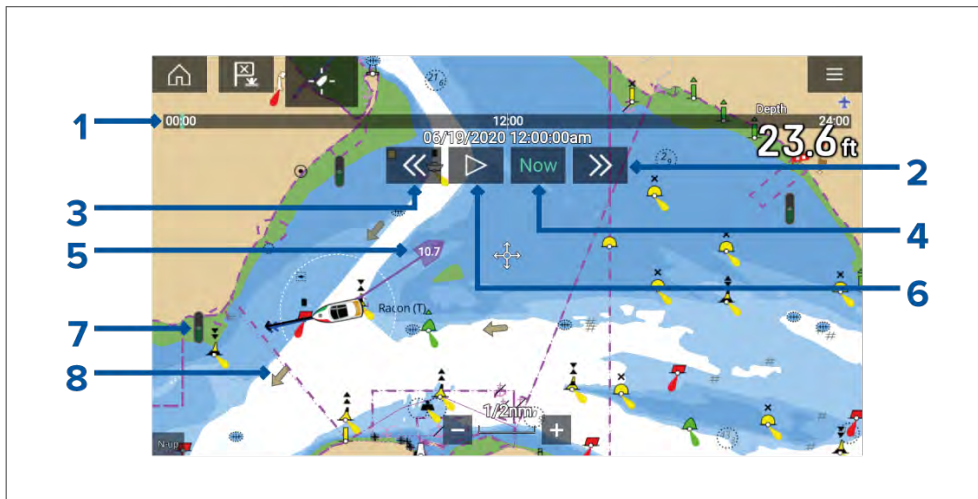

1. Animation progress bar — The progress bar is Blue for the current 24 hour period, or Green when playing animations from a different day.
2. Skip forwards — Skips forwards in user defined intervals, when the end of the progress bar is reached skipping forward will progress to the next day.
3. Skip backwards — Skips backwards in user defined intervals. When the beginning of the progress bar is reached, skipping backward will regress to the previous day.

4. Skip to the actual date / time — Position data is required from your GNSS (GPS) receiver to obtain current date and time.
5. Own vessel tide (Set and Drift) vector.
6. Play / Pause animation — When the animation is playing it will cycle through the current 24 hour period continuously.
7. Dynamic tide height graphic.
8. Dynamic current graphic.

Note:

The data provided in the Tide and Current graphs and graphics is for information purposes only and must NOT be relied upon as a substitute for prudent navigation. Only official government charts and notices to mariners contain all the information needed for safe navigation.

17.2 Tides mode main menu

The Tides mode menu contains items related to tides animation. Active navigation and target tracking menus such as **Targets**, **Go** and **New** are not available.

The following options are available from the main menu:

- **Find ship** — The find ship icon will be available in the main menu and as an onscreen icon anytime that your vessel is not centred in the chart app.
- **Mode** — Chart app mode can be changed at anytime by selecting a mode. For details of available chart modes refer to: [p.129 — Chart modes](#)
- **Animate tides** — For details refer to: [p.217 — Using animation controls](#)
- **Select date** — For details refer to: [p.217 — Setting a specific date for animations](#)
- **Settings** — Provides access the chart app settings menu. For details refer to: [p.220 — Tides mode settings menus](#)

17.3 Using animation controls

The animation controls can be selected using the Touchscreen, alternatively you can use the MFD's physical buttons or a RMK controller to control animations as described below:

With the Chart app set to **Tides mode**.

1. Select **Animate tides** from the menu.
2. Use the **Left** button on the Uni-controller to skip forwards in user defined intervals.
3. Use the **Right** button on the Uni-controller to skip backwards in user defined intervals.
4. Use the Uni-controller's **OK** button to Play or Pause the animation.

You can define the User skip time interval from the Advanced menu: **Menu > Settings > Advanced > Tide animation interval**.

17.4 Setting a specific date for animations

You can select a specific date for the Tide and Current animation predictions.


1. Select **Select date** from the main menu.
2. Use the **Up** and **Down** arrows to change the date to the required day.
3. Select **Save**.

The animation will be set for the specified date.

17.5 Tide station information

When using compatible cartography, Tide station information is available at the location of Tide stations.


Tide station symbol

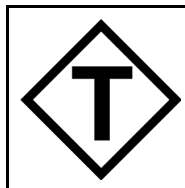

The location of Tide stations is marked on the Chart using a diamond-shaped symbol with a 'T' in the middle. The symbol color may vary.

Tide graph

Tide graphs can be accessed by selecting **Tide station** from the Tide station's context menu.

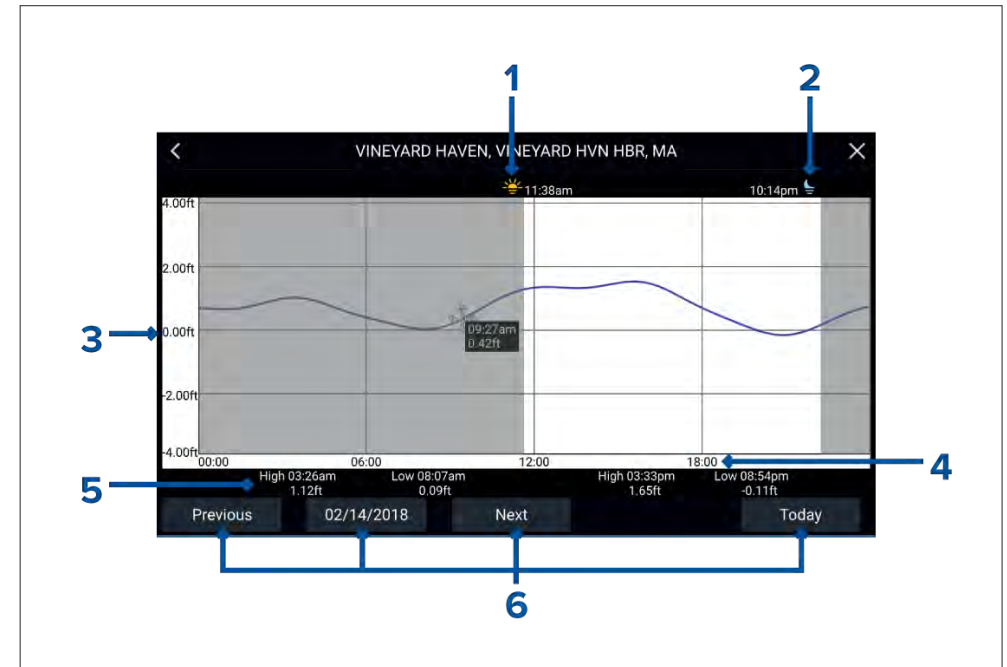

1. **Sunrise** — Indicates time of sunrise.
2. **Sunset** — Indicates time of sunset.
3. **Height** — Provides tide height in selected units.
4. **Time** — Indicates time of day.
5. **Low / High tide** — Indicates the time of low and high tides.
6. **Time and date options** — Use the buttons to view previous, next or today's tide predictions, or enter a date by selecting the date field.

17.6 LightHouse charts dynamic tide graphic


When the Tides layer is enabled or when the Chart app is in **Tides mode**, the standard Tide station symbol is replaced with a dynamic Tide height graphic:



1. High tide (Full Green indicator with equals symbol)
2. Decreasing tide (Red decreasing indicator with down arrow)
3. Low tide (Nearly empty Green indicator with equals symbol)
4. Increasing tide (Green indicator with up arrow)

17.7 Navionics dynamic tide graphic

When the Tides layer is enabled or when the Chart app is in **Tides mode**, the standard Tide station symbol is replaced with a dynamic Tide height graphic:

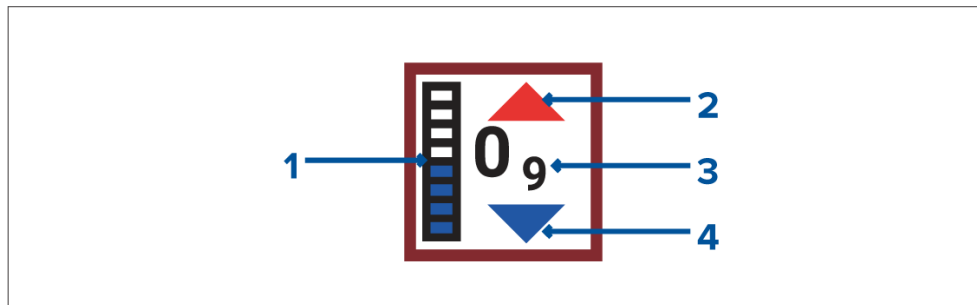


1. Tide bar — The tide bar plots the current tide height against the maximum predicted tide height for that day.
2. Red arrow indicates tide height is increasing.
3. Tide height — Tide height is displayed in user-selected depth units, with decimals displayed in subscript. Decimals are not shown for values of 10 or greater.
4. Blue arrow indicates tide height is decreasing.

17.8 Current station information


Depending on your cartography, Current station information may be available at the location of Current stations.

Current station symbol

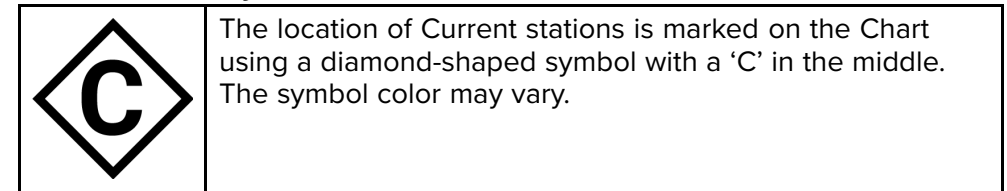

Current graph

Current graphs can be accessed by selecting **Current station** from the Current station's context menu.

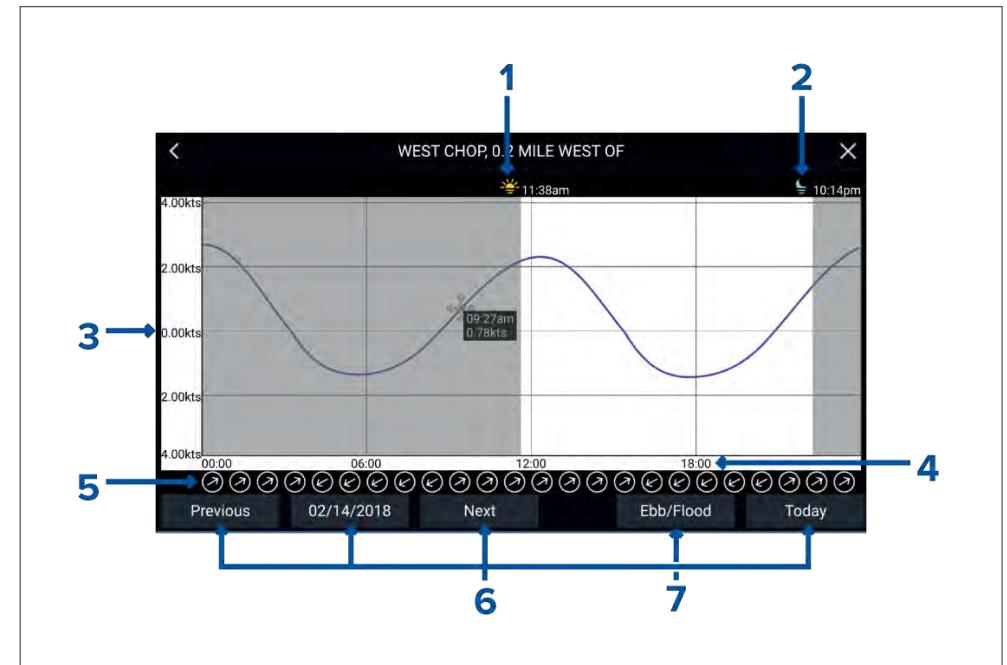


1. **Sunrise** — Indicates time of sunrise.
2. **Sunset** — Indicates time of sunset.
3. **Speed** — Provides current speed in selected units.
4. **Time** — Indicates time of day.

5. **Direction** — Indicates the direction of the current (relative to North).
6. **Time and date options** — Use the buttons to view previous, next or today's tide predictions, or enter a date by selecting the date field.
7. **Ebb / Flood** — Displays a list showing ebb, slack and flood tides.

17.9 LightHouse Charts dynamic current graphic


When the Tides layer is enabled or when the Chart app is in **Tides mode**, the standard Current station symbol is replaced with a dynamic Current graphic. Arrows are used to indicate the direction of current flow. The size and color of the arrow indicates the strength of the current:

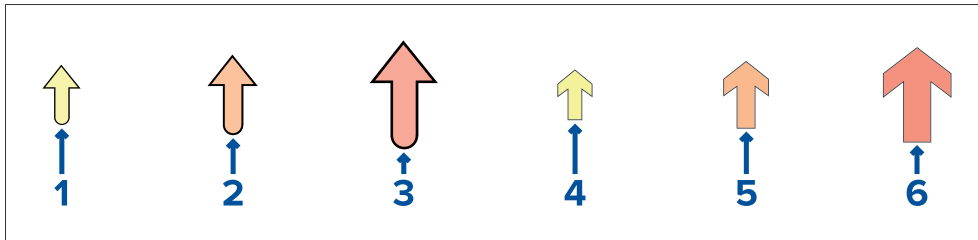

1. Yellow small arrow: 0 Knots to 1.0 Knots (Leisure chart style)
2. Orange medium arrow: 1.1 Knots to 2.0 Knots (Leisure chart style)
3. Red large arrow: Greater than 2.0 Knots (Leisure chart style)
4. Yellow small arrow: 0 Knots to 1.0 Knots (Government chart style)
5. Orange medium arrow: 1.1 Knots to 2.0 Knots (Government chart style)
6. Red large arrow: Greater than 2.0 Knots (Government chart style)

17.10 C-Map dynamic current graphic

When the Tides layer is enabled or when the Chart app is in **Tides mode**, the standard Current station symbol is replaced with a dynamic Current graphic. Arrows are used to indicate the direction of current flow. The size and color of the arrow indicates the strength of the current:

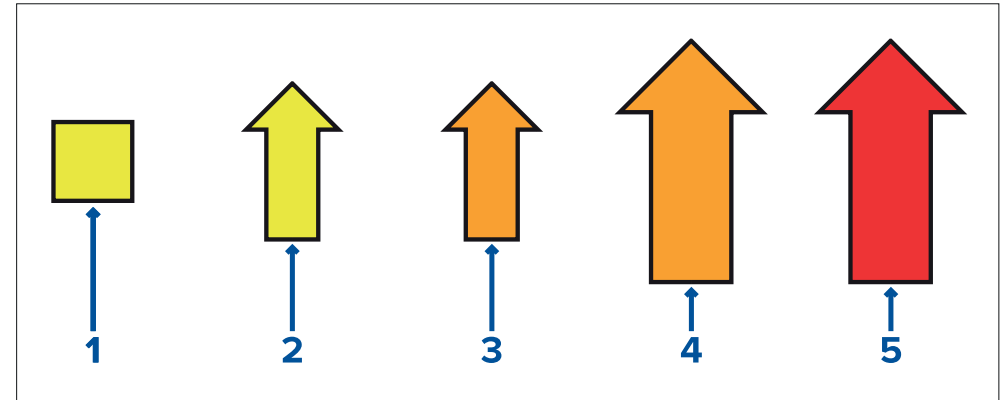


1. Yellow square: 0 Knots to 0.1 Knots
2. Yellow small arrow: 0.2 Knots to 1.0 Knots
3. Orange small arrow: 1.1 Knots to 2.0 Knots
4. Orange large arrow: 2.1 Knots to 3.0 Knots
5. Red large arrow: Greater than 3.0 Knots

17.11 Navionics dynamic current graphic

When the Tides layer is enabled or when the Chart app is in **Tides mode**, the standard Current station symbol is replaced with a dynamic Current graphic. Arrows are used to indicate the direction of current flow.

The length of the arrow indicates the speed of the current; the longer the arrow, the faster the speed. The border color of the arrow indicates increasing or decreasing speed.

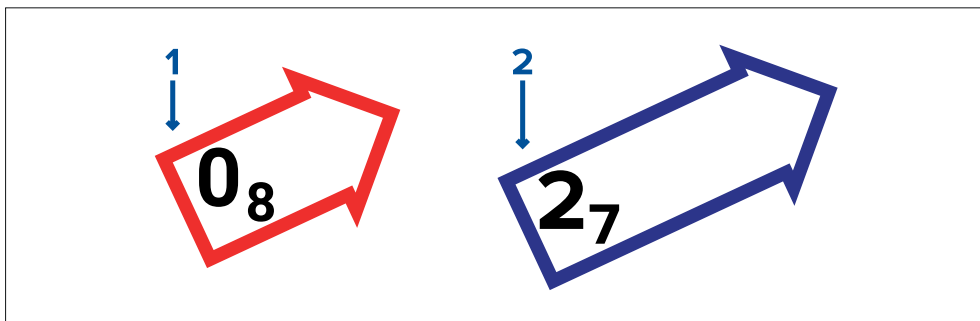

1. **Red** = increasing current speed.
2. **Blue** = decreasing current speed.

Current speed is shown inside the arrow. Current speed is displayed in user-selected speed units, with decimals displayed in subscript. Decimals are not shown for values of 10 or greater.

If tidal conditions are “slack”, the word “SLACK” appears in a box with a Blue border.

17.12 Displaying tide or current graphs

1. Select a tide or current station symbol or dynamic graphic.
2. Select **more options** from the context menu.
3. Select **Tide station** or **Current station**

Note:

You can also access tide and current graphs by selecting **More info** from the pop-over options when performing a **Find nearest** search for tides.

17.13 Tides mode settings menus

The following settings menus are available in tides mode:

- **Cartography** — For details refer to: [p.168 — Cartography settings menu](#)
- **Advanced** — For details refer to: [p.174 — Advanced settings menu](#)
- **Page settings** — For details refer to: [p.175 — Page settings menu](#)

CHAPTER 18: FISHFINDER APP


CHAPTER CONTENTS

- 18.1 Sonar technologies — page 222
- 18.2 Sonar module range — page 226
- 18.3 Fishfinder app overview — page 226
- 18.4 Opening the Fishfinder app — page 228
- 18.5 Sonar transducer calibration — page 230
- 18.6 Sonar channels — page 231
- 18.7 Placing a Waypoint (Sonar, DownVision and SideVision) — page 232
- 18.8 Fish detection — page 233
- 18.9 Sonar scroll back — page 233
- 18.10 Sonar sensitivity controls — page 234
- 18.11 Fishfinder settings menu — page 235

18.1 Sonar technologies

Traditional sonar technology


Traditional sonar uses a single carrier frequency or carrier wave for the sonar ping. The sonar works by measuring the time it takes the ping echo to return to the transducer to determine target depth.

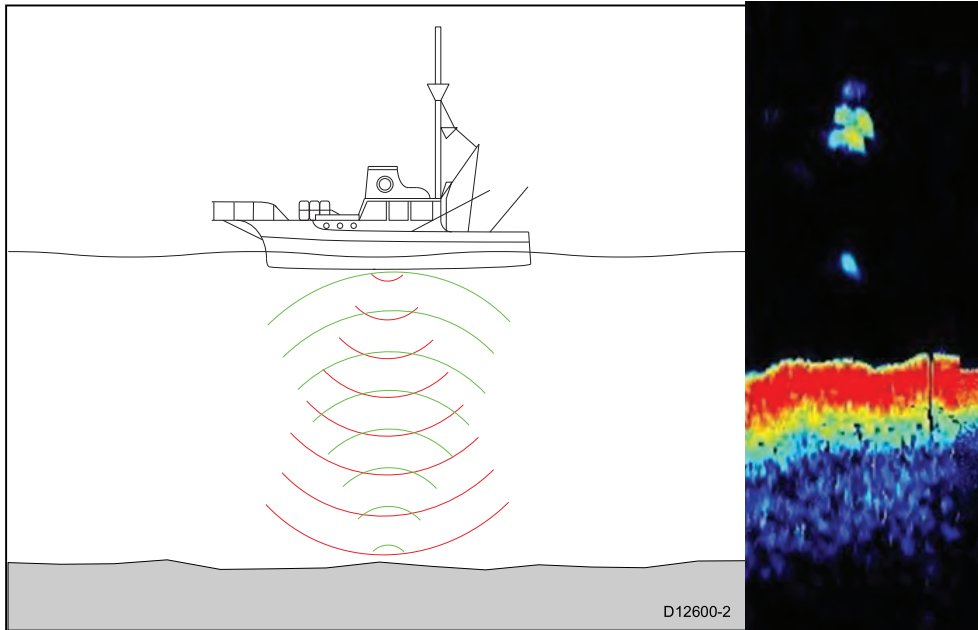

CHIRP technology

CHIRP sonars use a swept frequency 'CHIRP' signal which can distinguish between multiple close targets, this enables the sonar to display multiple targets instead of large combined targets that you would see when using traditional non-CHIRP sonar.


Benefits of CHIRP include improvements to target resolution, bottom detection even through bait balls and thermoclines and detection sensitivity.

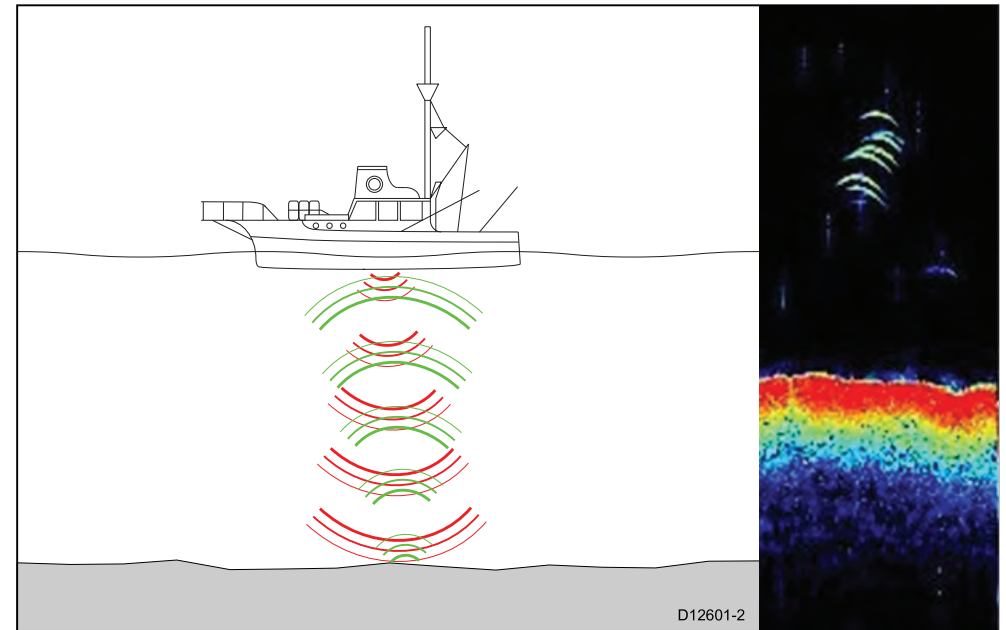

CHIRP Sonar overview


CHIRP sonar produces a conical shaped beam, the coverage of the conical beam is the water column directly beneath the vessel

Conical beam

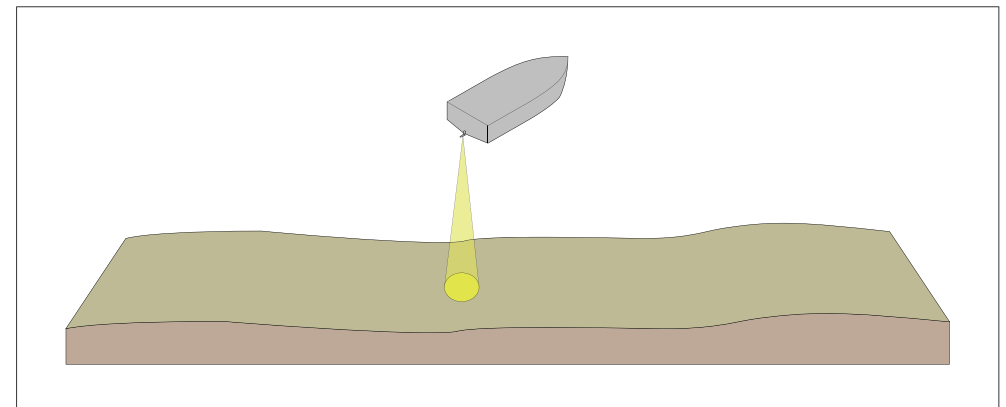

Sonar is effective at a range of speeds. In deeper waters the CHIRP bandwidth is automatically optimized to improve bottom lock and the detection of moving objects (e.g. fish) in the wider water column.


CHIRP sonar screen example

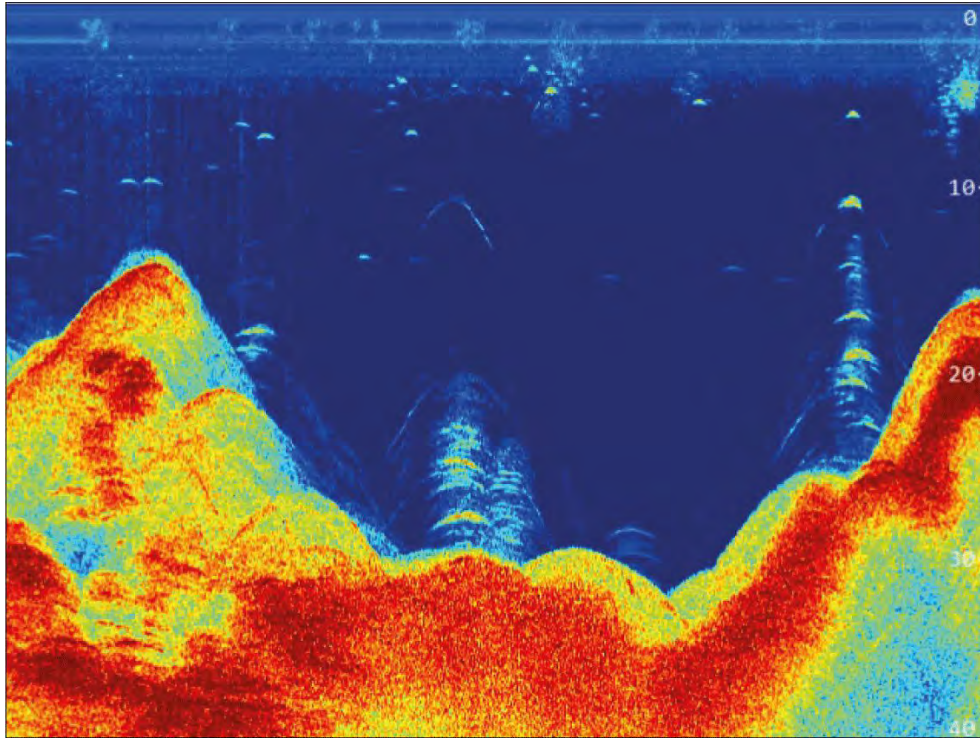

CHIRP DownVision™ overview

DownVision™ produces a wide-angle side-to-side beam and a thin fore-to-aft beam. The coverage of the **DownVision™** beam is a water column directly beneath and to the sides of the vessel.


DownVision™ beam

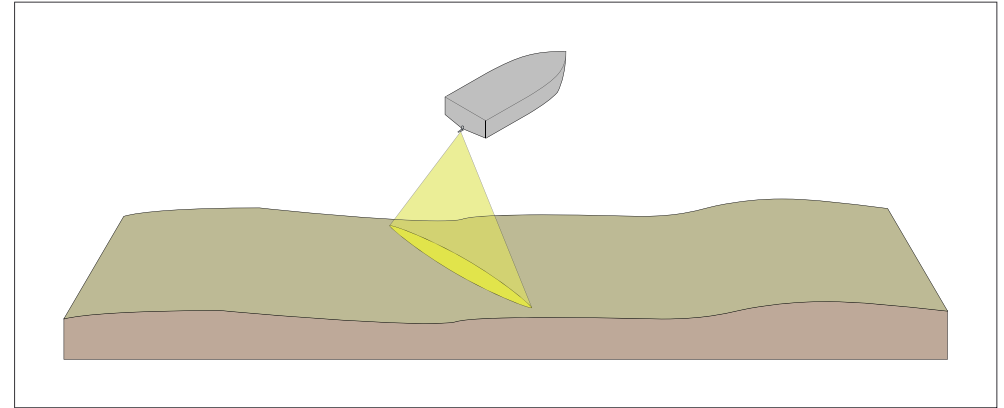

DownVision™ is effective at lower vessel speeds. In deeper waters the CHIRP bandwidth is automatically optimized to improve bottom lock and the detection of moving objects (e.g. fish) in the wider water column.

The wide, thin beam produces clear target returns. The use of CHIRP processing and a higher operating frequency provide a more detailed image, making it easier to identify bottom structures around which fish may reside.


CHIRP DownVision™ screen example

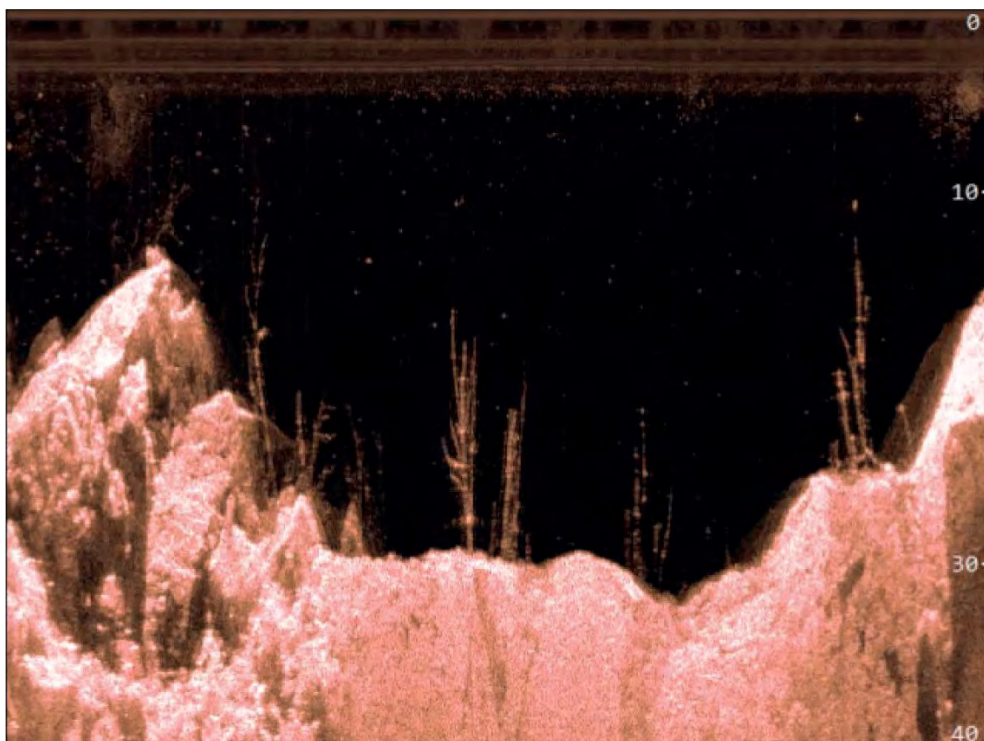

SideVision™ overview

SideVision™ transducers are side looking transducers that produce 2 wide-angle side-to-side beams, each with a thin fore-to-aft beam to build up a detailed underwater view as your vessel moves forward.. The coverage of the SideVision™ beams is an area to both side of your vessel.

SideVision™ beams

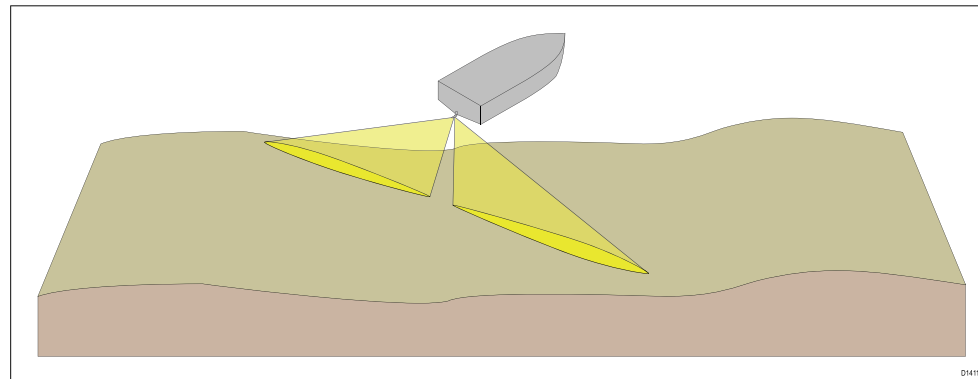


The transducers send pulses of sound waves into the water on each side of your vessel, and records the sound waves that are reflected off objects suspended in the water column and the bottom,, known as sonar returns. The sonar image is constructed line-by-line, similar to the way a television picture is composed of many horizontal lines. Each successive ping from the transducer adds a new line of image data to the top of your display. Each new line shows sonar returns from both the port and starboard sides of your vessel. As new lines are added with each successive ping, older data gradually scrolls down the display, building up a detailed image of the water column and bottom to the sides of your vessel. If your vessel maintains the same bearing and speed for a period of time, you can interpret the image as a plan of the bottom along your vessel's course. SideVision™ is effective at lower vessel speeds.

Note:

SideVision™ does not provide direct depth readings. The scale shown across the top of the image indicates the distance of features from your vessel.

SideVision™ screen interpretation

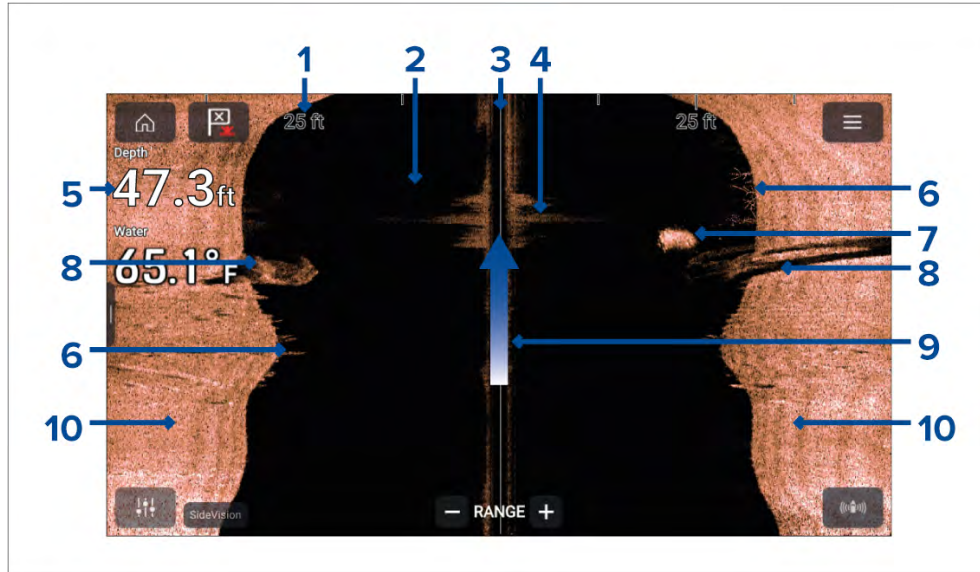

1. **Range scale** — The range scale indicates distance (range) to port and starboard from your vessel.
2. **Water** — Using the default color palette black indicates no sonar returns i.e.: clear water.
3. **Centerline** — The solid line represents the centerline of your vessel. left of the centerline represents the water, objects and bottom to the port side of your vessel, right of the centerline represents the starboard side.
4. **Turbulent water** — turbulence in the water caused by such things as vessel wake can produce a sonar return due to the aeration in the water.
5. **Water depth** — When using a separate depth transducer current depth can be displayed in a data overlay.
6. **Vegetation** — Examples of vegetation growth (e.g: trees) on the bottom.
7. **Bait ball** — Example of a bait ball at an approximate distance of 18.5 ft from your vessel.
8. **Structure** — Example of bottom structure. Underwater structures such as pipelines, piers and other large solid structures may cause an area of shadow directed away from your vessel's direction.
9. **Vessel direction** — Vessel direction of travel. The sonar image will scroll from top to bottom as your vessel moves.


10. **Bottom** — Solid mass indicating the bottom, using the default color palette the bottom is colored copper. It may be possible to identify the transition of bottom material (e.g.: where an area of mud meets an area of gravel).

CHIRP RealVision™ 3D overview

CHIRP **RealVision™ 3D** transducers combine CHIRP DownVision™, CHIRP SideVision™, high frequency CHIRP Sonar, and RealVision™ 3D to deliver life-like 3D sonar imagery.

RealVision™ 3D provides a true, easy-to-understand view of bottom topography, debris, and fish.

CHIRP RealVision™ 3D screen example

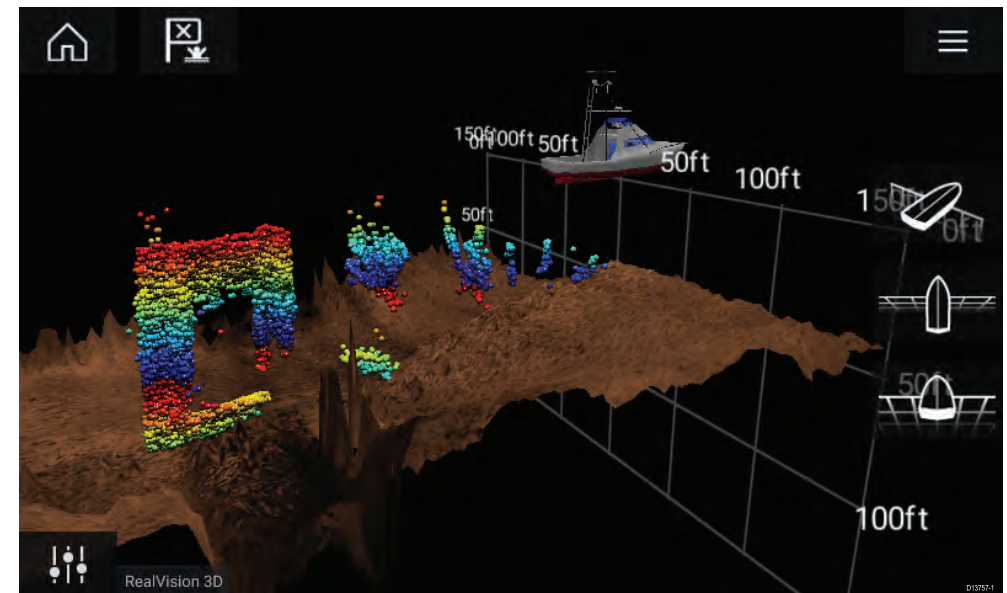

Note: The “Depth” figure shown in the illustration above assumes that you have a device in your system that provides depth data. Please be aware that not all transducers and / or sonar modules support depth sensing. For more information, refer to the latest specifications and documentation available for your particular products on the Raymarine website (www.raymarine.com).

18.2 Sonar module range

Range capabilities of Raymarine sonar modules / channels are shown below.

Note:

Stated ranges are for optimum conditions and are dependent upon connected transducer.


| Sonar module / sonar channel | Minimum range | Maximum range |
|---|------------------------|-------------------------|
| RealVision™ 3D | 0.6 m (2 ft) | 91 m (300 ft) |
| SideVision™ | 0.6 m (2 ft) each side | 91 m (300 ft) each side |
| DownVision™ | 0.6 m (2 ft) | 183 m (600 ft) |
| CHIRP sonar channel (when using RealVision™ 3D, SideVision™ or DownVision™ transducers) | 0.6 m (2 ft) | 274 m (900 ft) |
| Traditional 600 W sonar | 0.9 m (3 ft) | 914 m (3,000 ft) |
| CHIRP 1 kW sonar | 0.9 m (3 ft) | 914 m (3,000 ft) |
| Traditional 1 kW sonar | 0.9 m (3 ft) | 1,524 m (5,000 ft) |
| CHIRP 2 kW sonar | 0.6 m (2 ft) | 3,048 m (10,000 ft) |

Sonar minimum depths

Accurate bottom tracking can be unreliable in depths shallower than 0.8 m/2.62 ft. When operating at or below this depth be cautious of misleading sonar returns, false bottom tracking and incorrect depth readings

The Minimum sonar depth alarm is triggered when your vessel reaches or is in water shallower than this depth.

Below are examples of the Sonar app when it is tracking a false bottom in shallow waters.

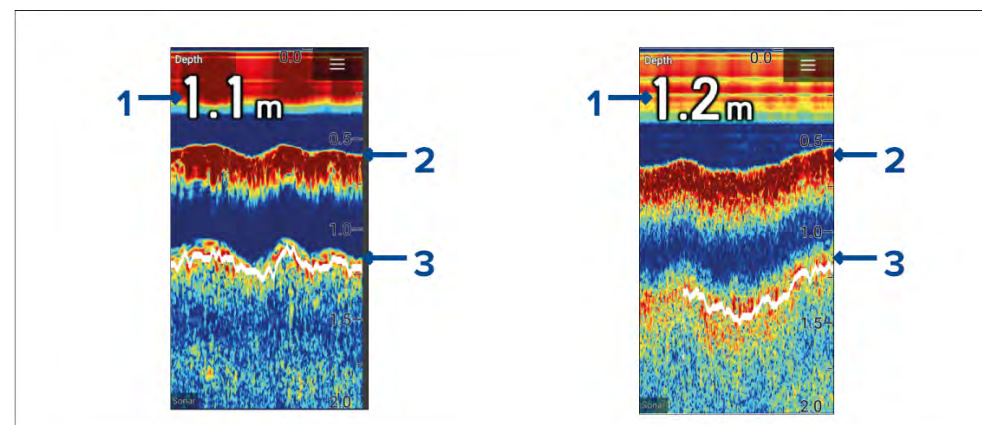

1. Examples of incorrect depth readings due to false bottom tracking.
2. Actual bottom tracking and water depth.
3. False bottom tracking providing false depth readings.


18.3 Fishfinder app overview

The Fishfinder app displays a visualization of the echoes received from a Sonar module and transducer. The Fishfinder app is compatible with Traditional, CHIRP, DownVision™, SideVision™ and RealVision™ 3D sonar modules and transducers. The Fishfinder app builds an underwater view of bottom structure and targets in the water column.






Multiple Sonar modules can be connected at the same time. Sonar modules can be internal (built-in to your MFD) or external (a separate box on your network).

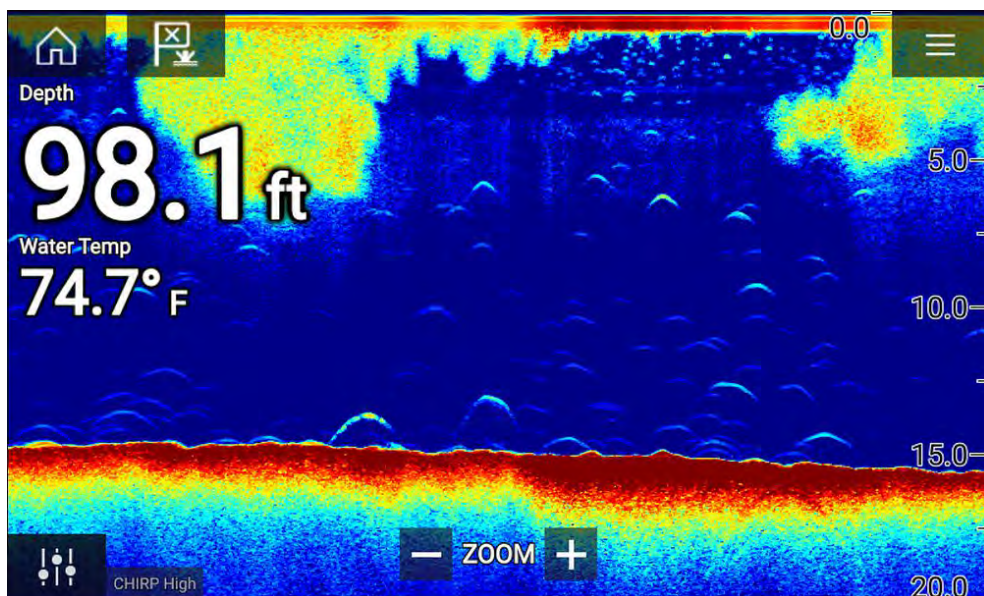



For each instance of the Fishfinder app you can select which Sonar module and channel that you want to use, the Sonar module and channel selection will persist over a power cycle.

The Fishfinder app can be displayed in both Fullscreen and splitscreen app pages. App pages may consist of up to 4 instances of the Fishfinder app.



Fishfinder app controls

| Icon | Description | Action |
|---|------------------|---|
|  | Home icon | Takes you to the Homescreen |
|  | Waypoint / MOB | Place waypoint / activate Man overboard (MOB) alarm |
|  | Pilot icon | Opens and closes the Pilot Sidebar |
|  | Menu icon | Opens the app menu |
|  | Image adjustment | Displays onscreen sensitivity / image adjustment controls |


| Icon | Description | Action |
|---|----------------|--|
|  | Pause | Pause RealVision™ 3D sonar image. |
|  | Unpause | When the Fishfinder app is paused, you can recommence scrolling by selecting the Unpause icon. |
|  | Range/Zoom In | When Auto range is enabled, pressing the plus icon activates Zoom mode, subsequent presses will increase the Zoom factor. When Range is set to Manual pressing the Plus icon decreases the distance displayed onscreen. Auto range can be enabled and disabled from the Menu: Menu > Auto range . |
|  | Range/Zoom Out | When in Zoom mode, pressing the minus icon will decrease the Zoom factor and finally revert to normal mode. When Range is set to Manual pressing the Minus icon increases the distance displayed onscreen. |

Touchscreen controls

- Pinch-to-zoom changes the magnification of the image.
- The Range control determines how far the sonar will ping.
- Press and hold onscreen to display the context menu

RealVision 3D controls

When using RealVision 3D sonar you can manipulate the view using touch gestures.

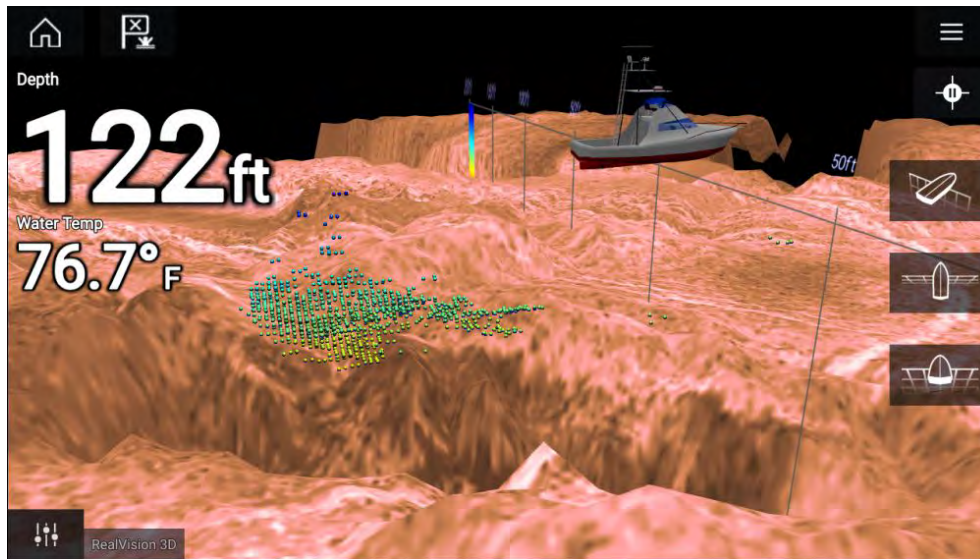

Touchscreen controls

- One finger swipe rotates the image.
- Two finger swipe pans the image around the screen.
- Pinch-to-zoom changes the magnification of the image.
- The Range control determines how far the sonar will ping.
- Press and hold onscreen to display the context menu

Physical buttons

- **Ok** button pauses Sonar scrolling.
- **Back** button resumes Sonar scrolling.
- **Ok** button when paused opens the context menu.
- Use the Uni-controller's **Directional** (Up, Down, Left, Right) controls to rotate the image.
- Use the Uni-controller's **Rotary** control or a RMK's **Range In** and **Range Out** buttons to Range in and out.

18.4 Opening the Fishfinder app

The Fishfinder app is opened by selecting a page icon from the Homescreen that includes a Fishfinder app.


Pre-requisites:

1. Ensure your Sonar module is compatible (check the latest details available on the Raymarine website). If in doubt contact an authorized Raymarine dealer for advice.
2. Ensure you have installed your Sonar module in accordance with the documentation that was supplied with the module.


The Fishfinder app will open in 1 of 4 states:

Please select a sonar channel

The first time you open a new app page that includes the Fishfinder app you will need to select a Sonar channel.

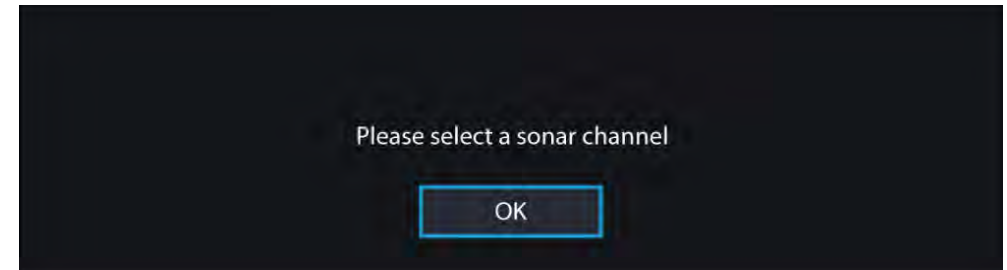


Select **OK** and then choose the Sonar channel you want to use from the list:

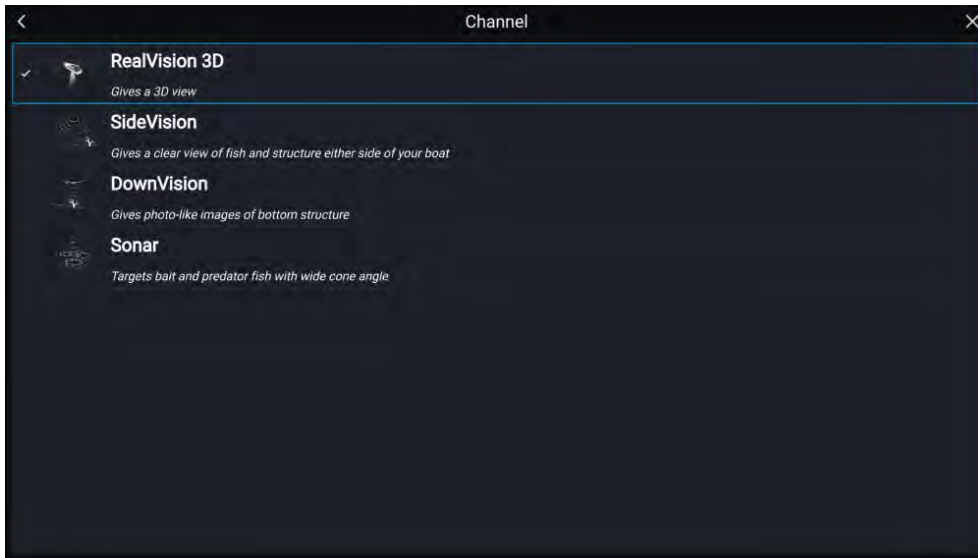

Sonar on and pinging


If your Fishfinder app has already been set up then when the Fishfinder app is opened the Sonar image will be displayed and start scrolling.

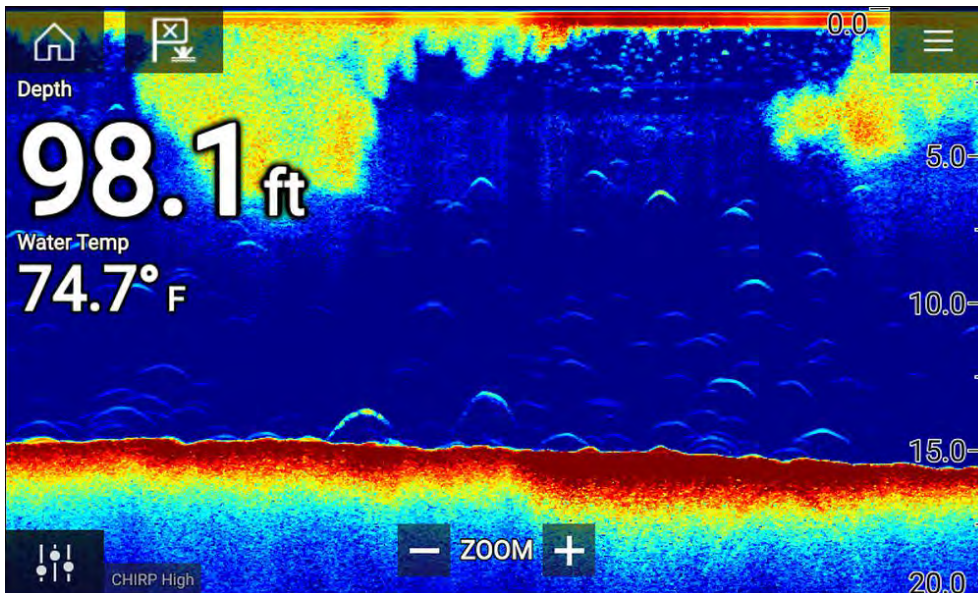

No sonar source available

If the 'No sonar source available' warning is displayed then either:


- your sonar module is still powering up.
- your MFD cannot establish a connection with your external Sonar module
- your Internal Sonar module has no transducer connected.

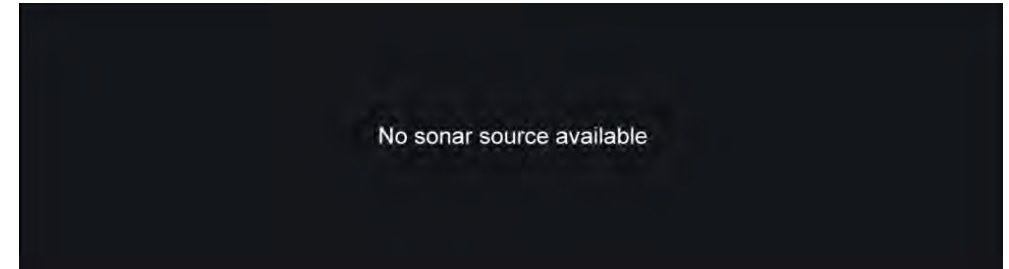

Check your external sonar module's network and power connection, check your MFD's network or transducer connection ensuring the connections and cabling is correct and free from damage, then power cycle your system. If the Sonar module is still not found then refer to your equipment's installation documentation for further troubleshooting information.

No transducer connected

If the 'No transducer connected' warning is displayed then your Sonar module cannot connect to your transducer.

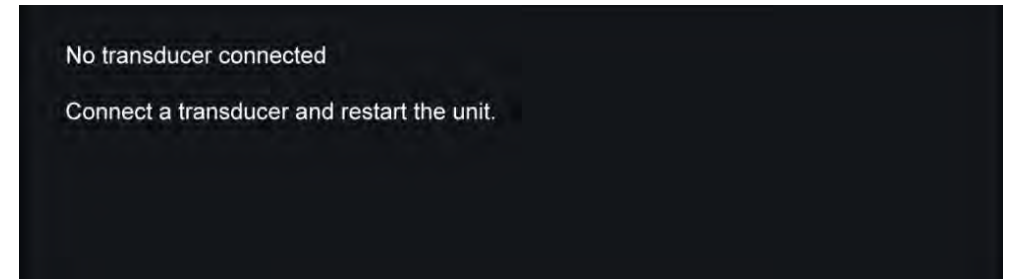

Check your transducer connection(s) are correct and free from damage, then power cycle your system. If the transducer is still not found then refer to your equipment's installation documentation for further troubleshooting information.


18.5 Sonar transducer calibration

Sonar transducers should be calibrated to ensure accurate readings are displayed on the MFD.

Depth offset

Depths are measured from the transducer face to the bottom (e.g.: seabed). An offset value can be applied to the depth data so that the displayed depth reading represents the depth reading taken from either the keel (negative offset) or the waterline (positive offset).


Before setting a waterline or keel offset, establish the vertical distance between the transducer and waterline or the bottom of your vessel's keel, as appropriate. Then set this distance as the depth offset value.

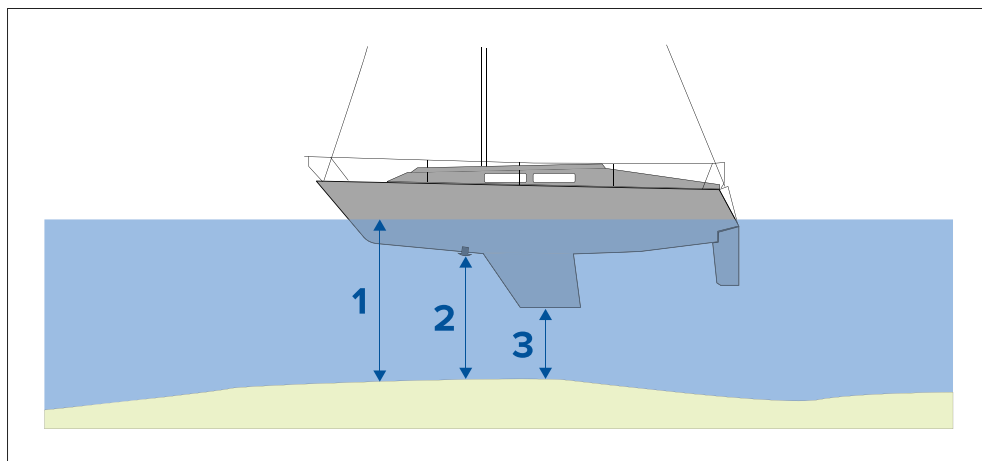

1. **Below waterline** — The depth reading will be increased from the transducer's default reading.
2. **Below transducer** — This is the default reading from the transducer (zero offset applied).
3. **Below keel** — The depth reading will be decreased from the transducer's default reading.

Setting a depth offset

You can set the point depth readings are taken from.

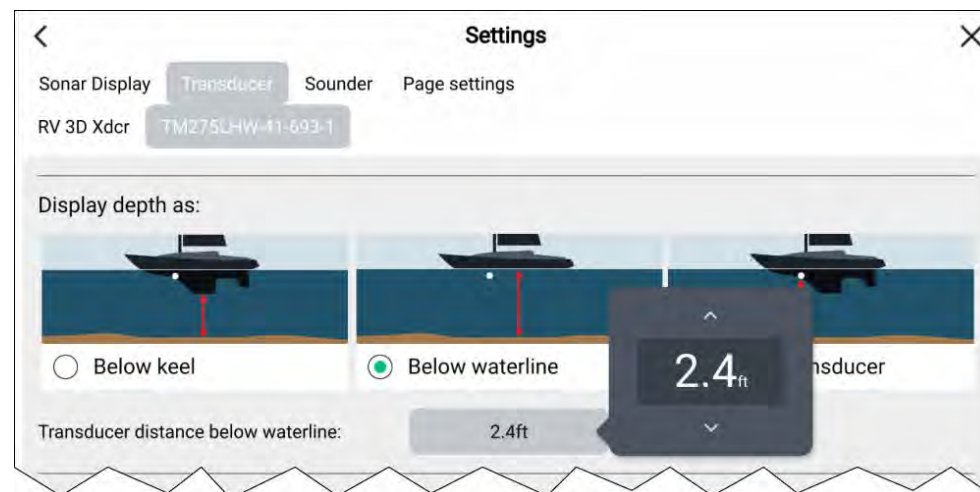

1. Open the **Fishfinder app**.
2. Open the **Transducer** settings menu: **Menu > Settings Transducer**.
3. If you have more than 1 sonar transducer installed, then you will need to select the relevant transducer.
4. Select either **Below keel**, **Below waterline**, or **Below transducer** as required.
 - i. If you have selected **Below keel** enter your transducer's distance above the lowest point of your keel in the offset field.
 - ii. If you have selected **Below waterline** enter your transducer's distance below the waterline in the offset field.

Setting a temperature offset

If your sonar transducer includes a temperature sensor then you can check and calibrate your temperature reading.




1. Open the **Fishfinder app**.
2. Open the **Transducer** settings menu: **Menu > Settings Transducer**.
3. If you have more than 1 sonar transducer installed, then you will need to select the relevant transducer.
4. If required, select the **Enable temperature sensor** toggle switch to enable the sensor.
5. Measure the actual water temperature using a thermometer.
6. Check your reading against the displayed **Current temperature**.
7. If the readings are not the same, select **Calibrate temp** and enter the difference between your 2 readings.

Ping depth limit

When high-powered transducers are searching for a bottom lock, they can search down to a maximum of 3,048 m (10,000 ft), during the sonar's hunt cycle. This means it can take some time to acquire or re-acquire a bottom lock. To help improve sonar bottom lock re-acquisition time on high powered transducers, a ping depth limit can be set.

When using a CHIRP or non-CHIRP high power (greater than 600 W) transducer connected to the 1 kW transducer connector on an Axiom™ Pro MFD or RVX1000 sonar module, the **Ping depth limit** control will be available in the Fishfinder app's Transducer settings menu: **Menu > Settings > Transducer > Ping depth limit**.

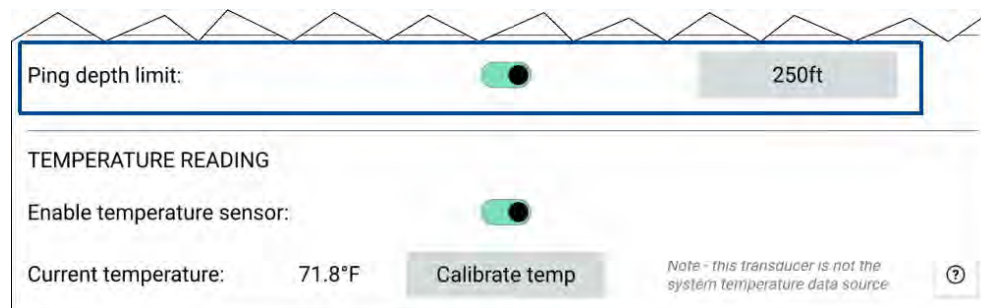

Important:

- The **Ping depth limit** should only be enabled when problems are experienced re-acquiring depth readings after the sonar has lost depth readings.
- Once **Ping depth limit** is enabled, when sailing in waters deeper than the specified depth limit, the Fishfinder app / transducer will not be able to establish a depth reading / bottom lock.

The Ping depth limit control enables you to specify a depth limit that your sonar will search down to. It is recommended this limit is set to a depth of approximately 25% to 50% deeper than the maximum water depth you want to use your Fishfinder in. E.g.: In 200 ft max depth water, the ping depth limit should be set between 250 ft and 300 ft.

18.6 Sonar channels

The Sonar channels that are available depend on the Sonar module and transducer you have connected.



RealVision™ 3D



SideVision™



DownVision™



High CHIRP / High Frequency



Medium CHIRP / Medium Frequency



Low CHIRP / Low Frequency

Selecting a Sonar channel

The first time you open a new Fishfinder app page you will be requested to select a channel, subsequently you can change the sonar channel by selecting a channel icon from the Fishfinder app menu.

1. Select a relevant channel icon from the Menu.
2. Alternatively select **All channels** from the Menu and then choose your desired sonar module and channel.

18.7 Placing a Waypoint (Sonar, DownVision and SideVision)

When you observe something of interest in the Fishfinder app you can place a waypoint at its location so that you can find the area again.


1. Select and hold on the point of interest onscreen.
The Context menu is displayed and scrolling is paused, temporarily.
2. Select **Add Waypoint** from the context menu.

The Sonar image will remain paused for approximately 10 seconds after the Waypoint has been placed.

Placing a waypoint RealVision 3D

To place a waypoint whilst viewing a RealVision 3D channel follow the steps below.

1. Select and hold a location onscreen.
The Waypoint context menu and Red waypoint marker is displayed:

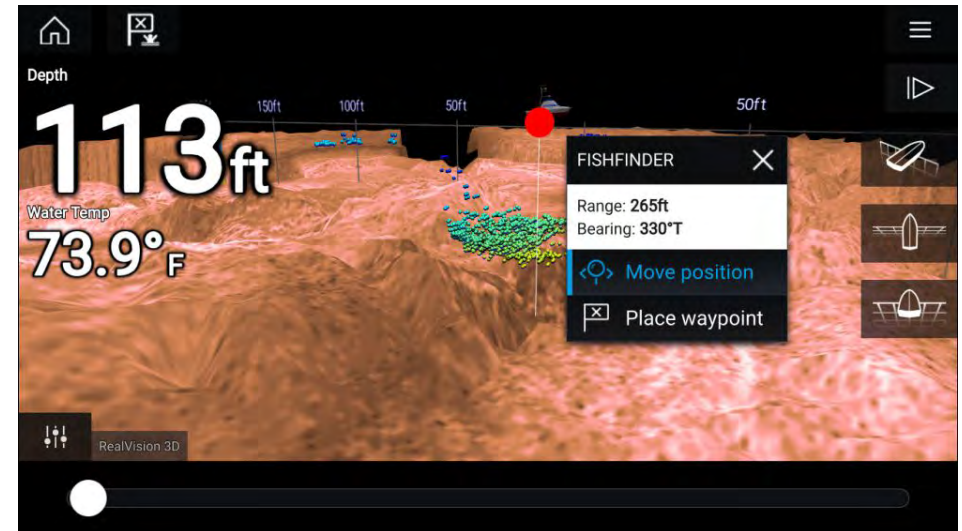

2. Select **Place waypoint** to create a waypoint at the marker's location, or
3. Select **Move position** to adjust the marker's position before creating the waypoint.



You can move the waypoint along its current axis by sliding 1 finger across the screen. You can also adjust the view onscreen using the usual 2 finger touch gestures.

4. When the marker is over the desired location select **Place waypoint** to save a waypoint at the marker's location.

18.8 Fish detection

Fish detection options are available when using a compatible Raymarine® sonar module with a Raymarine® or Airmar conical beam capable sonar transducer.

The fish detection feature is available when using the following conical beam sonar channels

- **50KHZ**
- **200KHZ**
- **SONAR**
- **CHIRP Low**
- **CHIRP High**
- **CHIRP Auto**


Note:

The fish detection feature is not available when using DownVision, SideVision, RealVision, RealVision Max or HyperVision sonar channels.

The Fish detection feature can be accessed from the fishfinder app menu:
Menu > Settings > Fish detection

Fish detection options include:

- **Fish detection beep** — An audible 2–tone beep is sounded when a sonar target is detected that the fish detection algorithm considers to be a fish.
- **Fish icons** — A fish icon is placed onscreen over sonar targets that the fish detection algorithm considers to be fish.
- **Fish depth labels** — The depths of sonar targets are displayed next to the target that the fish detection algorithm considers to be fish.

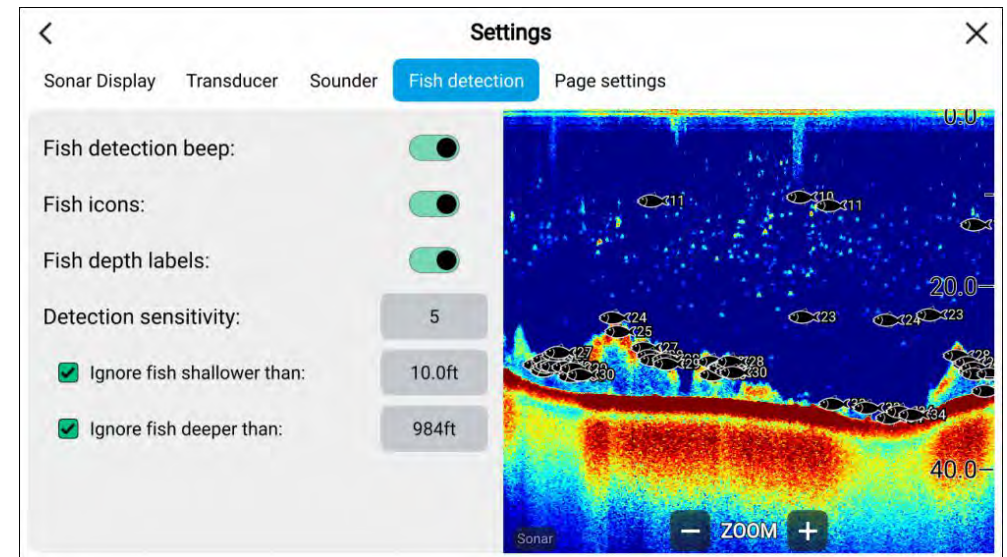

The fish detection feature can be adjusted manually as follows:

- **Detection sensitivity** — The detection sensitivity setting determines the size at which sonar targets are considered to be fish. The higher the value, the more sonar targets will be considered to be fish.
- **Ignore fish shallower than:** — Specifies the depth at which the fish detection algorithm will be used.
- **Ignore fish deeper than:** — Specified the depth at which the fish detection algorithm will stop being used.

Using these options allows you to specify a specific depth band of water where you will be fishing, and also the size of the fish you want to catch.


18.9 Sonar scroll back

You can “scroll back” in the Fishfinder app to view sonar history.

To activate sonar “scroll back”, perform the following:

- **Sonar and DownVision** — Swipe your finger left to right across the sonar screen.
- **SideVision** — Swipe your finger from the bottom to the top of the sonar screen.
- **RealVision 3D** — Select the onscreen **Pause** icon.

When sonar scroll back is active the sonar **Scroll back bar** and **Unpause** icons are displayed.

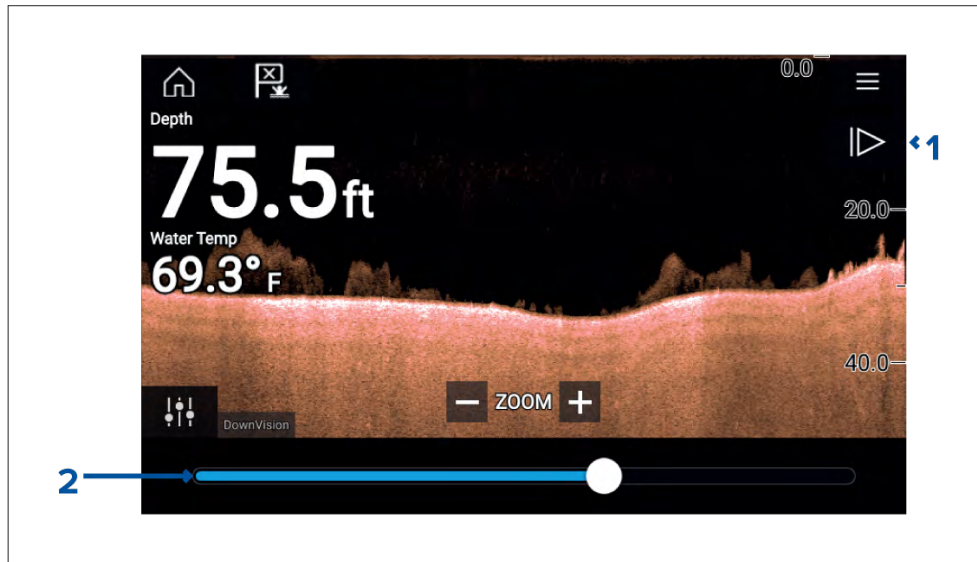

1. **Unpause** — Selecting this option resumes live sonar scrolling.
2. **Scroll back bar** — Use this to move back and forward through the available sonar history. You can either drag the position indicator right or left or select a specific location on the bar to jump to that position.

In Sonar, DownVision and SideVision channels, subsequent swipes will rewind the sonar history and swiping in the opposite direction will fast forward the sonar history.

18.10 Sonar sensitivity controls



Optimum performance is usually achieved using the default settings. You can adjust the image using the Sensitivity controls to improve the displayed image. Sensitivity setting adjustment is also applied to the sonar history that is displayed when using sonar scroll back.



Sensitivity settings can be accessed using the onscreen **Image adjustment** icon, or the Adjust sensitivity menu option: **Menu > Adjust sensitivity**.

The Sensitivity controls available are dependant upon the Sonar module in use.

| Control | Name | Description |
|---------|--|--|
| | 'G' Gain | The control determines the signal strength at which target returns are shown onscreen. The Gain control can be set to Auto or Manual . Depending on Sonar module, in Auto you can add an offset of up to $\pm 50\%$. A higher value produces more target returns and noise onscreen. |
| | 'I' Intensity, or 'CG' Color Gain | The control sets the lower limit for the color used for the strongest target returns. All target returns above this value are displayed in the strongest color. Those with a weaker value are divided equally between the remaining colors. The control can be set to Auto or Manual . Depending on Sonar module, in Auto you can add an offset of up to $\pm 50\%$. |
| | 'SF' Surface Filter , or 'NF' Noise filter | The control determines the amount of noise displayed onscreen by varying the gain throughout the water column. A lower value decreases the depth at which the control is applied. The control can be set to Auto or Manual . |

| Control | Name | Description |
|---|-------------------------------|--|
|  | 'TVG' Time Varied Gain | The control determines the amount of attenuation applied throughout the water column to ensure that targets of a similar size appear the same regardless of depth. A higher value produces weaker targets and less noise onscreen. The control can be set to 1 of 3 Auto modes or can be set to Manual . |
|  | All to Auto | Sets all Sensitivity settings to Auto with 0% offset. |

18.11 Fishfinder settings menu

The table below lists settings applicable to the Fishfinder app and their location within the app Settings menu. The settings available are dependant upon the Sonar module in use.

Sonar display tab

| Settings | Description | Options |
|-------------------------------|--|--|
| Color palette | Various color palettes are available to suit different conditions or your personal preference. | List of color palettes. |
| View selection buttons | Enables and disables SideVision™ Left , Right and Both onscreen channel selection icons. | <ul style="list-style-type: none"> • On • Off |
| A-scope | A-Scope mode provides a splitscreen view that includes the normal scrolling sonar image and a smaller pane which shows a 'live' image of what is directly below your transducer. | <ul style="list-style-type: none"> • Off • Center • Right • Cone |

| Settings | Description | Options |
|------------------------|---|---|
| Bottom lock | Bottom Lock flips the range indication readings so that zero is shown as the bottom this flattens the image of the bottom and makes any objects on or just above it easier to see. This feature is particularly useful for finding fish that feed close to the bottom. Note: When bottom lock is enabled transducer offset values will be ignored. | <ul style="list-style-type: none"> • On • Off |
| Range lines | Displays vertical range lines when viewing. | <ul style="list-style-type: none"> • On • Off |
| Depth lines | Displays horizontal depth lines. | <ul style="list-style-type: none"> • On • Off |
| White line | Displays a solid white line along the bottom contour. | <ul style="list-style-type: none"> • On • Off |
| Bottom fill | Displays a solid color fill for the bottom. | <ul style="list-style-type: none"> • On • Off |
| Color threshold | Color threshold determines the signal strength below which target returns are not shown. A low value results in only the strongest colors or lightest shades being displayed. | <ul style="list-style-type: none"> • 0% to 100% |
| Scroll speed | Determines the scrolling speed for the Sonar image. | <ul style="list-style-type: none"> • 10% to 500% |

RealVision™ 3D — Sonar display tab

| Settings | Description | Options |
|----------------------------|--|--|
| Boat icon | Choose which boat icon to use. | List of available Boat icons. |
| Image stabilization | Uses RealVision™ 3D transducer's built-in sensors to counter-act the rocking motion of your vessel to produce a stable sonar image. | <ul style="list-style-type: none"> • On • Off |
| Target colors | Changes the color palette used for target returns. | List of color palettes. |
| Color targets by | Changes the way targets are colored. Depth colors targets according to their depth, a gradient scale can be shown on the 3D grid to aid depth identification. Intensity colors targets according to their size, the bigger the target the darker the color used. | <ul style="list-style-type: none"> • Depth • Intensity |
| Show targets as | Changes the method of rendering targets, Point provides the highest resolution, Sphere provides a lower resolution but increases target size for increased visibility. | <ul style="list-style-type: none"> • Point • Sphere |
| Bottom colors | Changes the color used for bottom structure. | List of colors. |
| Background | Changes the color used for the app background. | List of colors. |
| View mode | In GPS track mode the boat icon will remain in the same position and bottom structure and target detail will move in true relation to your vessel movements. In Scrolling image mode the sonar pings at a constant speed and displays a scrolling image behind the boat icon. | <ul style="list-style-type: none"> • GPS track • Scrolling image |

Transducer tab

| Settings | Description | Options |
|----------------------------------|---|---|
| Transducer | Allows selection of Sonar transducer. | List of available transducers. |
| Display depth as | Determines the position from where depth readings are taken from. | <ul style="list-style-type: none"> • Below keel • Below waterline • Below transducer |
| Speed transducer | Allows selection of Speed transducer. | List of available transducers. |
| Calibrate speed | Allows you to enter an offset between actual measured speed and the current speed displayed by your transducer. | Offset value. |
| Enable temperature sensor | Enables and disables the selected transducer's temperature sensor. | <ul style="list-style-type: none"> • On • Off |
| Calibrate temp | Allows you to enter an offset between actual measured water temperature and the current temperature displayed by your transducer. | Offset value. |

Sounder tab

| Settings | Description | Options |
|------------------------|---|---|
| Sounder name | Allows you to rename your sonar module. | Onscreen keyboard. |
| Ping enable | Enables and disables transducer ping. | <ul style="list-style-type: none"> • On • Off |
| Ping rate limit | Allows you to restrict the transducer's maximum ping rate to suit current conditions. | <ul style="list-style-type: none"> • 1 to 100 |

| Settings | Description | Options |
|-------------------------------|--|---|
| Power mode | Adjusts the transducer's signal strength. In Auto the sonar module will automatically determine the optimal power based on current depth, speed and bottom signal. In Manual you can adjust the power to the desired level. | <ul style="list-style-type: none"> • 1 to 100 |
| Ping rate | Hyper ping should be used at speeds of up to 40 knots in shallower waters (6 metres or less). When the depth reaches 6 metres or above the ping rate will automatically reduce to normal until depth conditions are met. | <ul style="list-style-type: none"> • Normal • Hyper |
| Dual channel ping mode | On sonar modules that offer simultaneous dual channel operation, such as the CP570, The ping mode can be changed. Auto the Fishfinder app will select the best mode chosen based on range settings. Independent pings maximizes ping rate but may introduce interference. Simultaneous pings reduced ping rate and reduces chance of interference. | <ul style="list-style-type: none"> • Auto • Independent pings • Simultaneous pings |
| Tune frequency | Enables manual tuning of non-CHIRP frequency channels. | <ul style="list-style-type: none"> • -50% to +50% |
| AHRS stabilization | The AHRS built in to the RealVision™ 3D transducer is used to stabilize the sonar image onscreen based on your vessel's detected movements. | <ul style="list-style-type: none"> • On • Off |

| Settings | Description | Options |
|--------------------------------|---|---|
| Reverse Port/Starboard | When a RV100 transducer is hull/step mounted the transducer can be installed with the cable orientated towards either the bow or the stern of the vessel. On installations where the transducer cable is orientated towards the stern of the vessel then the Reverse Port/Starboard control must be enabled. | <ul style="list-style-type: none"> • Enabled • Disabled |
| Interference rejection | Removes interference caused by other transducers on your vessel or from vessels equipped with transducers close by. | <ul style="list-style-type: none"> • Auto • Low • Medium • High • Off |
| 2nd echo rejection | The control helps to remove false target returns or false bottom that can be caused by signal reflection. | <ul style="list-style-type: none"> • Off • Low • High |
| Dual-channel ping mode. | On Axiom™ Pro MFDs when using multiple transducers at the same time you can balance the ping rate vs interference between the two transducers using the Dual-channel ping mode. option By default Independent ping is selected, if you experience interference then you can 'lock' the transducers to ping at the same rate. Locking to the transducer with the fastest ping rate should give the best results. | <ul style="list-style-type: none"> • Independent ping • Lock to RV 3D Xdcr • Lock to <transducer name> |

| Settings | Description | Options |
|----------------------|---|---|
| Reset sounder | Resets the sonar module to factory default settings. | <ul style="list-style-type: none"> • Yes • No |
| Reset trip | In installations that include a speed transducer connected via the sonar module a trip log is automatically recorded. Selecting this option resets the sonar module's trip log. | <ul style="list-style-type: none"> • Yes • No |

Note:

The fish detection tab is only available when viewing a high CHIRP sonar channel.

Fish detection tab

| Menu item and description | Options |
|--|---|
| Fish detection beep: Enables and disables audible beep when a target is detected that is considered to be a fish. | <ul style="list-style-type: none"> • On • Off (default) |
| Fish icons: Enables and disables display of a fish icon over targets considered to be fish. | <ul style="list-style-type: none"> • On • Off (default) |
| Fish depth labels: Enables and disables display of depth labels next to targets considered to be fish. | <ul style="list-style-type: none"> • On • Off (default) |
| Detection sensitivity: Determines how sensitive the fish detection algorithm is. The higher the value, the more target returns will be considered to be fish. | Values from 0 to 10 (8 (default)) |

| Menu item and description | Options |
|---|---|
| <p>Ignore fish shallower than: Targets returns found in water shallower than the specified depth will not be considered to be fish.</p> <p>Note: The shallow limit cannot be greater than the deep limit.</p> | 0 ft to 1000 ft (3.3 ft (default)) or equivalent units. |
| <p>Ignore fish deeper than: Targets returns found in water deeper than the specified depth will not be considered to be fish.</p> <p>Note: The deep limit cannot be less than the shallow limit.</p> | 0 ft to 1000 ft (984 ft (default)) or equivalent units. |

Page settings tab

| Settings | Description |
|-------------------------|--|
| Data Overlays | Enables configuration of Data overlays, which overlay key information from connected sensors onto the Chart, Radar, Sonar and Camera apps. |
| Edit split ratio | Enables you to customize the position of the partitions in splitscreen app pages. For example, 50/50, 70/30 etc. |

CHAPTER 19: RADAR APP

CHAPTER CONTENTS

- 19.1 Radar app overview — page 240
- 19.2 Radar feature comparison — page 242
- 19.3 Opening the Radar app — page 245
- 19.4 Set up and configuration — page 246
- 19.5 Radar modes — page 248
- 19.6 Range rings — page 249
- 19.7 Range and bearing — page 249
- 19.8 AIS targets — page 250
- 19.9 Radar targets — page 253
- 19.10 Dangerous targets alarm — page 258
- 19.11 Guard zone alarms — page 258
- 19.12 Doppler Radar overview — page 259
- 19.13 Blank sectors — page 261
- 19.14 Radar sensitivity controls — page 261
- 19.15 Radar settings menus — page 262


19.1 Radar app overview

The Radar app displays a visualization of the echoes received from a connected Radar scanner. The Radar app is a navigation aid used to help enhance collision and situational awareness by enabling target's distance and speed to be tracked in relation to your vessel.

Up to 2 Radar scanners can be connected at the same time. However, only 1 Radar in a system can be a Quantum™ Radar.

For each instance of the Radar app you can select which Radar scanner you want to use, the Radar scanner selection will persist over a power cycle.

The Radar app can be displayed in both Fullscreen and splitscreen app pages. App pages may consist of up to 2 instances of the Radar app.

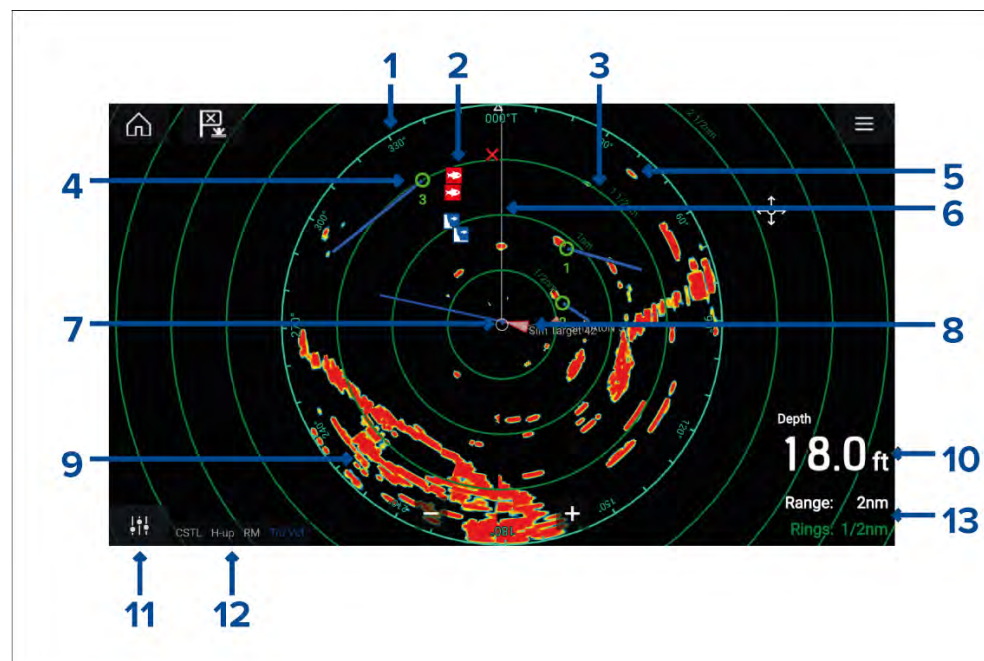





1. **Azimuth ring** — used to provide indication of bearing.
2. **Waypoint symbols** — waypoint symbols can be displayed in the Radar app.
3. **Range rings** — evenly spaced concentric circles help determine distances in the Radar app.
4. **Tracked radar target** — symbols with vector lines are used to represent tracked radar targets.




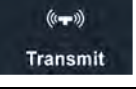


5. **Radar return** — possible target e.g.: vessel.
6. **SHM (Ship heading marker)** — points in the direction of travel on the azimuth ring.
7. **Own vessel position** — indicates own vessel position in relation to the radar returns.
8. **AIS target** — symbols with vector lines are used to represent AIS targets.
9. **Radar return** — land mass.
10. **Data overlay** — by default depth is displayed.
11. **Sensitivity controls** — access the Radar app's sensitivity controls.
12. **Radar mode and status** — identifies the Radar mode, orientation and motion mode.
13. **Range and rings** — shows the current Radar app range and spacing between range rings.

The Radar app allows you to configure alarms which are triggered when a target or object conflicts with the **Dangerous targets** or **Guard Zone** alarm settings.

The Range rings, azimuth ring and VRM/EBLs can be used to identify a target's distance and heading in relation to your vessel.

Radar app controls

| Icon | Description | Action |
|---|----------------|---|
|  | Home icon | Takes you to the Homescreen |
|  | Waypoint / MOB | Place waypoint / activate Man Overboard (MOB) alarm |
|  | Pilot icon | Opens and closes the Pilot Sidebar |
|  | Menu icon | Opens the App menu |

| Icon | Description | Action |
|---|------------------|---|
|  | Image adjustment | Displays onscreen sensitivity / image adjustment controls |
|  | Power Off | Powers down the current Radar scanner |
|  | Power On | Powers up the selected Radar scanner |
|  | Transmit | Start Radar transmission |
|  | Range In | Decreases the distance displayed onscreen (minimum range: 1/16nm). |
|  | Range Out | Increases the distance displayed onscreen (up to your Radar scanner's maximum range). |

Radar app context menu

Context menus provide context sensitive menu options.



- Context menus are accessed in the Radar app by selecting a location or target.
- The context menu provides Latitude, longitude, range and bearing details for the selected location or object.
- The context menu provides quick access to relevant settings or features.
- Select **More options** to display further options.

Camera tracking

When connected to a compatible Pan and Tilt Thermal camera you can track targets or point your camera at a specific target or area.

2 options are available for camera tracking:

- **Point camera here** — Points the camera at a specific point onscreen, the camera will remain pointed at this area regardless of your own vessel's course.
- **Track with camera** — Tracks a selected target regardless of your own vessel's or target's course.

Camera tracking options are available from the Context menu in the Chart and Radar apps: **Context menu > more options > Point camera here**, or **Context menu > more options > Track with camera**.

Automatic tracking

You can use the Camera app settings to configure automatic tracking for AIS, Radar and MoB targets: **Camera app > Menu > Settings > Camera motion > AUTO TRACKING**

19.2 Radar feature comparison

The range of features and settings that are available in the Radar app is dependent on the type of connected Radar scanner.

Sensitivity controls

| Features/settings | Radar type |
|--------------------------|--|
| Gain | <ul style="list-style-type: none"> • All |
| Color Gain | <ul style="list-style-type: none"> • Cyclone — Solid state open array • Magnum — Open array • Quantum™ 2 Doppler — Radome • Quantum™ — Radome • SuperHD™ — Open array • HD — Open array • HD — Radome |
| Rain | <ul style="list-style-type: none"> • All |
| Sea Clutter | <ul style="list-style-type: none"> • All |
| FTC (Fast Time Constant) | <ul style="list-style-type: none"> • Digital — Radome |
| Power Boost | <ul style="list-style-type: none"> • Magnum — Open array • SuperHD™ — Open array |
| Antenna Boost | <ul style="list-style-type: none"> • Magnum — Open array • SuperHD™ — Open array |
| Beam sharpening | <ul style="list-style-type: none"> • Cyclone — Solid state open array |
| Near target enhancement | <ul style="list-style-type: none"> • Cyclone — Solid state open array |

Gain Modes

| Features/settings | Radar type |
|-------------------|--|
| Buoy | <ul style="list-style-type: none"> • Magnum — Open array • SuperHD™ — Open array • HD — Open array • HD — Radome |
| Harbor | <ul style="list-style-type: none"> • All |
| Coastal | <ul style="list-style-type: none"> • All |
| Offshore | <ul style="list-style-type: none"> • All |
| Bird | <ul style="list-style-type: none"> • Cyclone — Solid state open array • Magnum — Open array • SuperHD™ — Open array • HD — Open array • HD — Radome |
| Weather | <ul style="list-style-type: none"> • Cyclone — Solid state open array • Quantum™ 2 Doppler — Radome • Quantum™ — Radome |

Features

| Features/settings | Radar type |
|--|--|
| Sector blanking | <ul style="list-style-type: none"> • Cyclone — Solid state open array • Magnum — Open array • Quantum™ 2 Doppler — Radome (Radar software version 2.46 and above) |
| True trails | <ul style="list-style-type: none"> • Cyclone — Solid state open array • Magnum — Open array • Quantum™ 2 Doppler — Radome • Quantum™ — Radome |
| Note: Requires heading sensor. | |

| Features/settings | Radar type |
|------------------------------|--|
| Doppler | <ul style="list-style-type: none"> • Cyclone — Solid state open array • Quantum™ 2 Doppler — Radome |
| Dual Range | <ul style="list-style-type: none"> • Cyclone — Solid state open array • Magnum — Open array • SuperHD™ — Open array • HD — Open array • HD — Radome |
| RangeFusion™ | <ul style="list-style-type: none"> • Cyclone — Solid state open array |
| Interference Rejection | <ul style="list-style-type: none"> • All |
| Interference Rejection Level | <ul style="list-style-type: none"> • Cyclone — Solid state open array • Quantum™ 2 Doppler — Radome • Quantum™ — Radome • Digital — Radome |
| Expanded returns | <ul style="list-style-type: none"> • All |
| Expansion Level | <ul style="list-style-type: none"> • Digital — Radome |
| Guard Zones | <ul style="list-style-type: none"> • All = 2 |
| Guard Zone Sensitivity | <ul style="list-style-type: none"> • All |
| Radar Targets | <ul style="list-style-type: none"> • Cyclone — Solid state open array = 50 • Magnum — Open array = 25 • Quantum™ 2 Doppler — Radome = 25 • Quantum™ — Radome = 10 • SuperHD™ — Open array = 25 • HD — Open array = 25 • HD — Radome = 25 • Digital — Radome = 10 |

| Features/settings | Radar type |
|------------------------|---|
| Auto acquire (targets) | <ul style="list-style-type: none"> • Cyclone — Solid state open array = 50 • Magnum — Open array = 25 • Quantum™ 2 Doppler — Radome = 25 |
| Tuning | <ul style="list-style-type: none"> • Magnum — Open array • SuperHD™ — Open array • HD — Open array • HD — Radome |
| Transmit Frequency | <ul style="list-style-type: none"> • Cyclone — Solid state open array • Quantum™ 2 Doppler — Radome • Quantum™ — Radome |
| Scanner Rotation Speed | <ul style="list-style-type: none"> • Cyclone — Solid state open array = 12 RPM, 24 RPM, 36 RPM, 48 RPM, 60 RPM and Auto • Magnum — Open array = 24 RPM and Auto (48 RPM) • Quantum™ 2 Doppler — Radome = 24 RPM • Quantum™ — Radome = 24 RPM • SuperHD™ — Open array = 24 RPM and Auto (48 RPM) • HD — Open array = 24 RPM and Auto (48 RPM) • HD — Radome = 24 RPM and Auto (48 RPM) • Digital — Radome = 24 RPM |
| Sea Clutter Curve | <ul style="list-style-type: none"> • All |
| Parking Offset | <ul style="list-style-type: none"> • Magnum — Open array • SuperHD™ — Open array • HD — Open array |

| Features/settings | Radar type |
|--|--|
| Antenna Size selection | <ul style="list-style-type: none"> Magnum — Open array SuperHD™ — Open array = 4ft / 6ft HD — Open array = 4ft / 6ft <p>Note: Antenna size selection (i.e.: 3ft, 4ft or 6ft) for Cyclone radars is automatically detected and cannot be selected manually.</p> |
| Timed Transmit | <ul style="list-style-type: none"> All |
| Bearing Alignment | <ul style="list-style-type: none"> All |
| MBS (Main Bang Suppression) Off | <ul style="list-style-type: none"> All |
| Tuning Preset | <ul style="list-style-type: none"> Magnum — Open array SuperHD™ — Open array HD — Open array HD — Radome Digital — Radome |
| STC (Sensitivity Time Control) Preset | <ul style="list-style-type: none"> Digital — Radome |
| VRM/EBL (Variable Range Markers/Electronic Bearing Line) | <ul style="list-style-type: none"> All |
| Display Timing | <ul style="list-style-type: none"> SuperHD™ — Open array = 0–767m HD — Open array = 0–767m HD — Radome = 0–767m Digital — Radome = 0–153.6m |

| Features/settings | Radar type |
|-------------------|--|
| Max Range | <ul style="list-style-type: none"> Cyclone — Solid state open array = 96nm Magnum — Open array = 4kW = 72nm, 6kW = 96nm Quantum™ 2 Doppler — Radome = 24nm Quantum™ — Radome = 24nm SuperHD™ — Open array = 72nm HD — Open array = 72nm HD — Radome = 48nm Digital — Radome = 48nm |
| Colors | <ul style="list-style-type: none"> Cyclone — Solid state open array = 256 Magnum — Open array = 256 Quantum™ 2 Doppler — Radome = 256 Quantum™ — Radome = 256 SuperHD™ — Open array = 256 HD — Open array = 256 HD — Radome = 256 Digital — Radome = 8 |

Compatible Radar scanners

- Cyclone — Solid state open array
- Magnum — Open array
- Quantum™ 2 Doppler — Radome
- Quantum™ — Radome
- SuperHD™ — Open array
- HD — Open array
- HD — Radome
- Digital — Radome

19.3 Opening the Radar app


The Radar app is opened by selecting a page icon from the Homescreen that includes the Radar app.

Pre-requisites:

1. Ensure your Radar scanner is compatible, check the latest details available on the Raymarine website, if in doubt please contact an authorized Raymarine dealer for advice.
2. Ensure you have installed your Radar scanner in accordance with the documentation that was supplied with your Radar.

The Radar app will open in 1 of 3 states:

Off/Not Connected

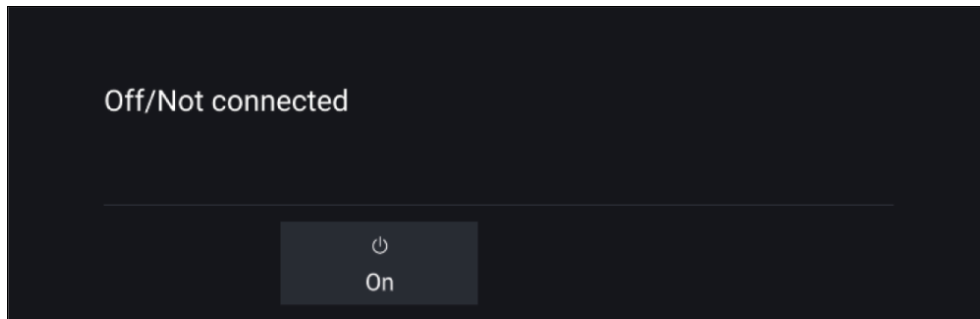

If the '**Off/Not Connected**' message is displayed then:

- your Radar scanner may be powered down, or
- your MFD cannot establish a connection with your Radar scanner


Select **On** to power up your Radar. If the '**Radar not found**' message is displayed then a connection could not be established, ensure that network and power connections to your Radar and MFD are correct and free from damage and then power cycle your system. If the Radar scanner can still not be found refer to your Radar's installation documentation for further troubleshooting information.

Off




If the '**Off**' message is displayed then your Wi-Fi connected Radar scanner is paired but powered off, select **On** to power up your Radar

Standby (Not transmitting)

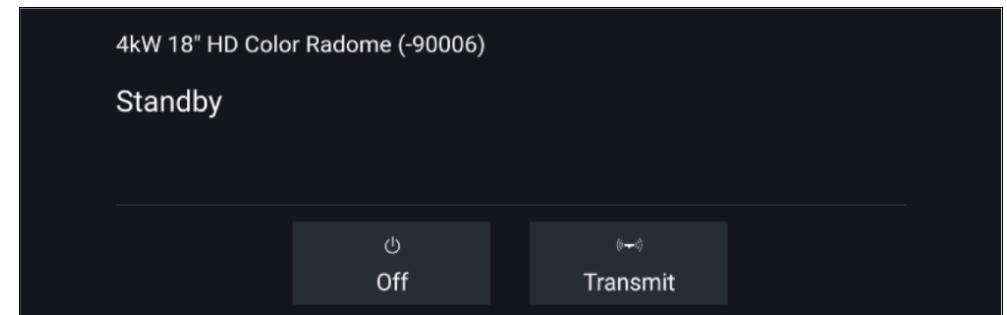

If the '**Standby**' message is displayed then select **Transmit** to begin transmitting.

Transmitting

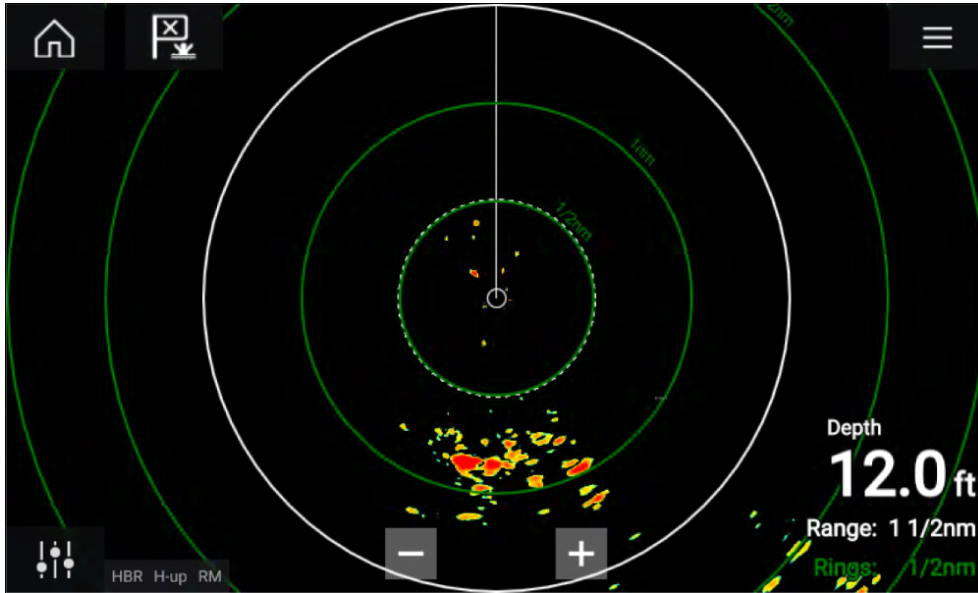

If your Radar scanner is connected, powered up and transmitting then the Radar image is displayed and echoes/targets are displayed onscreen.

Putting the radar into standby

With your selected radar displayed onscreen:

1. Select **Transmit** from the main menu.
The radar scanner will stop transmitting and is put into standby mode.

Powering down your radar scanner

With your radar scanner in standby mode:

1. Select the **Off** icon.
2. Select **Yes** to confirm power down.


The radar scanner will still consume a small amount of power whilst it is powered off, this is to ensure the radar can be powered back up quickly.

19.4 Set up and configuration

Selecting a Radar scanner

On systems with 2 Radar scanners, you can select which Radar scanner is used in each instance of the Radar app.

1. Select the **Settings** (“cogs”) icon from the Radar app menu.

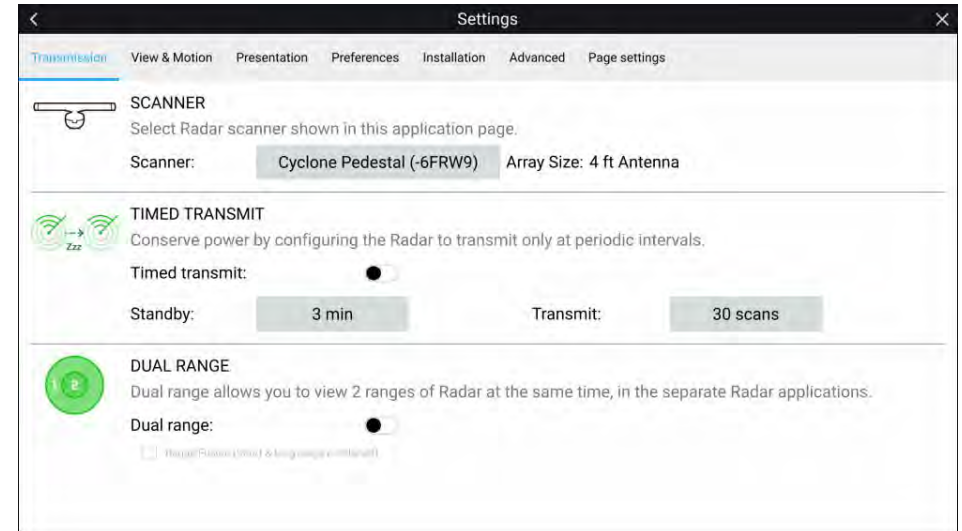

2. Select the **Scanner:** box on the **Transmission** tab.
A list of available Radar scanners is displayed.
3. Select the Radar scanner that you want to associate with the current instance of the Radar app.
4. Close the **Settings** page.

The current instance of the Radar app will change to display the selected Radar scanner. Radar scanner selection shall persist over a power cycle. Alternatively, with the Radar powered off or in Standby, you can select switch Radar scanner by selecting **Change scanner**.



Dual range

Cyclone, Magnum, HD and SuperHD™ radar scanners are capable of **Dual range**. Dual range enables you to view 2 ranges (i.e. short range and long range) simultaneously.

To view both ranges you will need to configure a splitscreen, dual radar, app page that displays the same Radar scanner in each window. You can then enable **Dual Range** mode and set the **Channel** for each window from the **Transmission** tab: **Menu > Settings > Transmission**.

Note:

The following dual range limitations do not apply to Cyclone radar scanners.

Dual range limitations:

- Dual range cannot be enabled when radar targets are being tracked (clear the target list and try again).
- When dual range is enabled manual and automatic radar target acquisition is disabled
- In dual range the maximum rotation speed is 24rpm.
- When using a Magnum or SuperHD™ open array radar scanner **Antenna boost** and **Power boost** controls are only applied to the long range channel.
- Open array radar scanners running version 1.xx or 2.xx software will have the short range channel's maximum range restricted to 3 nm.
- When dual range is enabled on a radar scanner running version 1.xx or 2.xx software the **Expansion** control will be disabled.

RangeFusion™

When using a Cyclone radar scanner the RangeFusion™ feature is available in the dual range settings. Range fusion enables the short range and long range to be displayed simultaneously in a merged view in the same radar app.

When using RangeFusion the short range channel can be viewed separately. The large range channel is always merged with the short range channel.

Timed Radar transmission

To help conserve power you can configure your Radar to only transmit periodically.

From the Radar menu:

1. Select the **Settings** (“cogs”) icon.
The settings page is displayed.
2. Switch on **Time Transmit**: using the toggle switch.
3. Select **Standby**: and choose a time interval.
4. Select **Transmit**: and choose the number of rotations you want the Radar to perform.

The Radar will transmit for the specified number of rotations and then will switch to Standby for the specified time interval, the sequence will repeat until Timed Transmit is switched off.

The Timed transmit will revert to Off after a power cycle.

Setting open array antenna size

When connected to a HD, SuperHD or Magnum open array radar scanner you can configure the **Antenna size**. Setting the antenna size can help when setting a **Parking offset**.

Note:

Antenna size selection (i.e.: 3ft, 4ft or 6ft) for Cyclone radars is automatically detected and cannot be selected manually.

From the Radar app:

1. Select **Menu > Settings > Transmission**.
2. Select the correct size for your Radar's antenna from the **Antenna size** option.

Bearing alignment

The Radar bearing alignment ensures that Radar objects appear at the correct bearing relative to your vessel's bow. You should check the bearing alignment for any new installation.

Checking alignment

Align the bow with a stationary object between 0.25 and 2 NM away.

Reduce the gain to make the target as small as possible on the screen.

Note the position of the object on the Radar screen. If the target is not under the ship's heading marker (SHM), then bearing alignment adjustment is required.

Adjusting alignment

Adjust the **Bearing alignment** setting until the target object appears under the SHM.

Bearing alignment setting can be accessed from the **Installation** tab: **Menu > Installation > Bearing alignment**.

Note: Heading (HDG) is displayed in the Radar application. Please be aware that bearing alignment refers to the **relative** bearing of **targets** to the vessel's bow using visual checks / traditional means.

19.5 Radar modes

The Radar app provides preset modes that can be used to quickly achieve the best picture depending on your current situation. Only Radar modes supported by your Radar scanner are shown.

To change Radar mode select the required mode from the Radar app menu.

Note:

Non-HD Digital radomes use **Sea clutter** settings selection to enable supported modes.



HARBOR

Harbor mode takes into account land clutter that is typically encountered in a Harbor, so that smaller targets are still visible. This mode is useful when navigating in a Harbor.

Radar scanners: All.



BUOY

Buoy mode enhances the detection of smaller targets such as mooring buoys, and is useful at ranges up to 3/4nm.

Radar scanners: SuperHD™ Open Array, HD Open Array and HD Radome.



COASTAL

Coastal mode takes into account slightly higher levels of Sea clutter that are encountered out of Harbor areas. This mode is useful when in open water but keeping to coastal areas.

Radar scanners: All excluding Cyclone.



OFFSHORE

Offshore mode takes into account high levels of Sea clutter so that targets are still visible, useful when navigating in open water away from the coast.

Radar scanners: All.



BIRD

Bird mode optimizes the display to help identify flocks of birds, useful when trying to locate a fishing area.

Radar scanners: Cyclone, Magnum, SuperHD™ Open Array, HD Open Array and HD Radome.



WEATHER

Weather mode optimizes the display to help identify precipitation, useful for helping determine weather fronts.

Radar scanners: Quantum™ and Quantum™ 2 Doppler.

19.6 Range rings

Range rings are evenly spaced concentric circles displayed on the screen that are centered on your vessel. Range rings enable you to easily estimate the distance between two points on the Radar screen.


By default range rings are set to automatic with the number of range rings displayed and spacing between them determined automatically by the Radar app's range.

The **Range ring mode** can be changed to **Preferred number**. When preferred number is selected you can specify your preferred number of range rings (i.e.: 2, 4, or 6). The number of preferred rings includes the azimuth ring.

Note:

Due to the relationship between range and ring spacing it is not always possible to display the preferred number at all ranges.

Range ring settings can be accessed from the Presentation tab: **Menu > Presentation**.

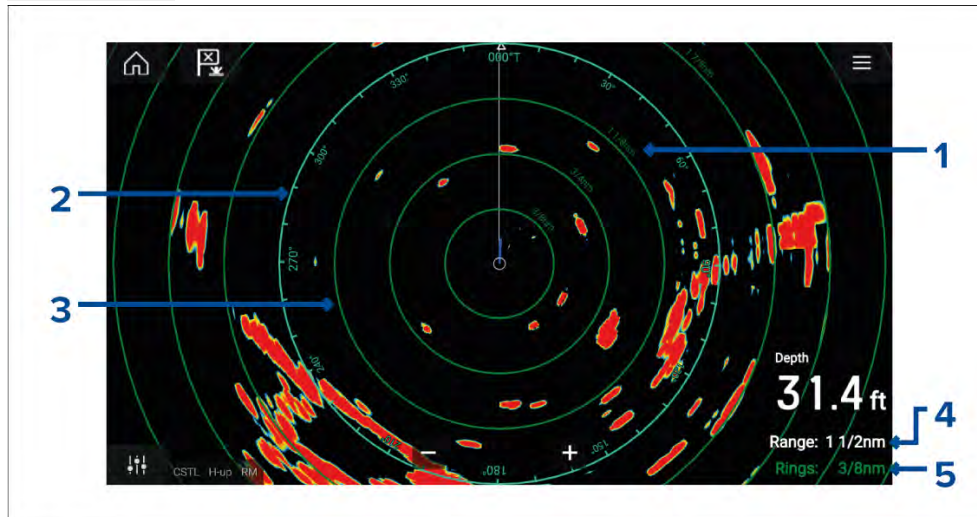


1. **Range ring distance** — each range ring includes the distance from your vessel.
2. **Azimuth ring** — The azimuth ring is the outermost range ring on the screen and is the farthest complete ring on the screen.
3. **Range ring** — evenly spaced concentric rings.

4. **Range** — shows the range displayed onscreen and is also the distance that the azimuth ring is placed at.
5. **Rings** — identifies the distance between each ring.

19.7 Range and bearing

The Radar app helps you identify a target's range (distance) and bearing from your vessel.

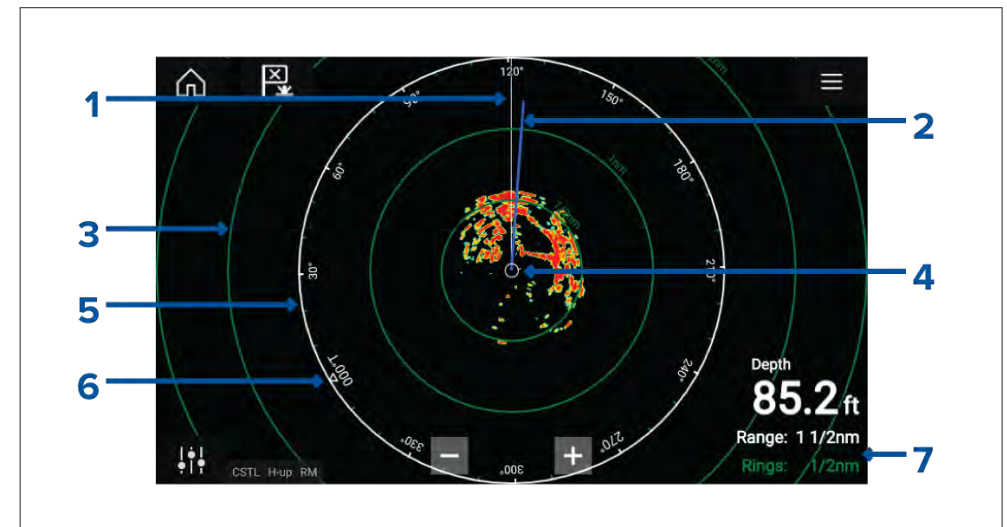

1. SHM (Ships heading marker).
2. COG/SOG line (Points in the direction of travel (COG), with the length of the vector providing an indication of speed (SOG)).
3. Range rings.
4. Vessel position.
5. Azimuth ring (The White ring identifies the distance from your vessel to the top edge of the screen. Bearing indicators are also provided around the ring).
6. North indicator (Always points North).
7. Current displayed Range and Ring separation distance (Range: identifies the distance from your vessel to the top edge of the screen. Rings: identifies the distance between each Range Ring).

The displayed range can be adjusted at anytime using the Range controls.


Range rings can be switched off from the Presentation tab: **Menu > Settings > Presentation > Range rings:**

You can also choose whether to display a numerical range indicator against each ring using the **Range ring labels:** option.

VRM (Variable Range Marker) / EBL (Electronic Bearing Line)

VRM/EBL is used to determine a targets range and bearing from your vessel, or from another target. 2 VRM/EBLs are available which are enabled from the context menu.


Context menu > More options > VRM/EBL 1 or **Context menu > More options > VRM/EBL 2**

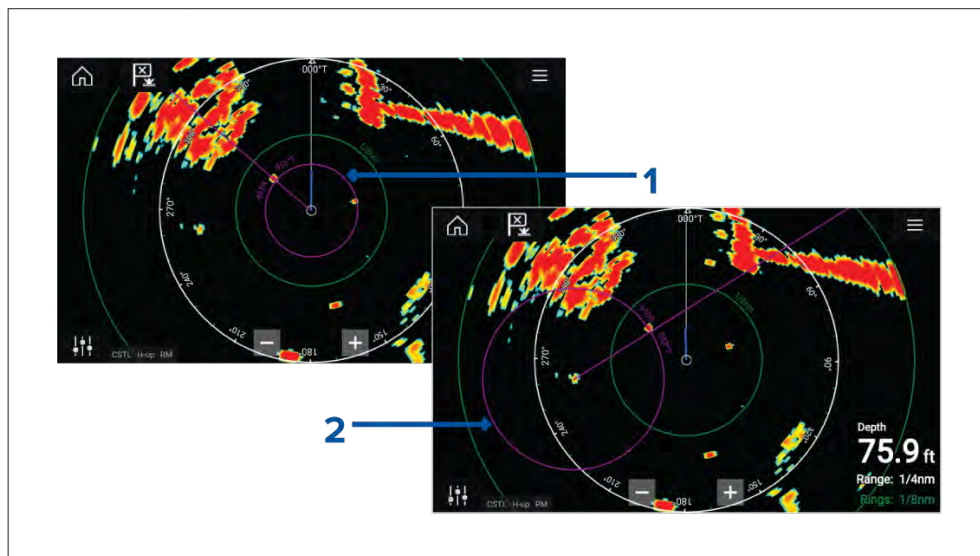

1. **Centered VRM/EBL** You can use a 'Centered' (on your vessel) VRM/EBL to determine the range and bearing of targets in relation to your vessel.
2. **Floating VRM/EBL** You can use a 'Floating' VRM/EBL to determine the range and bearing between 2 targets.

Editing a VRM-EBL

Once a VRM/EBL has been placed you can adjust its size and position.

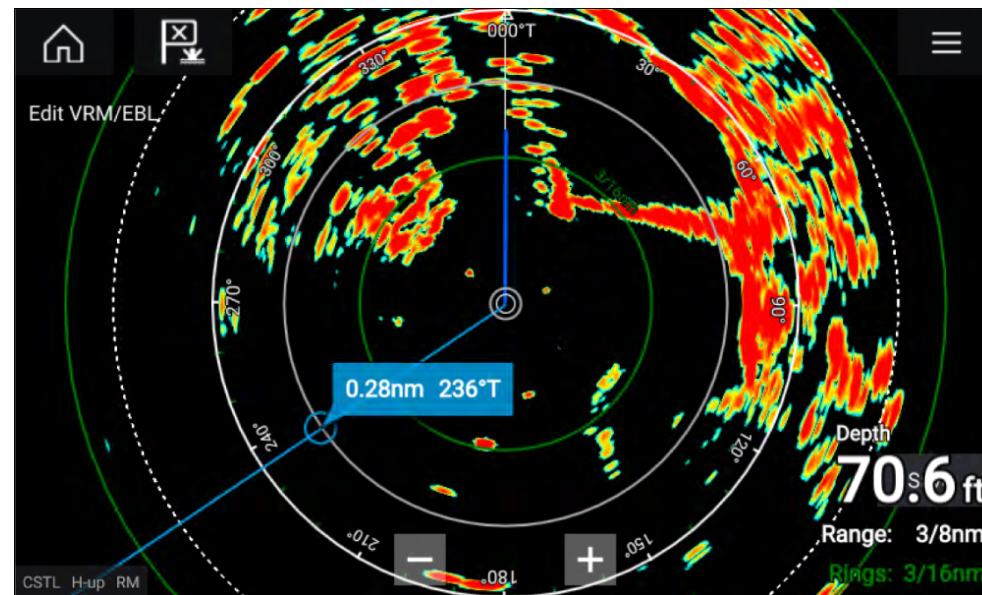


1. Select **Edit VRM/EBL** from the context menu.
2. To adjust the VRM/EBL select the desired target or drag the labelled circle to the target.
3. To create a floating VRM/EBL Drag the center circle to the desired target.

19.8 AIS targets

With compatible AIS hardware connected to your MFD, AIS targets can be automatically displayed in the Chart app and Radar app.

Tracked AIS targets are identified onscreen using target symbols.

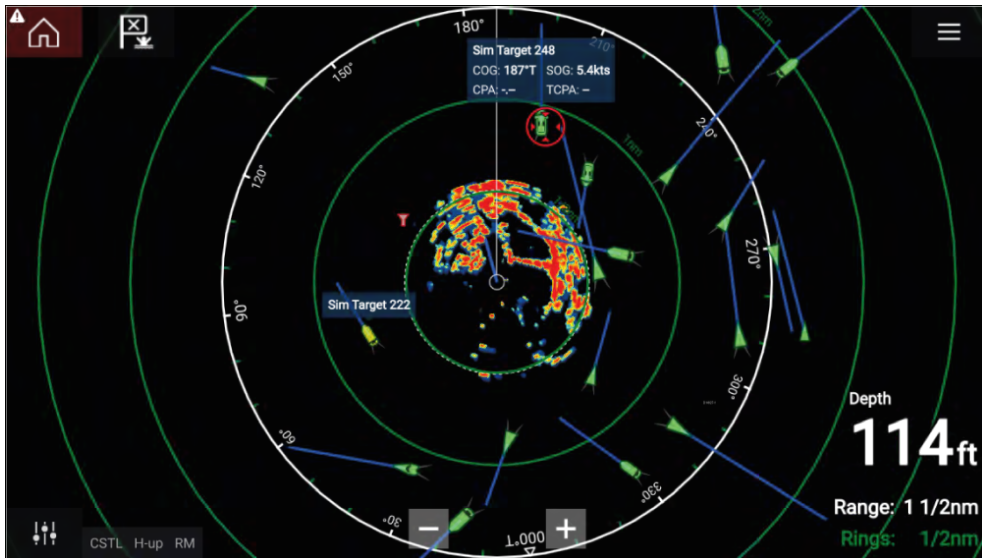

Up to 100 AIS targets can be tracked simultaneously. If more than 100 targets exist, within your range, the 100 targets nearest to your vessel will be displayed.

Target vectors and information can be displayed for each target by selecting the relevant option from the AIS target context menu. The AIS target context menu is accessed by selecting the AIS target.

You can also select the type of AIS targets that should be displayed, i.e.: **All**, **Dangerous**, **Buddies** and hide static targets from the AIS Settings tab.

AIS target list

AIS targets appear in the AIS target list.

The AIS target list can be accessed by selecting the **AIS** tab from the **Targets** menu: **Menu > Targets > AIS**.



The list identifies: Target name and Range and Bearing (from your vessel). Where relevant, CPA (Closest point of approach) and TCPA (Time to Closest Point of Approach) values are also shown.

Selecting a target from the list will highlight the selected target in the **LiveView** pane on the right of the screen and display Pop-over options. Pop-over options enable you to **View full target data** or add an AIS target a buddy by selecting **Add as buddy**.







AIS icons used for targets marked as buddies will be filled yellow. You can also rename buddy targets or remove buddies using the Pop-over options.

AIS targets

AIS icons are used to identify AIS targets onscreen.







By default the following icons are used:

AIS icons


| | | | |
|---|-------------------------|---|--------------------------------------|
|  | Vessel |  | SART (Search and Rescue Transponder) |
|  | Land-based station |  | ATON |
|  | SAR (Search and Rescue) |  | Virtual ATON |

You can enable enhanced AIS target icons from the **AIS Settings** menu: **Menu > Targets > AIS Settings > Enhanced AIS targets** or the **Advanced settings** menu: **Menu > Settings > Advanced > Enhanced AIS targets**. When Enhanced AIS targets is enabled the Enhanced AIS icons are used.

Enhanced AIS icons







| | | | |
|---|---|---|--------------|
|  | Sailing Vessel |  | Commercial |
|  | High speed vessel / Wing In Ground vessel |  | Cargo vessel |
|  | Passenger vessel |  | Other |

Enhanced AIS icons are scaled or outlined according to the reported size of the vessel, as shown below:

| | | | |
|---|--------------------------------|--|--|
|  | Relative length (Gray outline) | | |
|---|--------------------------------|--|--|

The status of an AIS target can be shown using different colors, outlines and flashing as shown below:

AIS target status

| | | | |
|---|-----------------------------------|---|--|
|  | Lost (No border, crossed through) |  | Uncertain (Dashed outline) |
|  | Buddy (Yellow fill) |  | Dangerous and Uncertain (Dashed outline and Flashes Red) |
|  | Dangerous (Flashes Red) |  | ATON off position (Red border) |

Note:

When the MFD is configured as 'First responder' and is connected to STEDs compatible AIS hardware, Blue Force AIS icons are used to identify other STEDs equipped vessels. For details refer to: [p.278 — Blue Force Tracking](#)

AIS settings menu

You can configure AIS target settings from the **AIS Settings** menu: **Menu > Targets > AIS Settings**.

The following options are available:


- **Show AIS targets in chart / Show AIS targets in Radar** — Enables and disables display of AIS targets in the Chart app / Radar app.
- **Enhanced AIS targets** — Enables and disables the display of enhanced AIS target icons.
- **AIS names** — When enabled, AIS target names are permanently displayed next to AIS target icons.

- **Show these AIS types** — Enables selection of the types of AIS target that will be displayed. Available AIS types:
 - All
 - Dangerous
 - Buddies
- **Hide static targets** — When enabled, AIS targets travelling under 2 knots will not be displayed, unless it is or becomes dangerous.
- **Silent mode (don't transmit my position)** — When enabled, your vessel's AIS transceiver will not transmit your position or details to other AIS equipped vessels.

19.9 Radar targets

With a compatible Radar scanner connected to your MFD, radar targets can be tracked in the Chart app and Radar app. Depending on your Radar scanner, radar targets can be acquired manually or automatically, based on your configured **Guard zones**.

Tracked radar targets are identified onscreen using target symbols.

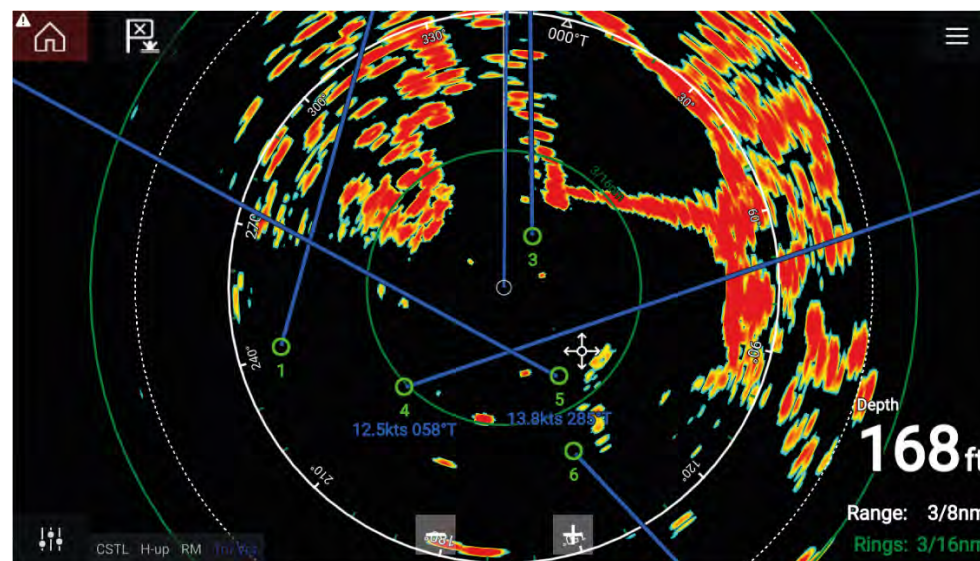

Multiple radar targets can be tracked simultaneously.

Target vectors and information can be displayed for each target.

Radar target options are available from the Radar target context menu. The Radar target context menu provides options for you to **Cancel target**, **Show CPA** graphic or display **Target info** onscreen by selecting the relevant option. The Radar context menu is accessed by selecting the radar target.

Radar target acquisition data source requirements







Radar target acquisition requires the following data sources to be available on your system (e.g. connected to your multifunction display, via SeaTalkng® or NMEA 0183).

| Data type | Example data source |
|--------------------------|--|
| COG (Course Over Ground) | GPS or GNSS receiver (MFD internal receiver or external receiver). |
| SOG (Speed Over Ground) | GPS or GNSS receiver (MFD internal receiver or external receiver). |
| HDG / HDT (True Heading) | Compass or Autopilot sensor providing Fastheading data (e.g. Evolution EV-1 / EV-2). |

Radar targets

Radar target symbols are used to identify Radar targets onscreen.

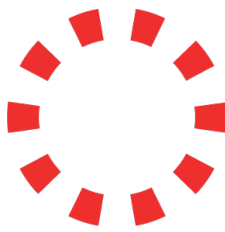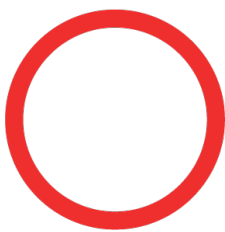Radar targets are displayed in the Radar app and when Radar overlay is enabled (**Chart app > Menu > Targets > Radar settings > RADAR OVERLAY > Show radar overlay**) they are also displayed in the Chart app.

| | | | |
|--|---|--|--|
|  | Acquiring target (manual) — Thin dashed Green circle |  | Acquired target (manual) — Green circle with Target ID |
|  | Acquiring target (auto) — Thick dashed Red circle, flashes until acknowledged |  | Unacknowledged acquired target (auto) — Red circle, flashes until acknowledged |
|  | Dangerous target — Red circle with Target ID, flashes until acknowledged |  | Lost target (Target not detected for 4 Radar scans) — Gray circle with Red cross through |

Once acquired the target's COG (Course Over Ground) and SOG (Speed Over Ground) can be displayed below the target ID.

The Target info is colored Blue if COG and SOG values are True or Orange if values are Relative. Target info will turn Red if the target becomes dangerous.


Acquiring a target manually

To acquire a Radar target manually using MARPA (Mini Automatic Radar Plotting Aid) follow the steps below.

1. Select the object / target.
The context menu is displayed.
2. Select **Acquire target**.
Once acquired the target will be tracked.

Automatic target acquisition

With a compatible Radar scanner connected, Radar targets can be acquired automatically.

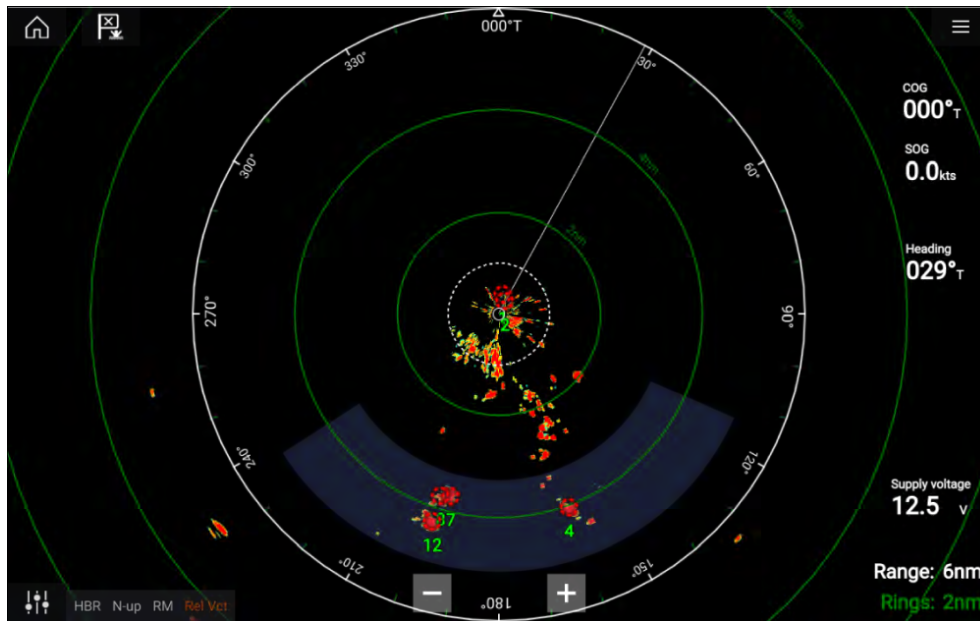


Once configured, targets which enter or appear in your chosen **Guard Zone(s)** will be automatically acquired.

Note:

- Automatic target acquisition cannot be enabled at the same time as **Timed Transmit** or **Dual Range**.
- Automatic target acquisition will be temporarily paused if the Radar display range is 12nm or greater.

Setting up automatic target acquisition

Follow the steps below to configure automatic target acquisition.

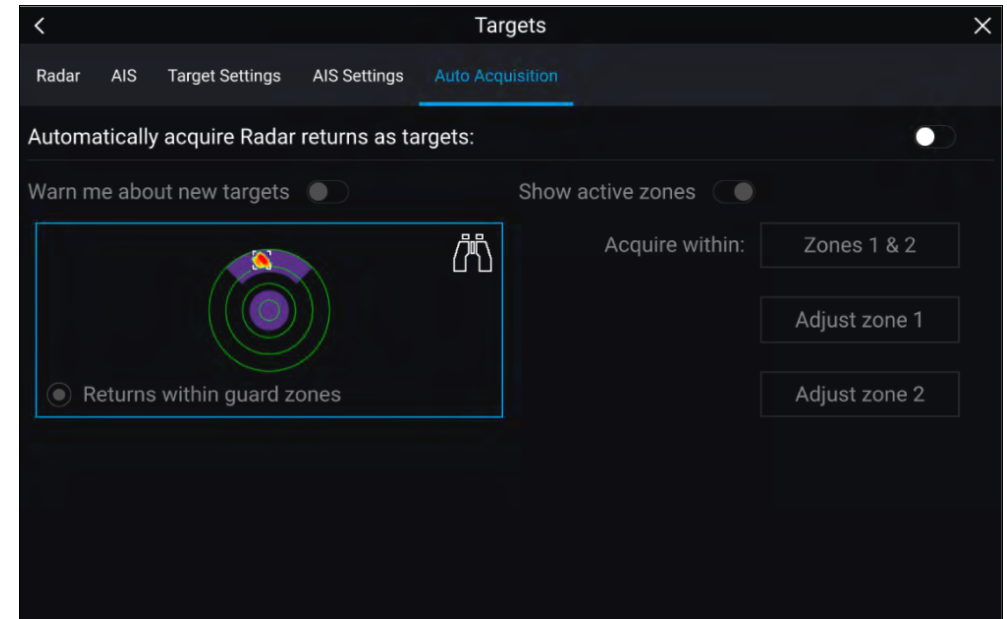

1. Select the **Auto Acquisition** tab from the Target menu: (**Menu > Targets > Auto Acquisition**).
2. Enable Automatic Target Acquisition by selecting the **Automatically acquire Radar returns as targets** toggle switch.
3. Select the **Acquire within** box and choose **Guard zone 1**, **Guard zone 2** or **Zones 1 & 2** as required.
4. To enable onscreen pop-up notifications of new targets which have been acquired automatically, select the **Warn me about new targets** toggle switch.
When multiple targets are acquired simultaneously, an Info dialog is displayed.
5. You can also adjust the size and position of the Guard zones directly from the **Auto Acquisition** page by selecting **Adjust zone 1** or **Adjust zone 2**.

Radar target list

The target list identifies: Target number, Range and Bearing from your vessel. Where relevant, CPA (Closest point of approach) and TCPA (Time to Closest Point of Approach) values will also be displayed.

The Radar target list can be accessed from the Targets menu in the Radar app and Chart app: **Menu > Targets > Radar**.

The Radar target list can be sorted by either Number or Range by selecting the **Sorted By** option located at the bottom of the LiveView pane:

- Number — List sorted by Target number so that the first detected target appears at the top of the list.
- Range — List sorted by proximity to your vessel with the closest target appearing at the top of the list. The list will automatically update as targets become closer or farther away.

Selecting a target from the list highlights the selected target in the LiveView app pane on the right of the page and opens the Pop-over menu.

| Target | Range | Bearing | CPA | TCPA | |
|--------|--------|---------|--------|---------|---|
| 1 | 0.87nm | 113°S | | 0m 0s | ⊗ |
| 2 | | | 1.57nm | 3m 14s | ⊗ |
| 3 | | | 2.33nm | 41m 45s | ⊗ |

Radar targets can be cancelled individually by selecting the 'X' next to the target's details in the list, or you can cancel all targets by selecting **Cancel all targets**.

Target settings


Target vectors, target history and object trail graphics can be displayed onscreen to improve situational and collision awareness.

Target settings can be accessed from the **Target Settings** tab: **Menu > Targets > Target settings**.


Reference mode

Target settings can be configured to either **True** or **Relative** mode. In True mode, Trails, Vectors and History are colored Blue and are shown ground referenced (i.e. the object or target's actual Course Over Ground (COG)). In Relative mode, Trails, Vectors and History are colored Orange and are shown relative to your vessel's movement.

To switch the target reference mode, select the **REFERENCE MODE** setting. Alternatively, you can switch reference mode by selecting the onscreen **Image Adjustment** icon and then selecting either **True** or **Relative**.

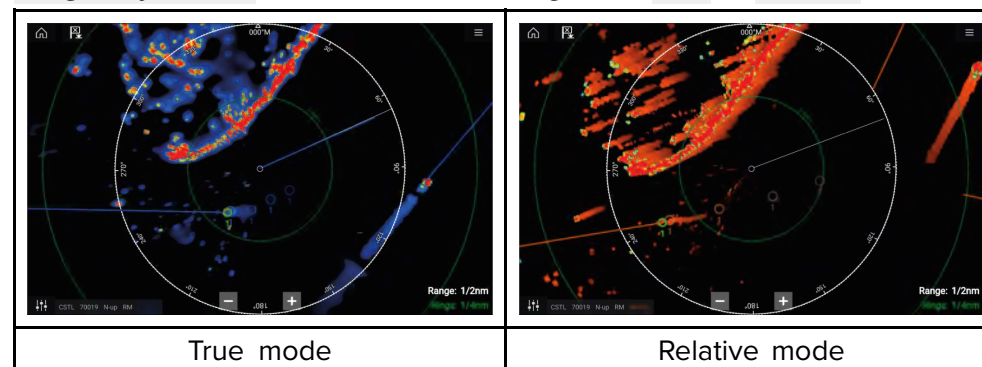

The **Target Settings** reference mode is independent of your vessel's motion mode.

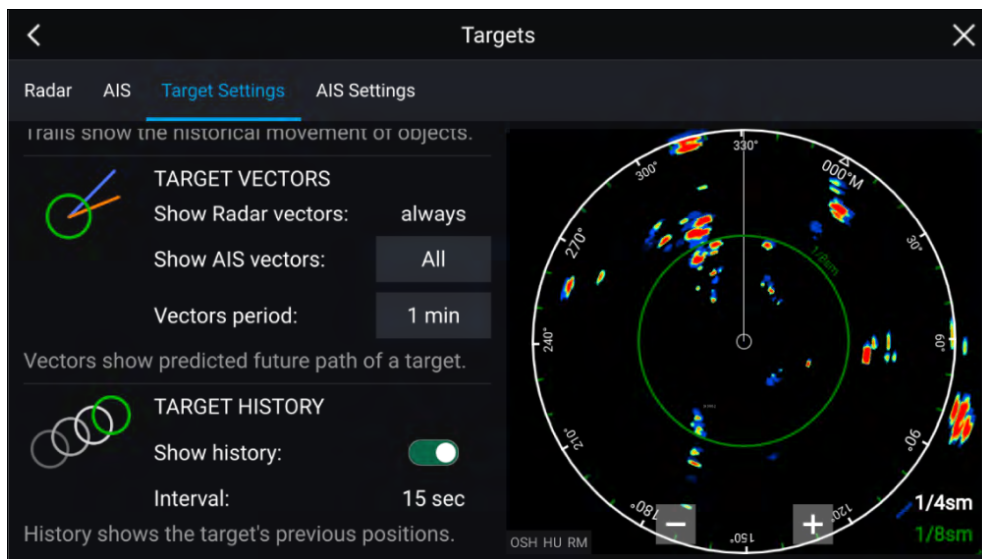

Target vectors

Target vectors show the predicted future course of a target.

Target vectors for acquired Radar targets are always shown. By default, target vectors are also shown for all AIS targets. You can switch the **Show AIS vectors** to Manual, enabling you to switch vectors for AIS targets On or Off for each target individually, via the target context menu.


The length of the Vector line signifies where the target will be after the time specified in **Vector period** has passed. The Vector period can be adjusted by selecting the current **Vector period** value and choosing a time from the Pop-over options.

Target history

Target history shows a target's previous positions.

Target history can be enabled or disabled using the **Show history** toggle switch.

Target history is plotted by displaying a target symbol at the vessel's position each time the value specified in the **Interval** setting has passed. The **Interval** is automatically calculated based on the target vector's **Vector period**, divided by 4.

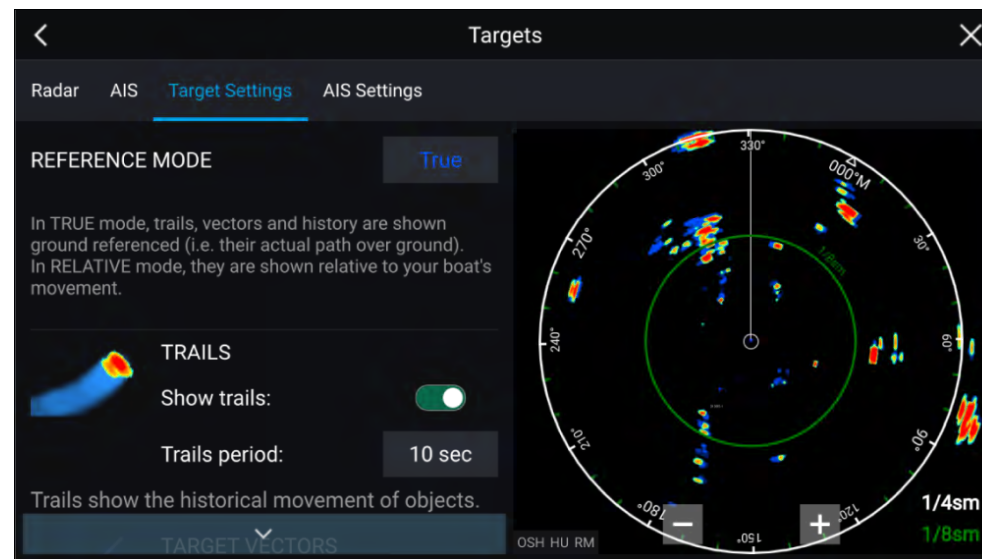

Trails


Trails plot the historical movements of objects (Radar returns) for the time specified in the **Trails period** setting.

Trails are subject to the selected "Reference Mode" (i.e. **True**, to show actual motion over "ground" (COG), or **Relative**, to show motion relative to your vessel).

Trails can be enabled and disabled using the **Show trails** toggle switch. Historical object position is shown as a colored trail behind the object.

Onscreen target settings

Target settings and information are also available using the onscreen **Image adjustment** icon.

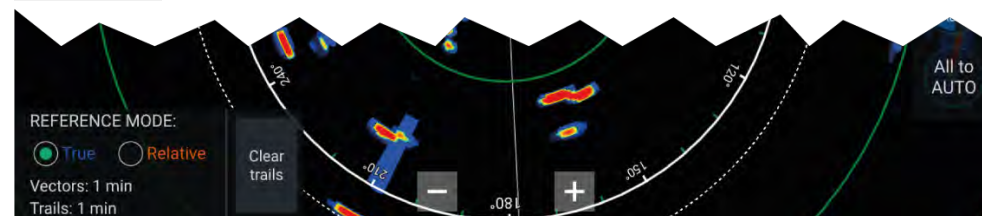

The following target settings and information is available:

- **REFERENCE MODE** — Choose whether Radar targets and objects are displayed in **True** or **Relative** reference mode.

- **Vector period and Trail interval** — Displays currently selected values.
- **Clear trails** — Clears and resets the trails displayed onscreen.

Clearing / resetting trails


In an area with multiple target returns, trails can clutter the Radar image, reducing its ability to provide a target's path, under these circumstances you can remove all existing trails using the onscreen **Clear trails** option.

1. Select the onscreen **Image adjustment** icon.
2. Select **Clear trails**.

Target context menu

A target context menu is available that provides quick access to useful target settings.

To open the Radar target context menu, select a target onscreen.

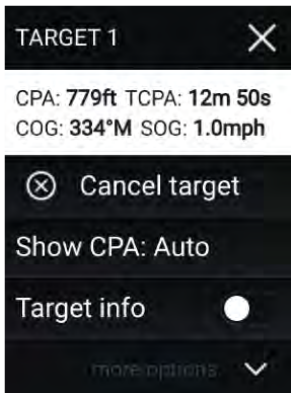


The Radar context menu provides CPA, TCPA, COG and SOG data for the selected target. The context menu also provides the following target menu options:

- **Cancel target** — The Radar target will no longer be tracked.
- **Show CPA** — Determines whether CPA graphics are shown. The default option is Auto which displays CPA graphics for the target if it becomes dangerous. You can also set CPA graphics to On, which displays CPA graphics, if there is an intersect point between your vessel's current course and the target's. When set to Off no CPA graphics will be displayed for the target.
- **Target info** — Determines whether the target's SOG and COG information is displayed under the target onscreen.

19.10 Dangerous targets alarm

You can use the Dangerous targets alarm to notify you if a Radar or AIS target will reach a specified distance from your vessel within a specified time.

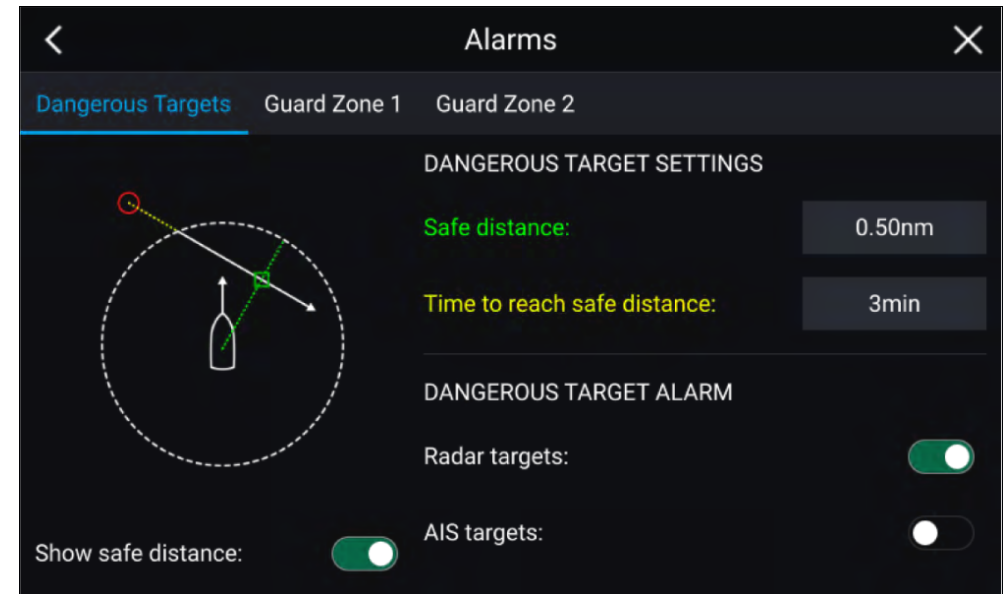

To set up the Dangerous target alarm, first adjust the **Safe distance** to the desired value and then select a **Time to reach safe distance**. The alarm will be triggered if a tracked target will reach the specified Safe distance from your vessel within the time period selected.

You can choose whether you want the Dangerous target alarm to trigger for Radar and / or AIS targets.


You can display a Safe distance ring around your vessel in the Radar app using the **Show safe distance** control.

19.11 Guard zone alarms

Guard zones alert you if a Radar return is detected within the Guard zone area.

2 Guard zones can be configured for each connected Radar scanner.

The Guard zones can be configured from the **Alarms** menu: **Menu > Alarms > Guard zone 1** or **Menu > Alarms > Guard zone 2**

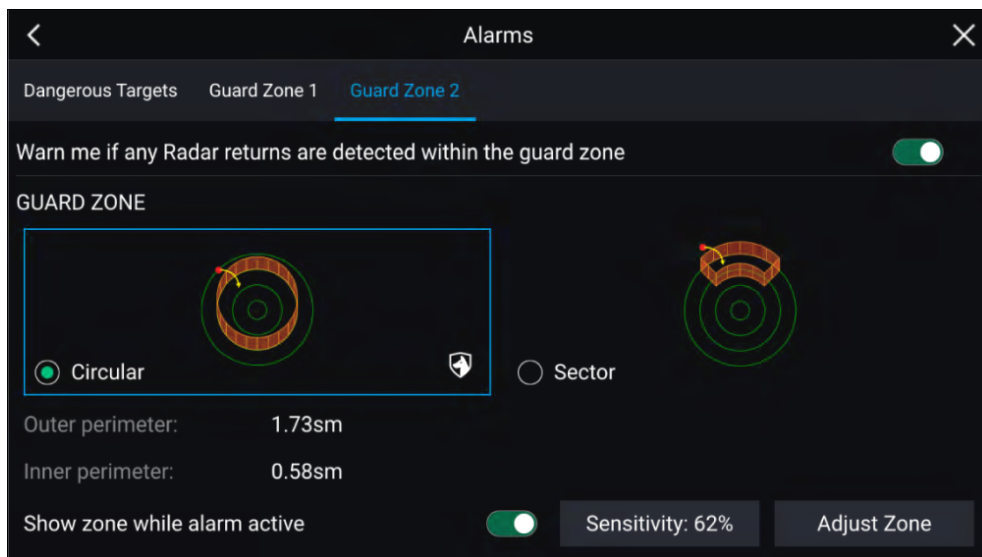

A Guard zone can be configured as a sector or as a circle around your vessel. Selecting **Adjust Zone** allows you to configure the size of the Guard Zone.



Adjust the guard zone's size by dragging the inner and outer perimeter end points (circles) to the desired locations.

Once configure select **Back**.

If required, you can also adjust the Guard zone sensitivity. Sensitivity determines the size at which objects trigger the alarm.

19.12 Doppler Radar overview

Doppler Radar technology makes it easier to track moving objects with ground speed exceeding 3 knots.


The Doppler function highlights objects on the Radar display that are moving towards or away from the vessel (e.g. other vessels, but not land or buoys, for example). Stationary targets will not be highlighted.

Doppler Radar technology is particularly beneficial in a marine environment, where poor weather conditions and visibility can make object tracking challenging. With the integration of Doppler information on the Radar display, the process of matching on-screen Radar returns with real-world objects becomes a much simpler task.

Doppler Radar works by transmitting a microwave signal which is then reflected off a moving object at a distance. By analyzing how the object's motion has altered the frequency of the returned signal, the Doppler Radar can interpret the variation to provide highly accurate measurements of an object's direction of travel, relative to the Radar scanner.

Doppler mode

When a compatible Radar scanner is connected, Doppler mode is available.

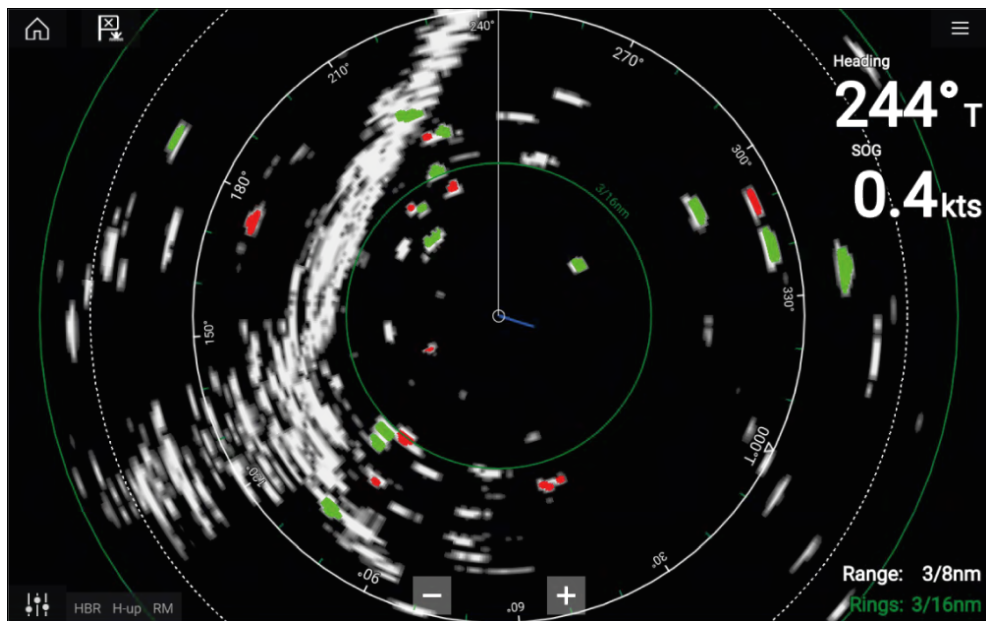

Doppler mode — Enabling and disabling

Doppler mode is enabled from the Main menu: **Menu > Doppler**.

With Doppler mode enabled, the color palette will change to the default Doppler palette: All approaching targets will be colored Red, and all targets moving away from you will be colored Green.

Doppler mode is suspended at ranges of 12 nm and greater. The Radar color palette will remain the same but targets will not be highlighted.

Doppler mode — Color palettes

Doppler has unique color palettes which help to ensure the Red and Green Doppler targets stand out from the Radar image. When Doppler is enabled, the standard color palette setting will show only the unique Doppler color palettes: **Doppler grey**, **Doppler blue** and **Doppler yellow**. A **Full Color** option is also available.

Note:

If 'Full color' is selected for the Radar palette, approaching targets will appear Pink instead of Red.

The Color palettes can be selected from the Presentation tab: **Menu > Settings > Presentation**.

Caution: Doppler limitations

When the target's speed is more than 60 knots Speed Over Ground (SOG), or the relative speed between your vessel and the target is greater than 120 knots, the direction of target returns from high speed vessels may be displayed incorrectly. Consequently, **the displayed target colors may be inverted, with targets colored red when they should be green, and vice versa.**

Doppler data source requirements

Use of the Doppler Radar features requires the following data sources to be available on your system (e.g. connected to your multifunction display, via SeaTalkng® or NMEA 0183).

Required data sources

| Data type | Example data source |
|--------------------------|--|
| COG (Course Over Ground) | GPS or GNSS receiver (MFD internal receiver or external receiver). |
| SOG (Speed Over Ground) | GPS or GNSS receiver (MFD internal receiver or external receiver). |

Recommended data source

| Data type | Example data source |
|--------------------------|--|
| HDG / HDT (True Heading) | Compass or Autopilot sensor providing Fastheading data (e.g. Evolution EV-1 / EV-2). |

Note:

A Heading data source is not essential for Doppler operation. However it will improve the performance of Doppler mode at slower speeds (< 15 knots), when tide set and leeway are present.

19.13 Blank sectors

Blank sectors can be manually set to hide specific sections of your radar display.

This feature is useful for vessels that experience false radar readings from onboard structures or equipment.


As blanking also physically disables the scanner's transmitter for the sector that you define, this feature is also useful for protecting crew members from radar radio frequency emissions when they are in close proximity to the radar antenna. One example of this scenario is when the helm is within the beamwidth of the radar antenna.

Note:

Sector blanking is only available with Cyclone solid state open array, Magnum™ Open Array and Quantum™ 2 Doppler running Radar software version 2.46 or above.


Blank sectors can be enabled from the Radar app settings: **Radar app > Settings menu > Installation**

Two blank sectors can be enabled. You can edit the minimum and maximum limits of each blank sector; this will determine how much of the radar display is hidden.

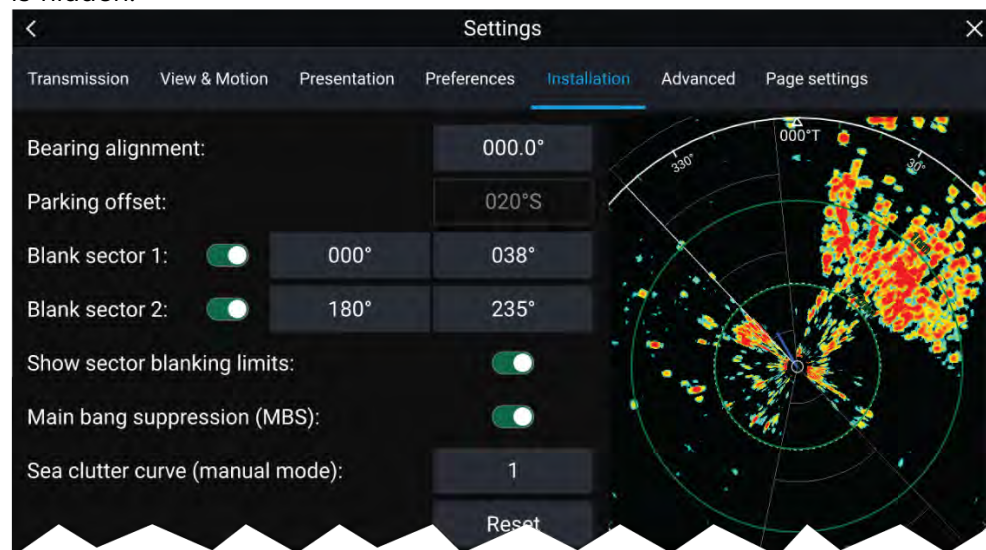

Blank sectors can be enabled / disabled on the radar overlay in the Chart app: **Chart app > Settings menu > Radar settings**

For more information refer to [Radar settings](#)

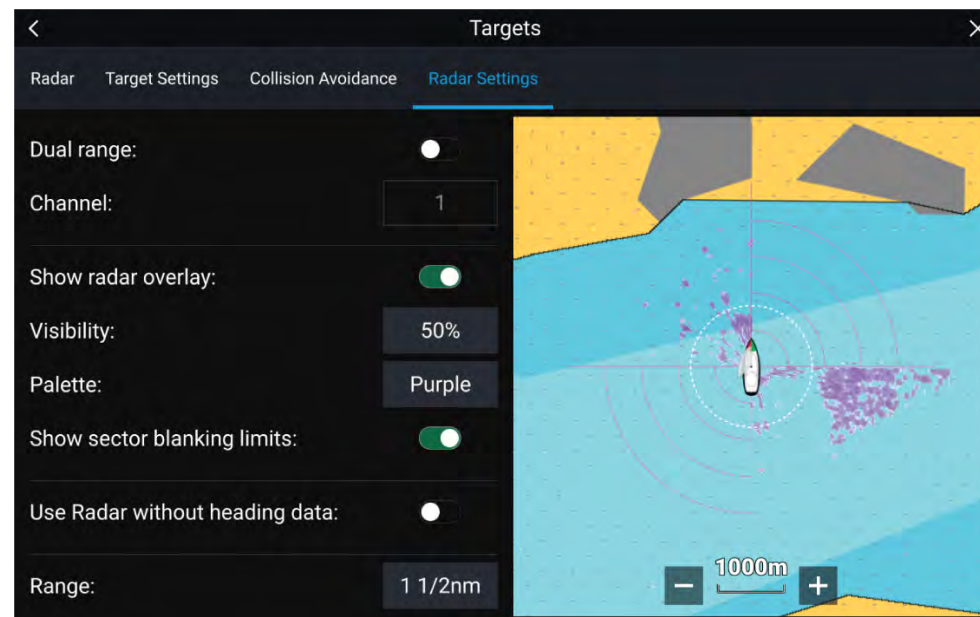






19.14 Radar sensitivity controls

Optimum performance is usually achieved using the default settings. You can adjust the image using the Sensitivity controls to improve the displayed image.



Sensitivity settings can be accessed using the onscreen **Image adjustment** icon, or the Adjust sensitivity menu option: **Menu > Adjust sensitivity**.

The Sensitivity controls available are dependant upon the Radar scanner in use.

| Control | Name | Description |
|---|-----------------|---|
|  | 'G' Gain | The control determines the signal strength at which target returns are shown onscreen. The Gain control can be set to Auto or Manual . A higher value produces more target returns and noise onscreen. |
|  | 'R' Rain | Precipitation appears on the Radar screen as lots of small echoes which continuously change size, intensity and position. The Rain control suppresses these echoes making it easier to identify real object. The higher the Rain control is set the more echoes will be suppressed. |
|  | 'S' Sea | Radar echoes from waves can clutter the Radar screen. The Sea control suppresses these echoes (for up to 5 nm depending on conditions) making it easier to identify real objects. The higher the Sea control is set the more echoes will be suppressed. |
|  | 'CG' Color Gain | The control sets the lower limit for the color used for the strongest target returns. All target returns above this value are displayed in the strongest color. Those with a weaker value are divided equally between the remaining colors. The control can be set to Auto or Manual . |
|  | All to Auto | Sets all Sensitivity settings to Auto with 0% offset. |

19.15 Radar settings menus

The radar settings menu is organized into tabs with settings and options appearing under the relevant tab. The following settings menus are available:

- **Transmission** For details refer to: [p.262 – Transmission settings menu](#)
- **View & Motion** For details refer to: [p.263 – View & Motion settings menu](#)
- **Presentation** For details refer to: [p.264 – Presentation settings menu](#)
- **Preferences** For details refer to: [p.264 – Preferences settings menu](#)
- **Installation** For details refer to: [p.265 – Installation settings menu](#)
- **Advanced** For details refer to: [p.266 – Advanced settings menu](#)
- **Page settings** For details refer to: [p.266 – Page settings menu](#)

Transmission settings menu

The transmission settings menu provides options relating to radar scanner selection and operation.

| Menu item and description | Options |
|---|---|
| Scanner Allows you to select the radar scanner that you want to use. (In systems featuring multiple connected radar scanners). | List of available Radar scanners. |
| Channel shown in this app Determines which channel is shown in the radar app. | <ul style="list-style-type: none"> • Channel 1 (Long range) • Channel 2 (Short range) |
| Antenna size selection Open array radar antenna size selection. | <ul style="list-style-type: none"> • 4ft • 6ft |
| Timed transmit Enables and disables Timed transmit. Timed transmit configures your radar to transmit at periodic intervals to conserve power. | <ul style="list-style-type: none"> • On • Off |

| Menu item and description | Options |
|--|--|
| <p>Standby Determines the length of time the radar is in Standby for in time transmit mode.</p> | <ul style="list-style-type: none"> • 3 min • 5 min • 10 min • 15 min |
| <p>Transmit Determines the amount of scans the radar will perform when transmitting in time transmit mode.</p> | <ul style="list-style-type: none"> • 10 scans • 20 scans • 30 scans |
| <p>Dual range Enables and disables dual range, which enables you to display 2 different ranges simultaneously.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Range Fusion Enables the Range Fusion feature when using dual range on Cyclone radar scanners. With Range Fusion, short and long pulses are combined to provide a high-clarity Radar image for both short-range and long-range targets, simultaneously.</p> <p>Note: Option only available on Cyclone radar scanners.</p> | <ul style="list-style-type: none"> • On • Off |

View & Motion settings menu

The view and motion settings menu contains settings that allow you to control how the radar is displayed in relation to your vessel.

| Menu item and description | Options |
|--|---|
| <p>Orientation Head-up The top of the screen always points towards your vessel's current heading and as your heading changes the Radar image rotates accordingly. In Head-up the motion mode is fixed to Relative motion.</p> <p>North-up The top of the screen always points towards north and as your vessel's heading changes the SHM rotates accordingly.</p> <p>Course-up In Course-up the top of the screen always points towards your destination and as your heading changes the SHM rotates accordingly.</p> | <ul style="list-style-type: none"> • Head-up • North-up • Course-up |
| <p>Motion mode Relative motion The position of your vessel remains fixed onscreen and the Radar image moves relative to your position. In Relative motion mode you can adjust your vessel's onscreen position using the Boat position setting.</p> <p>True motion Stationary Radar targets remain fixed and moving targets, including your vessel, move in true perspective to each other and to landmass. As your vessel's position reaches the edge of the screen, the image is redrawn to reveal the area ahead. In True motion mode the boat position is fixed to Full offset.</p> | <ul style="list-style-type: none"> • Relative motion • True motion |
| <p>Boat position The boat position determines the position of your vessel onscreen. You can adjust the Boat position to provide a greater distance ahead of your vessel. Your boat position can only be changed in Relative motion mode.</p> | <ul style="list-style-type: none"> • Center • Partial offset • Full offset |

Presentation settings menu

The presentation settings menu provides options for what is displayed on the screen.

| Menu item and description | Options |
|---|--|
| Range rings Enables and disables Range rings in the Radar app. | <ul style="list-style-type: none"> • On • Off |
| Range ring labels Enables and disables Range ring distance labels in the Radar app. | <ul style="list-style-type: none"> • On • Off |
| Range ring mode The number of Range rings displayed in the Radar app can be either set automatically according to the displayed range or you can specify a preferred number of range rings. | <ul style="list-style-type: none"> • Auto • Preferred number |
| Rings When Range ring mode is set to Preferred number use this setting to specify your preferred number. | <ul style="list-style-type: none"> • 2 • 4 • 6 |
| Color palette Allows selection of the color palette. | List of color palettes. |
| Show waypoints Allows the display of waypoint icons in the Radar app. | <ul style="list-style-type: none"> • On • Off |

Preferences settings menu

The preferences settings menu provides options to help you customize your radar to your personal preference.

| Description | Options |
|---|--|
| VRM/EBL reference Determines the reference point used for VRM/EBLs. | <ul style="list-style-type: none"> • True/Mag • Relative |
| Interference rejection Suppresses interference from other Radar scanners in the vicinity. | <ul style="list-style-type: none"> • On • Off |

| Description | Options |
|---|--|
| Interference rejection level Determines the amount of interference suppression used. Only available when Interference rejection is enabled. | <ul style="list-style-type: none"> • Quantum™ / Cyclone • Level 1 to Level 5 • Non-HD Digital Radomes • Normal • High |
| Near Target Enhancement The size of targets within the first half of the displayed range will be increased to provide a more consistent size of targets as they approach your vessel (i.e. the center of the screen). | <ul style="list-style-type: none"> • On • Off |
| Note: Option only available on Cyclone radar scanners. | |
| Expanded returns When enabled, increases the Radar pulse length to provide larger target returns. | <ul style="list-style-type: none"> • On • Off |
| Expansion level Determines the amount of target expansion applied. Only available when Target expansion is enabled. | <ul style="list-style-type: none"> • Low • High |
| Tune adjust Allows you to adjust the Radar scanners receiver for maximum target returns. It is recommended that the Radar scanner is allowed to warm up for at least 10 minutes prior to making adjustments. | <ul style="list-style-type: none"> • Auto • Manual (0% to 100%) |
| Radar Rotation Speed Allows you to select the appropriate rotation speed for your range. The Auto option provides an increased refresh rate at Radar ranges up to 3 nm. | <ul style="list-style-type: none"> • 24 RPM • Auto (24 / 48 RPM) |

| Description | Options |
|--|---|
| <p>Transmit frequency Changing the Transmit frequency can reduce interference on the Radar image.</p> | <ul style="list-style-type: none"> • Low • Normal • High |
| <p>Beam sharpening Reduces the beamwidth of the radar by the amount specified in Beam sharpening amount, to produce targets that have less resolution making it easier to identify targets that are close together. Intended for radars with 3ft or 4ft antennas, which have less beamwidth than a 6ft antenna.</p> <p>Note: Option only available on Cyclone radar scanners.</p> | <ul style="list-style-type: none"> • On • Off |
| <p>Beam sharpening amount Percentage of radar's beamwidth reduction for Beam sharpening.</p> | <ul style="list-style-type: none"> • 0% to 100% |

Installation settings menu

The installation settings menu provides options used during installation to help set up your radar

During normal operation it should not be necessary to adjust Installation settings.

| Menu item and description | Options |
|---|--|
| <p>Bearing alignment Enables you to align the Radar image correctly in relation to your vessel's bow. Correct alignment is necessary for the accurate display of radar returns and targets.</p> | <ul style="list-style-type: none"> • 179.5° Port to 180° Starboard |
| <p>Parking offset Allows you to select the "parked" position of your Open Array's antenna, which is the physical position that the antenna will be in, relative to the pedestal when the radar is in Standby. This feature is only available when the Open Array radar scanner is in Standby.</p> | <ul style="list-style-type: none"> • 0° to 359° |
| <p>Blank sector 1 Allows you to hide a specific section of the radar display, creating a "blank" sector onscreen that shows no radar signal returns.</p> <p>Note: Sector blanking is only available with Cyclone solid state open array, Magnum™ Open Array and Quantum™ 2 Doppler running Radar software version 2.46 or above.</p> | <ul style="list-style-type: none"> • 0° to 359° • 0° to 10° (default) |
| <p>Blank sector 2 Allows you to hide an additional section of the radar display, creating a "blank" sector onscreen that shows no radar signal returns.</p> <p>Note: Sector blanking is only available with Cyclone solid state open array, Magnum™ Open Array and Quantum™ 2 Doppler running Radar software version 2.46 or above.</p> | <ul style="list-style-type: none"> • 0° to 359° • 180° to 190° (default) |

| Menu item and description | Options |
|---|---|
| Main Bang Suppression (MBS) MBS eliminates saturation in radar returns displayed in the immediate vicinity of your vessel. When adjusting Zero range it is recommended that MBS is set to Off. | <ul style="list-style-type: none"> • Off • On |
| Sea clutter curve Adjusts the Radar scanner's sensitivity to Sea clutter. | <ul style="list-style-type: none"> • 1 to 8 |

- **Data Overlays** — Enables configuration of Data overlays, which overlay key information from connected sensors onto the Chart, Radar, Sonar and Camera apps.
- **Edit split ratio** — Enables you to customize the position of the partitions in splitscreen app pages. For example, 50/50, 70/30 etc.

Advanced settings menu

The advanced setting men contains advanced settings related to the radar.

During normal operation it should not be necessary to adjust Installation settings.

| Menu item and description | Options |
|---|---|
| Tune preset Radar tuning is controlled either automatically or manually, using the Tune adjust setting. Tune preset controls the range available to the Tune adjust control. | <ul style="list-style-type: none"> • 0 to 255 |
| STC preset The Sensitivity Time Control (STC) can be used to equalize targets across the image. If you find targets are brighter or dimmer nearer the center of the image adjust the STC preset until the desired result is achieved. | <ul style="list-style-type: none"> • 0% to 100% |
| Zero range Zero range (Display timing) is used to configure the zero range of the Radar scanner so that objects appear at the correct distance. | <ul style="list-style-type: none"> • 0 to 153m / 502ft |
| Reset Resets Installation and advanced settings to factory defaults. | <ul style="list-style-type: none"> • Yes • No |

Page settings menu

The page settings menu contains settings related to page layout.

The following options are available:

CHAPTER 20: FIRST RESPONDER

CHAPTER CONTENTS

- 20.1 First responder configuration — page 268
- 20.2 Heading and SOG Homescreen status — page 270
- 20.3 Settings password protection — page 270
- 20.4 Depth data monitor — page 271
- 20.5 Data logging — page 271
- 20.6 Waypoint at Range and Bearing from location — page 272
- 20.7 Intel targets — page 272
- 20.8 DSC targets — page 273
- 20.9 Target Of Interest (TOI) — page 275
- 20.10 First responder AIS modes — page 278
- 20.11 SITREP (Situation report) — page 279
- 20.12 SAR pattern receipt — page 279
- 20.13 Messaging — page 280
- 20.14 Import and export Waypoints and Routes over NMEA networks — page 282

20.1 First responder configuration

Configuring the MFD for First responders enables extra features that are otherwise not available on the MFD. Several of the First responder features require a STEDs compatible AIS transceiver to provide Sensitive Tactical Information Exchange and Display System (STEDS) functionality.

First responder and STEDS features require **First responder** to be selected as the 'Boating activity' during step 2 of the MFD's initial startup wizard.

Note:

To change boating activity a factory reset must be performed to initiate the startup wizard.

STEDS specific features also require:

- an AIS5000 to be connected to the same NMEA 2000 / SeaTalkng[®] network as the MFD.

Note: The AIS5000 must be correctly configured with an MMSI number and where required a radio operators license must be obtained.

- each vessel must be configured with the same STEDS passphrase.

STEDS features use the existing Automatic Identification System (AIS) network to transmit and receive messages and data but as the messages and data are encrypted they are not visible or available to standard Class A and Class B AIS receivers/ transceivers.

STEDs encryption

The encryption is 128bit AES encryption which is compliant with the requirements of FIPS (Federal Information Processing Standard Publication). The symmetric STEDs passphrase is used to encrypt and decrypt STEDs messages to ensure that only vessels with MFDs configured with the same passphrase can send and receive the messages.

e.g.: If another law enforcement geographically close to your network of vessels also uses the STEDs encrypted MFD functionality, unless they have a matching key there cannot be any interaction between the 2 agencies, and instead each agency will see the other's vessels as a normal AIS target (providing they aren't in AIS restricted mode).

Note:

On an MFD network only the Data master MFD needs to be configured.

First responder features:

The following features are available when the MFD is configured as 'First responder':

- The **Responder** settings menu tab is available and the **Responder vessel type** can be selected. For details refer to: [p.269 – Responder setup](#)
- Data logging is enabled. For details refer to: [p.271 – Data logging](#)
- DSC target tracking are enabled. For details refer to: [p.273 – DSC targets](#)
- Intel target tracking is available. For details refer to: [p.272 – Intel targets](#)
- LightHouse™ charts obstruction alarm is available For details refer to: [p.158 – Obstruction alarm \(legacy LightHouse charts\)](#)
- Settings password protection. For details refer to: [p.270 – Settings password protection](#)
- Place waypoint at range and bearing: [p.272 – Waypoint at Range and Bearing from location](#)
- Homescreen Heading and SOG indication: [p.270 – Heading and SOG Homescreen status](#)
- Depth data monitoring: [p.271 – Depth data monitor](#)
- Importing and exporting waypoints and Routes over NMEA networks: [p.282 – Import and export Waypoints and Routes over NMEA networks](#)

First responder STEDS features:

The following STEDS features are available when the MFD is configured as 'First responder' and the STEDS requirements have been met:

- The STEDS text messaging app is available: For details refer to: [p.280 – Messaging](#)
- SITREP status can be configured. For details refer to: [p.279 – SITREP \(Situation report\)](#)
- AIS restricted mode is available. For details refer to: [p.278 – First responder AIS modes](#)
- Targets of Interest (TOI) feature is enabled. For details refer to: [p.275 – Target Of Interest \(TOI\)](#)
- Search and Rescue (SAR) patterns can be received over STEDS messaging. For details refer to: [p.279 – SAR pattern receipt](#)
- Blue Force tracking is used to identify other STEDS configured vessels. For details refer to: [p.278 – Blue Force Tracking](#)

Responder setup

The Responder menu tab is only available when **First responder** is selected as the 'Boating activity' during step 2 of the MFD's initial startup wizard. The Responder menu includes settings for STEDS specific features, which require an AIS5000 to be connected to the system.

Vessel details

- **Responder vessel type** — Select your responder vessel type from a list.
- **Boat name** — Enter your vessel name (this option is also available in the Boat details menu).

MMSI / AIS

- **MMSI** — Set your vessel's MMSI number.

Important:

- In the United States of America (USA), the MMSI and Static Data must be entered only by a Raymarine® dealer or other appropriately qualified installer of marine communications equipment for marine vessels. In the USA, the user is NOT authorized to do this.
- In Europe and other parts of the world outside of the United States of America, the MMSI can be set up by the user.
- For further details, refer to the relevant Telecommunications Regulatory Body for your region.

- **AIS mode** — Determines the transmit/receive mode of STEDS AIS hardware. For details see: [p.278 — First responder AIS modes](#)

STEDS passphrase

- **Passphrase** — Enter the designated passphrase your team / organization is using to transmit and receive STEDS messages.
- **Clear passphrase** — Deletes the entered passphrase.
- **Passphrase auto-wipe** — Passphrase expiry. Set the number of days before the passphrase is automatically deleted (the passphrase will be wiped at 00:00 UTC).

Data logging

- **Data logging** — Enables and disables Data logging.
- **Logging interval** — Time interval between recording data.
- **Save to:** — Select the card slot to use for Data logging.

Password protection

- **Activate password lock / Deactivate password lock** — When activated critical settings cannot be changed without entering the specified password.

Advanced

- **Advanced set-up** — Configure OneShot TOI settings and STEDS messaging transmission FIDs and checksums.
 - For details on OneShot TOI settings see: [p.276 — TOI OneShot settings](#)
 - For details on FIDs and checksums see: [STEDS messaging transmission FIDs and checksums](#)

STEDS messaging transmission FIDs and checksums

The SITREP and Static data functional IDs (FIDs) and FID checksum validation can be enabled and disabled from the **Advanced set-up** menu. **Homescreen > Settings > Responder > Advanced set-up > Configure**

STEDS messages

The following transmission SITREP and Static data FIDs are available:

- Tx FID 10 (SITREP)
- Tx FID 11 (Static data)
- Tx FID 56 (Legacy SITREP)
- Tx FID 57 (Legacy static data)

Note:

FID 10 and FID 11 are enabled by default. FID 56 and FID 57 are disabled by default.

Checksum validation

Checksum validation is enabled by default but can be enabled and disabled from the **Transmission checksums** menu: **Homescreen > Settings > Responder > Advanced set-up > Configure > Transmission checksums**.

When enabled received FID's checksums are checked to validate messages.


Checksum validation is available for the following FIDs:

- FID 3— PI message acknowledgement
- FID 4 — Target of interest — 15s
- FID 5 — Target of interest — 60s
- FID 6 — Target of interest — 180s
- FID 7 — Target of interest — 600s

- FID 8 — Target of interest — single
- FID 10 — Situation report (v0 and v1 supported when clear)
- FID 11 — Static data report (v0 and v1 supported when clear)
- FID 23 — Search pattern report (encrypted)
- FID 28 — Text message

20.2 Heading and SOG Homescreen status

When either Heading or Speed Over Ground (SOG) data is not available then a relevant message is displayed in the top right corner of the Homescreen under the GNSS (GPS) status..

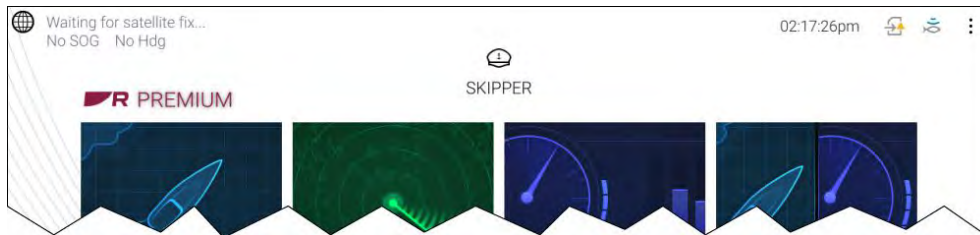

- **No SOG** is displayed if no source for SOG data is available.
- **No Hdg** is displayed if no source of heading data is available.

20.3 Settings password protection

Critical settings can be password protected to prevent them from being changed inadvertently.

The settings password lock is activated from the Responder settings tab menu: **Homescreen > Settings > Responder**.

Important:

If the password is forgotten the MFD will require a Power on reset to remove the password. Refer to: [p.388 — Performing a power on reset - Axiom Pro](#)

If password protection has been activated the following settings cannot be changed without entering the password:

Depth transducer settings

The settings for where depth readings are taken from and if applicable the associated depth offset value, located in the Fishfinder app settings menu: **Fishfinder > Settings > Transducer**.

Wireless connection settings

The following settings located in the **This display** menu: **Homescreen > Settings > This display**.

- **Wireless display**
- **Allow devices to connect via Wi-Fi**
- **Pair with Quantum**.
- **Settings reset**
- **Factory reset**
- **Bluetooth settings**

Boat details settings

The following settings located in the Boat detail menu: **Homescreen > Settings > Boat details**

- **Min safe height**
- **Min safe width**
- **Min safe depth**
- **Boat length**
- **Bow to GPS**

Homescreen settings

The following settings accessed from the Homescreen:

- **Bluetooth settings** — accessed from the status area.
- **Wi-Fi connection** — accessed from the 3rd party **Apps** page.
- **Homescreen app page pop-over** — accessed by pressing an holding on a blank space or app page icon..

20.4 Depth data monitor

MFDs configured to use the First responder profile will constantly monitor the availability of depth data.

If depth data becomes unavailable (i.e.: lost) then the Depth measurement lost alarm is triggered. If depth data is intermittent then the alarm will only be triggered once every 60 seconds. The alarm will be automatically dismissed when depth data becomes available again.



Note:

The depth measurement lost alarm is permanently enabled when using the First responder profile and cannot be disabled.

20.5 Data logging

The Data Logger records, at regular intervals, readings taken by your vessel's equipment, an active Man overboard alarm, and the 5 closest AIS targets.


The Data logger is enabled by default and records data to a CSV file saved to a MicroSD card inserted into a card slot on the MFD. A new CSV file is created every hour up to a maximum of 73 files (72 hours of data), after which the first file will be overwritten by the next new Data logging file.

If the MicroSD card is removed or reaches capacity, Data logging will be suspended and a notification will be displayed onscreen.

Note:

- On MFD networks only the Data master MFD can be used to perform data logging.
- For optimal performance, Do NOT use cartography cards for Data logging.

The status of the Data logger is displayed in the status area of the Homescreen using icons.

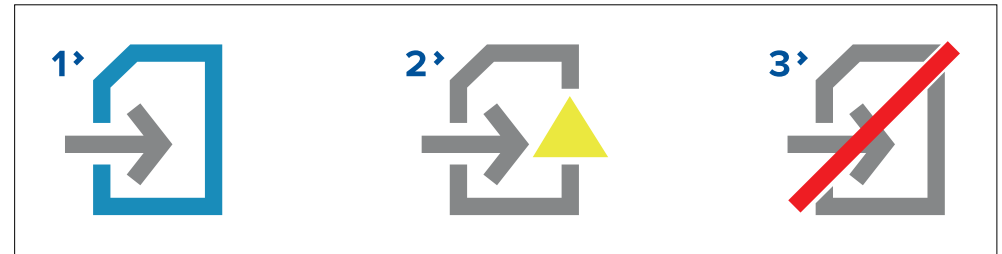

1. Data logging active
2. Data logging error (e.g.: no MicroSD card inserted)
3. Data logging disabled

The Data logger records the following data, when available:

Own vessel:

- Date and time
- Latitude and Longitude
- Heading
- Speed (SOG)
- Depth

Man Overboard:

- Latitude and Longitude
- Elapsed time

5 closest AIS targets:

- Vessel name
- Vessel MMSI
- Latitude and Longitude
- Heading
- Speed (SOG)


The Data logger can be configured from the **Responder** settings menu: **Homescreen > Settings > Responder**.

20.6 Waypoint at Range and Bearing from location

If an intelligence report is received that provides a target's range and bearing from the reporter's location a waypoint can be created using the reported details.

The waypoint can be placed in the Chart app by opening the Chart context menu at the location given and selecting **more options** and then **Place Wpt at Rng/Brg** to open the Waypoint dialog.

Screenshot of chart context menu and new waypoint dialog

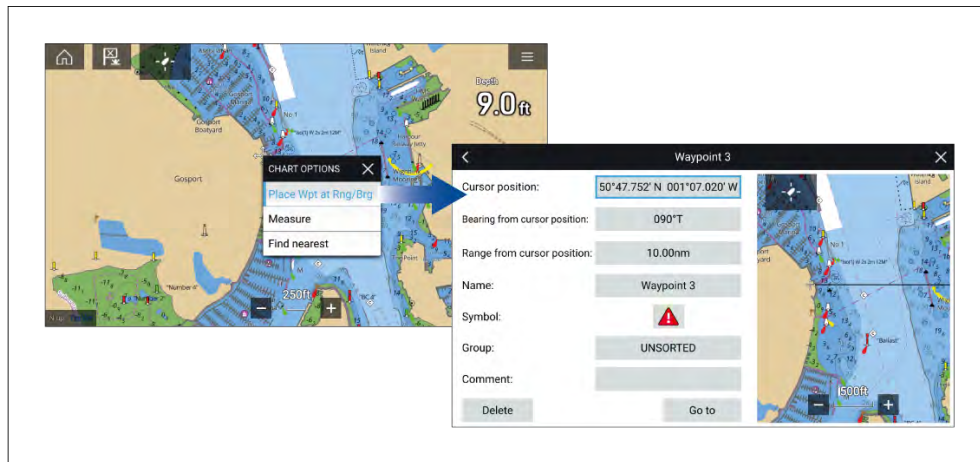

As a minimum the following fields are required to create the waypoint:

- **Cursor position** — Enter the reporter's coordinates
- **Bearing from cursor position** — Enter the reported target's Bearing
- **Range from cursor position** — Enter the reported target's Range

The following additional fields can be completed, if required:

- **Name** — Give the Waypoint a name
- **Symbol** — Change the default Waypoint symbol.
- **Group** — Assign the Waypoint to a Waypoint group.
- **Comments** — Add any additional details.


To finalize the waypoint creation select **Back** or **Close** the dialogue.

From the Waypoint from range and bearing dialogue you can also **Delete** the Waypoint if you do not want to keep it, or initiate a **Go to**.

20.7 Intel targets

Intel targets are targets created manually based on visual or reported information of a vessel's position and if available, course and speed.

Intel targets are listed in the Intel targets list and an icon is used in the Chart app to represent the target.

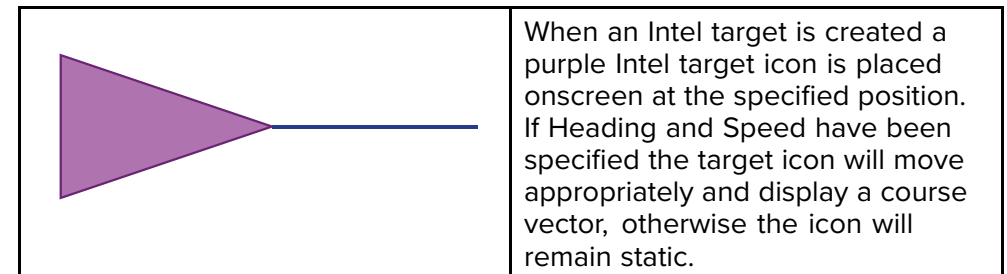


When an Intel target is created a purple Intel target icon is placed onscreen at the specified position. If Heading and Speed have been specified the target icon will move appropriately and display a course vector, otherwise the icon will remain static.

Intel targets will remain on the system until cancelled.

Creating an Intel target

Targets can be creating using reported or sighted information about a targets location, Heading and Speed.

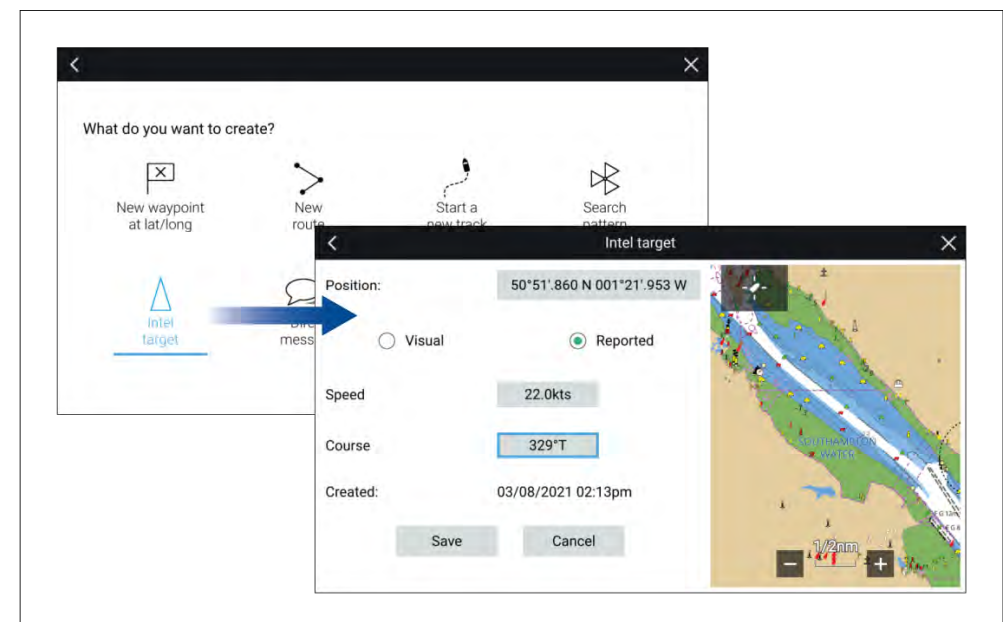

Intel targets are created from the Chart app's **New** menu: **Menu > New > Intel target**

To create an Intel target follow the steps below:

1. Place the cursor at the desired location in the Chart app..
2. Select **New** from the Chart app menu.
3. Select **Intel target**.
4. Ensure that the latitude and longitude for the target are correct in the **Position** field, adjusting if necessary.
5. Select whether the Intel is **Visual** or **Reported**.
6. Enter a **Speed** and **Course** for the Intel target.
7. Select **Save**.

The Intel target will be displayed in the Chart app using a purple target icon.

Intel targets can also be created from the Pop-over options in the Intel targets list: **Menu > Targets > Intel > New intel target**.

Accessing target options

Target specific options are available for targets that are currently being tracked. The target options can be accessed from the target's context menu and from the Pop-over options in the relevant target list. The options available are dependent on the type of target.

To access a target's context menu:

- Press and hold on the target onscreen, or
- Highlight the target onscreen using the **Direction controls** and press the **OK** button.

To access the target list Pop-over menu:

- Select the target in the relevant target list, or
- Highlight the target in the list using the **Direction controls** and press the **OK** button.

Intel target options

The following options are available for Intel targets.

- **Designate TOI** — If your MFD is configured for STEDS you can designate a target as a Target of Interest (TOI). For details see: [p.275 — Target Of Interest \(TOI\)](#)
- **Cancel Target** — Cancels the Intel target and removes it from the system.


- **Intercept** — Initiates a Target interception . For details see: [p.160 — Target intercept](#)
- **Show on chart** — Displays the target centered in the Chart app.

Intel target list

The target list identifies the target position, course, speed and the type of intel the target is based on (i.e.: Visual or Reported.). If the target has been designated as a TOI then the related Link ID will also be displayed.

The Intel targets list can be accessed from the Targets menu in the Radar app and Chart app: **Menu > Targets > Intel**.

Selecting a target from the list highlights the selected target in the LiveView app pane on the right of the page and opens the Pop-over menu.

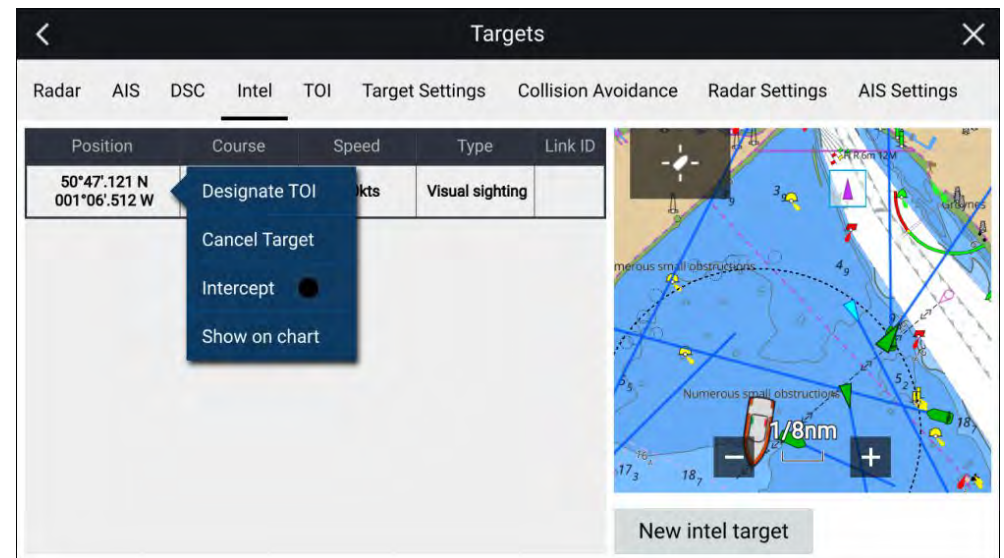


20.8 DSC targets

Waypoints created from DSC notifications will be displayed in the DSC target list and are displayed onscreen at the originating vessel's reported position.

For details on creating a waypoint from a DSC notification see: [p.81 — DSC VHF radio integration](#)

DSC target symbols are static and remain in the reported position, however if a DSC position update is received a new DSC waypoint symbol can be placed at the new location.

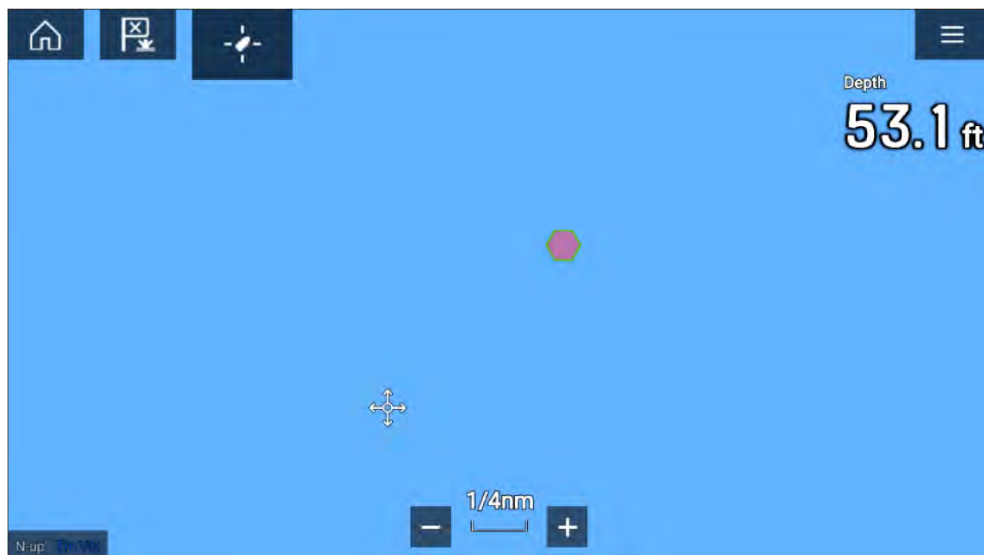

DSC targets will remain on the system until cancelled manually.

Accessing target options

Target specific options are available for targets that are currently being tracked. The target options can be accessed from the target's context menu and from the Pop-over options in the relevant target list. The options available are dependent on the type of target.

To access a target's context menu:

- Press and hold on the target onscreen, or
- Highlight the target onscreen using the **Direction controls** and press the **OK** button.

To access the target list Pop-over menu:

- Select the target in the relevant target list, or
- Highlight the target in the list using the **Direction controls** and press the **OK** button.

DSC target options

The following options are available for DSC targets.


- **Designate TOI** — If your MFD is configured for STEDS you can designate a target as a Target of Interest (TOI). For details see: [p.275 — Target Of Interest \(TOI\)](#)
- **Cancel Target** — Cancels the DSC target and removes the DSC waypoint from the system.
- **Intercept** — Initiates a Target interception . For details see: [p.160 — Target intercept](#)
- **Goto** — Initiate navigation to the target position.
- **Show on chart** — Displays the target centered in the Chart app.

DSC target list

The target list identifies: The MMSI number of the originating vessel, its reported Position, Range and Bearing from your vessel and the Type of distress. If the target has been designated as a TOI then the related Link ID will also be displayed.

The DSC target list can be accessed from the Targets menu in the Radar app and Chart app: **Menu > Targets > DSC**

Selecting a target from the list highlights the selected target in the LiveView app pane on the right of the page and opens the Pop-over menu.

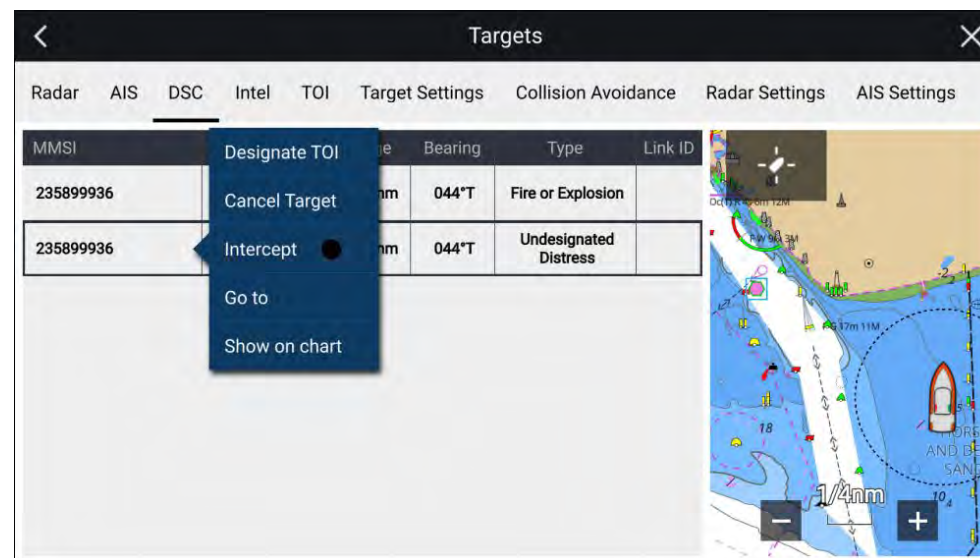

20.9 Target Of Interest (TOI)

AIS, Radar, DSC and Intel targets can be designated as TOIs. Once a target is designated as a TOI, STEDS messaging is used to broadcast the TOI to all vessels in range or to send the TOI to an individual MMSI number. TOIs can also be received over STEDS messaging.




Important:

Recipient MFDs must have the same STEDS passphrase installed as the sender's MFD.

TOIs can be assigned as 'OneShot' TOIs or as recurring TOIs. OneShot TOIs are sent once and are automatically cancelled after a specified decay period. Recurring TOIs are repeated until cancelled at the selected transmission rate.

TOIs created from Inter targets or DSC targets are always assigned as OneShot TOIs.


TOI icons are displayed in the Chart app and Radar app. Different icons are used to differentiate between sent and received TOIs.
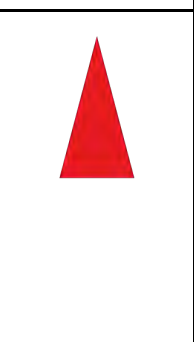
| | |
|---|---|
|  | <p>Sent recurring TOI icon A recurring TOI is represented on the sender's MFD using a red triangle icon with 2 red rings around it. Recurring TOIs will be tracked until cancelled.</p> |
|  | <p>Sent OneShot TOI icon A OneShot TOI is represented on the sender's MFD using a red triangle icon with 2 red dashed rings around it. OneShot TOIs will be tracked until the decay period has elapsed. See: p.275 – OneShot TOI decay times</p> |
|  | <p>Received TOI icon A TOI that has been received from another vessel is represented on the recipient's MFD using a red triangle icon. When a TOI message is received a notification is displayed onscreen. The incoming message is saved in the Messages app. A TOI received from another vessel cannot be forwarded on to other vessels. Received TOIs will be tracked until cancelled.</p> |

If a Radar target or AIS target that a TOI is based on becomes lost then the TOI will also become lost.

OneShot TOI decay times

TOIs designated as OneShot are temporary and are subject to a delay period before reverting to their original target states (i.e.: AIS target, Radar target, DSC target or Intel target).

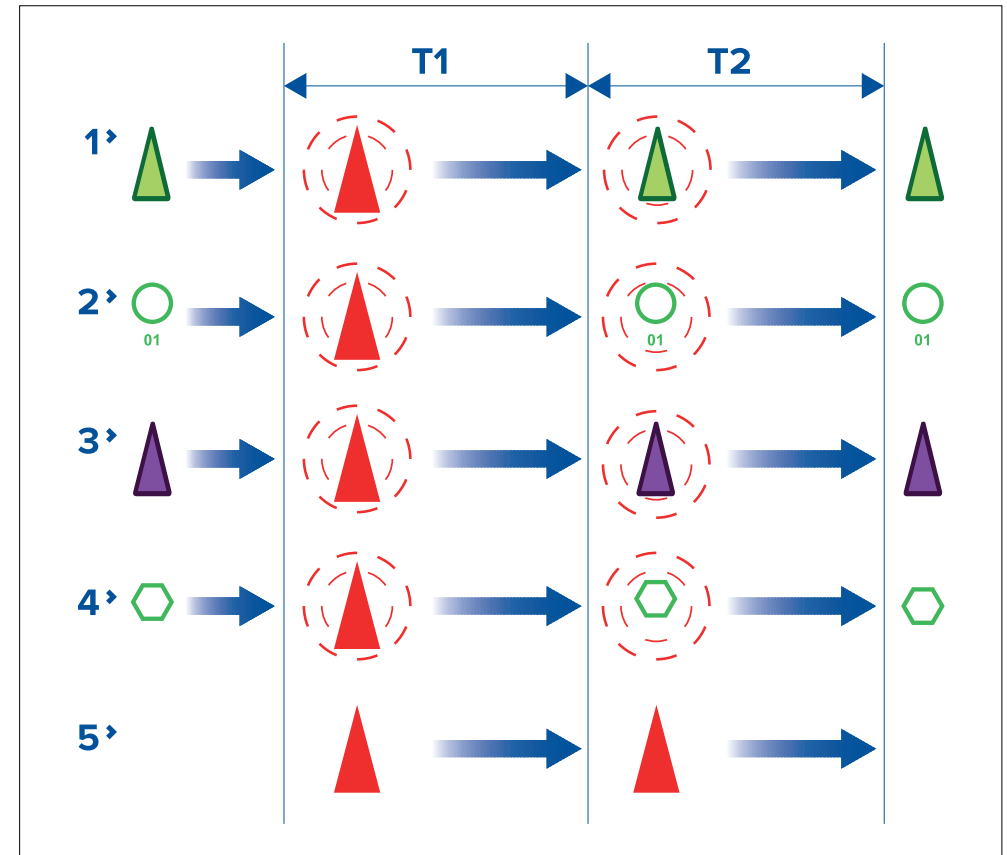

- **T1** Initial delay — The OneShot TOI icon is used to represent OneShot TOIs until an initial delay period has expired.
- **T2** Second delay — After the initial delay period has expired the TOI will revert to using its original target icon but maintain the Red dashed rings around the icon. After a second delay period expires the Red dashed circles are removed and the target reverts to using its original target icon.

After the second delay period expires the target is no longer designated as a TOI.

1. AIS targets
2. Radar targets
3. Intel targets
4. DSC targets
5. Received TOI

Note:

Received OneShot TOIs use the standard received TOI icons for the duration of both delay periods and will then disappear.

TOI OneShot settings

TOI OneShot decay times and automatic repeat for sending / broadcasting the related STEDS message can be adjusted.

TOI OneShot settings are accessed from the **Advanced set-up** menu: **Homescreen > Settings > Responder > Advanced set-up > Configure**.

The following settings are available:

- **T1** — Number of seconds for the initial delay period.
- **T2** — Number of seconds for the second delay period.

TOI transmission rates

TOIs can be transmitted as either a single 'OneShot' transmission or as a recurring transmission.

TOIs generated from Intel targets or DSC targets are automatically assigned as OneShot TOIs. TOIs generated from AIS targets and Radar targets allow the sender to select the TOI rate when the TOI is created. Recipients and senders can change the TOI rate at anytime.

The following TOI rates can be selected:

- OneShot (Single Transmission) — TOI message is transmitted only once.
- Slow Target (600 sec repeat) — TOI message is transmitted every 600 seconds.
- Medium Target (180 sec repeat) — TOI message is transmitted every 180 seconds.
- Fast Target (60 sec repeat) — TOI message is transmitted every 60 seconds.

- Aircraft Target (15 sec repeat) — TOI message is transmitted every 15 seconds.

Note:

- A vessel can only send 1 recurring TOI message at a time. If a second recurring TOI message is sent out it will replace the first TOI message.
- A vessel can send out multiple OneShot TOI messages.
- A vessel can receive multiple OneShot and recurring TOI messages.
- TOI rates for Intel targets and DSC targets are always set as OneShot and cannot be changed.

TOI cancellation repeat

To ensure a TOI cancellation is received cancellations can be automatically repeated multiple times at a specified interval.

The cancellation repeat options are accessed from the Responder menu tab: **Homescreen > Settings > Responder > Advanced settings > Configure > CANCEL/UPDATE MESSAGES**. For following options are available:

- **Repeat** — Determines the number of times the TOI cancellation is transmitted.
- **Interval** — Determines the time interval between sending cancellation repeats..

TOI position updates

TOI positions are updated as follows:

- AIS targets and Radar targets will receive regular position updates from the relevant device.
- Intel targets will maintain their initially reported heading and speed
- DSC targets remain static, unless position reports are received.

Accessing target options

Target specific options are available for targets that are currently being tracked. The target options can be accessed from the target's context menu and from the Pop-over options in the relevant target list. The options available are dependent on the type of target.

To access a target's context menu:

- Press and hold on the target onscreen, or

- Highlight the target onscreen using the **Direction controls** and press the **OK** button.

To access the target list Pop-over menu:

- Select the target in the relevant target list, or
- Highlight the target in the list using the **Direction controls** and press the **OK** button.

TOI options

TOI options are available which change the status and details of a TOI. Changes to TOI options are sent and received over STEDS messaging.

Note:

Context menu options — In addition to the TOI options listed below, options relevant to the type of target the TOI originated from will also be available in the target context menu (i.e.: Radar, AIS, DSC or Intel).

- **Cancel TOI** — TOIs can be cancelled by selecting **Cancel TOI**.
 - Sent TOI — When a sender selects **Cancel TOI** the local TOI target icon will revert to its original target icon and the TOI is automatically cancelled for all recipients.
 - Received TOI — When a recipient selects **Request TOI cancellation** a cancellation request is sent to the originator and once acknowledged the TOI target icon will be removed or revert to its original target icon.
- **TOI description** — The type of vessel that the TOI target icon represents can be set or updated using the **TOI description** option. Changes are automatically updated for the sender and all recipients.
- **TOI status** — The status of the TOI can be set or updated using the **TOI status** option. Changes are automatically updated for the sender and all recipients.
- **Intercept** — Selecting **Intercept** initiates target interception for the selected target. For details see: [p.160 — Target intercept](#)
- **Centre on chart** — Selecting **Centre on chart** centres the TOI in the Chart app.
- **View related messages** — Selecting **View related messages** opens the STEDS messaging app and displays all related messages (messages that have the same link ID as the selected TOI).

- **TOI rate** — The rate of transmission can be changed for recurring TOIs by selecting **TOI rate** and then selecting the required rate.

Note: TOI rate for OneShot TOIs cannot be changed.

- **Clear lost TOI** — Selecting removes the TOI from the TOI list and either removes the TOI icon from the Chart app or reverts the target icon to its previous target icon.


TOI list

Targets currently designated as TOIs are listed in the TOI target list: The TOI list identifies: The Link ID created when the TOI was sent/broadcast. The Description, Originating vessel, Range and Bearing and the TOI status.

The TOI list can be accessed from the Targets menu in the Radar app and Chart app: **Menu > Targets > TOI**

Selecting a target from the list highlights the selected target in the LiveView app pane on the right of the page and opens the Pop-over menu.

TOI target list

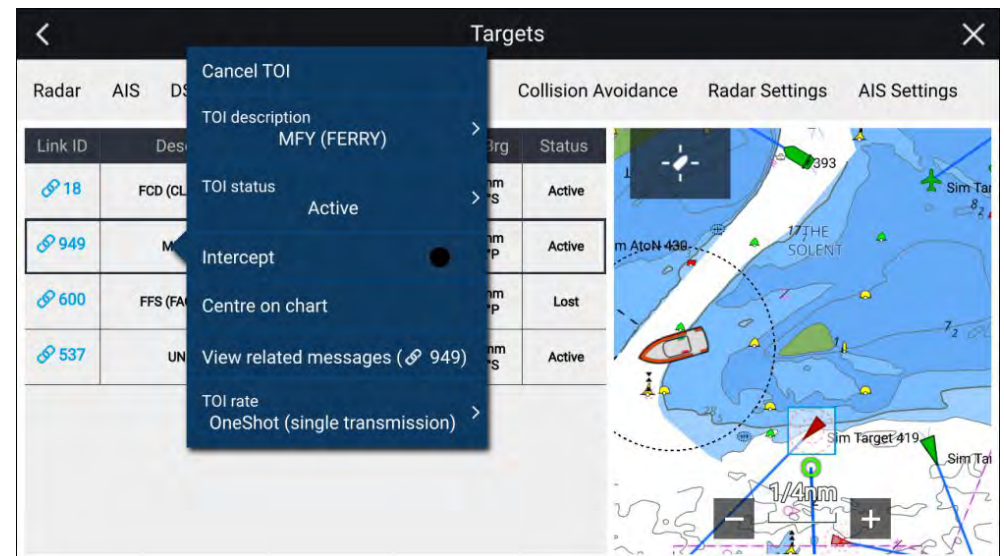


20.10 First responder AIS modes

With compatible STEDS AIS hardware connected the mode of the AIS hardware can be set from the MFD.

The AIS modes can be viewed and changed from the Status area in the Homescreen. Select the Status area and then select AIS to display and select available modes.

The AIS mode of the connected STEDS compatible AIS hardware will automatically be updated to match the selected mode.

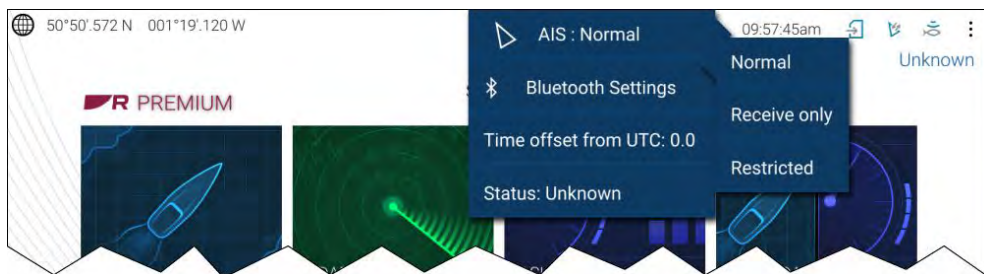

The following AIS modes are available:

- **Normal** — In this mode your AIS hardware will receive and transmit AIS messages and encrypted AIS messages.
- **Receive only** — In this mode your AIS hardware receives AIS messages and encrypted AIS messages, but transmits nothing (maintaining radio silence).
- **Restricted** — In this mode your AIS hardware will receive AIS messages and encrypted AIS messages, but only transmits encrypted AIS messages (no AIS messages are transmitted). This means vessels with 'standard' AIS receivers / transceivers will not be able to detect Blue Force vessels.


The AIS mode can also be changed from the **AIS Settings** menu: **Menu > Targets > AIS Settings > AIS mode** and from the Homescreen settings menu: **Homescreen > Settings > Responder. AIS mode**

Note:

AIS mode replaces the **Silent mode** option available on non-STEDS First responder configurations.

AIS mode status icons

Status icons are displayed in the Homescreen status area which identify the current AIS mode in use.

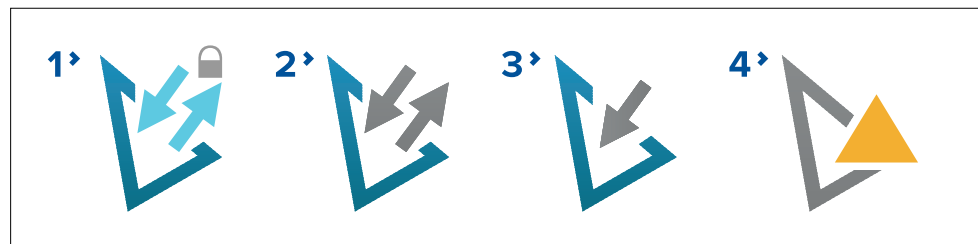



1. Restricted mode.
2. Normal mode.
3. Receive only mode.
4. Error.

Blue Force Tracking

Other vessels that are equipped with STEDS compatible AIS hardware, such as the AIS5000 are displayed onscreen using Blue Force AIS target icons.

The following icons are used:

| | | | |
|--|-------------------|--|----------------|
|  | Blue Force vessel |  | Blue Force SAR |
|--|-------------------|--|----------------|

The Blue Force icons are used as long as:



- your MFD has a matching First responder passphrase.
- you have received a SITREP from them within the last 6 minutes.
- their AIS mode is not set to Receive only.

If the above conditions are not met then the target icon will revert to using the standard, Green AIS target icon.

20.11 SITREP (Situation report)

SITREP status is transmitted and received over STEDS messaging so that other STEDS equipped vessels using the same STEDS passphrase can see your status and you can see their status.

The current SITREP status is displayed in the Status area of the Homescreen. The SITREP status can be changed by selecting **Status:** from the Status area Pop-over menu and then selecting a SITREP.

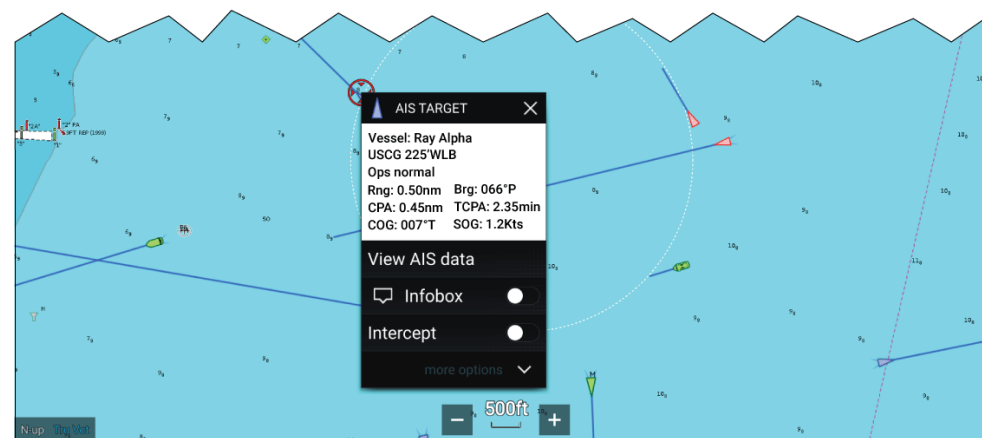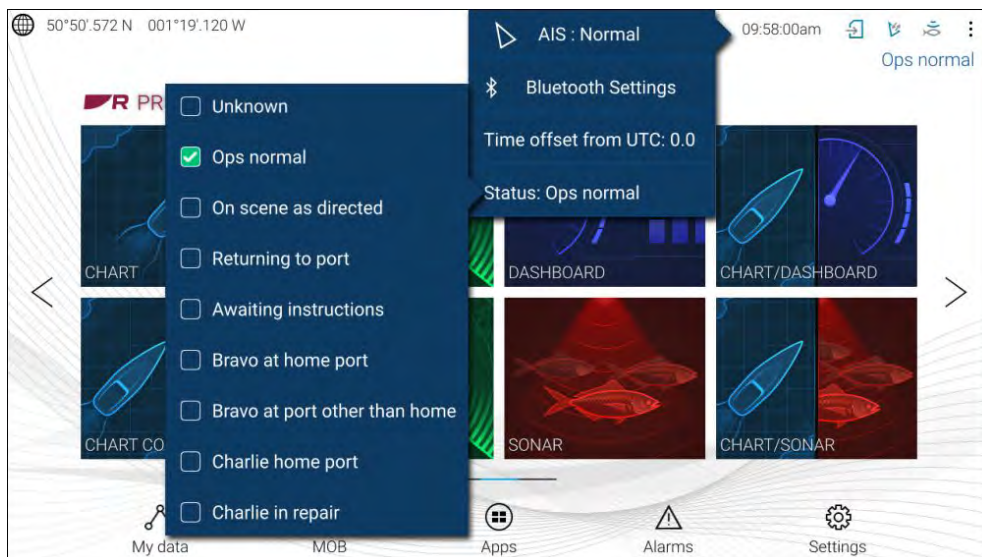

The MFD supports both current (FID 10) and legacy (FID 56) SITREPs.

Note:

- Blue Force targets using Legacy SITREP FID 56 are displayed using the Blue Force icons, however cannot be interacted with (i.e.: you cannot send or receive text messages, SAR patterns or TOIs).
- Blue Force targets using Legacy SITREP FID 56 can also be displayed when using an NMEA 0183 connection but cannot be interacted with.

20.12 SAR pattern receipt

SAR patterns can be received over STEDS messaging and imported so that they can be followed.

When a SAR pattern is received a notification is displayed onscreen.




The notification provides details about the SAR pattern and the following options:

Note:

- SITREP status is transmitted every 15 seconds if a vessel is traveling at 3 knots or more.
- SITREP status is transmitted every 30 seconds if a vessel is traveling under 3 knots for more than 3 minutes.

The SITREP status of other vessels is displayed in the Blue Force Target's context menu in the Chart app and Radar app.

- **Import SAR Route** — Imports the SAR pattern as a router so that it can be followed.
- **Reply** — Allows you to send a new direct message to the sender.
- **View Inbox** — Opens the Messaging app.
- **Dismiss** — Dismisses the notification. The SAR pattern can still be imported from the Messaging app if required.

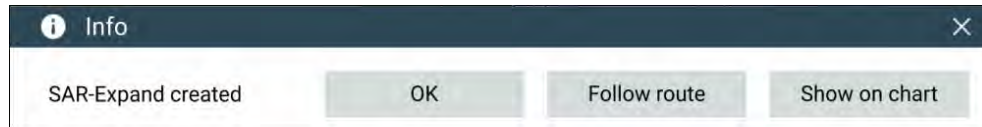


Once a SAR pattern is imported it can be followed by selecting **Follow route** or, if the Chart app is open it can be displayed onscreen by selecting **Show on chart**.

For more information about SAR patterns refer to: [p.118 — SAR \(Search and Rescue\) patterns](#)

20.13 Messaging

MFDs configured as ‘First responder’ which also have STEDs functionality can send and receive secure text messages with other properly equipped STEDs vessels.

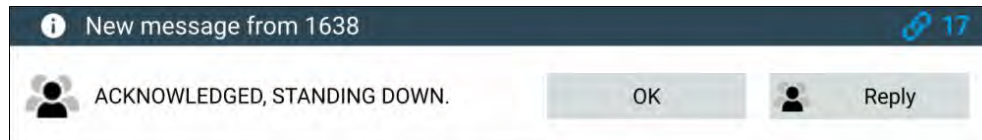

When a message is received it is displayed onscreen in a dialog box. The dialogue will identify the sender, the link ID and display the message.

The following options are available on the Message dialog:


- **OK** — Dismisses the Dialog (The message will be saved in the Messages inbox).
- **Reply** — Opens the onscreen keyboard so that a reply can be sent.

Sent and received messages are stored in the Messages inbox.

The Messages inbox can be accessed by creating a Messages app page on the Homescreen or from the **My data** menu: **Homescreen > My data > Messages**.

Message inbox

The inbox stores all direct messages and broadcasts that you have sent and received from other responder vessels.

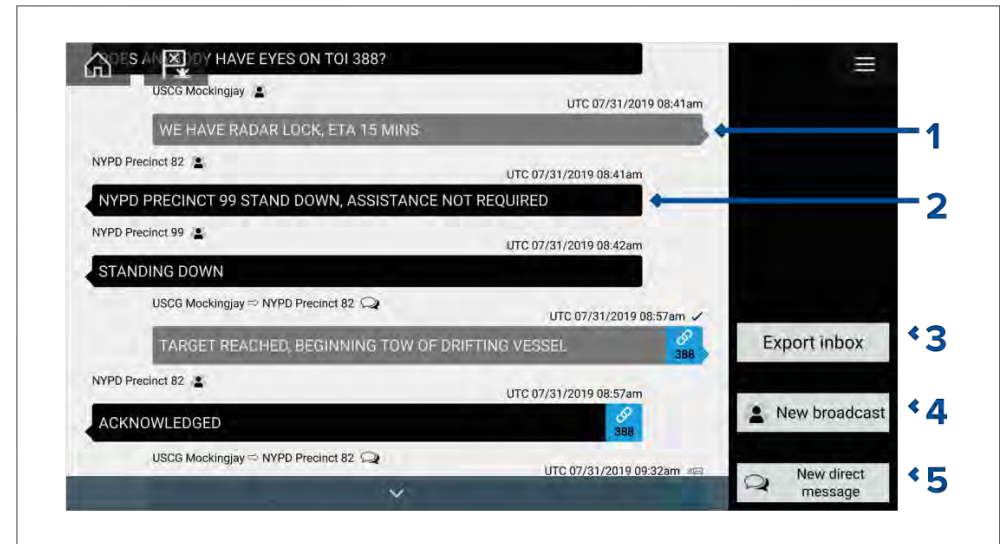

1. **Sent** broadcasts and direct messages (white, right side).
2. **Received** broadcasts and direct messages (grey, left side).
3. **Export inbox** — Exports the current view / filter of messages to a .csv (Comma Separated Values) spreadsheet file to a memory card inserted in the MFD’s card reader. The Export inbox option is only available when a memory card is present in the MFD’s card reader.
4. **New broadcast** — Send a broadcast to all responder vessels.
5. **New direct message** — Send a direct message to a specific responder vessel.

Note:

- The date and time provided for each inbox message is the last modified date and may not be same as the date and time the messages was originally created or received.
- Messages older than 72 hours will be removed from the inbox after a power cycle.

New broadcast

A new message can be broadcast to all responder vessels with the same STEDs passphrase.

Selecting **Broadcast message** from the Chart app's **New** menu or selecting **New broadcast** from the Messages inbox opens the onscreen keyboard where you can enter your message. When you are happy with your message select **Send** to broadcast the message.

Note:

Inbox messages have a 57 character limit per message.

New direct message

A new direct message can be sent to specific vessel using its MMSI number or to an AIS vessel designated as a 'Buddy'.


Selecting **Direct message** from the Chart app's **New** menu or selecting **New direct message** from the Messages inbox opens the **Recipient** page where you can select **Recent** contacts (recent message senders and recipients) and **Buddy** contacts or you can enter the MMSI number of a vessel you want to send a direct message to.

Select a recent or buddy contact and select **Next** to open to the onscreen keyboard where you can enter your message. When you are happy with your message select **Send** to send the message. or,

Select Enter MMSI to enter a new MMSI number then select **Next** to open to the onscreen keyboard where you can enter your message. When you are happy with your message select **Send** to send the message.

Direct message Blue Force targets

A direct message can be sent to Blue Force targets in the Chart app and Radar app.

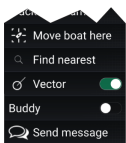

Open the Blue Force target's context menu and select **Send message** to open to the onscreen keyboard where you can enter your message. When you are happy with your message select **Send** to send the message.

For more information on Blueforce AIS targets, refer to:
[p.278 — Blue Force Tracking](#)

Reply to messages


You can reply to direct messages and broadcasts from the **Inbox**.

To reply, perform a long hold on a received direct message or broadcast until the context menu appears:

- **Reply** — Reply to a direct message with a direct message.
- **Broadcast reply** — Reply to a broadcast with a broadcast.
- **Reply / Broadcast reply (with Link ID)** — Reply to a direct message or broadcast that has a link ID by responding with a direct message or broadcast that contains the same link ID.

Onscreen keyboard

Use the onscreen keyboard to type your messages. Messages can contain a maximum of 57 characters.

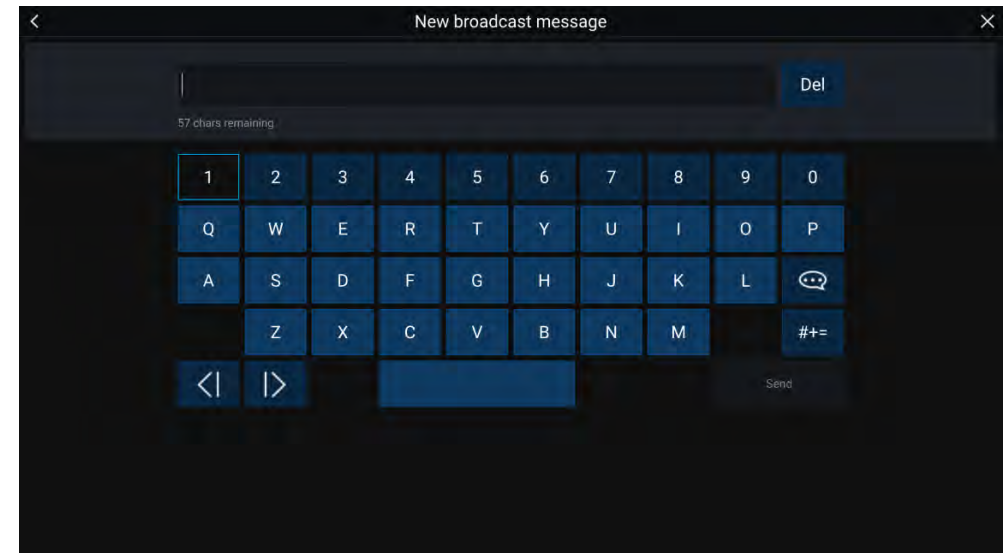








Selecting the **Template Text** icon will change the onscreen keyboard to a list of template messages that can be quickly added to the message when selected. Selecting **My Position** will enter your vessel's current coordinates into the message.

Note:

Coordinates entered into the message display degrees as **'DEG'**.

Message symbols

Symbols attached to messages in the **Inbox** indicate its type and status.

| | |
|---|---|
|  | Broadcast — A broadcast to all other responder vessels. |
|  | Direct message — A direct message to a specific responder vessel. |
|  | Sender — Indicates the sender (left of the arrow) and recipient (right of the arrow) of a direct message. |
|  | Message sent — Direct message has been sent and acknowledged by the recipient's hardware. |
|  | Message sending — Direct message is still waiting to be acknowledged as successfully received by the recipient's hardware. Note: A maximum number of 4 attempts will be made to send the message by the sender's hardware, with 150 seconds of separation between each attempt. |
|  | Message failed to send — Direct message has failed to be acknowledged by the recipient's hardware. Note: The failed message will remain in the Inbox . |
|  | Link ID — A link ID generated and used by responder vessels. Note: Replying to a direct message or broadcast that has a link ID will send a reply that contains the same link ID. |


20.14 Import and export Waypoints and Routes over NMEA networks

Waypoints and Routes can be imported and exported over NMEA 0183 and NMEA 2000 (N2K) / SeaTalkng®

Note:

- Receiving waypoints and routes is subject to the waypoint and route capacity of your MFD. The transfer will fail if the MFD's capacity is reached during the transfer. For capacity limits refer to: [p.116 — Waypoint, routes and tracks capacity](#)
- It is recommended that importing and exporting waypoints over NMEA 0183 and NMEA 2000 is used for small batches of less than 150 waypoints. The preferred method for importing and exporting larger amounts of waypoint is via memory card transfer. Refer to: [p.75 — Import/export](#)

The import and export options are available from the Import/Export menu:
Homescreen > My data > Import/Export > Import/export from network.

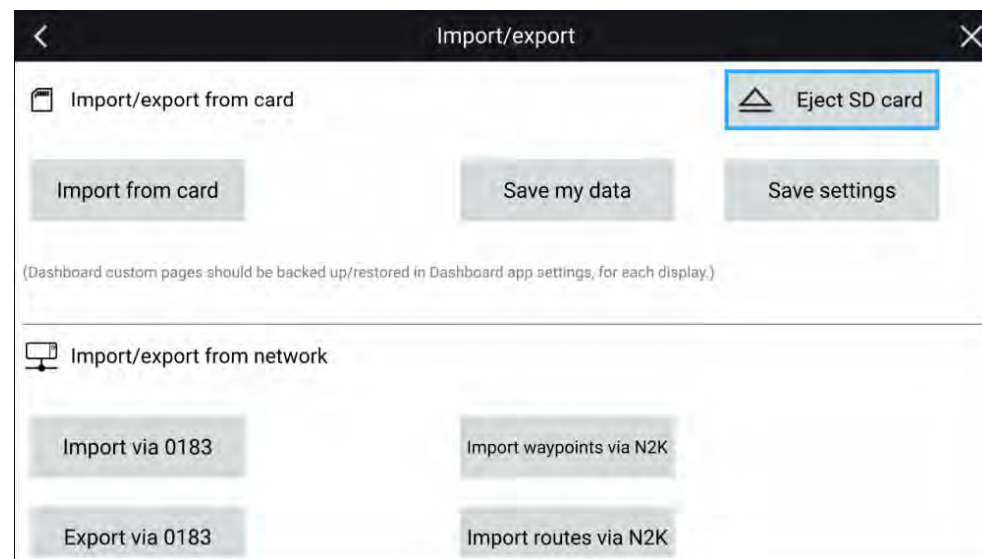

The **Import waypoints via N2K** and **Import Routes via N2K** options are only enabled when another compatible MFD is present on the NMEA 2000 / SeaTalkng® network.

The **Import via 0183** and **Export via 0183** options are always enabled and require interaction on the other MFD.


Importing Waypoints or Routes over NMEA 2000

Follow the steps below to Import Waypoints or Routes over an NMEA 2000 / SeaTalkng® network.

Note:

LightHouse 3 and LightHouse 4 MFDs allow more than 1 waypoint or route to have the same name. It is recommended that you check that the import will not create waypoints or routes with the same name and if necessary rename them before importing.

Example importing waypoints

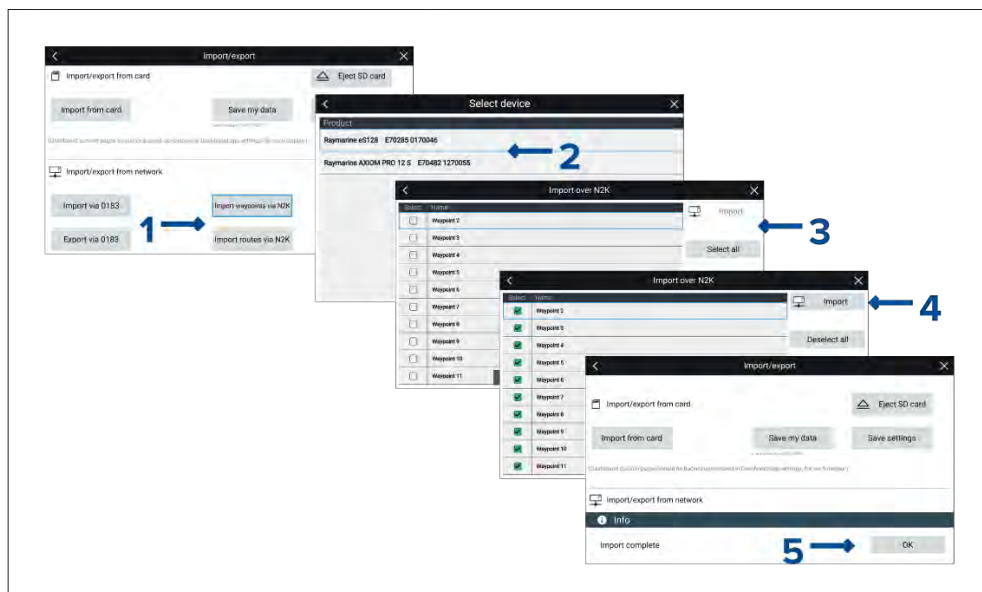

From the **Import/export** menu: **Homescreen > My data > Import/export**:

1. Select either **Import waypoints via N2K** or **Import Routes via N2K**.
2. Select the device from the list that has the waypoints or routes that you want to import.

Important:

If there is only 1 compatible device connected then this step will be skipped.

A list of Waypoints or Routes on the selected device will be displayed.

3. Select each waypoint or route that you want to import, or select **Select all**.
4. Select **Import**.
5. Select **OK** on the import confirmation dialog.

The selected waypoints or routes will now be available on the MFD.

Importing waypoints or routes over NMEA 0183

This procedure details importing waypoint or routes to an MFD running either the LightHouse 3 or LightHouse 4 operating system from an MFD running the First responder version of the LightHouse 2 operating system.

Note:


It may be possible to import waypoints and routes from other NMEA 0183 devices following a similar procedure, refer to the instructions that accompanied the NMEA 0183 device and use them in place of the LightHouse 2 steps below.

Note:

LightHouse 3 and LightHouse 4 MFDs allow more than 1 waypoint or route to have the same name. It is recommended that you check and rename waypoints or routes that have the same name as existing waypoints and routes before importing.

1. Ensure that an NMEA 0183 input port on the receiving MFD is correctly connected to an NMEA 0183 output port on the LightHouse 2 First responder MFD.

Example NMEA 0183 connection

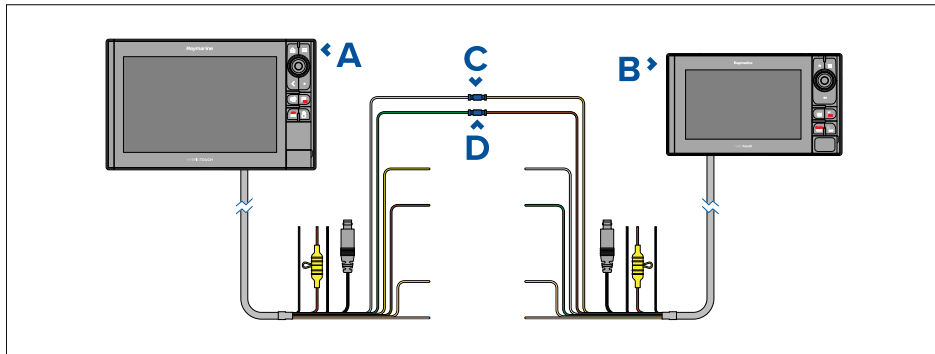


1. Receiving MFD (e.g.: Axiom Pro running LightHouse 3 / LightHouse 4)
2. LightHouse 2 MFD (e.g.: eS series)
3. Example connection Port 1, positive input (White) to Port 1, positive output (Yellow)
4. Example connection Port 1, negative input (Green) to Port 1, negative output (Brown)

Note:


If you require 2 way transfer of waypoint and routes also connect:

- Example connection Port 1, positive output (Yellow) to Port 1, positive input (White)
- Example connection Port 1, negative output (Brown) to Port 1, negative input (Green)

2. Select **Import via 0183** from the **Import/Export** menu: **Homescreen** > **My data** > **Import/export** .
The receiving MFD will be waiting to receive over NMEA 0183 connection.

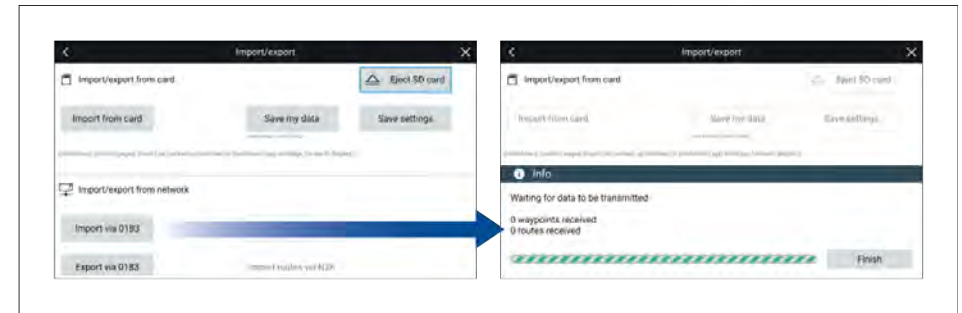


3. On the LightHouse 2 MFD:
 - i. Select **My data** from the Homescreen.
 - ii. Select either **Waypoints** or **Routes**.
 - iii. Select **Import/Export** from the top of the waypoint list / routes list.
 - iv. Select either **Export Waypoints to Connected Device (0183)** or **Export Routes to Connected Device (0183)**.
 - v. Select the Waypoints or the Routes you want to transfer.
 - vi. Select **Send**.

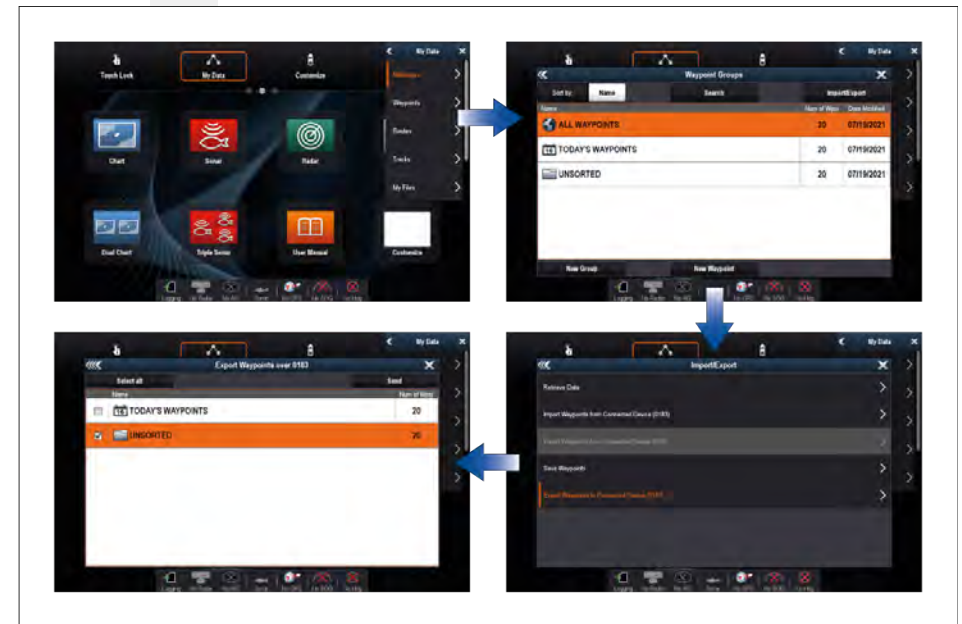

4. Back on the receiving MFD:
 - i. When all waypoints or routes have been received select **Finish**.

- ii. Select **OK** on the Import complete dialog..

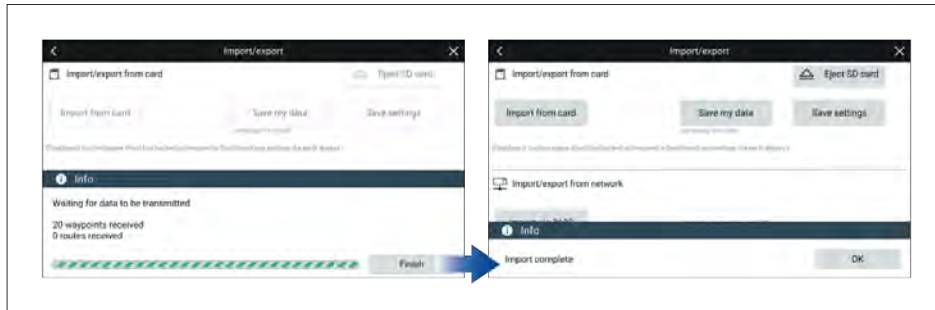

Exporting waypoints or routes over NMEA 0183


This procedure details exporting waypoints or routes from an MFD running the LightHouse 3 or LightHouse 4 operating system to an MFD running the First responder version of the LightHouse 2 operating system.

Note:

It may be possible to export waypoints and routes to other NMEA 0183 devices following a similar procedure, refer to the instructions that accompanied the NMEA 0183 device and use them in place of the LightHouse 2 steps below.

1. Ensure that an NMEA 0183 output port on the sending MFD is correctly connected to an NMEA 0183 input port on the LightHouse 2 First responder MFD.

Example NMEA 0183 connection

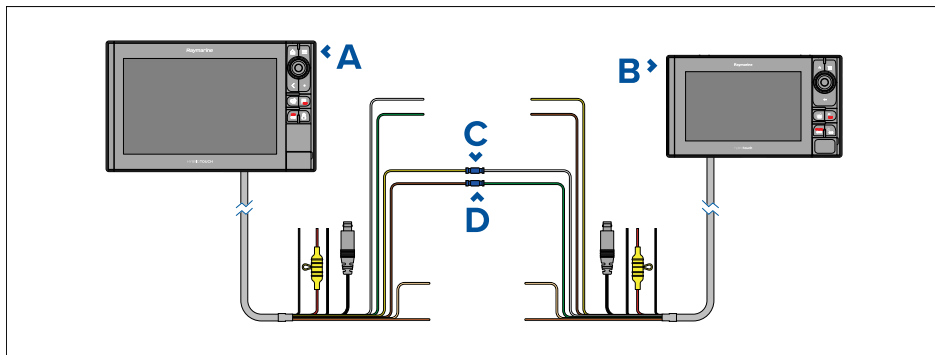


1. Sending MFD (e.g.: Axiom Pro running LightHouse 3 / LightHouse 4)

2. LightHouse 2 MFD (e.g.: eS series)
3. Example connection Port 1, positive output (Yellow) to Port 1, positive input (White)
4. Example connection Port 1, negative output (Brown) to Port 1, negative input (Green)

Note:


If you require 2 way transfer of waypoint and routes also connect:

- Example connection Port 1, positive input (White) to Port 1, positive output (Yellow)
 - Example connection Port 1, negative input (Green) to Port 1, negative output (Brown)
2. Ensure the sending MFD's NMEA 0183 Transmission mode setting is set to **Single-ended**.
The Transmission mode settings is located on the NMEA set-up menu page: **Homescreen > Settings > Network > NMEA set-up >**

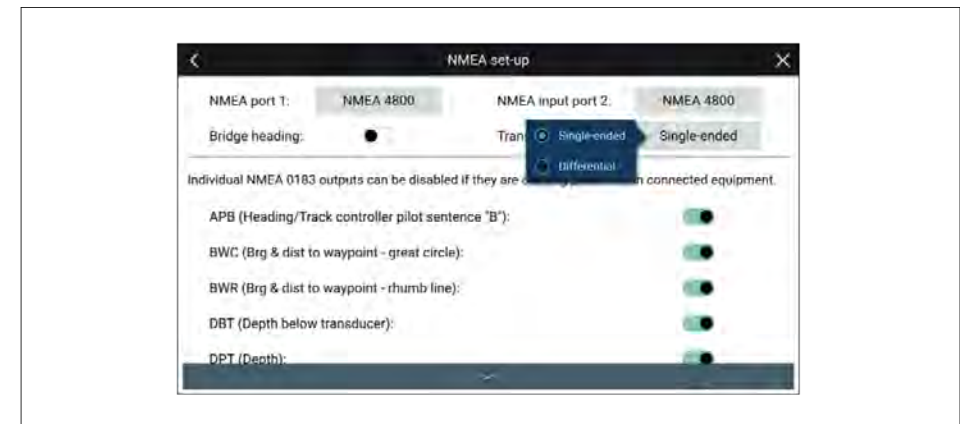

3. From the LightHouse 2 MFD:
 - i. Select **My data** from the **Homescreen**.
 - ii. Select either **Waypoints** or **Routes**.
 - iii. Select **Import/Export** from the top of the waypoint list / routes list.


- iv. Select either **Import Waypoints from Connected Device (0183)** or **Import Routes from Connected Device (0183)**.

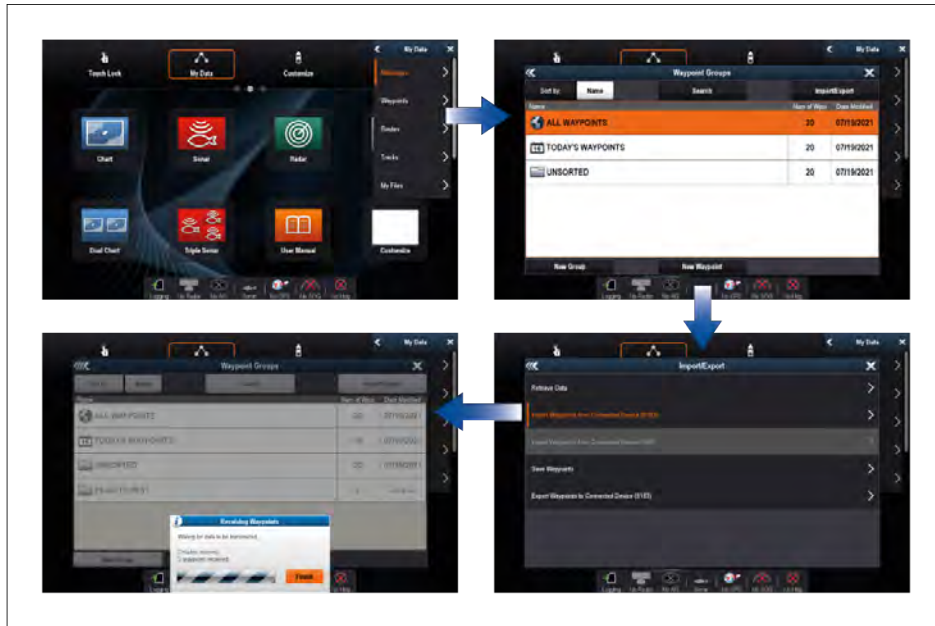


The LightHouse 2 MFD will be waiting to receive over NMEA 0183 connection.

4. From the sending MFD:
- Select **Export via 0183** from the Import/export menu: **Homescreen > My data > Import/export**.
 - Select either **Export waypoints** or **Export routes**.
 - Select the waypoints or the routes that you want to export.
 - Select **Export**.

- v. Select **OK** on the export complete dialog.

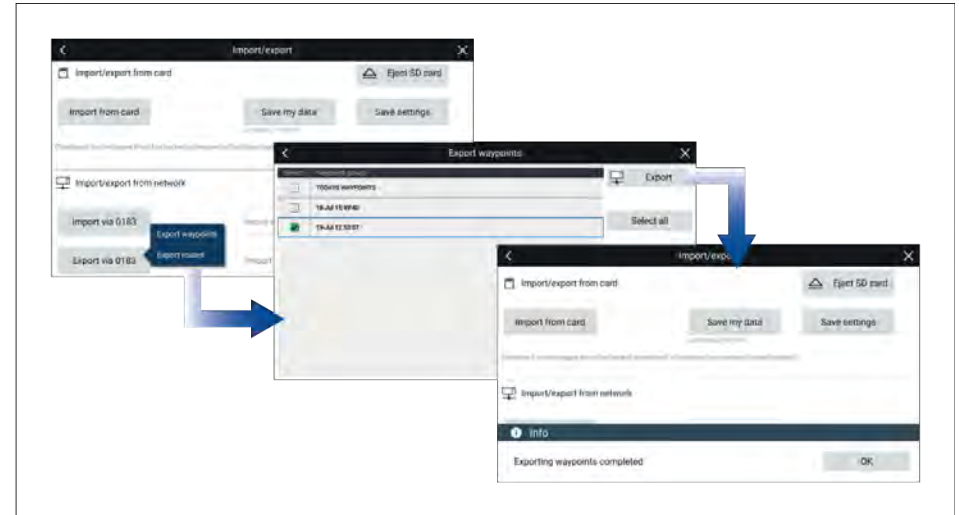

5. From the LightHouse 2 MFD:
- LightHouse 2 MFDs do not allow more than 1 waypoint or routes to have the same name. If the MFD detects a waypoint or route with a name that conflicts with a waypoint or route already in the system the following options are displayed:
 - Copy as new waypoint / Copy as new route**— renames the waypoint / routes and imports it.
 - Copy & Replace** — replaces the existing waypoint or route with the new one.
 - Don't copy** — Keeps the existing waypoint or route and does not import the new one.
 - When all waypoints or routes have been received select **Finish**.

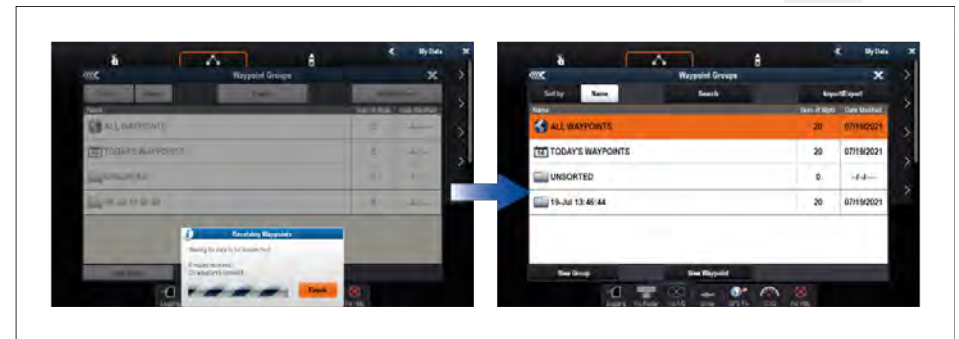

CHAPTER 21: DASHBOARD APP

CHAPTER CONTENTS

- 21.1 Dashboard app overview — page 288
- 21.2 Default data pages — page 289
- 21.3 Customizing existing Data pages — page 289
- 21.4 Dashboard settings menu — page 294
- 21.5 CZone plug and play — page 296
- 21.6 Navigation and Sailing dials — page 297

21.1 Dashboard app overview

The Dashboard app enables you to view system data. System data may be generated by your MFD or by devices connected to your MFD via SeaTalkng® / NMEA 2000 and SeaTalkhs™. The Dashboard app can also be configured to provide control of your compatible Digital Switching devices.

Note: For data to be available in the Dashboard app it must be transmitted to your MFD from compatible hardware using supported protocols and messages.







The Dashboard app can be displayed in Fullscreen and half screen portrait app pages.

For each instance of the Dashboard app you can select which Data pages you want to use, the Data page selection will persist over a power cycle.



The Dashboard app is pre-configured with a number of customizable data pages.

Dashboard app controls

| Icon | Description | Function |
|---|----------------|--|
|  | Home icon | Takes you to the Homescreen. |
|  | Waypoint / MOB | Place waypoint / activate Man overboard (MOB) alarm. |
|  | Pilot icon | Opens and closes the Pilot Sidebar |
|  | Menu icon | Opens the app menu. |
|  | Left arrow | Displays the previous data page. |
|  | Right arrow | Displays the next data page. |

Switching data page

1. Use the **Left arrow** and **Right arrow** buttons, located at the bottom of the screen, to cycle through the available data pages.
2. Alternatively, you can select a specific data page from the Dashboard app menu.

Selecting Data pages to display

For each instance of the Dashboard app you can select which Data pages you want to be able to view.

1. Select the **Pages** tab: **Menu > Settings > Pages**.
2. Select the relevant page from the list.
3. Select **Hide page** from the pop-over options.


The selected page will no longer be available in the current instance of the Dashboard app.

Selecting **Show page** for a hidden page will include the page in the app instance again.

21.2 Default data pages

The Dashboard app comes with a selection of default data pages:

- Engines
- Sailing (only shown if boating activity is set to Sailing in startup wizard)
- Race start (only shown if boating activity is set to Sailing in startup wizard)
- Navigation
- Rolling road with data
- Tanks
- Bidata
- Single data
- Fuel

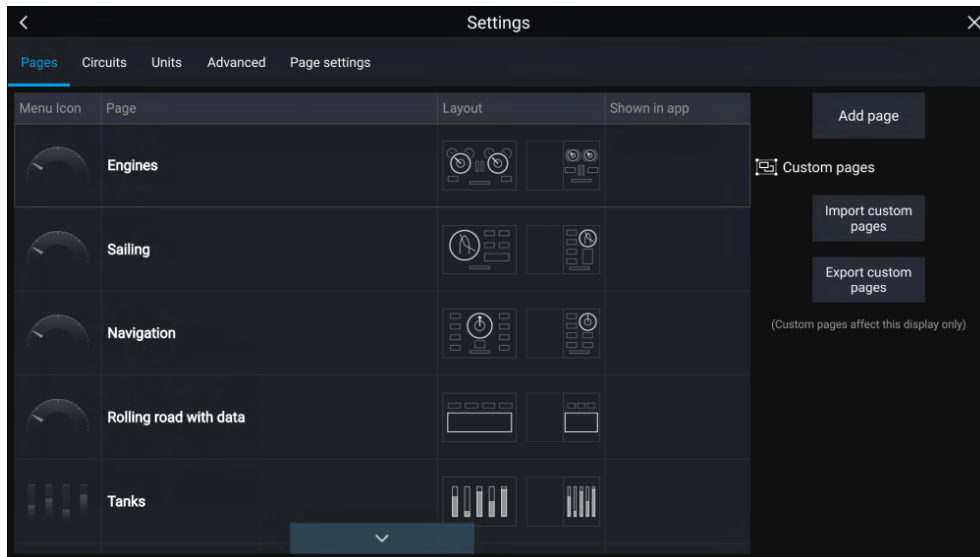

The displayed data items on each of these pages can be customized.

21.3 Customizing existing Data pages

The data items displayed on each page can be changed.

1. Select and hold on the relevant Data item.
2. Select **Edit** from the Data item pop-over menu.
3. Select the new Data item that you want to display.

Alternatively you can select **Customize page** from the app menu: **Menu > Customize page**.

Data overlay and Sidebar data items

The following data items are available for display in the Dashboard app, in Data overlays and Sidebars.

Note:

- For data to be available compatible sensors and transducers are required to be connected to the same data network as the MFD.
- Standard NMEA 2000 PGNs are listed next to the relevant data items.
- Supported Raymarine and 3rd party proprietary messages are not listed.

| Data category | Data items |
|--|--|
| Battery Battery related data. Data items are available for the number of batteries specified in the Boat details settings: Homescreen > Settings > Boat details > Num of batteries . | <ul style="list-style-type: none"> • Battery voltage (PGN 127508) • Battery current (PGN 127508) • Time till zero charge (PGN 127506) • Battery temperature (PGN 127508) • State of charge (PGN 127506) |
| Boat <hr/> Note: <ul style="list-style-type: none"> • (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> • Roll (PGN 127257) • Mast rotation • Pitch (PGN 127257) • Rate of turn (PGN 127251) • Trim tabs⁽¹⁾ (PGN 130576) |
| Depth Depth related data. | <ul style="list-style-type: none"> • Maximum depth • Minimum depth • Depth (PGN 128267) |

| Data category | Data items |
|---|---|
| <p>Display Data relating to the voltage supplied to the MFD.</p> <hr/> <p>Note:</p> <ul style="list-style-type: none"> • (1) Data item is only available in Sidebars and data overlays. • (2) Data item is only available in Sidebars. | <ul style="list-style-type: none"> • Supply voltage⁽¹⁾ • Supply voltage level⁽²⁾ |
| <p>Distance</p> <hr/> <p>Note:</p> <ul style="list-style-type: none"> • (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> • Distance to line • Distance to tack • Trip (manual) • Trip (month) • Trip (day) • Trip (season) • Line bias • Ground log • Trip (PGN 128275) • Log (PGN 128275) • Log Trip⁽¹⁾ |
| <p>Engine Engine related data requires data connection to compatible vessel engine(s). Data items are available for the number of engines specified in the Boat details settings: Homescreen > Settings > Boat details > Num of engines</p> | <ul style="list-style-type: none"> • Engine trip (PGN 127497) • Trans oil temp (PGN 127493) • Fuel flow (avg) (PGN 127497) • Trans oil pressure (PGN 127493) • Gear (PGN 127493) • Engine load (PGN 127489) • Alternator (PGN 127489) • Oil temperature (PGN 127489) • Oil pressure (PGN 127489) |

| Data category | Data items |
|--|--|
| | <ul style="list-style-type: none"> • Engine RPM (PGN 127488) • Engine hours (PGN 127489) • Coolant temperature (PGN 127489) • Coolant pressure (PGN 127489) • Boost pressure (PGN 127488) • Fuel pressure (PGN 127489) • Fuel flow (inst) (PGN 127489) • Fuel flow (PGN 127489) • Tilt position (PGN 127488) |
| <p>Fuel Data related to fuel economy. An 'All tanks' category is available when more than 1 fuel tank has been specified that combines data from all fuel tanks.</p> | <ul style="list-style-type: none"> • Est. fuel remaining (PGN 127496) • Total fuel (vol) (PGN 127505) • (vol) • (%) • Total fuel (%) • Engine economy total (PGN 127497) • Time to empty (PGN 127496) • Distance to empty (PGN 127496) • Fuel flow total (PGN 127497) • Fuel used (trip) (PGN 127497) • Fuel used (season) (PGN 127497) |
| <p>Environment</p> <hr/> <p>Note:</p> <ul style="list-style-type: none"> • (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> • Drift (PGN 129291) • True wind chill • App wind chill • Set (PGN 129291) • Max water temp • Min water temp |

| Data category | Data items |
|--|--|
| | <ul style="list-style-type: none"> Water temp (PGN 130310 / 130311 / 130312 / 130316) Max air temp Min air temp Humidity (PGN 130311 / 130313) Dew point Barometric pressure (PGN 130310) Air temp (PGN 130310) Sunset Sunrise⁽¹⁾ Set Drift⁽¹⁾ (PGN 129291) Water & Supply⁽¹⁾ |
| Inside Environment Data items are available for the number of interior environment sensors specified in the Boat details settings: Homescreen > Settings > Boat details > Num of interior environment sensors . | <ul style="list-style-type: none"> Inside humidity (PGN 130313) Inside temperature (PGN 130316) |
| GPS <hr/> Note: <ul style="list-style-type: none"> (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> Cursor position Loran cursor position Loran position Vessel position (PGN 129025 / PGN 129029) SOG (Speed Over Ground) (PGN 129026) Course over ground (PGN 129026) Average SOG Maximum SOG |

| Data category | Data items |
|--|---|
| | <ul style="list-style-type: none"> COG SOG (Course Over Ground) (Speed Over ground)⁽¹⁾ (PGN 129026) |
| Heading <hr/> Note: <ul style="list-style-type: none"> (1) Steer to layline is only available when boating activity is set to Sailing in the initial MFD start up wizard. (2) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> Steer to layline⁽¹⁾ Heading error Tack heading Locked heading Heading (PGN 127250) Locked heading & Error⁽²⁾ Heading & Speed⁽²⁾ |
| Navigation <hr/> Note: <ul style="list-style-type: none"> (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> Sailing Wpt TTG (Waypoint Time To Go) Sailing Dist to Wpt (Distance To Waypoint) Next waypoint Loran target position Cross tack error Waypoint TTG (Time To Go) Route TTG (Time To Go) Target position Waypoint ETA (time & date) (Estimated Time of Arrival) Route ETA (time & date) (Estimated Time of Arrival) Distance to waypoint Distance made good Course made good Bearing Origin to Waypoint Bearing to waypoint |

| Data category | Data items |
|---|---|
| | <ul style="list-style-type: none"> • Active waypoint • Route ETA (Estimated Time of Arrival) • Waypoint ETA (Estimated Time of Arrival) • CTS & DTW⁽¹⁾ (Course To Steer & Distance To Waypoint) • CMG & VMG⁽¹⁾ (Course Made Good & Velocity Made Good) • BTW & DTW⁽¹⁾ (Bearing To Waypoint & Distance To Waypoint) • Waypoint info⁽¹⁾ • CMG & DMG⁽¹⁾ (Course Made Good & Distance Made Good) |
| Pilot | <ul style="list-style-type: none"> • Rudder angle (PGN 127245) |
| Speed <hr/> Note: <ul style="list-style-type: none"> • (1) Polar performance is only available when boating activity is set to Sailing in the initial MFD start up wizard. | <ul style="list-style-type: none"> • VMG to waypoint (Velocity Made Good) • Speed thru water (PGN 128259) • VMG to windward (Velocity Made Good) • Avg speed • Max speed • Target speed • Polar performance⁽¹⁾ |

| Data category | Data items |
|--|---|
| Time <hr/> Note: <ul style="list-style-type: none"> • (1) Data item is only available in the Dashboard app | <ul style="list-style-type: none"> • Sunset time • Sunrise time • UTC date (Universal Time Coordinated) (PGN 129033) • UTC time (Universal Time Coordinated) (PGN 129033) • Race timer⁽¹⁾ • Date (PGN 126992) • Time (PGN 126992) • Time to tack • Time to burn |

| Data category | Data items |
|--|--|
| Wind | <ul style="list-style-type: none"> • True wind angle (PGN 130306) • Cardinal • Beaufort • Ground wind direction (PGN 130306) • Ground wind speed (PGN 130306) • True wind direction (PGN 130306) • Minimum true wind angle • Maximum true wind angle • Minimum true wind speed • True wind speed (PGN 130306) • Maximum app wind speed • App wind speed (PGN 130306) • Minimum app wind angle • App wind angle (PGN 130306) • Maximum app wind angle • Minimum app wind speed • Minimum true wind speed • GWD & Beaufort⁽¹⁾ (Ground Wind Direction) • GWS & GWD⁽¹⁾ (Ground Wind Speed & Ground Wind Direction) • AWA & VMG⁽¹⁾ (Apparent Wind Angle & Velocity Made Good) • AWA & AWS⁽¹⁾ (Apparent Wind Angle & Apparent Wind Speed) • TWA & VMG wind⁽¹⁾ (True Wind Angle & Velocity Made Good) • TWA & TWS⁽¹⁾ (True Wind Angle & True Wind Speed) |
| Note: | |
| <ul style="list-style-type: none"> • (1) Data item is only available in the Dashboard app | |

| Data category | Data items |
|------------------------|--|
| Fuel (Gasoline) | <ul style="list-style-type: none"> • % (PGN 127505) |
| Fresh water | <ul style="list-style-type: none"> • % |
| Live well | <ul style="list-style-type: none"> • % |
| Grey water | <ul style="list-style-type: none"> • % |

| Data category | Data items |
|---------------|---|
| Black water | <ul style="list-style-type: none"> • % |
| Load cells | <ul style="list-style-type: none"> • Pre-defined list of Load cells <p>Note: Cyclops marine Load cells are supported — refer to: p.34 — Cyclops Marine load cells</p> |

21.4 Dashboard settings menu

Pages tab

The Pages tab provides a list of all available pages.

| Settings | Description | Options |
|-----------|--|--|
| Page list | <p>Pop-over options allow you to customize the Dashboard app. You can rearrange pages, add new pages, rename existing pages or reset pages to default settings.</p> <p>Note: * You can only delete pages added using the Add page option.</p> | <ul style="list-style-type: none"> • Hide/Show page • Move up • Move down • Add page • * Delete page • Rename • Reset all |
| Add page | You can add new dashboard pages that you can customize by selecting Add page . | Displays pop-over with page layouts. |

| Settings | Description | Options |
|---------------------|--|-----------------------|
| Import custom pages | You can import digital switching pages . Please refer to Raymarine Product support for more details. | Displays file browser |
| Export custom pages | You can export your digital switching pages so that they can be restored at a later date. You must use this feature if you wish to export or backup your digital switching pages, as digital switching pages are not included in the standard MFD “Backup and restore” process, which is used to backup user settings only. Please refer to Raymarine Product support for more details. Exporting digital switching pages must be performed on each MFD configuration. | Save dialog |

Circuits tab

| Settings | Description | Options |
|--------------------------|--|---|
| List of tripped channels | In Digital Switching systems, the circuit tab provides a list of tripped channels. Tripped circuits can be acknowledged and reset from the pop-over options. | <ul style="list-style-type: none"> • Acknowledged • Reset |

Units tab

| Measurement | Units |
|--------------------------|---|
| Distance units | <ul style="list-style-type: none"> • Nautical Miles • NM & m • Statute Miles • Kilometers |
| Speed units | <ul style="list-style-type: none"> • Kts • MPH • KPH |
| Depth units | <ul style="list-style-type: none"> • Meters • Feet • Fathoms |
| Temperature units | <ul style="list-style-type: none"> • Celsius • Fahrenheit |
| Date format | <ul style="list-style-type: none"> • MM:DD:YYYY • DD:MM:YYYY • MM:DD:YY • DD:MM:YY |
| Volume units | <ul style="list-style-type: none"> • US Gallons • Imperial Gallons • Liters |
| Economy units | <ul style="list-style-type: none"> • Distance per Volume • Volume per Distance • Liters per 100 km |
| Wind speed units | <ul style="list-style-type: none"> • Knots • Meters per Second |

| Measurement | Units |
|-----------------------|---|
| Pressure units | <ul style="list-style-type: none"> • Bar • PSI • Kilopascals |
| Time format | <ul style="list-style-type: none"> • 12hr • 24hr |

| Settings | Description | Options |
|-------------------------|---|--|
| Bearing mode | Determines how bearing and heading data is displayed. | <ul style="list-style-type: none"> • True • Magnetic |
| System Datum | Determines the datum used by your MFD. This should be set to the same datum used by your paper charts. | List of available datums. |
| Variation | When set to Auto the MFD will automatically compensate for the naturally-occurring offset of the Earth's magnetic field. | <ul style="list-style-type: none"> • Auto • Manual |
| Manual variation | When variation is set to Manual , you can specify an offset. | <ul style="list-style-type: none"> • 30° W to 30° E |

Advanced tab

| Settings | Description | Options |
|----------------------------|---|---|
| Maximum RPM | You can select a maximum RPM for your engine dials, or allow the system to automatically configure the Maximum RPM. | <ul style="list-style-type: none"> • Auto • 3,000 RPM to 10,000 RPM |
| Custom RPM Red zone | You can create a custom Red zone for your RPM dials. | <ul style="list-style-type: none"> • 0 RPM to 10,000 RPM |

| Settings | Description | Options |
|----------------------------|---|-----------|
| Wind angle response | You can configure the rate at which Wind angle data is updated on the MFD. The Higher the response setting the faster the update rate will be. | • 1 to 15 |
| Wind speed response | You can configure the rate at which Wind speed data is updated on the MFD. The Higher the response setting the faster the update rate will be. | • 1 to 15 |

Page settings tab


| Settings | Description |
|-------------------------|---|
| Data Overlays | Enables configuration of Data overlays |
| Edit split ratio | Enables you to customize the position of the partitions in splitscreen app pages. |

21.5 CZone plug and play

Digital switching pages for CZone® digital switching systems can be set up automatically in the Dashboard app using the CZone plug and play wizard.

Note:

- The Plug and play process requires a display interface to be present in the CZone configuration file for Raymarine MFDs.
- Only 1 display interface dipswitch number must be used to represent all Raymarine MFDs in the system.
- If the CZone configuration file contains only 1 display interface then the MFD will automatically select that assigned display interface dipswitch number.

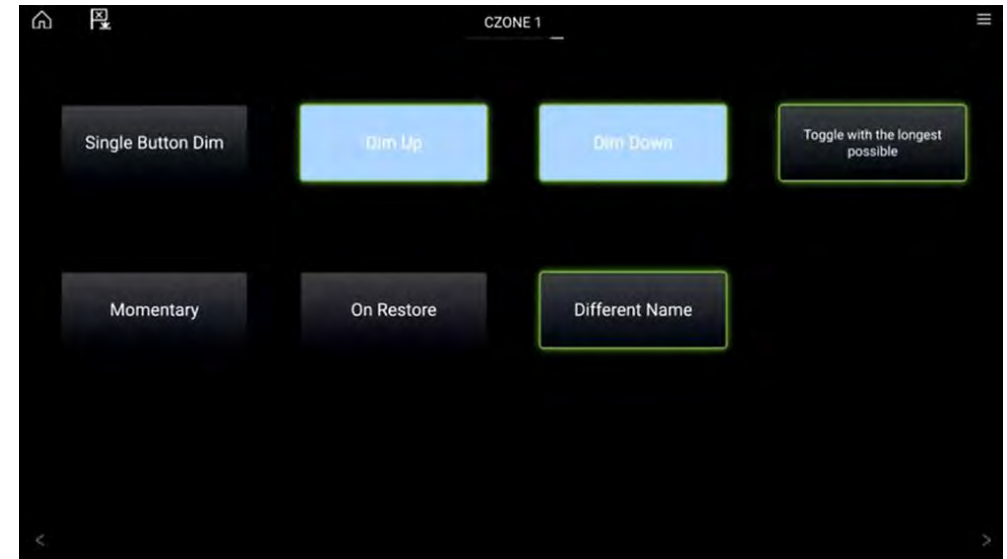

Once the CZone plug and play wizard is completed successfully you will have access to all of the programmed circuits via the Dashboard app.

The wizard will create pages with up to 12 buttons per page (4 x 3), with a maximum number of 120 buttons. The buttons will be created in the circuit ID order from the configuration file.

Splitscreen page configurations are supported with 12 buttons per page (2 x 6).

Creating CZone digital switching pages automatically


When the Dashboard app detects CZone hardware and the system does not have an existing digital switching configuration installed, the CZone plug and play wizard is started.

Note:

The CZone plug and play wizard can be initiated at any time from the Pages settings menu: **Dashboard app > Menu > Settings > Pages** by selecting **Add page** and then **CZONE** from the pop-over menu.

21.6 Navigation and Sailing dials


Navigation and Sailing dials are available which provide a compass dial with various data indicators.

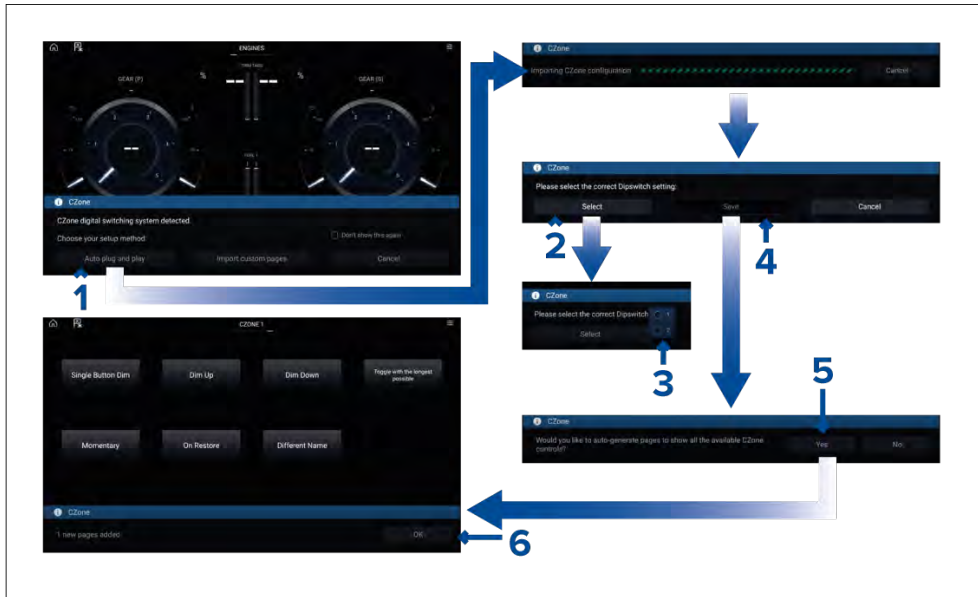

Note:

If you already have a CZone pages configured using the Raymarine graphics tool selecting **Import custom pages** will allow you to browse an inserted memory card for your custom pages file and import into the Dashboard app.


1. Select **Auto plug and play**.
The CZone configuration will be imported to the MFD.
2. Select the **Select** button.
3. Select the Dipswitch number as determined by your CZone configuration.
4. Select **Save**.
5. Select **Yes** to auto generate pages.
6. Select **OK**.

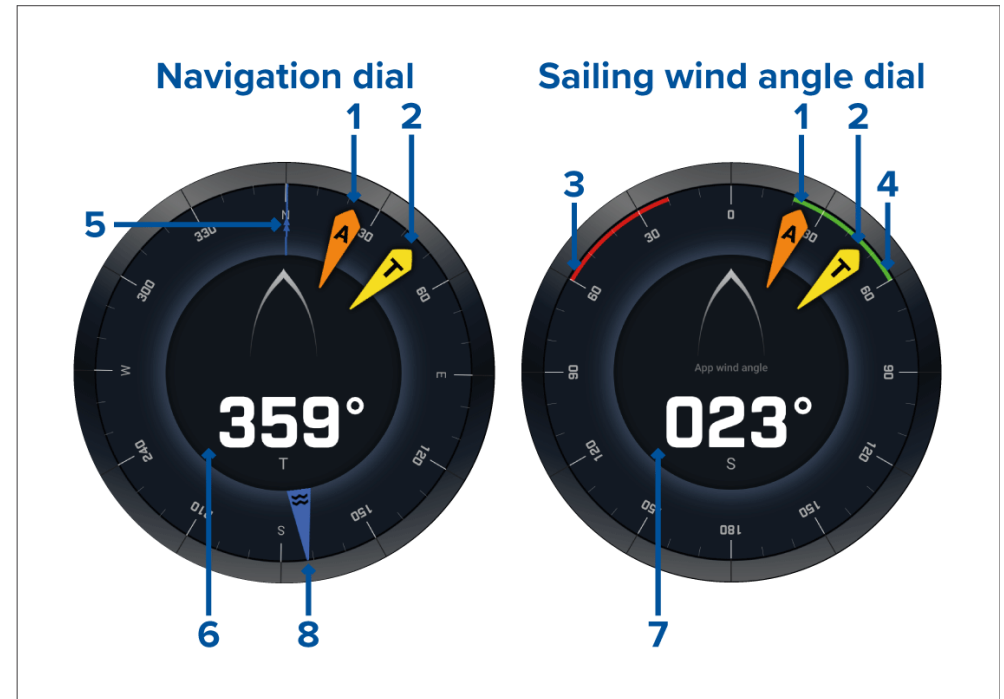

1. Apparent Wind Angle (AWA) indicator
2. True Wind Direction (TWD) indicator
3. Port closed hauled angle
4. Starboard closed hauled angle
5. Compass
6. Heading
7. Apparent Wind Angle (AWA)
8. Tide direction indicator

Sailing dials for laylines

The Sailing page and Navigation page can display an Apparent wind or True wind dial to aid with sailing along laylines.

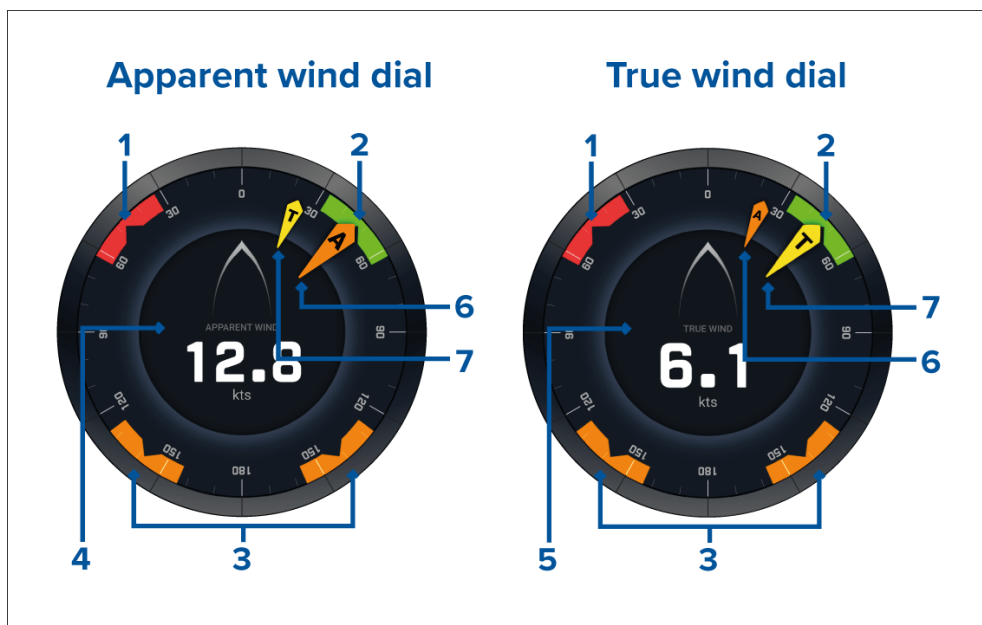

1. Port wind angle target
2. Starboard wind angle target
3. Downwind wind angle target
4. Apparent wind speed (AWS)
5. True wind speed (TWS)
6. Apparent Wind Angle (AWA)
7. True Wind Angle (TWA)



When sailing you may aim the wind angle so it aligns with the centre of the wind angle target to maximise your velocity made good (VMG) when tacking upwind or gybing downwind.

Sailing data items

The default sailing page comes with a selection of data items designed to help with sailing:

- Apparent wind sailing dial
- Distance to tack
- Time to tack
- Sailing distance to waypoint
- Waypoint sailing Time To Go
- Speed through water
- Target speed through water
- Steer to layline
- Polar performance (only active with sailing profile set to polar)
- Rudder bar

It is advised to use the Sailing data items in combination with the Laylines feature available in the **Chart app**. For more information refer to: [14.2 Laylines](#)

Race Start data items


The Race Start page displays a selection of useful data items designed to help you achieve a better racing start.

- Apparent wind sailing dial
- Race Timer (can be used to start, stop and edit the countdown timer)
- Distance to line
- Line bias
- Time to burn
- Time

It is advised to use the Race Start data items in combination with the Laylines feature and the Race Start Line and Race Timer features available in the **Chart app**. For more information refer to:

[14.2 Laylines](#)

[14.3 Race Start Line \(SmartStart\) and Race Timer](#)

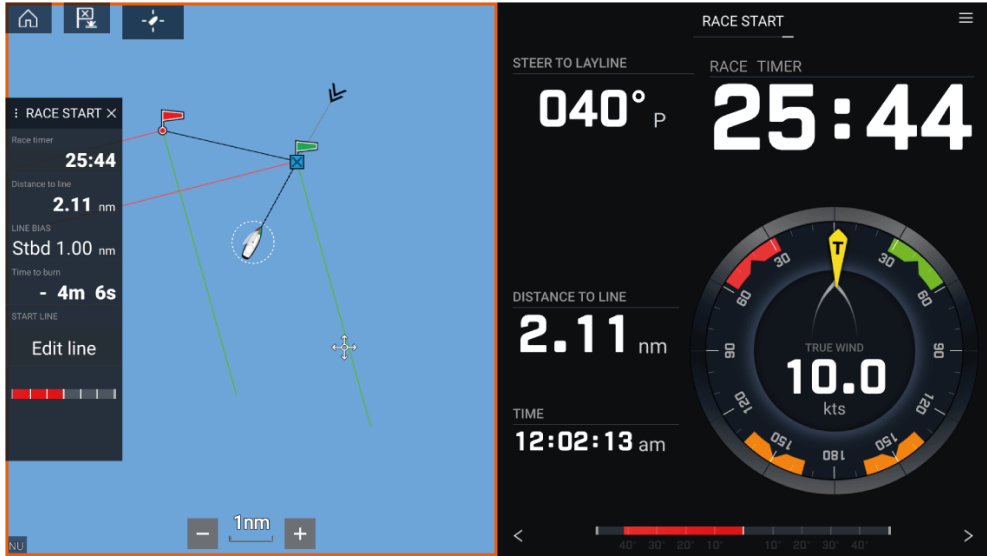

CHAPTER 22: YAMAHA APP

CHAPTER CONTENTS

- 22.1 Yamaha engine gateway selection — page 301
- 22.2 Yamaha HDMI overview — page 301
- 22.3 Yamaha app overview — page 301
- 22.4 Customizing Data pages — page 302
- 22.5 Engine page — page 306
- 22.6 Settings — page 309

22.1 Yamaha engine gateway selection

When the MFD is connected to Yamaha engines via a compatible gateway / interface, engine related data can be displayed in the dedicated Yamaha app.

Engine gateway selection is performed as part of the Boat details settings in the initial MFD start up wizard. The selection can also be changed in the Boat details settings tab: **Homescreen > Settings > Boat details > Engine manufacturer**.

- If you have a compatible gateway interface, select **Yamaha** from the Engine manufacturer options.
- If you have a compatible gateway that includes the Yamaha MFD HDMI interface, select **Yamaha HDMI** from the Engine manufacturer options.

Compatible Yamaha gateways

The following gateways are compatible:

- The **Yamaha app** is compatible with Yamaha Command Link and Command Link Pro when connected to the MFD via a Yamaha NMEA 2000 gateway or CL7 gauge.
- The **Yamaha HDMI** app is compatible with Yamaha Command Link and Command Link Pro when connected to the MFD via a Yamaha Helm Master EX 6YG gateway and MFD interface (MFDI).

22.2 Yamaha HDMI overview

The MFD will display the HDMI video input feed from the Yamaha MFDI. Control is achieved using the Yamaha supplied handheld controller.

Please refer to the documentation that was supplied with your Yamaha engine system.

22.3 Yamaha app overview

The **Yamaha app** enables you to view engine system data from a connected Yamaha Command Link or Command Link Pro network.

Note:

- The Yamaha app will only display data when a compatible Yamaha Command Link or Command Link Pro network is connected to the MFD via a Yamaha NMEA 2000 gateway or CL7 gauge.
- The Yamaha app can only be displayed as a Fullscreen app page.
- The Yamaha app is pre-configured with a number of customizable data pages.
- For each instance of the Yamaha app you can select which Data pages you want to use; the Data page selection will persist over a power cycle.








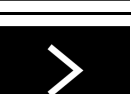
Requirements

The Yamaha app is available when a compatible Yamaha Command Link or Command Link Pro network is connected to the MFD via a Yamaha NMEA 2000 gateway (6YG-8A2D0-00-00) or CL7 display.

Note:

Do not use the Gateway module (6YG-8A2D0-00-00) and CL7 display together on the same network.

Yamaha app controls

| Icon | Description | Function |
|---|----------------|--|
|  | Home icon | Takes you to the Homescreen. |
|  | Waypoint / MOB | Place waypoint / activate Man overboard (MOB) alarm. |
|  | Pilot icon | Opens and closes the Pilot Sidebar |
|  | Menu icon | Opens the app menu. |
|  | Left arrow | Displays the previous data page. |
|  | Right arrow | Displays the next data page. |

Switching data page

1. Use the **Left arrow** and **Right arrow** buttons, located at the bottom of the screen, to cycle through the available data pages.
2. Alternatively, you can select a specific data page from the Yamaha app menu.

22.4 Customizing Data pages

The Yamaha App contains 3 default data pages: **Engines**, **Data** and **Tanks**. The data items displayed on each page can be changed, hidden or reset.


To customize each page:

1. Select and hold the relevant Data item.
 - i. Alternatively you can select **Customize page** from the app menu: **Menu > Customize page**.

2. Select **Edit**, **Hide** or **Reset** from the Data item pop-over menu.
 - i. **Edit** — you can select the new data item you want to add to the page.
 - ii. **Hide** — removes the data item from the page.
 - iii. **Reset** — reset the value of the selected data item (only available for certain data items).

Available data items

Engine page

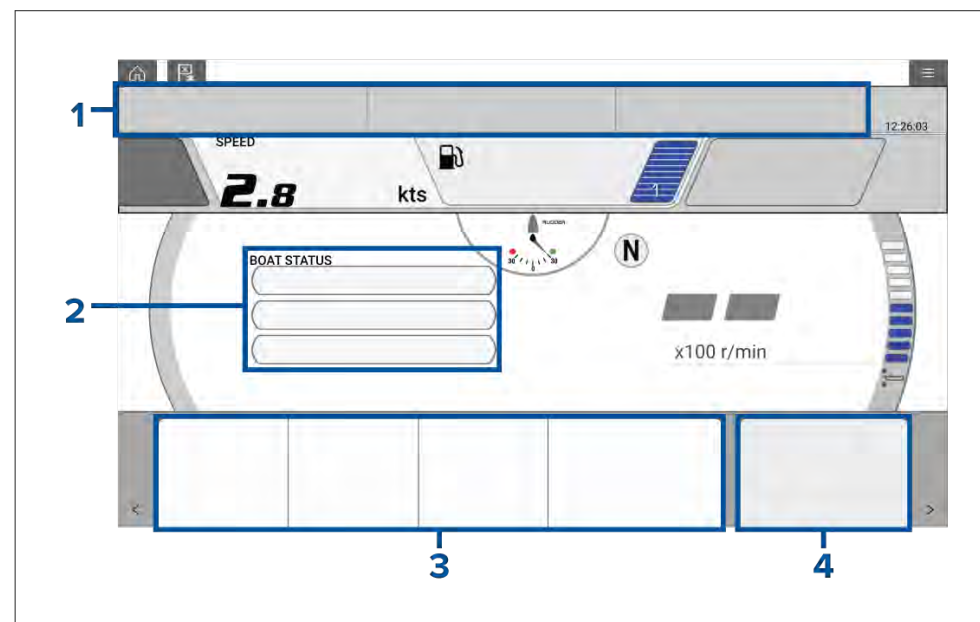

Cell 1 and Cell 2

| Data type | Data item | Data type | Data item |
|-----------------|---------------------------------------|--------------------|--------------|
| Depth | • Depth | Environment | • Water Temp |
| Distance | • Trip | GPS | • SOG |
| Engine | • Engine Trip Hours • Engine Hours | Pilot | • Rudder |

| | | | |
|------------------|--|------------------|--|
| Fuel | <ul style="list-style-type: none"> • Engine economy total • Fuel flow total • Fuel used (trip) • Est. fuel remaining | Speed | <ul style="list-style-type: none"> • STW |
| Cell 3 | | Cell 4 | |
| Data type | Data item | Data type | Data item |
| Engine | <ul style="list-style-type: none"> • Coolant Temp • Coolant Pres • Alternator Level • Alternator • Oil Pres | Boat | <ul style="list-style-type: none"> • Accessory voltage level • Accessory voltage • Supply voltage level • Supply voltage |

| Data type | Data item | Data type | Data item |
|----------------|---|----------------|---|
| Battery | <ul style="list-style-type: none"> • TTZ • SOC | GPS | <ul style="list-style-type: none"> • COG • Avg SOG • Max SOG • SOG • Loran Position • Position • COG SOG |
| Boat | <ul style="list-style-type: none"> • Mast Rot • Roll • ROT | Heading | <ul style="list-style-type: none"> • Lock Hdg Err • Tack Heading • Lock Hdg • Heading • Heading & STW |

Data Page



| | | | |
|-----------------|---|-------------------|---|
| Depth | <ul style="list-style-type: none"> • Max Depth • Min Depth • Depth | Navigation | <ul style="list-style-type: none"> • VMG to Wpt • BTW & DTW • CMG & VMG to WPT • Compass • BTW • XTE • DTW • CMG • DMG • Wpt ETA • TTP • Target Pos • Loran Target Pos • Wpt TTG • Wpt • Rte ETA • Next turn angle • Origin target distance • Next waypoint name • BOTW |
| Distance | <ul style="list-style-type: none"> • Trip season • Trip month • Trip day • Trip manual • Ground Log • Trip • Log | Pilot | <ul style="list-style-type: none"> • Rudder |

| | | | |
|---------------|--|--------------|--|
| Engine | <ul style="list-style-type: none"> • RPM • Engine Trip Hours • Fuel Rate (Avg) • Inst Fuel Economy • Engine Fuel Rate • Engine Hours | Speed | <ul style="list-style-type: none"> • VMG to Wind • Avg STW • Max STW • STW |
|---------------|--|--------------|--|

| | | | |
|--------------------|--|-------------|---|
| Fuel | <ul style="list-style-type: none"> • Engine economy total • Fuel flow total • Time to empty • Distance to empty • Fuel used (season) • Total Trip Fuel • Fuel used (trip) • Est. fuel remaining | Time | <ul style="list-style-type: none"> • Timer • Sunset Time • Sunrise Time • UTC Time • Local Time • UTC Date • Local Date • Time and Timer |
| Environment | <ul style="list-style-type: none"> • Drift from ps • Wind Chill (App) • Wind Chill (True) • Dew Point • Max Air Temp • Min Water Temp • Water Temp • Set • Drift • Sunrise/Sunset • Set Drift | Wind | <ul style="list-style-type: none"> • Max AWA • GWD + Beaufort • TWA & TWS • TWA (CH) & TWS • TWA & VMG to Wind • AWA & AWS • AWA (CH) & AWS • AWA & VMG to Wind • GWS & GWD • AWS • Max AWS • Min AWS • AWA • AWA (CH) • Cardinal Wind • Min AWA • TWS |

| | | |
|--|--|---|
| | | <ul style="list-style-type: none"> • Min TWS • Max TWS • TWA • TWA (CH) • Max TWA • Min TWA • TWD • GWS • GWD • Beaufort (wind force scale) |
|--|--|---|

Tanks Page



| Data type | Data item | Data type | Data item |
|-------------|--|-------------|--|
| Boat | <ul style="list-style-type: none"> • Fresh Water • Live Well • Gray Water | Fuel | <ul style="list-style-type: none"> • Total Fuel (vol) • Total Fuel |

• Black Water


• Fuel level

22.5 Engine page

In addition to the customizable data cells available, the Engine page also displays the following engine and tank data for your vessel:


- Rudder position (single engine only)
- Transmission
- Speed
- Revolutions Per Minute (r/min)
- Engine trim
- Number of fuel tanks and fill level

Troll mode can also be enabled from this page.

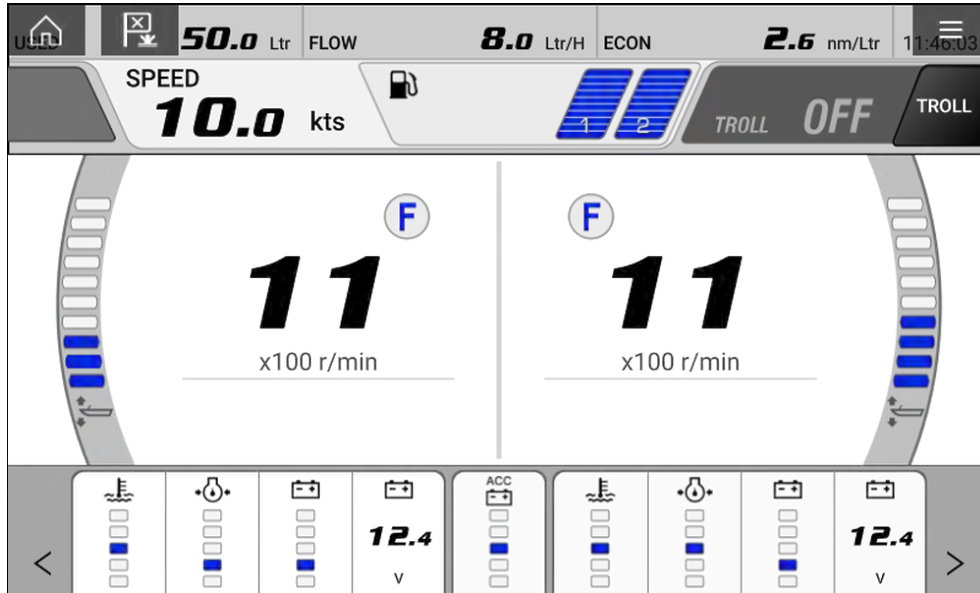


Engines

The number of Yamaha engines connected to your MFD's network determines how the engine page is displayed.

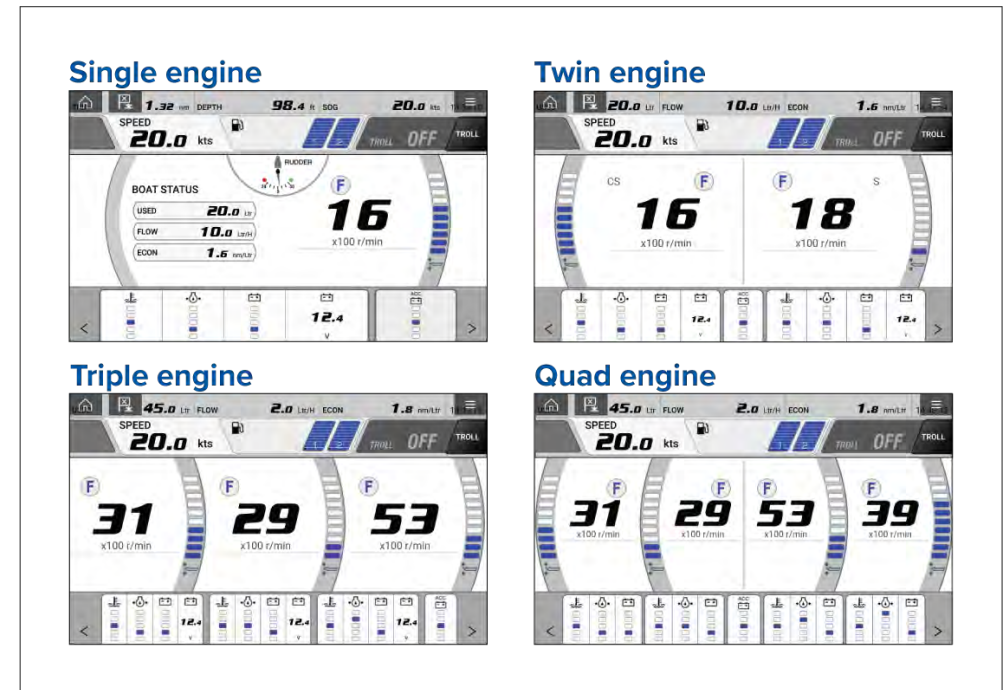


The number of engines and their manufacturer can be set on the **Boat details** page.


Homescreen > Settings > Boat details

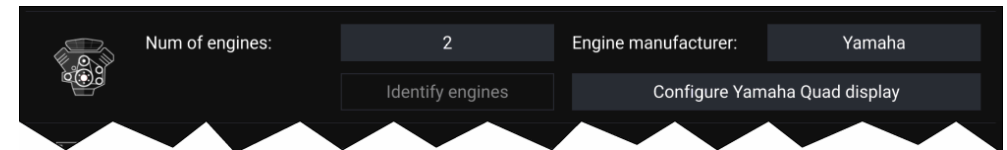

If your vessel is setup using the old quad engine system (2 MFDs for Port and Starboard Engines), you can select which engines are displayed per MFD by selecting **Configure Yamaha Quad display** and choosing **Port side** or **Starboard side**.

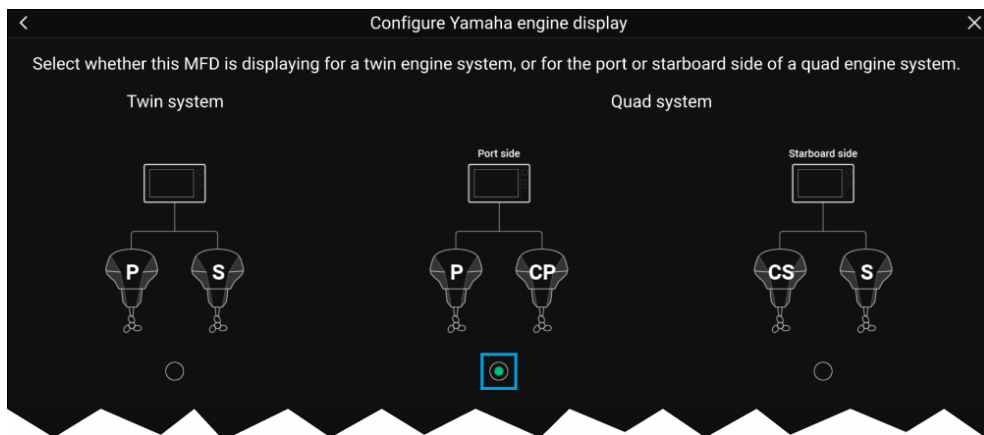


The engine page will update to reflect which engines your MFD is networked to, with Port and Central Port symbols or Starboard and Central Starboard symbols.

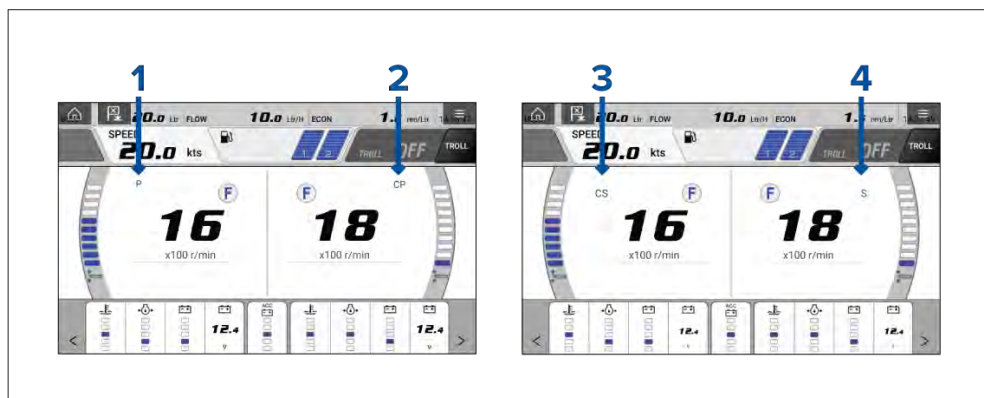

1. Port engine
2. Central Port engine
3. Central Starboard engine
4. Starboard engine

Transmission

The transmission icons indicate which transmission mode your vessel's engine is currently in:

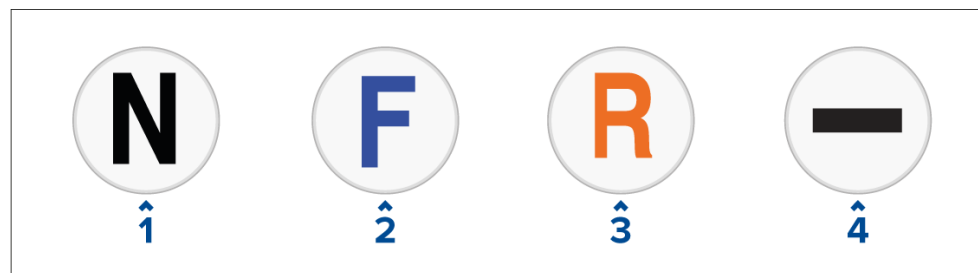


1. Neutral
2. Forward
3. Reverse
4. No transmission data detected

Note:

If no transmission information is detected from the CAN bus after 3 seconds, it will timeout. Ensure that your engine(s) are compatible and have been connected to your MFD network correctly.

Status and warning indicators

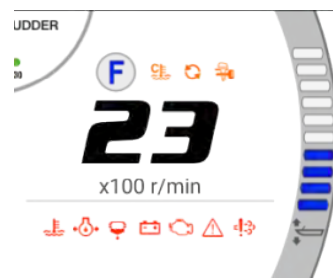


The engine page will display indicators for engine status and warnings.

These status and warning symbols are described below:



1. **Engine warming up status**
2. **Synchronization status**

3. Immobilizer lock status

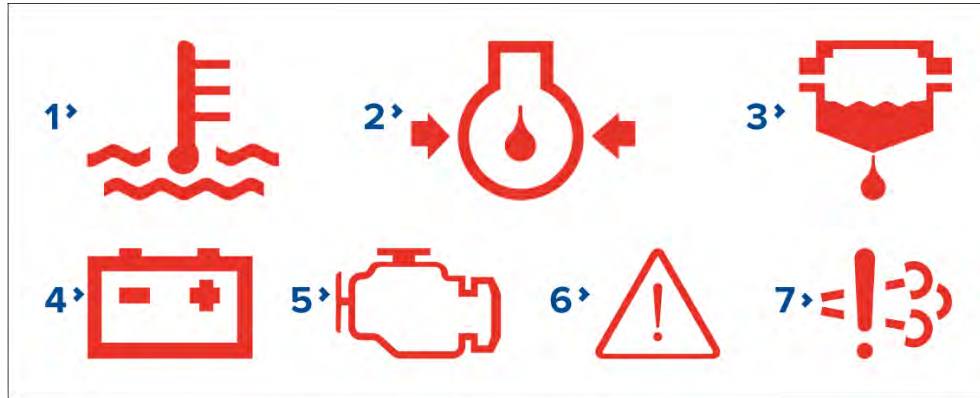

1. **Overheat warning**
2. **Low oil pressure warning**
3. **Water in fuel warning**
4. **Low voltage warning**
5. **Check engine warning**
6. **Steering system warning**
7. **Catalyst warning**

Tanks



The engine page displays the number of tanks aboard your vessel, their type, instance number and fill level.

Note:

- The number of tanks and their type is determined during the installation wizard.
- Tanks require calibration, for more information refer to [Calibrating tanks](#)
- No more than 6 tanks can be displayed on the engine page.
- If there are more than 6 tanks detected on your vessel's network the engine page will display them using the following hierarchy: fuel, fresh water, waste water, gasoline, followed by prioritizing the lowest instance numbers first.

Engine trim



The trim bar displays the trim level of your engine(s), a higher blue bar equates to a higher trim percent. The trim bar will begin to flash if you attempt to set the engine trim beyond 100%.

Troll mode



If your engine supports Troll mode it can be enabled from the engine page. Troll mode is enabled by pressing the Troll mode toggle or by selecting it from the menu.

Note:


- Lower engine RPM and go into idle mode before attempting to activate Troll mode.
- When Troll mode is enabled your RPM gauge will change from x100 r/min to r/min, allowing for more precise control.

22.6 Settings

The settings page can be used to view fault codes, schedule maintenance, and calibrate your engine(s).

Fault codes

The fault codes tab displays all live engine faults detected on the network.

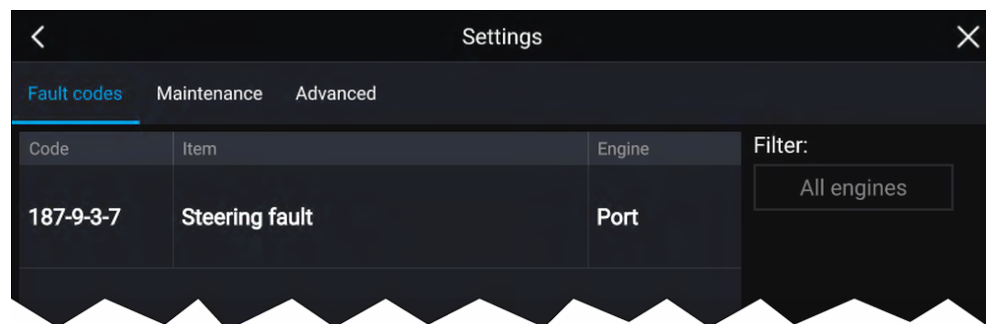


Note:

- The fault codes tab default setting is to display fault codes from all engines.
- You can use the filter option to display fault codes for a specific engine and hide codes for all other engines.

Maintenance

The Maintenance tab displays the amount of time since your Yamaha engine(s) have been serviced.

The amount of hours since last service will automatically accumulate when your Yamaha engine(s) are running. When your engine(s) have been serviced you can long hold the row and select **Reset** from the pop up to return the amount of hours back to 0.

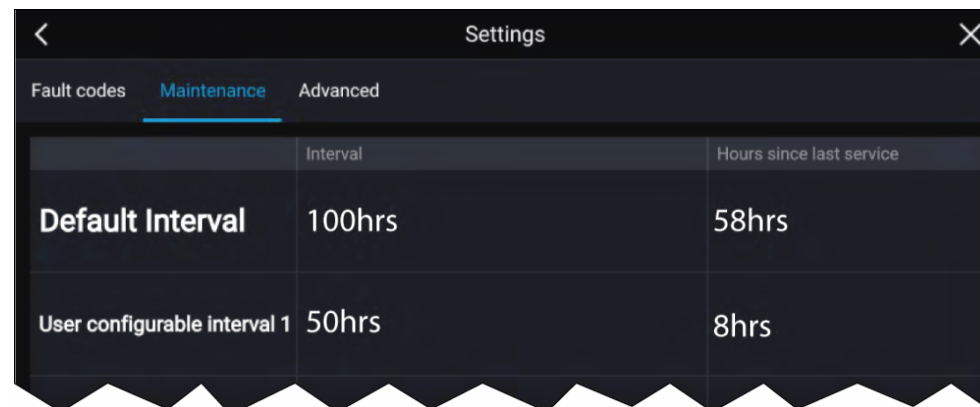

Note:

- A default interval of 100 hours is displayed at the top, this is the recommended maximum amount of time you can use your engine(s) before a service is required.
- Additional user configurable intervals can be customized by long holding each row and choosing the interval length.

Advanced

The Advanced tab is used during the installation and calibration of your Yamaha engine(s). For more information on how to install and calibrate your Yamaha engine(s) refer to Yamaha engine installation manual or Yamaha dealer.

Options:

Gateway reset — System protocol information reset.

Engine instances reset — Engine instances reset. Engine(s) will be reordered based on engine position:

| Engine | Port | Central or Central Port | Central Star-board | Star-board |
|---------------|------|-------------------------|--------------------|------------|
| Single Engine | 0 | - | - | - |
| Twin Engine | 0 | - | - | 1 |
| Triple Engine | 0 | 1 | - | 2 |
| Quad Engine | 0 | 1 | 2 | 3 |

All pages reset — All data items on each data page are reset to default.

Fuel flow offset — Set the Fuel flow offset value in accordance with your Fuel flow gauge reading.

Trim Calibration — Calibrate your engine trim by pressing **Set to zero** if any number other than 0 is showing on the Trim Position when engine(s) have stopped.

CHAPTER 23: MERCURY VESSELVIEW APP

CHAPTER CONTENTS

- [23.1 VesselView app overview — page 312](#)
- [23.2 VesselView Sidebar — page 314](#)
- [23.3 Sport exhaust — page 314](#)
- [23.4 Steering angle indicator — page 315](#)
- [23.5 Engine data page — page 315](#)
- [23.6 Faults — page 316](#)

23.1 VesselView app overview

Engine data from Mercury engines can be displayed in the VesselView app when the MFD is connected to the same SeaTalkng® / NMEA 2000 backbone as the Mercury engine gateway.

Note:

It is recommended that your Mercury Smartcraft connect gateway is upgraded to the latest version of software by a Mercury dealer.

Note:


- A VesselView app page icon will be available on the Homescreen when **Mercury** is selected as the Engine manufacturer during the MFD's initial start up wizard.
- The VesselView app can also be made available by changing the Engine manufacturer setting to **Mercury** and manually adding a VesselView app page icon to the Homescreen.
 - The Engine manufacturer setting is located in the MFD's Boat details settings: **Homescreen > Settings > Boat details > Engine manufacturer:**
 - To create a VesselView app page icon manually, refer to: [p.63 — Creating an app page](#)

Engine data for up to 4 engines can be displayed. The number of engines that data is displayed for is determined by the number of engines specified in the MFD's boat details settings menu: **Homescreen > Settings > Boat details > Num of engine:**

Data for port engine(s) is displayed on the left dial, and data for starboard engine(s) is displayed on the right dial. In 3 engine systems, the right dial is also used to display data for the Center engine.

In 3 and 4 engine configurations, the RPM dial and transmission graphics are dynamic and will switch between engines under different conditions.

Fullscreen app page

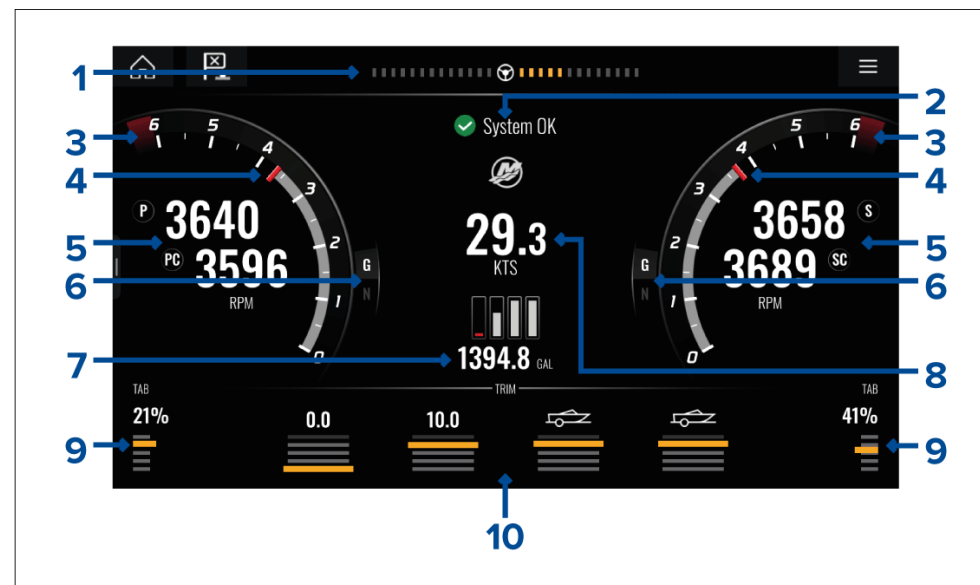

1. Steering angle indicator— Indicates the current steering position.
2. System status — Engine status and start up sequence is displayed.
3. Dynamic engine RPM red zone — The RPM red zone is determined automatically based on engine type. When an engine reaches the RPM red zone, the red zone color will change from dark red to bright red.
4. Dynamic engine RPM indicator— Indicates the engine's current RPM.
5. Engine RPM value — Displays current RPM values.
6. Dynamic transmission status — Indicates the current transmission gear.
7. Fuel tanks levels and total fuel — When a tank reaches 20% of its capacity, the level indicator will turn red. Up to 5 fuel tanks are supported.
8. Current vessel speed (Speed Through Water).
9. Tab position — Indicates vessel tab position as a percentage, with 0% being fully trimmed up (stored), and 100% fully trimmed down.
10. Engine trim — Indicates the engine trim position. Numeric values will be displayed between 1 and 10. Although the highest numeric value is 25, values above 10 are not displayed and are instead replaced by an icon, to indicate that the boat is being trailed.

The VesselView app can also be displayed in a splitscreen app page using either half screen portrait or landscape panes. When viewed in splitscreen app pages the page layout will be different.

Engine notifications

Engine notifications such as alarms and warnings will be displayed on the MFD screen. Refer to: [p.313 — Engine warning messages](#)

System status

The System status is displayed in the center of the page.

When the system is started a scan is performed after which **System OK** is displayed.

No Communication is displayed if the engines are turned off or engine data cannot be detected.


If the system is restarted after a brief time the system scan is not performed.

Engine warning messages

Engine alarms, warnings and notifications will be displayed on the MFD as they are triggered.

Engine warning messages are color coded to signify their severity:


Alarms

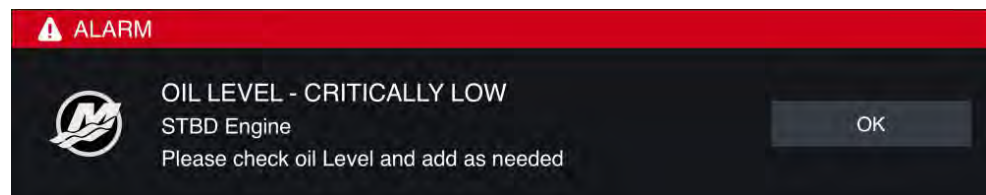

Alarms are **red**. — Alarms are used to signify that immediate action is required due to a potential or immediate danger or damage. Alarms are accompanied by an audible tone. The alarm message and audible tone will continue to be displayed until acknowledged or the conditions that triggered the alarm are no longer present. Acknowledged alarms may remain active whilst the alarm condition persists but will not trigger further onscreen or audible notifications.


Alarms are listed in the Fault code history which can be viewed from the app menu: **Menu > Settings > Fault code history**.

Warnings

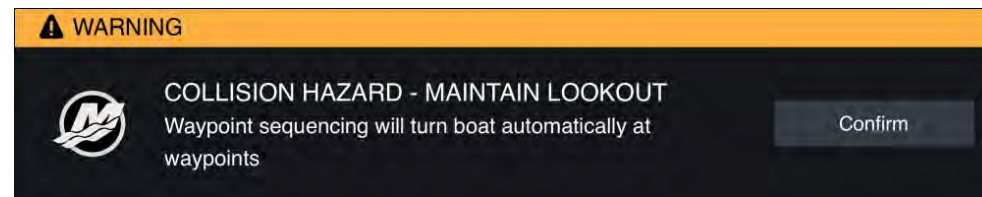

Warnings are **Orange**. — Warnings are used to signify that there has been a change in situation that you need to be aware of. Warnings are accompanied by an audible tone. The warning message and audible tone will continue to be displayed until acknowledged or the conditions that triggered the warning are no longer present. Acknowledged warnings may remain active whilst the warning condition persists but will not trigger further onscreen or audible messages.

Notices

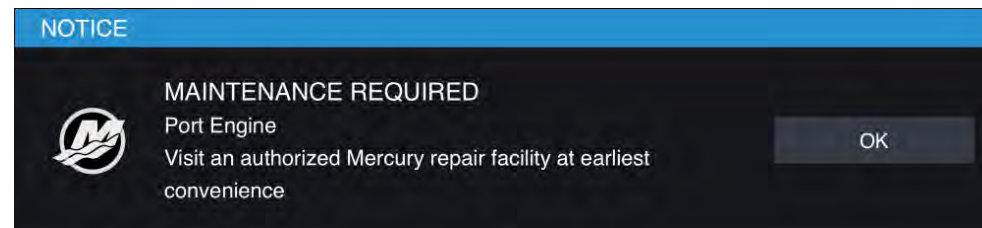


Notices are **Blue**. — Notices are used to provide information requiring user acknowledgement. Notices are not accompanied by an audible tone.

Mercury SmartCraft integration helm grouping

Mercury SmartCraft integration is only available on MFDs assigned to Display groups Helm 1, Helm 2, Helm 3 and Helm 4.


The Helm grouping should be configured during installation. If required the helm grouping can be changed from the **This display** menu: **Homescreen > Settings > This Display > Display group**.

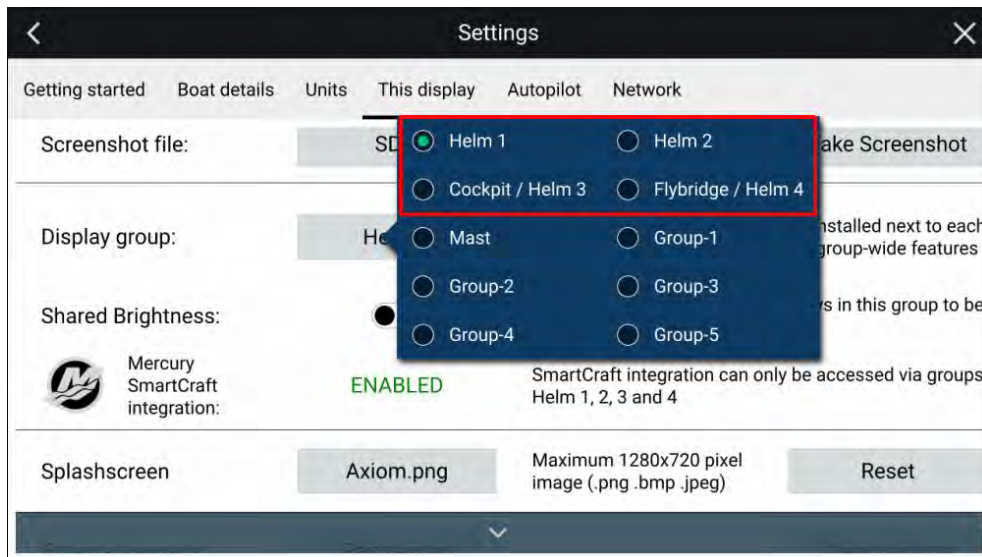

Displays that have been installed next to each other should be in the same group

Information messages

When integrated with a Mercury SmartCraft system the MFD supports display of standard information messages transmitted by the VesselView system.

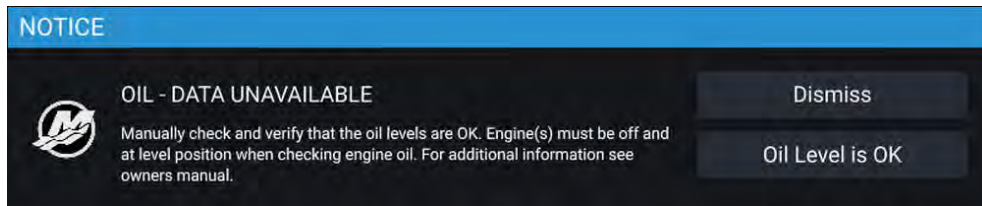

23.2 VesselView Sidebar

The VesselView Sidebar is available in all MFD apps and provides quick access to Mercury engine data and features..



Selecting the Mercury icon will display icons for related sidebars.

23.3 Sport exhaust

On supported outboards the option to switch the sport exhaust feature on and off will be available on the VesselView engine data sidebar.

The sport exhaust feature allows you to change the sound of the outboard idle relief exhaust volume. Enabling the sport exhaust feature opens an exhaust passage, allowing a more deep exhaust sound.

Note:


Mercury Smartcraft Connect Gateway software release 3 or greater is required.

23.4 Steering angle indicator

The steering angle indicator provides an onscreen indication of the steering position.

The Steering angle indicator is available in the VesselView app and the VesselView sidebar.

Steering angle indicator locations

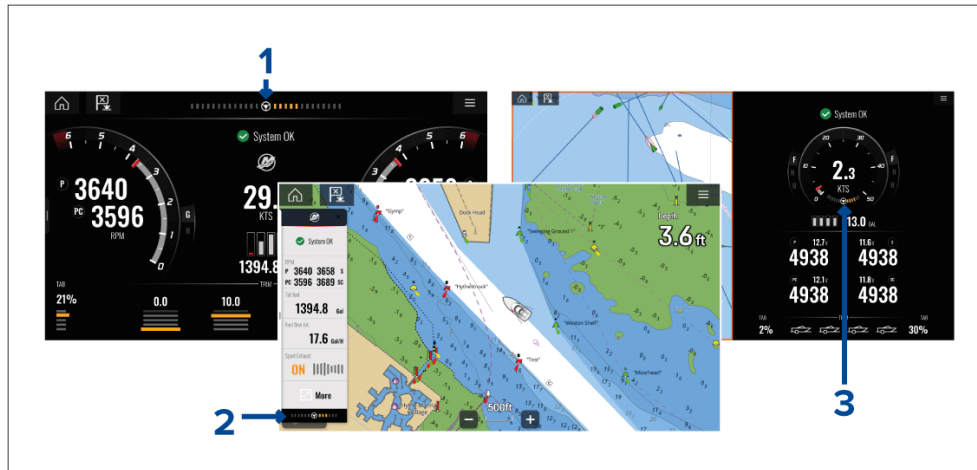

1. Location in fullscreen app page.
2. Location in VesselView sidebar.
3. Location in splitscreen app page.

The Steering angle indicator is non-linear and is more sensitive at lower steering angles.

Note:

The steering angle indicator is disabled when a Mercury joystick is active.

23.5 Engine data page

The VesselView engine data page displays various engine related data for your Mercury engines.

The Engine data page can be accessed from the VesselView app: **Menu > Engine data** or from the VesselView sidebar by selecting **More**.

| | Port | Starboard |
|--------------------------|-----------|-----------|
| RPM | 4188 | 4188 |
| Oil Level | Good | Good |
| Transmission Fluid Level | Good | Good |
| Engine Hours | 0.3 hours | 0.3 hours |
| Battery | 12.5 v | 12.1 v |
| Trim | 20% | 11% |

The following is the full list of data that is available for each configured engine.

- RPM
- *Oil level
- *Transmission fluid level
- Engine hours
- Battery voltage
- Trim position
- Coolant pressure
- Coolant temperature
- Oil pressure
- Oil temperature
- Fuel flow
- Gear pressure
- Gear temperature
- Load %
- Boost pressure

- Steering angle

Note:

*Only available on supported engines.

On compatible engines the engine data page also provides options to initiate automatic engine oil level and transmission fluid level check procedures.

23.6 Faults

Fault code history

The fault codes tab displays live and historical detected engine faults.

| Code | Description | Date & Time | Filter: |
|----------|---|------------------|---------------|
| 256 - 2 | Air injector circuit 6 - Wastegate Communication | 14/04/2021 08:20 | All |
| 321 - 13 | Throttle position sensors A and B for both Port and Starboard - Fuel Injector | 14/04/2021 08:20 | Clear history |
| 300 - 8 | Throttle position sensor group - Glow Plug | 14/04/2021 08:20 | |
| 256 - 14 | Air injector circuit 6 - Emergency Stop | 13/04/2021 16:04 | |

By default the Fault codes history tab displays fault codes for all engines. You can use the **Filter** option to display fault codes for a specific engine.


Active and historical engine fault codes can also be viewed from the MFD's Alarm manager: **Homescreen > Alarms** and selecting either **Active** or **History** tab.

On Board Diagnostics (OBD)

MFDs that are configured for use with Mercury engines can display OBD faults. When an OBD fault occurs an alarm will be triggered on the MFD.

An OBD icon will be displayed on the MFD's splashscreen during boot up to signify that the MFD supports OBD.

Notifications and icons will be displayed when an OBD fault occurs or is active.

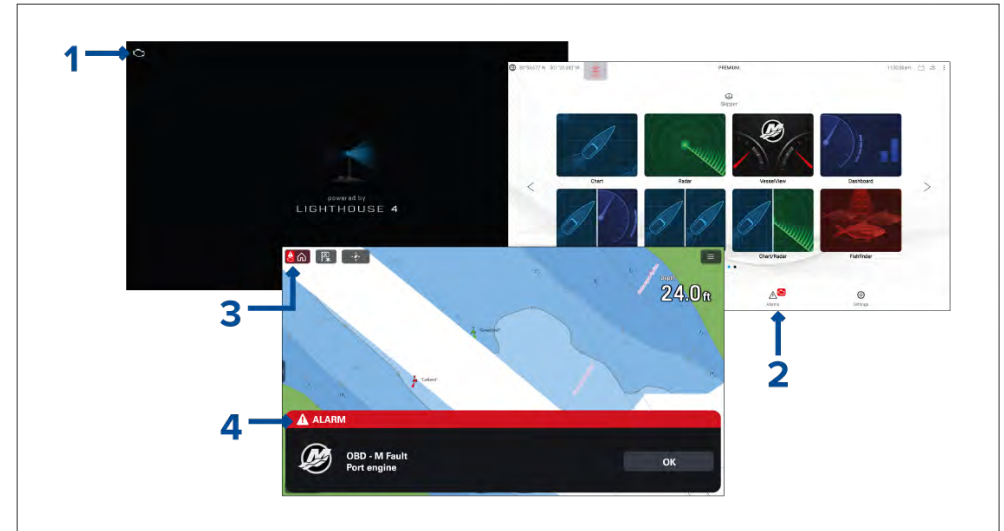

1. Splashscreen icon signifying that OBD is supported.
2. The Alarms icon on the homescreen will display an OBD icon when a fault is active.
3. The home icon in MFD apps will display an OBD icon when a fault is active.
4. When an OBD fault is triggered an alarm notification will be triggered.

OBD fault information will be available in the Alarm manager and in the VesselView app settings menu.

CHAPTER 24: VIDEO APP

CHAPTER CONTENTS


- [24.1 Video app overview — page 318](#)
- [24.2 Thermal camera screen overview — page 319](#)
- [24.3 Opening the Video app — page 320](#)
- [24.4 Video app settings — page 322](#)
- [24.5 Maritime \(M-Series\) camera compatibility — page 325](#)

24.1 Video app overview

Analog video feeds (Axiom™ Pro only) and IP (Internet Protocol) digital video feeds can be viewed, recorded and played back on the MFD using the Video app. Examples of video feeds include: CCTV cameras and Thermal imaging cameras, DVD player etc. It may also be possible to view analog video feeds from other sources using a suitable third party analog-to-IP video converter.


Up to 4 video feeds can be displayed simultaneously when using a splitscreen app page.

Axiom™ Pro MFDs will transmit a connected analog video feed over RayNet to enable the feed to be viewed on networked MFDs.

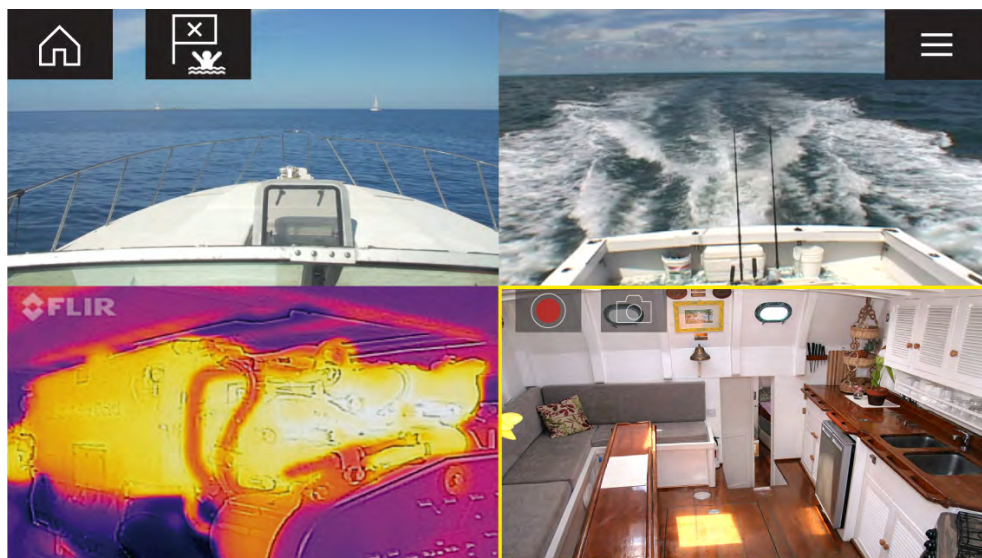

Video app pages

Each Video app instance is unique, this means that once you have selected a feed to display in a Video app page then your feed selection is saved and the same feed will be displayed whenever that app page icon is opened from the Homescreen. If you open the same Video app page from a networked MFD, the same feed will be displayed on each MFD.

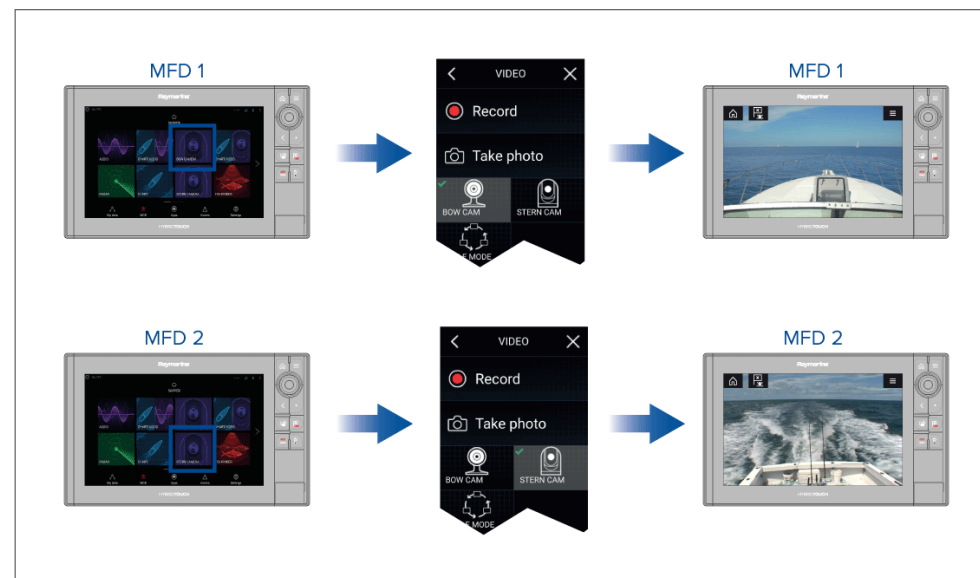

You can create additional Video app pages and assign a different feed to each. This will allow you to view multiple feeds on multiple networked MFDs simultaneously.

For example, if you want to display a different video feed on different networked MFDs, you must first create additional Video app pages.

Note:

When you have multiple Video app page icons on your Homescreen, you may wish to rename each icon to help you easily identify the feeds(s) assigned to each app page. For information on how to rename Homescreen icons, refer to:

[Customizing an existing app page](#)

Renaming video feeds








In multi camera installations you can rename your feed from within the Video app.

From the Video app menu:

1. Select the icon for the camera you want to rename so that its feed is displayed.
2. Goto the Video app's **Settings** menu: **Menu > Settings**.
3. Select the **Camera setup** tab.

- Select the Camera name field.
 - Use the onscreen keyboard to rename your feed and then select **Save**.
- Repeat the above steps for each video feed you want to rename. You can also associate a different icon to your video feed by selecting the **Icon** field.

Video app controls

| Icon | Description | Function |
|---|----------------|---|
|  | Home icon | Takes you to the Homescreen |
|  | Waypoint / MOB | Place waypoint / activate Man overboard (MOB) alarm |
|  | Pilot icon | Opens and closes the Pilot Sidebar |
|  | Menu icon | Opens the app menu |
|  | Record | Start recording (Replaced by Stop icon whilst recording.) |
|  | Stop | Stop recording (Replaced Record icon when not recording.) |
|  | Take photo | Take a photo of what is currently displayed in the active feed. |

Pan, Tilt, Zoom (PTZ) camera controls

Extra controls are available for cameras that can pan, tilt or zoom. Swiping your finger across the screen to pan or tilt the camera. Use Pinch-to-Zoom to zoom in and out.

When not in use place the camera in the Parked position by selecting **Park camera** from the menu: **Menu > Park camera**


Select **Home** from the menu: **Menu > Home** to move the camera to its Home position.

24.2 Thermal camera screen overview


When viewing the thermal or visible light video feed of a compatible thermal camera additional controls are available.

Note:

The status icons are embedded in the video stream from the camera. The focus and zoom buttons can be interacted with.

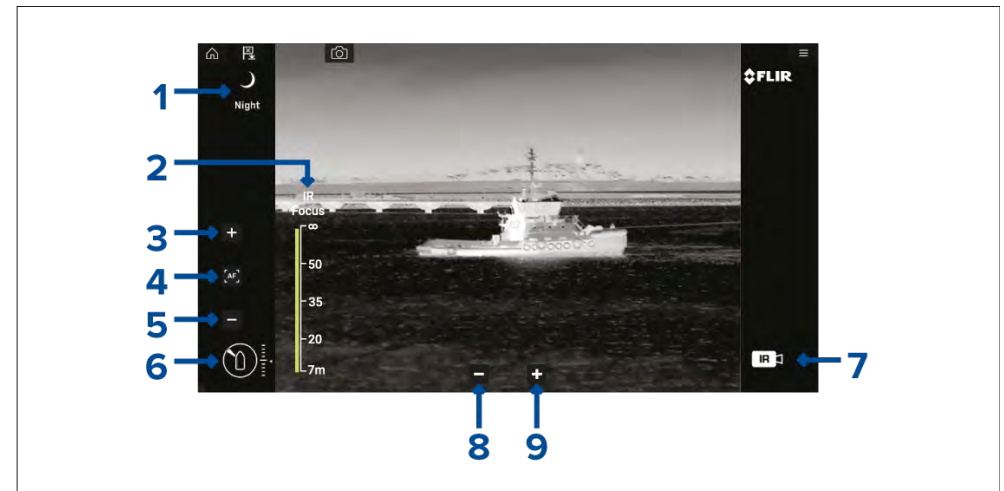


- Scene** Automatic Gain Control (AGC) settings — the icon for the currently select scene is displayed. The following scenes are available:

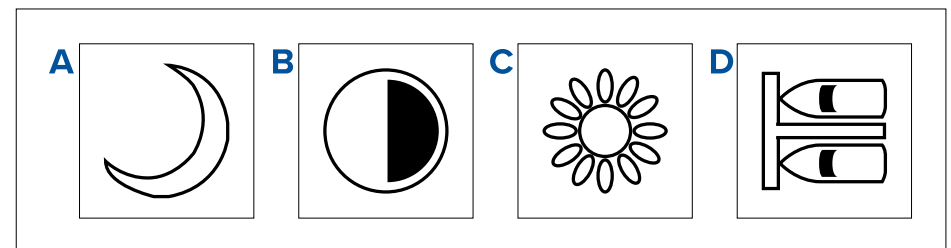

- Night scene** — optimized for use on the open water at night.

- b. **Contrast scene** — optimized for providing visibility to small moving objects.
 - c. **Day scene** — optimized for use on the open water during the day.
 - d. **Docking scene** — optimized for use when the boat is docking at night.
2. **IR Focus** — Shown when autofocus is activated. to indicate the progress of the operation.
 3. ⁽¹⁾**Increase focus** — Manually increases camera focus.
 4. ⁽¹⁾**Autofocus** — Set autofocus.
 5. ⁽¹⁾**Decrease focus** — Manually decrease focus.
 6. **Azimuth (Position) and Elevation (Tilt) indicator** — Shows the azimuth (or direction) of the camera relative to the vessel. The triangle shows the approximate camera field of view (FOV). Shows the vertical tilt of the camera. The diamond shows the approximate camera position.
 7. **Payload** — identifies the type of video feed being displayed.

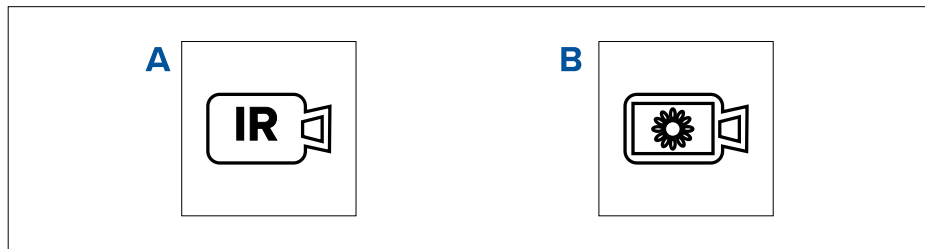

- a. **Thermal video feed**
 - b. **Daylight / visible feed**
8. **Zoom out**
 9. **Zoom in**

Note:

(1) For camera's that support manual focus the controls are displayed temporarily when the touchscreen is pressed.

24.3 Opening the Video app

The Video app is opened by selecting an app page icon from the Homescreen which includes the Video app.

Pre-requisites:

1. Ensure your video feed is compatible by checking the latest details available on the Raymarine website against your device's specification. If in doubt please contact an authorized Raymarine dealer for advice.
2. Ensure you have installed your video device in accordance with the documentation that was supplied with your device.

The Video app will open in 1 of 3 states:

Note: If the Video app is opened soon after powering on your system, you may have to wait for the device(s) to finish booting before the video feed is displayed.

Video feed displayed


If your device is powered up and operational then the Device's video feed is displayed.



Camera not yet available

The 'Camera not yet available' message is displayed if:

- a Video app page is opened before the camera has finished booting up.
- connection to the camera is lost.

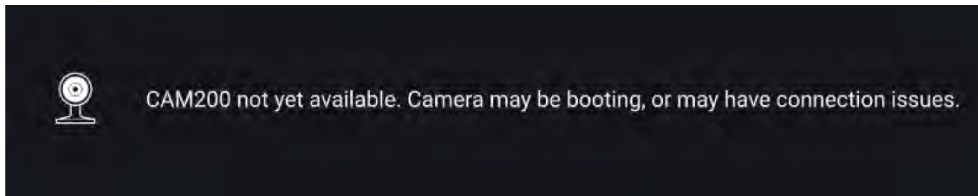


If the **'Camera not yet available'** message is displayed for more than 2 minutes, then your MFD cannot connect to your camera. Ensure network and power connections to your camera and MFD are correct and free from damage and then power cycle your system. If the camera feed is still not displayed, refer to your equipment's installation documentation for further troubleshooting information.

No camera detected


The **'No camera detected'** message is displayed if:

- a Video app page is opened for the first time and no compatible camera is connected.
- a Video app page is opened for the first time before the camera has finished booting up.

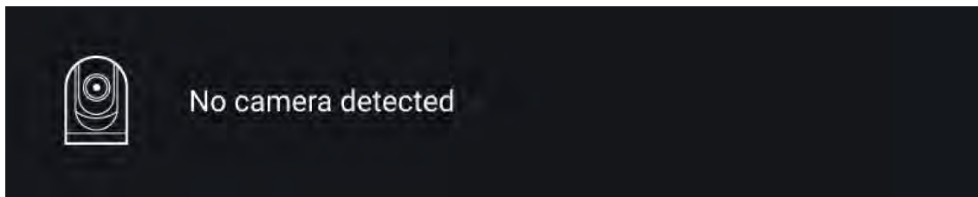

If the **'No camera detected'** message is displayed for more than 2 minutes, then your MFD cannot connect to your camera. Ensure network and power connections to your camera and MFD are correct and free from damage and then power cycle your system. If the camera feed is still not displayed, refer to your equipment's installation documentation for further troubleshooting information.


Selecting a video feed

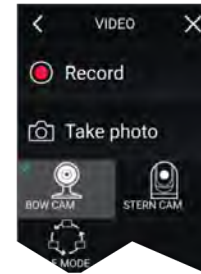

You can change the feed that is displayed in the Video app.
From the Video app main menu, select the icon for the camera that you want to display.

Dual streaming

M-Series cameras with dual payloads (visible and thermal camera lens) can stream a visible feed and thermal feed simultaneously.

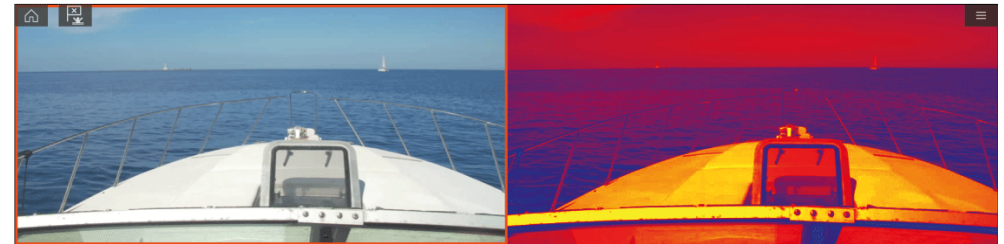

Note:

Dual streaming requires:

- A dual payload M-Series camera: M300, M400 and M500.

Single MFD

Activate dual video streaming on a single MFD.

1. From the **Homescreen**, create a custom combo app that comprises of at least 2 **Video apps**. For more information on creating and customizing LightHouse apps, refer to: [p.63 — Creating an app page](#)
2. Open the combo app and select one of the Video app instances.
3. Select the dual payload camera and select the stream you want to display (visible or thermal):

Combo app > Menu > Settings > Image Tab > Active feed > Visible / Thermal

4. Repeat steps 2 and 3 for the other app instance and video stream.

Dual MFDs

Activate dual video streaming on at least 2 MFDs connected on the same network.

Note:

Make sure your MFDs are both correctly connected on the same network as the dual payload camera.

1. Open the **Video app** on one of the MFDs.
2. Select the dual payload camera and select the stream you want to display (visible or thermal):

Video app > Menu > Settings > Image Tab > Active feed > Visible / Thermal

3. Repeat steps 1 and 2 for the other MFD and video stream.

24.4 Video app settings

The Settings menu provides access to the Video app's features and functions. The options available in the Settings menu are dependent on your system configuration and connected devices.

Image tab

| Settings | Description | Options |
|-----------------------|--|--|
| Active feed | On cameras with more than 1 payload you can select which feed to display in the Video app. | <ul style="list-style-type: none">• Thermal• Visible |
| Blending Mode | On cameras with more than 1 payload you can blend the two feeds together, displaying an overlap of daylight stream on top of thermal image, providing enhanced detail. <ul style="list-style-type: none">• CTV - Colored daylight image blended with the thermal feed.• MSX - Black and white daylight image detects and sharpens the edges of objects shown on the thermal feed. | <ul style="list-style-type: none">• Off• CTV• MSX |
| Blending Level | Set the percentage of the blend between both camera feeds for CTV or MSX blending. | <ul style="list-style-type: none">• 0% to 100% |
| Light | For cameras that include a light this setting switches the camera's light on and off as well as flashing mode and SOS mode. | <ul style="list-style-type: none">• On• Off• Flash• SOS |

| Settings | Description | Options |
|--|--|--|
| Palette | Various color palettes are available to suit different conditions or your personal preference. | <ul style="list-style-type: none"> • WhiteHot • BlackHot • RedHot • RedHot Inverse • Fusion • Firelce • Firelce Inverse |
| Scene | Scene presets that have been optimized for different running conditions. | <ul style="list-style-type: none"> • Day • Night • Docking • High contrast |
| Auto focus | The camera will focus the image. | <ul style="list-style-type: none"> • Activate |
| Low light mode | Visible cameras supporting low light mode can set this during low light conditions. | <ul style="list-style-type: none"> • On • Off • Auto |
| Wide Dynamic Range | Improves the viewable range of darkness to lightness of the image. | <ul style="list-style-type: none"> • Disable • Enable |
| Contrast Enhancement | Adjusts the brightness and contrast of the image to make dark and bright sections more distinguishable. | <ul style="list-style-type: none"> • Disable • Enable |
| Electronic stabilization | Stabilizes the image to reduce blurring caused by camera shake. | <ul style="list-style-type: none"> • Disable • Enable |
| Digital Zoom | Zooms the camera feed to maximum. | <ul style="list-style-type: none"> • Disable • Enable |
| Roll correction <i>(Requires AR200)</i> | Accounts for boat tilting and will adjust video feed accordingly. Video feed horizon will be parallel with the actual horizon. | <ul style="list-style-type: none"> • Disable • Enable |

Camera setup tab

| Settings | Description | Options |
|---------------------------------|---|--|
| Heater | Enables and disables the camera's built-in heater used to de-mist the camera lens. | <ul style="list-style-type: none"> • Disable • Enable |
| Zoom Lock | Synchronize zoom level between visible and thermal camera feeds. | <ul style="list-style-type: none"> • Disable • Enable |
| Mirrored view | Flips the camera image to provide a mirror image, suitable for rear view installations. | <ul style="list-style-type: none"> • Disable • Enable |
| Camera name | Change your camera name. | <ul style="list-style-type: none"> • Displays the onscreen keyboard. |
| Icon | Select the icon to be used for the camera. | <ul style="list-style-type: none"> • List of icons. |
| Flip image vertical | Flips the camera image upside down, suitable for Ball-down installations. | <ul style="list-style-type: none"> • Disable • Enable |
| UI language | Select the language of the user interface. | <ul style="list-style-type: none"> • List of languages. |
| On-screen icons | Sets the level for the camera's built-in onscreen icons | <ul style="list-style-type: none"> • None • Minimal • All |
| Save default settings | Save the current camera settings as the default. | <ul style="list-style-type: none"> • Save |
| Restore default settings | Restore the camera settings to default. | <ul style="list-style-type: none"> • Run default restore |

| Settings | Description | Options |
|-----------------------------------|---|--|
| Self-tests and calibration | Offers a series of tests and calibration options for your camera. | <ul style="list-style-type: none"> • Pan/tilt test • Reset IR lens • Flat Field Correction • Set elevation reference • Set forward position |
| Restore factory settings | Restore camera settings to factory default. | <ul style="list-style-type: none"> • Run factory restore |

Photo & Video recording tab

| Settings | Description | Options |
|-----------------------|---|---|
| Save files to: | Determines the save location for photos and video recordings. Note: External SD 1 and USB Media are available when using the RCR-SDUSB Accessory. | <ul style="list-style-type: none"> • SD 1 • External SD 1 USB Media |

ClearCruise tab (Augmented Reality) (Requires AR200)

| Settings | Description | Options |
|----------------------------|--|---|
| Augmented Reality | Enables / disables Augmented Reality and Augmented reality settings. | <ul style="list-style-type: none"> • Disable • Enable |
| AIS labels | Display other vessels as flags (requires AIS). | <ul style="list-style-type: none"> • Disable • Enable |
| Hide static targets | Hide AIS targets travelling under 2 knots (requires AIS). | <ul style="list-style-type: none"> • Disable • Enable |
| Waypoints | Display Waypoints as flags. | <ul style="list-style-type: none"> • Disable • Enable |

| Settings | Description | Options |
|---------------------------|---|--|
| Chart objects | Display Chart objects as flags (requires compatible charts). | <ul style="list-style-type: none"> • Disable • Enable |
| Cartography source | Select the cartography ClearCruise displays data from (requires compatible charts). | <ul style="list-style-type: none"> • Cartography source options |
| Compass | Display the Compass bar. | <ul style="list-style-type: none"> • Disable • Enable |
| Range limit | Set the maximum range flags will automatically be displayed from. | <ul style="list-style-type: none"> • 1/8nm to 13nm |

ClearCruise tab (Object Detection) / (Video Analytics)

| Settings | Description | Options |
|-----------------------------------|---|---|
| Highlight detected objects | Uses proprietary ClearCruise™ technology to highlight and track objects detected in the water. | <ul style="list-style-type: none"> • Disable • Enable |
| Beep on detection | When enabled, the MFD will audibly beep when an object is detected. | <ul style="list-style-type: none"> • Disable • Enable |
| Display estimated range | When enabled, the MFD will display an estimated range for highlighted objects (objects must be closer than 300 ft). | <ul style="list-style-type: none"> • Disable • Enable |

Camera motion tab

| Settings | Description | Options |
|--|--|---|
| Camera height above the waterline | To ensure correct alignment of the camera for tracking purposes the height the camera has been installed at, above the waterline, must be set. | <ul style="list-style-type: none"> • 0ft to 99ft |
| Set forward position | Adjust the Forward position of your camera | Displays the forward alignment picture |
| Man overboard | Enables and disables automatic tracking of a MOB alarm. The most recent target is tracked. | <ul style="list-style-type: none"> • Disable • Enable |

| Settings | Description | Options |
|--------------------------------|---|--|
| Dangerous AIS targets | Enables and disables automatic tracking of Dangerous AIS targets. The most recent target is tracked. | <ul style="list-style-type: none"> • Disable • Enable |
| Dangerous MARPA targets | Enables and disables automatic tracking of Dangerous Radar targets. The most recent target is tracked. | <ul style="list-style-type: none"> • Disable • Enable |
| Enable scan | Enables and disables Surveillance mode. Surveillance mode pans the camera left to right continuously to the specified speed | <ul style="list-style-type: none"> • Disable • Enable |
| Scan width | Determines how far the camera pans from left to right when in Surveillance mode. | <ul style="list-style-type: none"> • Narrow • Medium • Wide |
| Scan speed | Determines the speed at which the camera pans from left to right when in Surveillance mode. | <ul style="list-style-type: none"> • Slow • Medium • Fast |

Page settings

| Settings | Description | Options |
|---------------------------|----------------------------------|---|
| Edit data overlays | Add data overlays to video feed. | <ul style="list-style-type: none"> • List of data overlays |

24.5 Maritime (M-Series) camera compatibility

Support for the various video features and settings, as per each M-Series camera variant.

For an explanation of the settings listed in the following table, refer to: [p.322 – Video app settings](#)

| | |
|----------------------------------|---|
| Not applicable to product | — |
| Applicable to product | |

| | |
|--|--------------------|
| Applicable to product (M200 only) | <i>(M200 only)</i> |
| Applicable to dual payload M300 variants only | *** |

| IMAGE TAB | | | | |
|---|------------|---------|------|------|
| Setting | M100/M-200 | M300*** | M400 | M500 |
| Active feed | — | | | |
| <ul style="list-style-type: none"> • Thermal • Visible | | | | |
| Blending mode | — | | — | — |
| <ul style="list-style-type: none"> • Off • CTV • MSX | | | | |
| Blending level | | | — | — |
| <ul style="list-style-type: none"> • 0% to 100% | | | | |
| Light | — | — | | |
| <ul style="list-style-type: none"> • Off • On • Flash • SOS | | | | |

| IMAGE TAB | | | | |
|---|---|---|--|--|
| Palette <i>(Thermal feed)</i> <ul style="list-style-type: none"> • WhiteHot • BlackHot • RedHot • RedHot Inverse • Fusion • Fusion Inverse • Firelce • Firelce Inverse | | | | |
| Scene <i>(Thermal feed)</i> <ul style="list-style-type: none"> • Day • Night • Docking • High Contrast | | | | |
| Auto focus <i>(Visible feed)</i> <ul style="list-style-type: none"> • Activate | — | — | | |
| Low light mode <i>(Visible feed)</i> <ul style="list-style-type: none"> • Off • On • Auto | — | | | |
| Wide dynamic range <i>(Visible feed)</i> <ul style="list-style-type: none"> • Disable • Enable | — | | | |

| IMAGE TAB | | | | |
|---|---|---|---|---|
| Contrast enhancement <i>(Visible feed)</i> <ul style="list-style-type: none"> • Disable • Enable | — | | | |
| Electronic stabilization <i>(Visible feed)</i> <ul style="list-style-type: none"> • Disable • Enable | — | — | — | |
| Digital Zoom <ul style="list-style-type: none"> • Disable • Enable | | | | |
| Roll correction <i>(Requires AR200)</i> <ul style="list-style-type: none"> • Disable • Enable | | | — | — |

| CAMERA SETUP TAB | | | | |
|--|------------|---------|------|------|
| Setting | M100/M-200 | M300*** | M400 | M500 |
| Heater <ul style="list-style-type: none"> • Disable • Enable | | | | |
| Zoom lock <ul style="list-style-type: none"> • Disable • Enable | — | | | |
| Mirrored view <ul style="list-style-type: none"> • Disable • Enable | | | | |

| CAMERA SETUP TAB | | | | |
|--|---|---|--|--|
| Camera name | | | | |
| • Onscreen keyboard | | | | |
| Icon | | | | |
| • List of camera icons | | | | |
| Flip image vertical | | | | |
| • Disable | | | | |
| • Enable | | | | |
| UI language | — | | | |
| • List of available languages | | | | |
| On-screen icons | — | | | |
| • None | | | | |
| • Minimal | | | | |
| • All | | | | |
| Save default settings | — | | | |
| • Save | | | | |
| Restore default settings | — | | | |
| • Run default restore | | | | |
| Self-tests and calibration | | | | |
| Pan/tilt test | | — | | |
| Set elevation reference | | | | |
| Set forward position | | | | |
| Spotlight test | — | — | | |
| Self-tests and calibration (Thermal feed) | | | | |
| IR test pattern | — | — | | |
| Reset IR lens | | — | | |

| CAMERA SETUP TAB | | | | |
|--|------------|---------|------|------|
| Flat field correction | | | | |
| Restore factory settings | | | | |
| • Run factory restore | | | | |
| PHOTO & VIDEO RECORDING | | | | |
| Setting | M100/M-200 | M300*** | M400 | M500 |
| Save files to | | | | |
| • List of connected SD cards | | | | |
| CLEARCRUISE™ | | | | |
| Setting | M100/M-200 | M300*** | M400 | M500 |
| ClearCruise™ Augmented Reality (Requires AR200) | | | — | — |
| Augmented Reality | | | — | — |
| • Disable | | | | |
| • Enable | | | | |
| AIS targets | | | — | — |
| • Disable | | | | |
| • Enable | | | | |
| Hide static targets | | | — | — |
| • Disable | | | | |
| • Enable | | | | |
| Waypoints | | | — | — |
| • Disable | | | | |
| • Enable | | | | |

| CLEARCRUISE™ | | | | |
|--|--|---|---|---|
| Chart objects • Disable • Enable | | | — | — |
| Cartography source • Disable • Enable | | | — | — |
| Compass • Disable • Enable | | | — | — |
| Range limit • Disable • Enable | | | — | — |
| ClearCruise™ Object Detection (Video Analytics) | | | — | — |
| Highlight detected objects • Disable • Enable | | — | — | — |
| Beep on detection • Disable • Enable | | — | — | — |
| Display estimated range • Disable • Enable | | — | — | — |

| CAMERA MOTION | | | | |
|--|-------------|---------|------|------|
| Setting | M100/M-200 | M300*** | M400 | M500 |
| Camera height above waterline • Adjust value | | | | |
| Forward position • Adjust position and Save | (M200 only) | | | |
| Man overboard • Disable • Enable | (M200 only) | | | |
| Dangerous AIS target • Disable • Enable | (M200 only) | | | |
| Dangerous MARPA target • Disable • Enable | (M200 only) | | | |
| Vertical stabilization • Disable • Enable | (M200 only) | | | |
| Horizontal stabilization • Disable • Enable | (M200 only) | | | |
| Enable scan • Disable • Enable | (M200 only) | | | |

| CAMERA MOTION | | | | |
|--|-------------|--|--|--|
| Scan width <ul style="list-style-type: none"> • Disable • Enable | (M200 only) | | | |
| Scan speed <ul style="list-style-type: none"> • Disable • Enable | (M200 only) | | | |

| PAGE SETTINGS | | | | |
|--|------------|---------|------|------|
| Setting | M100/M-200 | M300*** | M400 | M500 |
| Edit data overlays <ul style="list-style-type: none"> • List of data overlays | | | | |

CHAPTER 25: CLEARCRUISE (OBJECT DETECTION / VIDEO ANALYTICS, AND AUGMENTED REALITY)

CHAPTER CONTENTS

- 25.1 ClearCruise™ features — page 331
- 25.2 Camera setup — page 332
- 25.3 AR200 setup for Augmented Reality — page 334
- 25.4 ClearCruise™ Object Detection (Video Analytics) overview — page 335
- 25.5 Augmented Reality (AR) overview — page 336
- 25.6 Augmented Reality flags — page 337
- 25.7 ClearCruise settings (Augmented Reality) — page 339
- 25.8 Roll correction — page 340
- 25.9 AR200 Calibration (Linearization) — page 342

25.1 ClearCruise™ features

ClearCruise™ features are designed for enhancing situational awareness and aiding navigation.

ClearCruise™ technology provides 2 separate features, which are described in more detail throughout this chapter:

- Object Detection (Video Analytics)
- Augmented Reality (AR)


Object Detection

Object Detection (Video Analytics) is a feature available for M100, M200, and M300 Series thermal cameras. Intelligent thermal analytics technology provides audible and visual alerts when “non-water” objects are identified in the scene. Vessels, obstacles, and navigation markers can all be automatically identified by the camera without the need for Chart or Radar data.

Compatible cameras for Object Detection

- Thermal Camera (M100, M200, or M300 Series), **running the latest available software version.**

Note: Visit www.raymarine.com/software to download the latest software for your camera.

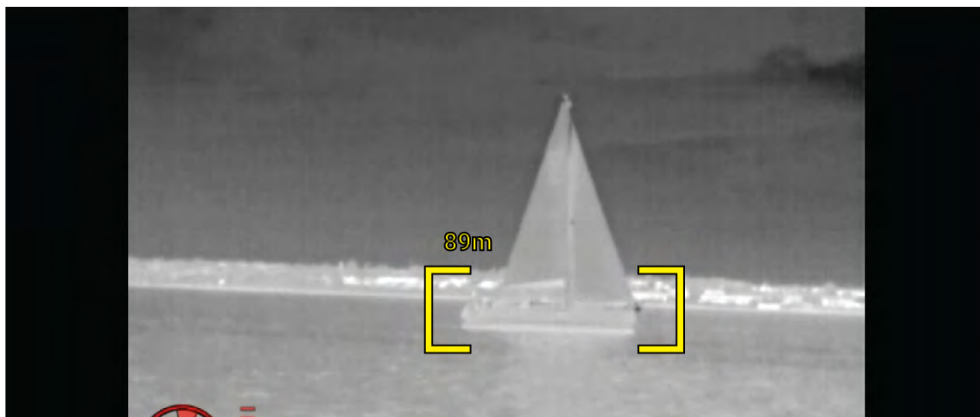

Note: Weather conditions can cause the target's temperature, luminance, contrast or chrominance to be below a detectable range in relation to the background image. Therefore, the effectiveness of the ClearCruise Object Detection (Video Analytics) feature for distinguishing targets and non-targets is dependent on optimal scene conditions. It is recommended:

- The visible image is adjusted to contain good color, brightness and contrast;
- Accuracy can be improved by excluding irrelevant regions such as sun glare.

Augmented Reality

The **Augmented Reality** feature places layers of digital information directly over the top of the Video app's video feed. Data from the Chart app is used to generate informative text and images (flags) on the Video app. When calibrated correctly, ClearCruise™ Augmented Reality accurately overlays automatically-updating flags on the Video app so they overlap real-life objects.

Required components for Augmented Reality (IP cameras)

- AR200 Augmented Reality Sensor
- IP camera (CAM210IP or CAM220IP)

Required components for Augmented Reality (M-Series cameras)

- AR200 Augmented Reality Sensor
- M-Series camera (M100, M200 and M300 Series)

Important:

Cameras utilizing ClearCruise™ Augmented Reality are subject to an unstable image on rough waters.



Note: ClearCruise’s performance is dependent on environmental conditions and is not a replacement for maintaining a visual watch.

25.2 Camera setup

Before using the Augmented Reality features, it’s important to correctly install and setup your compatible camera.

Refer to your camera’s installation manual to determine the correct physical installation and connections for using the camera as part of an Augmented Reality system.

A number of additional camera-related settings and calibrations must be completed in the Video app before Augmented Reality features can be used:

- Camera height above the waterline.
- Camera direction.
- Camera horizontal field of view [not required for cameras which auto assign their field of view].
- Horizon calibration.


Note:

- The camera’s height above the waterline and camera’s view direction need to be physically measured for accurate camera installation.
- The camera’s horizontal field of view can be found in your camera’s installation manual specification.

Fixed camera calibration

Fixed mount cameras require calibration for Augmented Reality to function correctly.

1. For first time setup, either:
 - i. Select the **Enter Details** prompt in the Video app.
 - ii. Select the **ClearCruise** tab in the Video app’s Settings, **Video app > Settings > ClearCruise**. There will be a prompt to **Enter Details** using the **Camera Installation** page.
2. Go directly to the **Camera Installation** page in the Video app (**Settings > Camera Setup > Camera Installation**).
3. The **Camera Installation** page will offer a series of camera installation options which all need to be completed correctly.

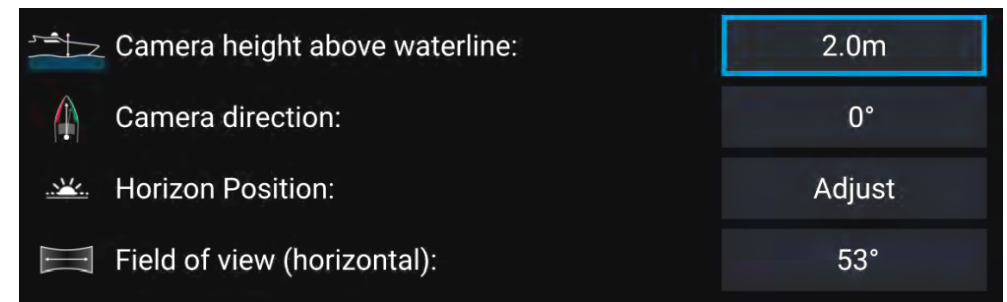

Note:

Incorrect physical camera installation and incorrect settings provided in the camera setup page could result in an inaccurate Augmented Reality overlay.


- To adjust the values of **Camera height above waterline**, **Camera direction** and **Field of view**, select the value boxes of each option and adjust using the arrows.

| Menu item | Options |
|-------------------------------|---|
| Camera height above waterline | <ul style="list-style-type: none"> • 0m to 50m • 0ft to 165ft |
| Camera direction | <ul style="list-style-type: none"> • 0° (Forward) (default) • 0° to 180°p (Port) • 0° to 180°s (Starboard) |
| Field of view | <ul style="list-style-type: none"> • 30° to 120° • [CAM210IP – 53°] • [CAM220IP – 93°] |

- To Calibrate horizon, use the **up, down, rotate left** and **rotate right** arrow keys until the red line is placed on the horizon. When the line is in position, select **Save**.

Important:


Calibrating the horizon correctly is essential for accurate Augmented Reality overlay. Calibrating on calm water and in clear sight of the horizon is recommended.

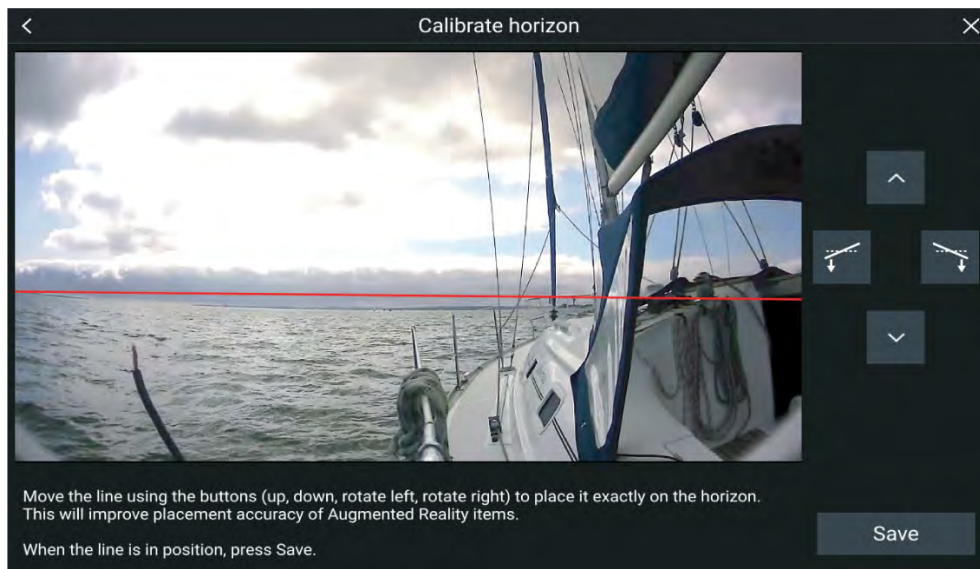

Pan and Tilt camera calibration

Pan and Tilt cameras require calibration for Augmented Reality to function correctly.

1. For first time setup, either:
 - i. Select the **Enter Details** prompt in the Video app.
 - ii. Select the **ClearCruise** tab in the Video app's Settings, **Video app > Settings > ClearCruise**. There will be a prompt to **Enter Details** using the **Camera Installation** page.
2. Go directly to the **Camera Installation** page in the Video app (**Settings > Camera Setup > Camera Installation**).
3. The **Camera Installation** page will offer a series of camera installation options which all need to be completed correctly.

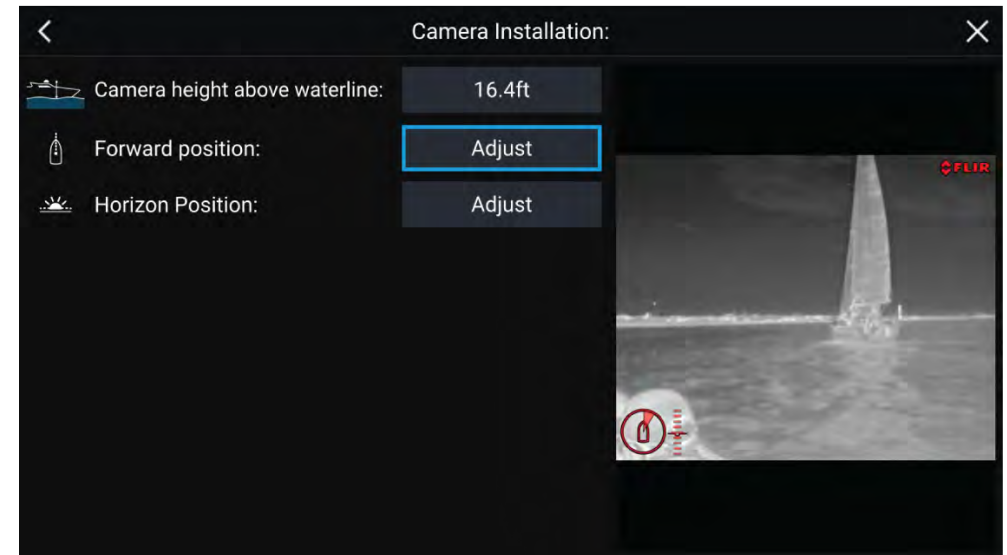


Note:

Incorrect physical camera installation and incorrect settings provided in the camera setup page could result in an inaccurate Augmented Reality overlay.


- To adjust the values of **Camera height above waterline** select the value box and adjust using the arrows.

| Menu item | Options |
|-------------------------------|---|
| Camera height above waterline | <ul style="list-style-type: none"> • 0m to 50m • 0ft to 165ft |

- To Calibrate the camera's **Forward Position** adjust the camera direction so the vertical black line is positioned directly forward, parallel to your vessels forward position.

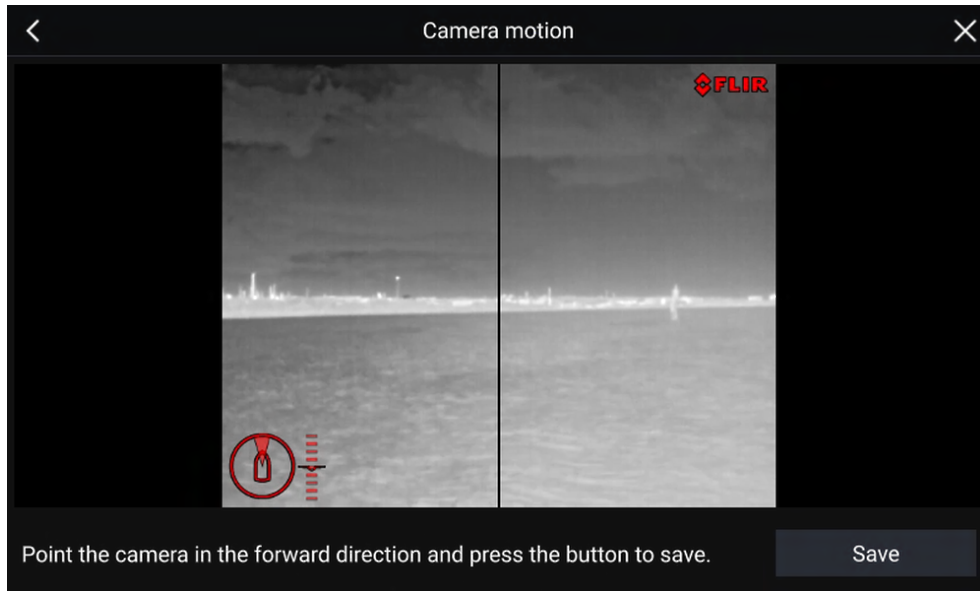

- Pan and tilt the camera 360° during calibration to ensure the horizon line has been positioned correctly.

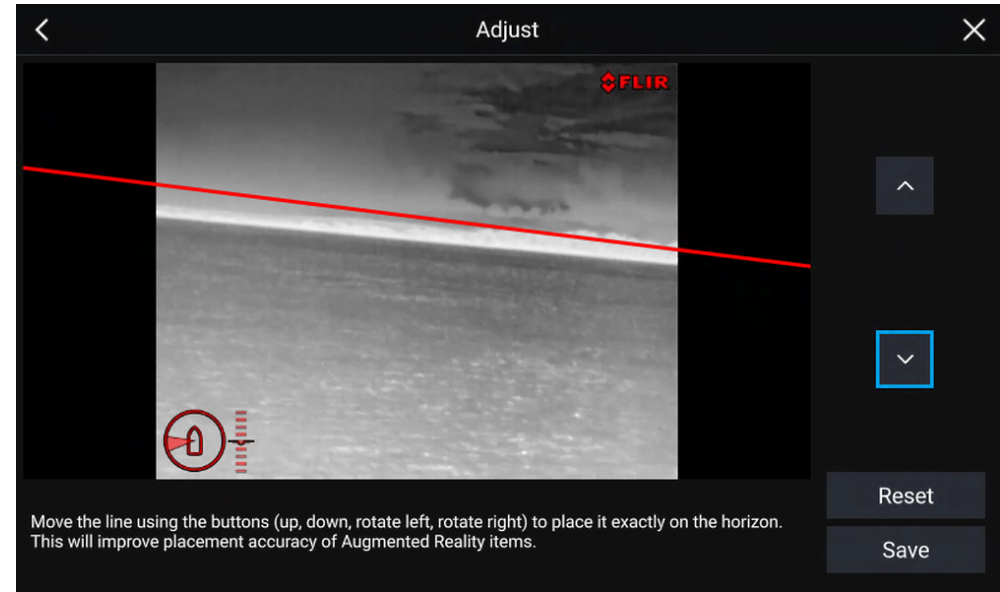


Important:

Calibrating the horizon correctly is essential for accurate Augmented Reality overlay. Calibrating on calm water and in clear sight of the horizon is recommended.

25.3 AR200 setup for Augmented Reality

Before using the Augmented Reality features, it's important to correctly install and setup the AR200 Augmented Reality sensor.

Refer to the AR200 Installation manual (87372) to determine the correct physical installation and connections for using the AR200 as part of an Augmented Reality system.

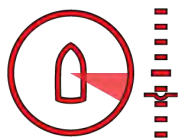

Important:

- Calibrating the cameras forward position is essential for accurate Augmented Reality overlay when the camera pans and tilts. Calibrating on calm water and with a clear view of the front of your vessel is recommended.
- Certain cameras display a camera direction indicator which can help identify when the camera is facing directly forward.

- To Calibrate the camera's **Horizon position** use the arrow keys to align the horizontal red line so it is level with the horizon.

25.4 ClearCruise™ Object Detection (Video Analytics) overview

The Object Detection (Video Analytics) features provide audible and visual alerts when “non-water” objects are identified by connected M100/M200/M300 Series cameras.

Objects that visually differ from the water will be identified by the camera as a “non-water” object.

The following features are available with Object detection:

- **Highlight detected objects** — Enables/disables object highlighting, which automatically identifies and highlights “non-water” objects.
- **Beep on detection** — Enables/disables an audible beep when an object is detected (**Highlight detected objects** must be enabled)
- **Display estimated range** — Enables/disables display of an object’s estimated range from your vessel (**Highlight detected objects** must be enabled, and object must be closer than approximately 100 m (~300 ft)).




- Object detection can be particularly useful at night or visually limiting environments such as storms or fog.
- In the event of an emergency, such as man overboard, Object detection could be a useful aid that helps to identify and predict the distance from the MOB.

Note: ClearCruise’s performance is dependent on conditions and is not a replacement for maintaining a visual watch.

ClearCruise settings (Object Detection / Video Analytics)

Object Detection (Video Analytics) features and settings can be enabled and disabled in the **ClearCruise** tab in the Video app.

Video app > Settings > ClearCruise

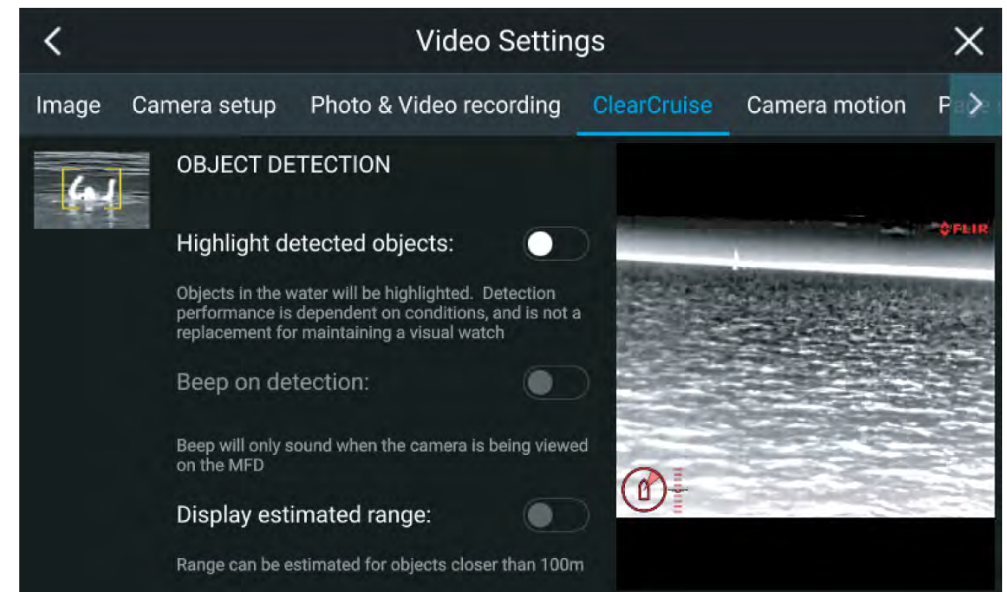

| Setting | Description |
|-----------------------------------|--|
| Highlight detected objects | Enables/disables object highlighting. |
| Beep on detection | Enables/disables an audible beep when an object is detected (Highlight detected objects must be enabled). |
| Display estimated range | Enables/disables display of an object's estimated range from your vessel (Highlight detected objects must be enabled, and the object must be closer than approximately 100 m (~300 ft)). |

Important: ClearCruise Object Detection (Video Analytics) is only compatible with cameras that are positioned upright. ClearCruise Object Detection will not function with cameras that are upside down and have vertical flip enabled.

25.5 Augmented Reality (AR) overview

ClearCruise™ Augmented Reality uses data from the Chart app and displays this data in realtime as an overlay in the Video app.



The **Augmented Reality** feature places layers of digital information directly over the top of the Video app's video feed. Data from the Chart app is used to generate informative text and images (flags) on the Video app. When calibrated correctly, ClearCruise™ Augmented Reality accurately overlays automatically-updating flags on the Video app so they overlap real-life objects.

The Augmented Reality feature requires an Axiom, Axiom Pro or Axiom XL MFD, an AR200 sensor and a compatible camera.

For more information, refer to: [p.331 – ClearCruise™ features](#)

Note:


- The Augmented Reality feature requires correct camera calibration for accurate image overlay.
- The Augmented Reality feature serves as an aid to navigation and situational awareness only, and should not be solely relied on for precise navigation. Always maintain a visual watch.

Important: Rear-facing cameras with a flipped or mirrored image may not place Augmented Reality content as accurately as a forward-facing camera.

25.6 Augmented Reality flags

ClearCruise™ Augmented Reality displays AIS Targets, Waypoints and Chart Objects as individual Augmented Reality **Flags** in the Video app.

All flags display an icon and your vessel's distance from the target's location.

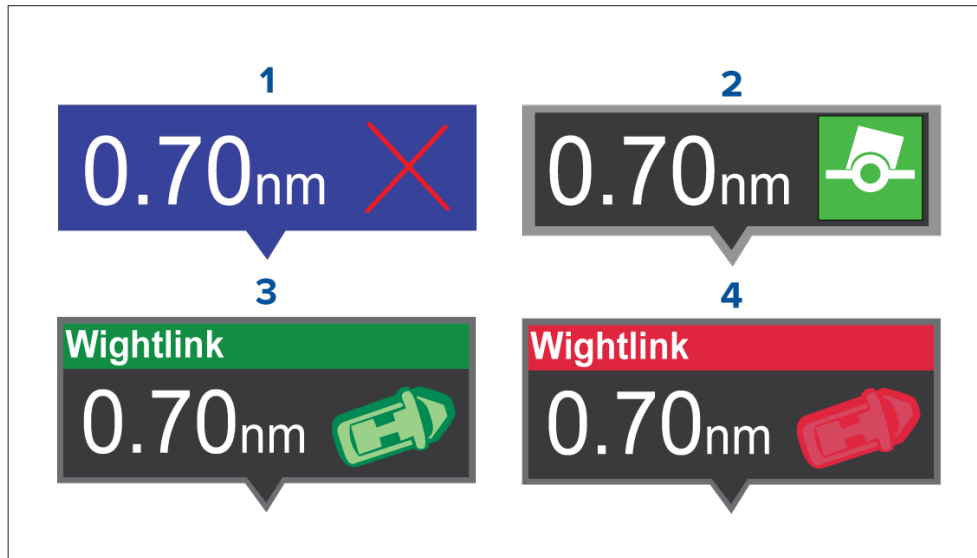

| | |
|---|--|
| 1 | Waypoint flag |
| 2 | Chart Object flag (buoy) |
| 3 | AIS Target flag (passenger ferry; icon points in the direction of travel relative to the camera feed) |
| 4 | Dangerous AIS Target flag (passenger ferry; icon points in the direction of travel, relative to the camera feed) |

Note: AIS flags update periodically; however, accurate placement is not guaranteed.

- AIS Targets, Waypoints and Chart Object flags can be quickly enabled / disabled via buttons in the Video app.

- The maximum range within which flags are automatically shown can also be adjusted in the Video app.
- For more information on adjusting flag settings.




Selected flags

Augmented Reality flags in the Video app can be selected (highlighted), providing access to more information about the object and additional features.


A flag is an onscreen visual overlay element displayed in the Video app when the Augmented Reality features are enabled. A flag represents an object from the Chart application: e.g. AIS target, Waypoint, or other chart object.

When a flag is selected, the corresponding object is also highlighted in the Chart app. Conversely, selecting an object in the Chart app highlights the corresponding flag in the Video app.

Only one flag may be selected at a time.

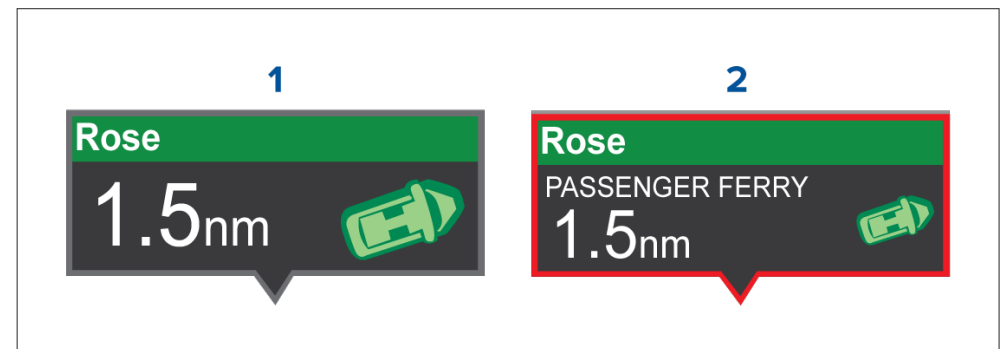

| | |
|---|-------------------|
| 1 | AIS Flag |
| 2 | Selected AIS Flag |

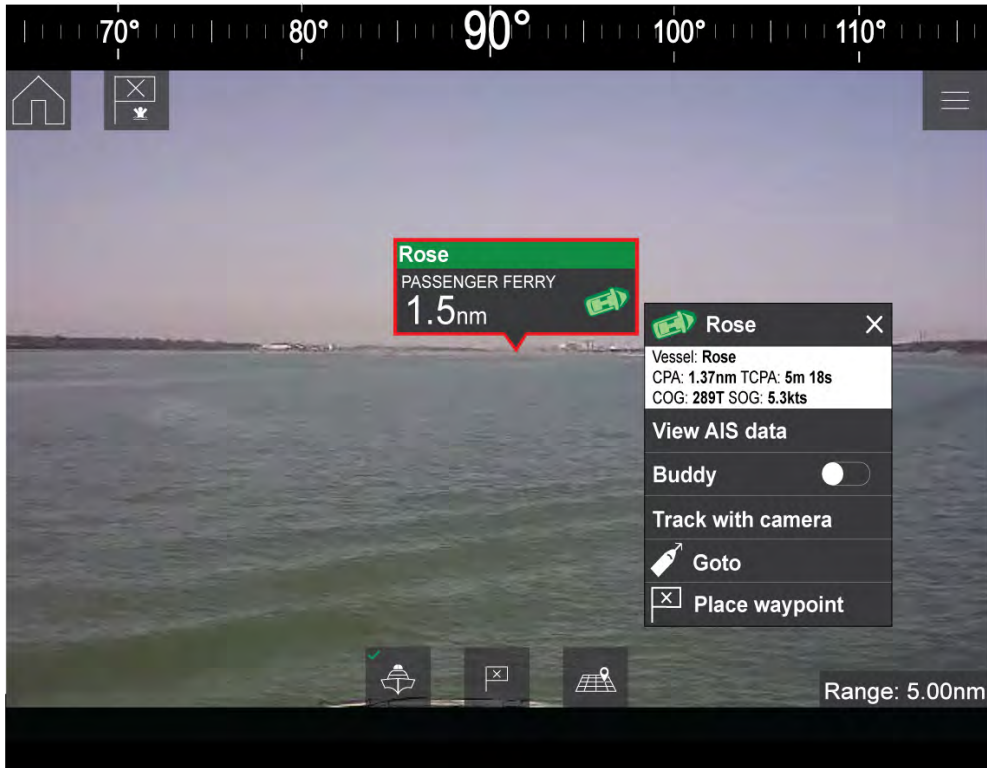

Selecting a flag highlights it in red and provides additional information about the object in a context menu. The menu also provides additional features. The range of features available in the context menu depends on the type of object selected:

AIS Target Flag

| Option | Description |
|------------------------|---|
| AIS Target name | The name of the target vessel. |
| Target data | Vessel (name), CPA, TCPA, COG, SOG. |
| View AIS data | Displays the AIS data transmitted by the target vessel. |

| Option | Description |
|------------------------------|---|
| Buddy (toggle ON/OFF) | Add the vessel to your “Buddy List”, with the option to rename it. The Buddy feature enables you to add AIS-equipped friends and regular contacts to a “Buddy List” on your MFD. As soon as a vessel on your Buddy List comes within range of your AIS receiver, the onscreen vessel icon changes to indicate this. |
| Goto | The Chart app will plot a direct route to the last known location of the target. |
| Place waypoint | The Chart app will place a waypoint at the last known location of the target. |

Waypoint Flag

| Option | Description |
|----------------------|--|
| Waypoint name | The name of the waypoint. |
| Target data | Lat, Lon, Rng, Brg. |
| Goto | The Chart app will plot a direct route to the last known location of the target. |
| Delete | Delete the waypoint. |
| Edit | Edit the waypoint’s Name, Symbol, Group, Position, and add a Comment. |

Chart Object Flag


| Option | Description |
|--------------------------|--|
| Chart Object name | The name of the chart object. |
| Target data | Lat, Lon, Rng, Brg. |
| Goto | The Chart app will plot a direct route to the last known location of the target. |

Goto flag

Selecting **Goto** on a selected Augmented Reality flag will plot a direct course to the flag's last known location.

A **Goto** flag will appear in the last known location of the selected flag in both the Video and Chart apps, and in the Video app's **Compass bar**. The flag is displayed with a Goto icon, as a blue copy of the original flag.

Selecting the **Goto** flag makes it a selected flag, and also displays a context menu providing more information about the location of the flag, and the option to stop a goto action.


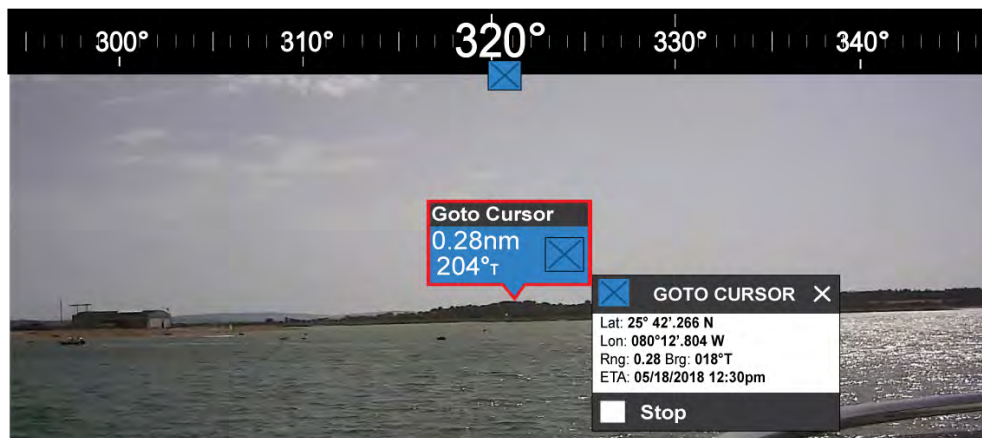


- Selecting **Stop** removes the Goto flag from the Video app and Chart app.
- If the camera loses sight of the **Goto** flag, it will display red and green navigational arrows on the **Compass bar**, indicating whether you need to turn port or starboard to regain sight of the flag. However, this only works if the camera is forward-facing.

25.7 ClearCruise settings (Augmented Reality)

Augmented Reality settings can be edited in the **ClearCruise** tab in the Video app.

| Setting | Description |
|----------------------------|--|
| AIS labels | Enables/disables the display of other vessels as Augmented Reality flags (requires AIS). |
| Hide static targets | Enables/disables the display of AIS targets travelling under 2 knots (requires AIS). |
| Waypoints | Enables/disables the display of Waypoint Augmented Reality flags. |
| Chart objects | Enables/disables the display of Chart objects (requires compatible charts). |
| Cartography source | Select the cartography source that the ClearCruise™ features will use for the display of chart objects in the Video app Augmented Reality features. (Requires compatible charts). |
| Compass | Enables/disables the display of the Compass bar in the Video app. |
| Range limit | Sets the maximum range at which the camera will detect and display Augmented Reality flags. This range is displayed visually in the Chart app with the “FOV cone”. Refer to: Field of View . For the maximum range supported by your camera, refer to: Range limit |

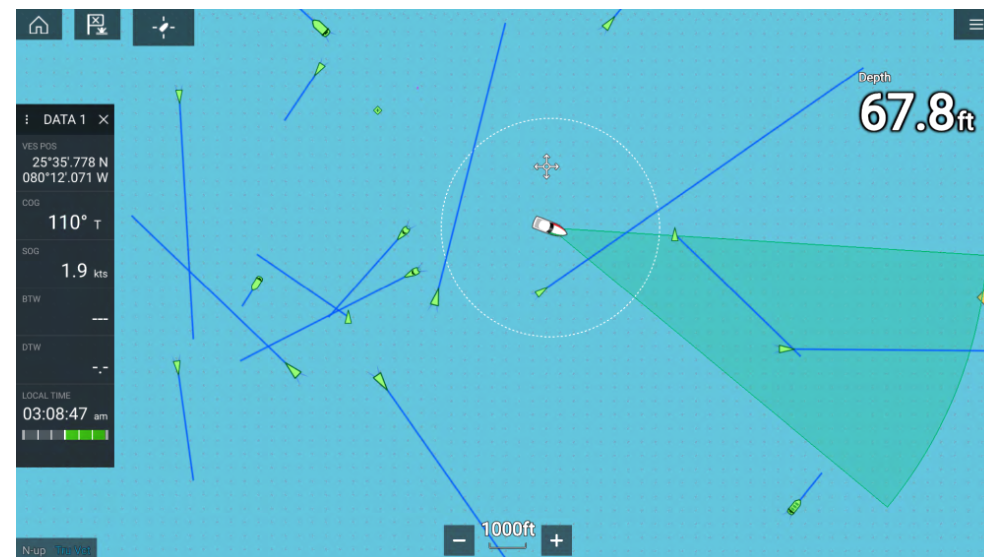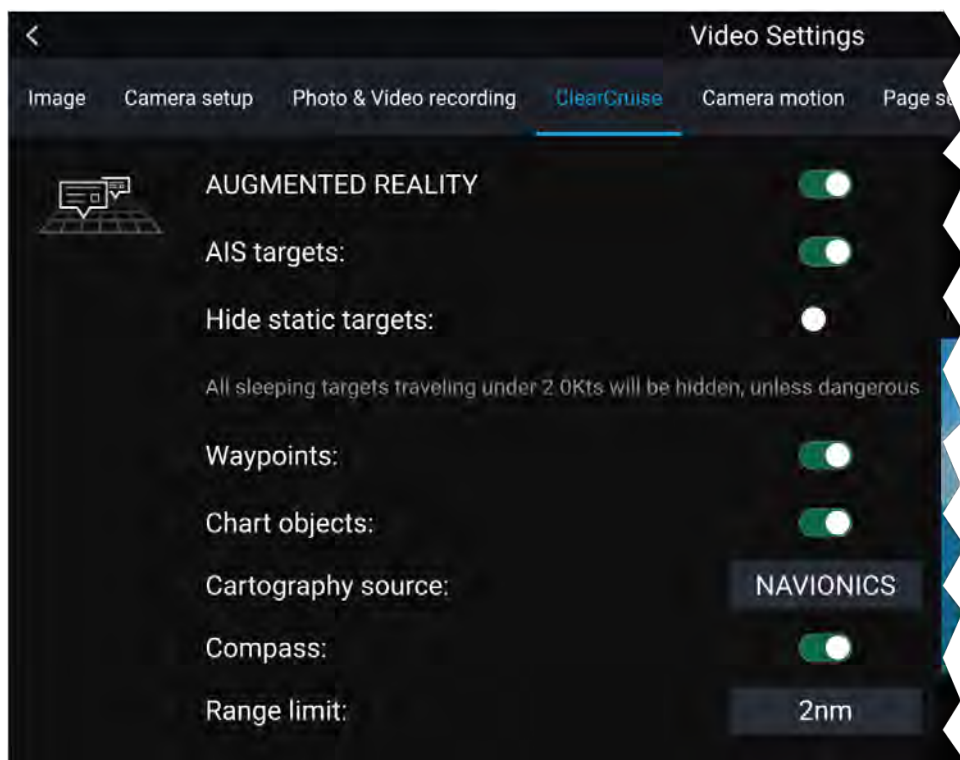

Note:

Some chart objects just outside of the FOV cone might still display in the Video app as flags.

You can specify this range limit manually in the Video app: **Video Settings > ClearCruise tab**. Any adjustments you make will be reflected in the FOV cone display in the Chart app.

25.8 Roll correction

Roll Correction automatically adjusts the Video app image when the vessel tilts (rolls) to port or starboard.

Note: Roll correction is only available with IP cameras.

Roll Correction can be enabled/disabled in the Video app: **Settings > Image**.


Note:

The variety of chart objects is dependent on the selected cartography source. For more information on different cartography sources, refer to: [9.13 Find nearest](#)


Range limit

The Range Limit is the maximum range at which ClearCruise™ can display AIS targets, Waypoints and Chart Object flags in the Video app.

The range limit can be checked using the Field of View (FOV) cone in the Chart app. All AIS targets, Waypoints and Chart Objects within the area of coverage of the FOV cone can be displayed as Augmented Reality flags in the Video app. For more information, refer to: [Field of View](#)

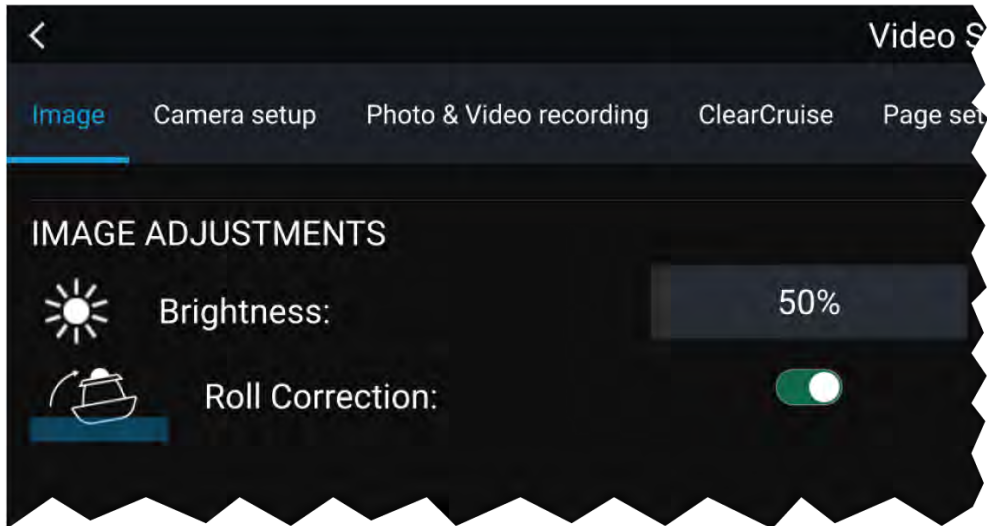

When enabled, the Roll Correction feature accounts for the boat tilting and stabilizes the video feed accordingly. This means that the video feed's horizon will be parallel with the actual horizon. When disabled, the video feed will tilt with the boat and the MFD screen.

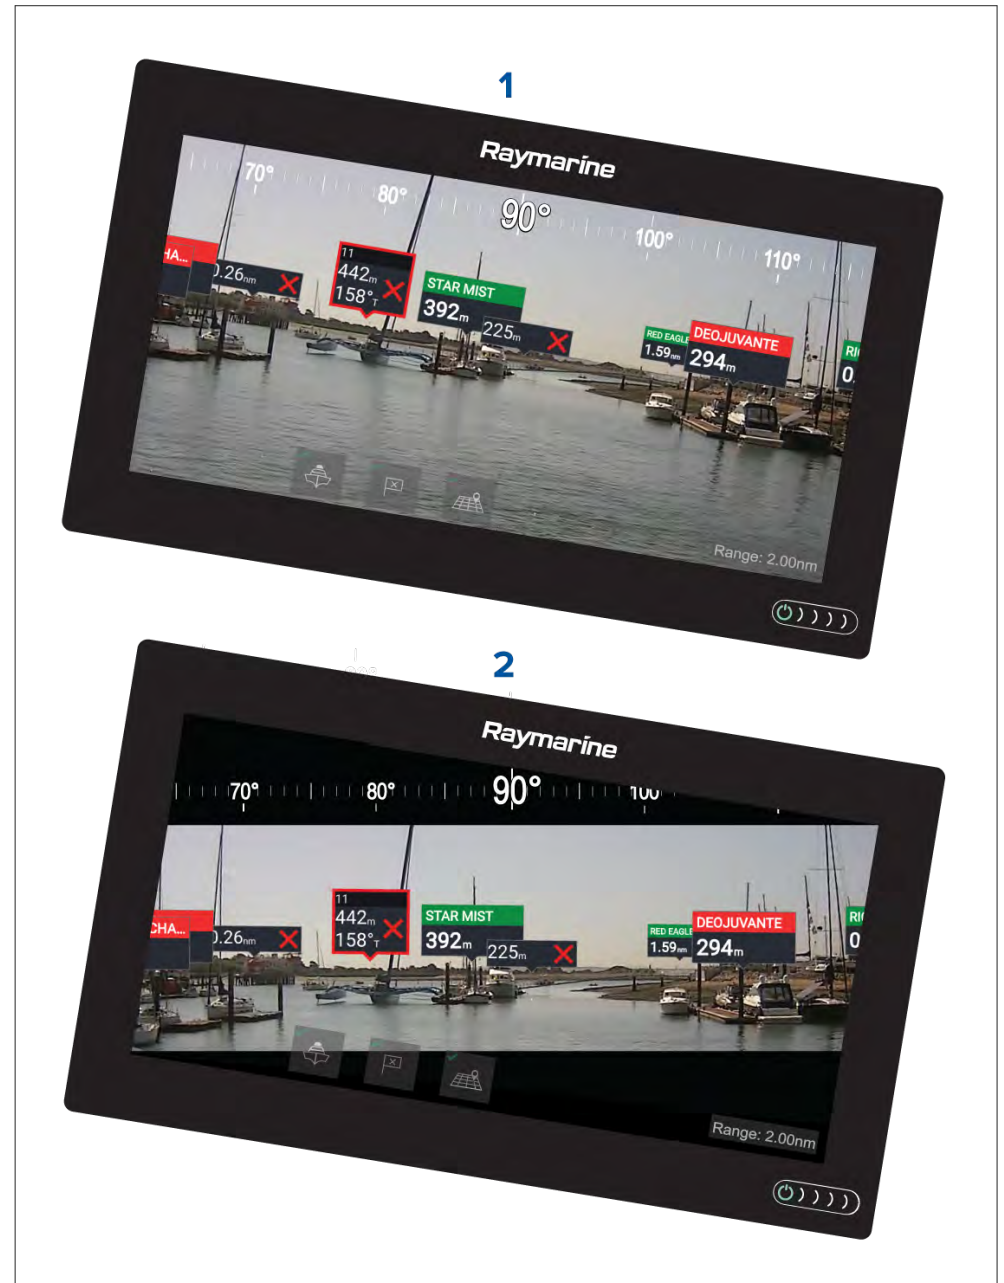


| | |
|---|--------------------------|
| 1 | Roll correction disabled |
| 2 | Roll correction enabled |

25.9 AR200 Calibration (Linearization)

To enable accurate placement of Augmented Reality (AR) flags on the camera's video feed, the AR200's AHRS sensors need to compensate for local magnetic fields, as well as the Earth's magnetic fields.

Calibration is achieved using an automatic linearization process. The linearization process starts automatically after your vessel has turned approximately 100°, when travelling at a speed of between 3 to 15 knots. The linearization process requires no user input, however at least a 270° turn is required before linearization can be completed. The duration of the linearization process can be decreased by completing a full 360° turn, when travelling at a speed of between 3 to 15 knots. The linearization process can also be restarted at anytime.

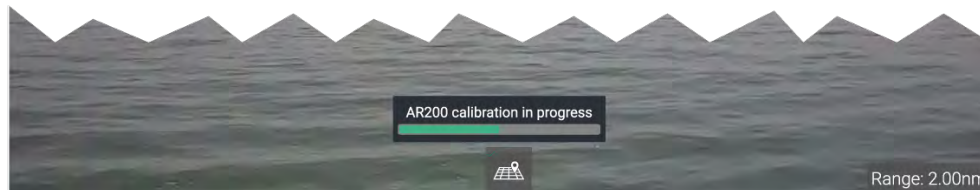

In the Video app the Linearization progress bar is displayed when linearization is in progress. The bar is filled to indicate completeness, and will turn Red if the process is paused or otherwise interrupted.

The time taken to complete the linearization process will vary according to the characteristics of the vessel, the AR200's installation location, and the levels of magnetic interference present at the time linearization is performed.

Magnetic interference can be caused by objects onboard your vessel, such as:

- Speakers
- Electronic equipment
- Electrical cabling
- Metal bulkhead or hull

Magnetic interference can also be caused by external objects in close proximity to your vessel, such as:

- Metal hulled vessels
- Underwater electrical cables
- Marine pontoons

Magnetic deviation


Magnetic deviation is the error induced in a compass caused by interference from local magnetic fields.

The automatic linearization process results in a deviation value being set for your AR200. If Augmented Reality flags in the Video app are not aligned with their onscreen objects, or the compass is out of alignment, you should check the AR200's current calibration settings. For instructions on how to do this, refer to: [AR200 calibration settings](#)

AR200 calibration settings

The calibration settings page provides access to the AR200's compass calibration options.

The AR200 calibration page can be accessed using your Data master MFD; from the Homescreen select: **Settings > Network > Data sources > Heading > AR200 > Calibrate.**

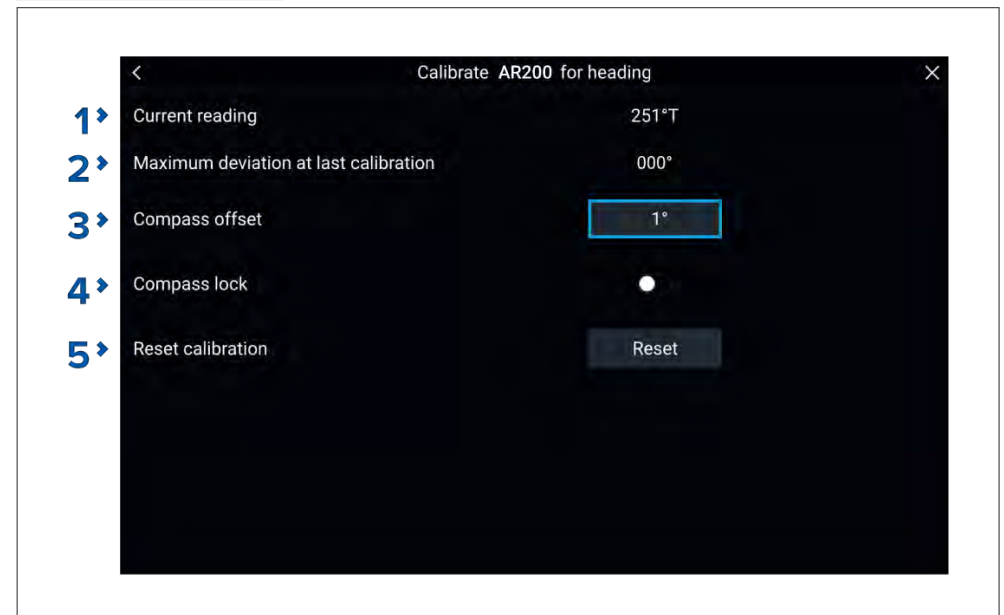

| | |
|---|--|
| 1 | <p>Current reading: The current heading reported by the AR200.</p> |
| 2 | <p>Maximum deviation at last calibration: The maximum deviation reported during the last linearization process.</p> <hr/> <p>Important:</p> <ul style="list-style-type: none"> If the Maximum deviation at last calibration is 45° or above, it is recommended that the AR200 unit is moved and re-installed in a location which is subject to less magnetic interference. <p>Calibration in progress: While linearization is in progress the progress percentage is displayed.</p> |
| 3 | <p>Compass offset Once the linearization process has completed, it is possible that the heading value may be slightly out of alignment. This is common where installation space is limited and the AR200 is not properly aligned with your vessel's longitudinal axis. In this case, it is possible to manually adjust the Compass offset.</p> |
| 4 | <p>Compass lock When enabled, the Compass lock prevents the continual monitoring and adaptation of the compass linearization process. For more information, refer to: Compass lock.</p> |
| 5 | <p>Reset calibration You can reset your AR200's current linearization settings by selecting Reset calibration</p> |

- vessel speed too slow or too fast
- rate-of-turn too slow or too fast

Compass lock

Once you are satisfied with the compass accuracy, you can lock the setting to prevent the system from completing a further automatic linearization in the future.

This feature is particularly useful for vessels in environments that are exposed to strong magnetic disturbances on a regular basis (such as offshore wind farms or very busy rivers, for example). In these situations it may be desirable to use the Compass lock feature to disable the continuous linearization process, as the magnetic interference may build a heading error over time.

Note: The compass lock may be released at any time, to allow the compass continual monitoring and adaptation to re-commence. This is particularly useful if planning a long voyage. The earth's magnetic field will change significantly from one geographical location to another, and the compass can continually compensate for the changes, ensuring you maintain accurate heading data throughout the voyage.

Continual monitoring and adaptation

To ensure optimum performance, after the initial linearization process is complete the unit continues to monitor and adapt the compass linearization to suit current conditions.

If the conditions for linearization are less than ideal, the automatic linearization process temporarily pauses until conditions improve again. The following conditions can cause the linearization process to temporarily pause:

- significant magnetic interference is present

CHAPTER 26: AUDIO APP


CHAPTER CONTENTS

- [26.1 Audio app overview — page 345](#)
- [26.2 Opening the Audio app — page 348](#)
- [26.3 Getting started — page 350](#)
- [26.4 Audio app menu options — page 351](#)

26.1 Audio app overview

The Audio app can be used to control compatible entertainment systems that are connected to the same network as your MFD.

The Audio app can be displayed in Fullscreen and half screen portrait app pages.

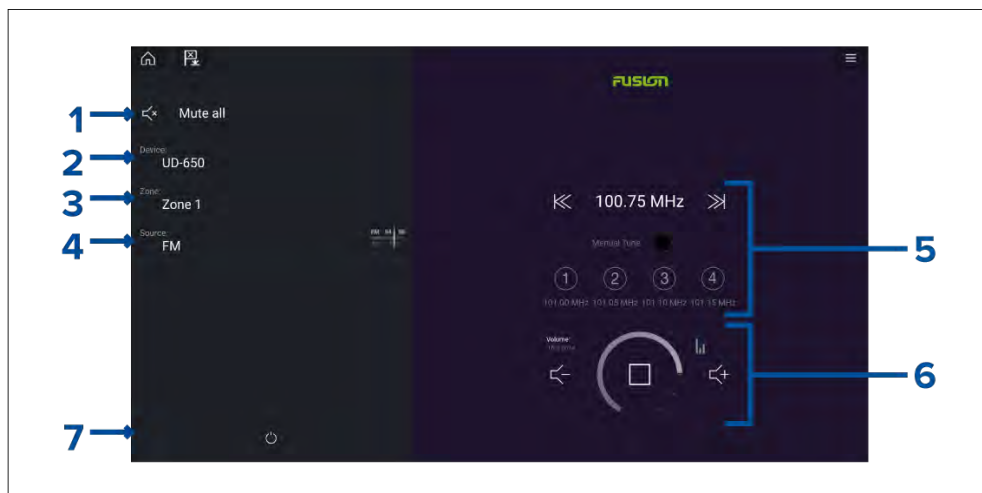

1. **Mute All** — Mutes all zones on all connected entertainment systems.
2. **Device** — On systems where more than 1 entertainment system are installed you can select which device the audio app controls.
3. **Zone** — On devices that support multiple zones you can select which zone the audio app controls.
4. **Source** — Change the media source for the selected entertainment system.
5. Audio source details and controls for currently selected source.
6. Volume and player controls for currently selected zone or multi-zone.
7. **Power** — Power on or off connected entertainment systems.

Compatible entertainment systems

The table below lists compatible entertainment systems which have been approved for use with the MFD Audio app. The Audio app can be used to control up to 3 entertainment systems from the same manufacturer. However, connecting entertainment systems from Fusion and Rockford Fosgate at the same time is NOT supported.

SiriusXM receivers

| Model number | Raymarine part number | Supported Network connection |
|--------------|-----------------------|------------------------------|
| SR150 | E70161 | Ethernet / RayNet |
| SR200 | E70499 | Ethernet / RayNet |

Rockford Fosgate entertainment systems

| Model number | Raymarine part number | Supported Network connection |
|--------------|-----------------------|------------------------------|
| RMX-2 | E70397 | NMEA 2000 |
| RMX8DH | E70394 | NMEA 2000 |
| RMX8BB | E70395 | NMEA 2000 |
| RMX5CAN | E70396 | NMEA 2000 |

Fusion entertainment systems

| Model number | Supported Network connection |
|--------------|------------------------------|
| AV750 | NMEA 2000 Ethernet |
| AV755 | NMEA 2000 Ethernet |
| BB100 | NMEA 2000 |
| BB300 | NMEA 2000 |
| RA70 | NMEA 2000 |
| RA70N | NMEA 2000 |
| RA205 | NMEA 2000 |
| RA670 | NMEA 2000 Ethernet |

| Model number | Supported Network connection |
|--------------|------------------------------|
| RA770 | NMEA 2000 Ethernet |
| SRX400 | Ethernet |
| UD750 | NMEA 2000 Ethernet |
| UD755 | NMEA 2000 Ethernet |

JL Audio



| Model number | Supported Network connection |
|--------------|------------------------------|
| MM50 | NMEA 2000 |
| MM100s-BE | NMEA 2000 |
| MMR-40 | NMEA 2000 |






Note:







Connecting entertainment systems from Fusion and Rockford Fosgate at the same time is not supported.

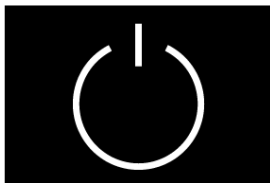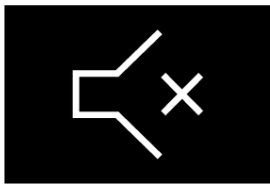
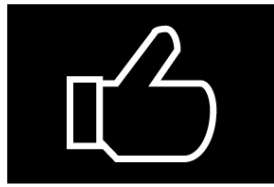

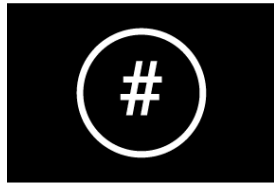
Audio app controls

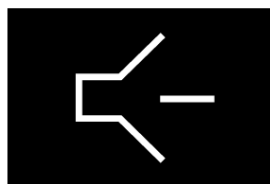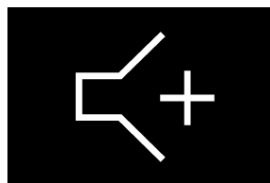Audio player controls



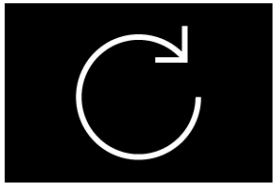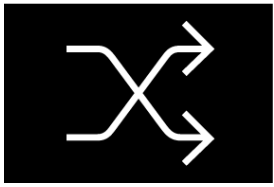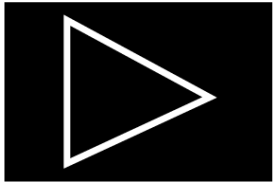

| Icon | Description |
|---|--|
|  | Power Off Powers off the Entertainment system. |
|  | Mute All Mutes all audio zones. |

| Icon | Description |
|---|---|
|  | Volume Down Decreases volume for current zone. |
|  | Volume Up Increases volume for current zone. |
|  | Forwards <ul style="list-style-type: none"> • Skip to the next track (USB and Bluetooth) • Seek/Search Forward (Radio) <hr/> Note: Control is not available from SiriusXM device. |
|  | Backwards <ul style="list-style-type: none"> • Skip back to beginning of current track (USB and Bluetooth) • Seek/Search Backward (Radio) <hr/> Note: Control is not available from SiriusXM device. |
|  | Manual Tune <ul style="list-style-type: none"> • On — (enables Forwards and Backwards icons for manual tuning) • Off |

| Icon | Description |
|---|--|
|  | <p>Tune Up Manually searches up for radio stations/channels.</p> <hr/> <p>Note: Control is not available from SiriusXM device.</p> |
|  | <p>Tune Down Manually searches down for radio stations/channels.</p> <hr/> <p>Note: Control is not available from SiriusXM device.</p> |
|  | <p>Repeat</p> <ul style="list-style-type: none"> • Off • Repeat Track • Repeat All |
|  | <p>Shuffle</p> <ul style="list-style-type: none"> • On • Off |
|  | <p>Play Select to commence playback.</p> |
|  | <p>Pause Select to Pause playback.</p> |


| Icon | Description |
|---|---|
|  | <p>Stop Select to Stop (Mute) Radio devices.</p> |
|  | <p>Like Like a track (Pandora only).</p> |
|  | <p>Dislike Dislike a track (Pandora only).</p> |
|  | <p>Radio presets Save your favorite radio stations/channels to 4 preset buttons. Press and hold to save, press once to change to saved station/channel.</p> <hr/> <p>Note: Control is not available from SiriusXM device.</p> |

Standard app controls

| Icon | Description |
|--|---|
|  | Menu Opens the app menu. |
|  | Home Takes you to the Homescreen. |
|  | Waypoint / MOB Place waypoint / activate Man overboard (MOB) alarm. |
|  | Pilot Opens and closes the Pilot Sidebar |

Audio sidebar

With compatible audio equipment connected the Audio sidebar is available which enables you to control your audio system from an MFD app.

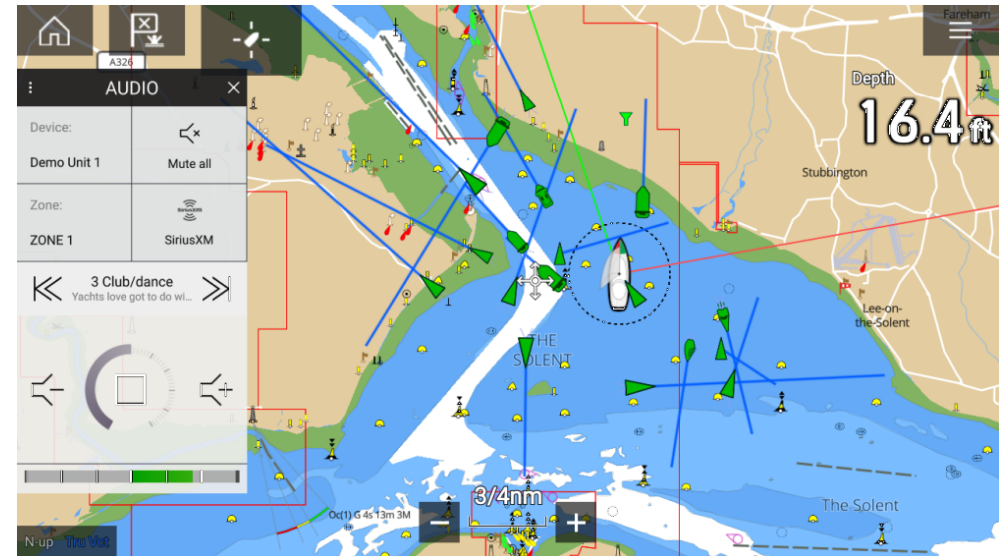

The Audio sidebar includes the following controls:

- Audio device selection.
- Zone selection.
- Source selection
- Track/Station selection.
- Volume controls.

26.2 Opening the Audio app

The Audio app is opened by selecting an app page from the Homescreen that includes the Audio app.


Pre-requisites:

1. Ensure your Entertainment system(s) are compatible by checking the latest details available on the Raymarine website. If in doubt please contact an authorized Raymarine dealer for advice.
2. Ensure you have installed your Entertainment system(s) in accordance with the documentation that was supplied with the system.

The Audio app will open in 1 of 3 states:

Audio app displayed

If your Entertainment system is powered up and operational then the player controls are displayed and can be used to control your system.

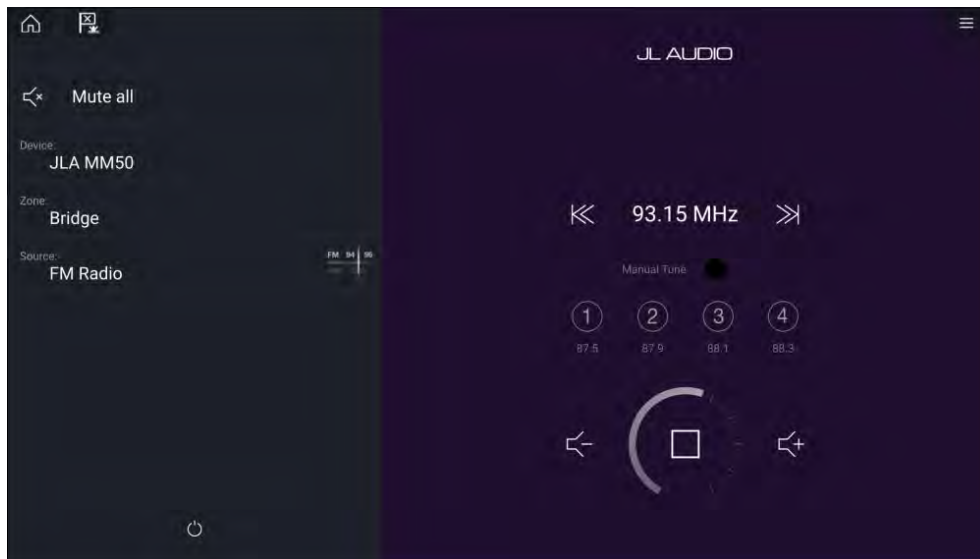


Entertainment system powered off

If all Entertainment systems are powered off then a Power icon is displayed for each connected system. An icon is also displayed to power on All systems. Selecting the **Power icon** will switch your Entertainment system on. Selecting the All icon will power on all connected systems.



No audio devices found

If the Audio app is opened soon after powering on your MFD, the '**No audio device found**' message may be displayed whilst the network is being established. If the message is displayed for more than 10 seconds, your MFD cannot connect to your Entertainment system(s). Ensure network and power connections to your Entertainment system(s) and MFD are correct and free from damage and then power cycle your system. If the Entertainment system(s) are still not displayed then refer to your equipment's installation documentation for further troubleshooting information.

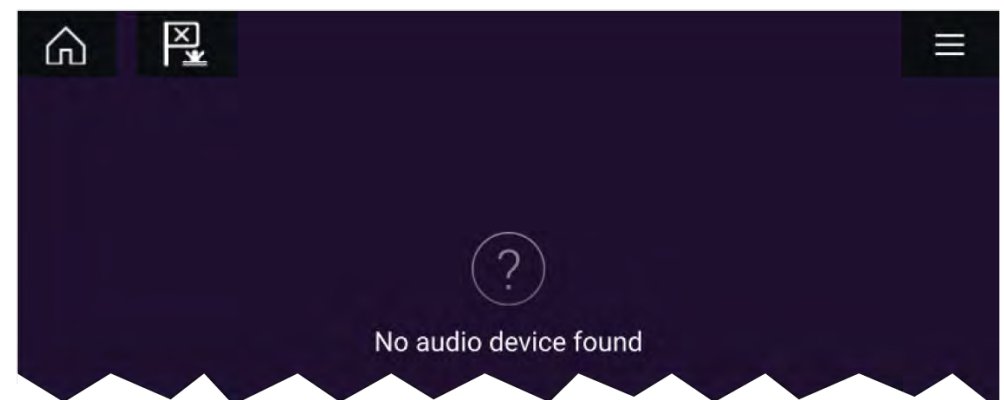

26.3 Getting started

Selecting an audio zone

If the select entertainment system supports multiple zones you can select which zone the audio app controls..

1. Select **Zone**.
The zone pop-over menu is displayed.
2. Select the zone you want to control.

Tip

Refer to the instructions provided with your entertainment system for details on naming your zones. This aids device and zone identification when multiple systems each with multiple zones are connected.


Selecting an audio source

Before you can select an audio source from your MFD, the source must already be available to your Entertainment system's main control unit ("head unit").

1. Select an audio source (mode) icon from the app **Menu**.

The currently selected zone will switch to the selected audio source. Depending on your entertainment system all zones will change and play the same audio source, or you may be able to play a different source on each zone. Check the instructions provided with your system for details.

Muting and unmuting

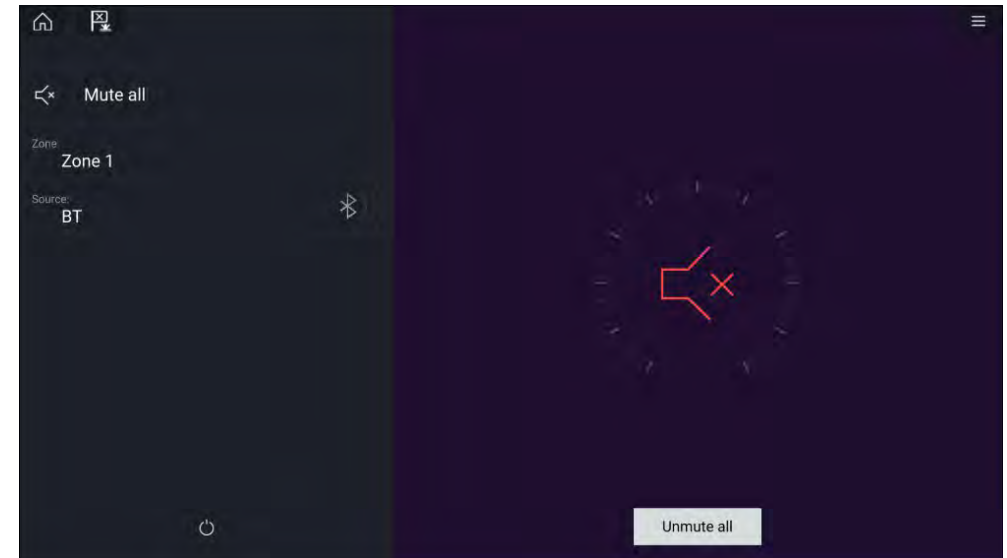

1. Select **Mute All**, to mute all audio.


*When multiple entertainment systems are connected selecting **Mute all** will mute all zones on all connected entertainment systems.*

2. To unmute the selected entertainment system, select the Mute icon in the center of the screen. If your entertainment system supports independent zone control then only the selected zone will be unmuted.

*Selecting **Unmute all** will unmute all zones for all connected entertainment systems.*

Browsing for tracks

You can browse USB and Bluetooth devices for tracks.

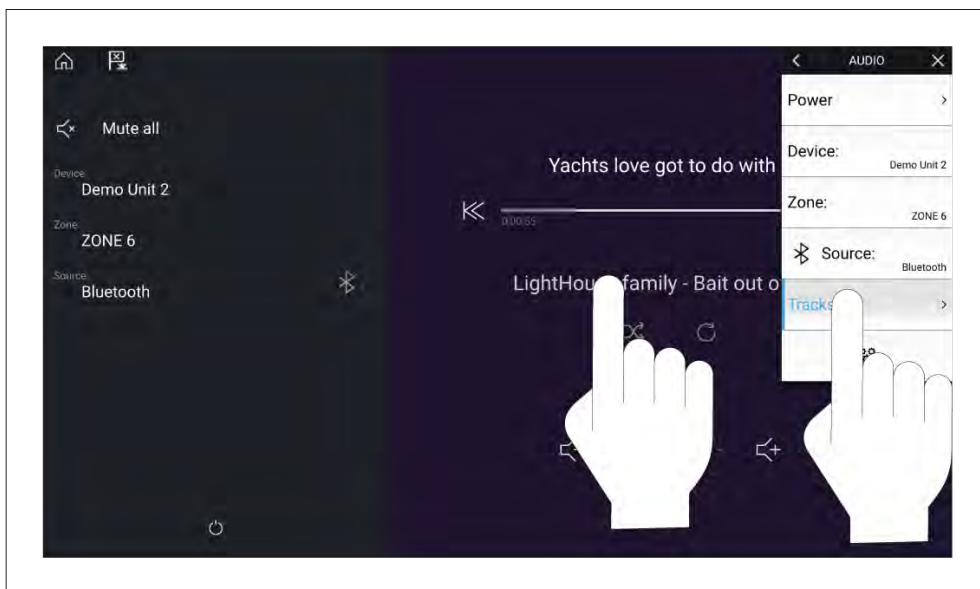

With the relevant USB or Bluetooth device selected as the audio source:

1. Select **Tracks** from the Menu.
The file browser is displayed.
2. Alternatively, you can select the current track's details to open the file browser.
3. Browse to the file you want to play.

Wait for the file list to finish loading before selecting a track.

4. Select the track you want to play.

Browsing for stations / channels

You can browse available Radio stations/channels.

With the relevant Radio device selected as the audio source:

1. Select **Stations** or **Channels** from the Menu.
The station or channel browser is displayed.
2. Browse to and select the station or channel you want to listen to.

Note: For SiriusXM, channel control is not available from an external audio head unit.

Saving presets

Up to 4 presets can be saved for each Radio audio source (i.e.: AM Radio, FM Radio, Weather, SiriusXM and Pandora).

1. Whilst listening to the station you want to save, press and hold the relevant Preset button for approximately 3 seconds.

Powering off entertainment systems

Connected entertainment systems can be powered off using the Audio app.

With the Audio app displayed and the entertainment system powered on:

1. Select the **Power** icon located on the bottom left of the screen.
If only 1 entertainment system is connected then the entertainment system will power off. If more than 1 entertainment system is connected then pop-over options are displayed allowing you to choose the entertainment system to turn off, or you can select **Power down all** to power off all connected systems.

Tip

Refer to the instructions provided with your entertainment system for details on naming your device. This aids device identification when multiple systems are connected.


26.4 Audio app menu options

The options available in the Audio app menu are dependent on the connected entertainments systems and audio source.

| Menu item / Description | Options |
|--|---|
| Power Enables you to Power your Entertainment system on and off | <ul style="list-style-type: none"> • On • Off |
| Device When more than 1 entertainment system is connected you can change which system the audio app is controlling / displaying details for. | List of connected devices. |

| Menu item / Description | Options |
|---|---|
| <p>Zone When the entertainment system supports multiple zones you can change which zone the audio app is controlling / displaying details for.</p> | List of zones.. |
| <p>Source Change the audio source for the entertainment system. If your entertainment system supports independent control of zones then only the source for the selected zone will change. Only supported audio source will be displayed.</p> | <ul style="list-style-type: none"> • AM Radio • FM Radio • Weather • Sirius XM • Pandora • Auxiliary • USB • Bluetooth • Airplay • S/PDIF |
| <p>Tracks / Channels / Stations</p> <ul style="list-style-type: none"> • The Tracks menu option is available for USB and Bluetooth audio sources. When selected the folder browser is displayed. • The Channels menu option is available for SiriusXM. <p>Note: Control is not available from SiriusXM device.</p> <ul style="list-style-type: none"> • The Stations menu option is available for Pandora. | Folder browser or channel/station list. |
| <p>Settings Displays the Settings menu</p> | <ul style="list-style-type: none"> • Audio setting • Page settings |

Audio app settings menu

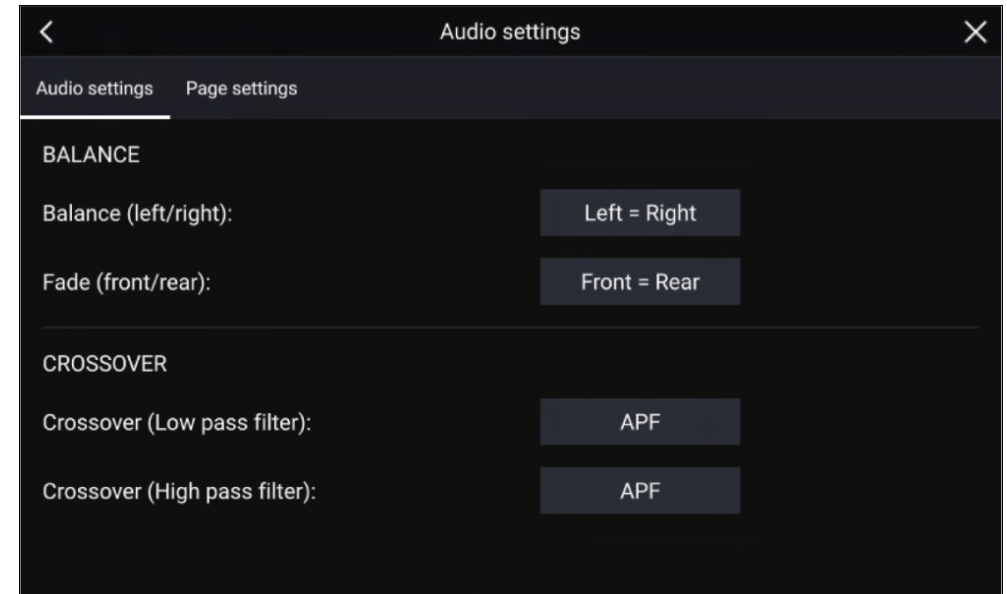

Audio settings tab

| Menu item | Description | Options |
|--------------------------------------|---|--|
| Balance | Allows you to control the left / right speaker balance of your entertainment system speakers. | <ul style="list-style-type: none"> • L = Left speakers up to 100% • Left = Right (Balance centered) • R = Right speakers up to 100% |
| Fade | Allows you to control the front / back speaker fade of your entertainment system speakers. Note: Only available on Rockford Fosgate entertainment systems. | <ul style="list-style-type: none"> • F = Front speakers up to 100% • Front = Back (Fade centered) • R = Rear speakers up to 100% |
| Crossover (Low pass filter): | Allows you to select the crossover frequency. The Low Pass Filter (LPF) will block all audio frequencies above the threshold you specify. Selecting APF (All Pass Filter) will allow all frequencies. | <ul style="list-style-type: none"> • 60 Hz • 80 Hz • 120 Hz • APF |
| Crossover (High pass filter): | Allows you to select the crossover frequency. The High Pass Filter (HPF) will block all audio frequencies below the threshold you specify. Selecting APF (All Pass Filter) will allow all frequencies. | <ul style="list-style-type: none"> • 60 Hz • 80 Hz • 120 Hz • APF |

| Menu item | Description | Options |
|-----------------------------------|---|---|
| Multi-zone volume control: | Allows you to select independent audio zones that are controlled by multi-zone volume control. Note: Only available on Fusion audio devices with multi-zone control. | <ul style="list-style-type: none"> • Audio zones 1–12 |
| Reset: | Performs a factory reset and power cycle of the SR200. Note: Only available on Sirius SR200 devices. | <ul style="list-style-type: none"> • Reset |
| Diagnostics mode: | Displays the SR200's diagnostic information. Note: Only available on Sirius SR200 devices. | <ul style="list-style-type: none"> • Display diagnostics |

Page settings tab


| Settings | Description |
|-------------------------|---|
| Data Overlays | Enables configuration of Data overlays |
| Edit split ratio | Enables you to customize the position of the partitions in splitscreen app pages. |

Adjusting balance and fade controls

From the **Audio settings** menu: **Menu > Audio settings**

1. Select the **Balance** setting field or the **Fade** setting field.
The Adjustment slider control is displayed.

- Place your finger on the White marker and then slide it left or right to adjust the setting the required value, alternatively use a **Rotary controller** to adjust the setting the required value.

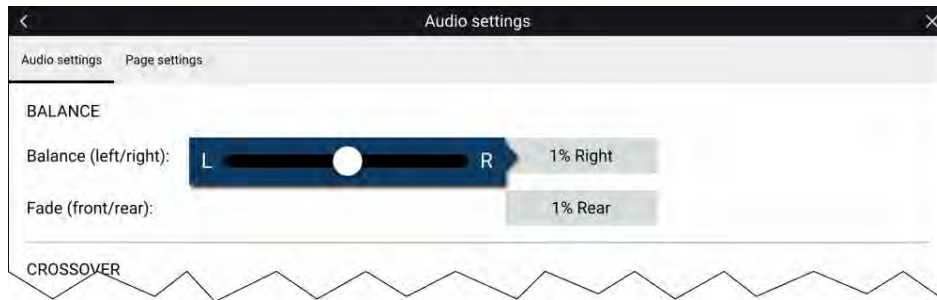

Note:


The fader control will only be displayed for systems that support fading..

Adjusting multi-zone controls


When supported by the entertainment system the audio app can be configured to control the volume of multiple zones simultaneously.

From the **Audio settings** menu: **Menu > Audio settings:**

- Select the zones you want to include in Multi-zone volume control.

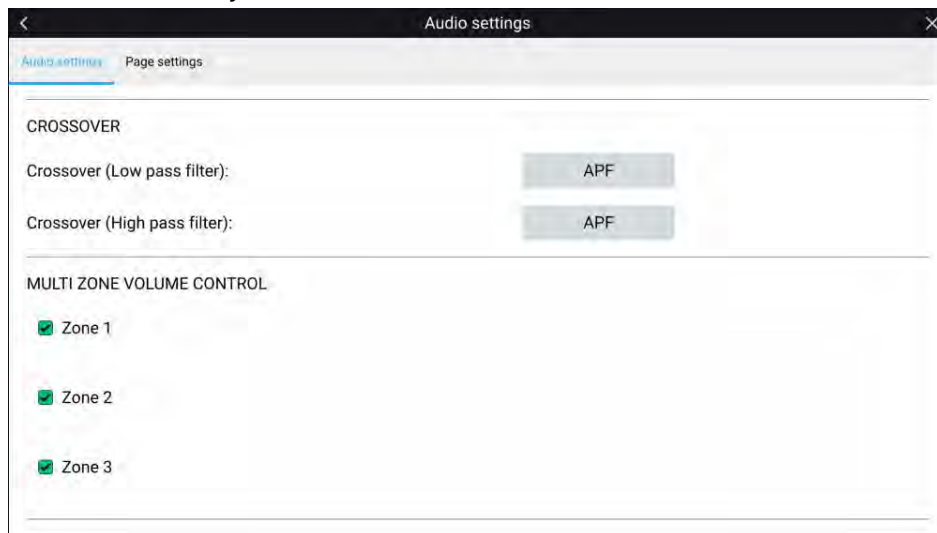


- Enable and disable multi-zone volume control by selecting the text as shown below.

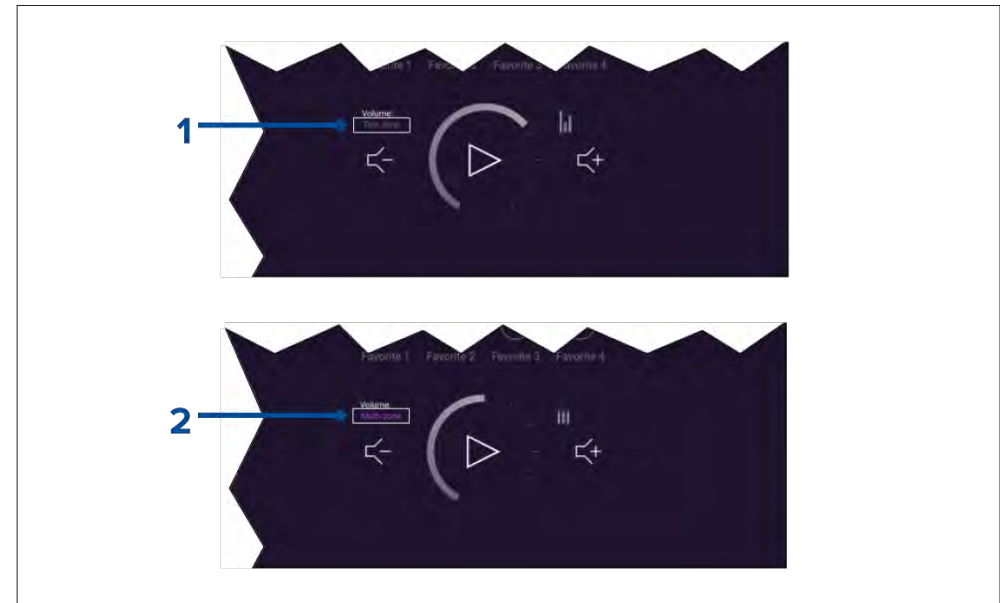

- To enable multi-zone control select the text **'This zone'**.
- To disable multi-zone control select the text **'Multi-zone'**.

SR200 diagnostics mode

The SR200 diagnostic mode can be accessed from the audio settings menu from the master MFD on the network. The diagnostics mode should be referred to when liaising with Sirius product support.

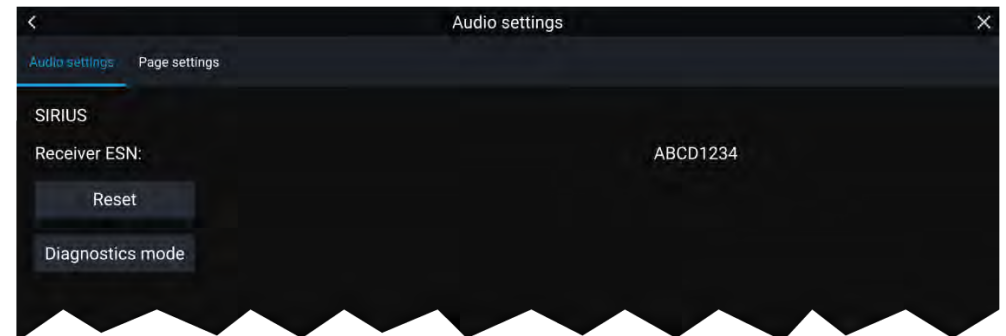

- Reset — Performs a factory reset and power cycle of the SR200.
- Diagnostics mode — Displays the SR200's diagnostic information.

CHAPTER 27: PDF VIEWER APP

CHAPTER CONTENTS

- [27.1 PDF Viewer app overview — page 357](#)
- [27.2 Opening PDF files — page 357](#)
- [27.3 PDF Viewer controls — page 357](#)
- [27.4 Searching a PDF — page 358](#)

27.1 PDF Viewer app overview

The PDF Viewer app can be used to browse and open PDF files located on your external storage device(s).

A typical use for the PDF viewer is to display Raymarine product handbooks that you have downloaded from the Raymarine website (www.raymarine.com/manuals). PDF files must first be copied to a MicroSD card using an external device (such as a PC or tablet). You can then insert the MicroSD card into your MFD's card slot, and access the PDF file(s) via the PDF Viewer app.

Note:

- Secured PDF documents (encrypted with certificate or password) are not supported.

27.2 Opening PDF files

When opened, the PDF Viewer app allows you to browse PDF files available on your external storage device(s).


Select **Browse** to open a PDF file.

Recently-viewed files are displayed on the right-hand side of the initial app start screen, for quick access. These files can be opened, pinned to the top of the list, or removed from the list.

To access these options, long-hold touch on a filename to display the context menu.


Note:

- Recent files cannot be opened if the files are deleted or the external storage device is removed.
- A maximum of 15 of the most recent files can be shown in the pinned and unpinned recent files list.

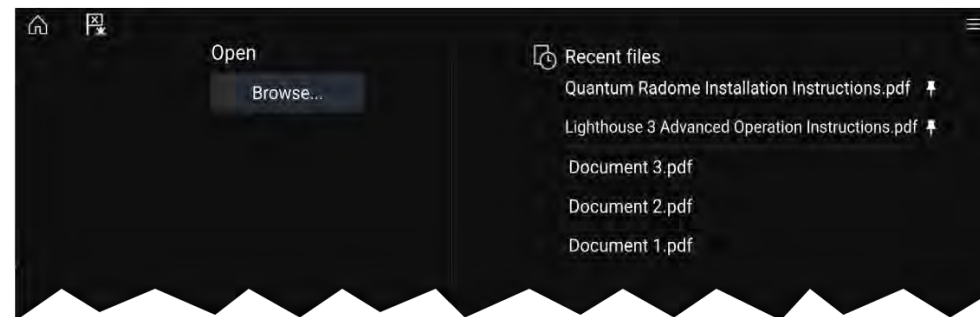

27.3 PDF Viewer controls

When a PDF file is displayed in the PDF Viewer app, the following options are available.

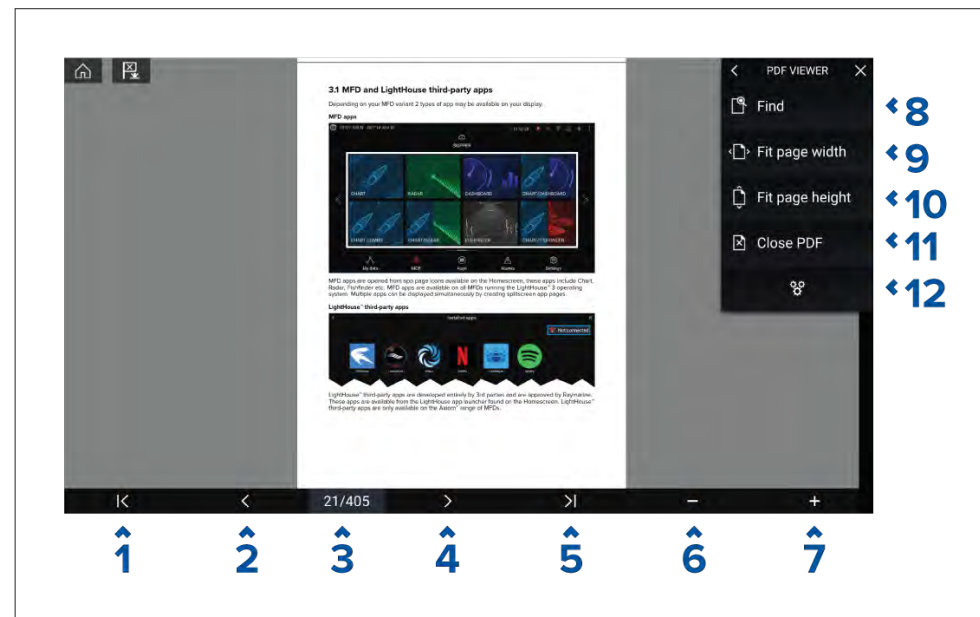

- First page** — Select to display the first page of the PDF document.
- Page back** — Select to display the previous page.
- Pages** — Indicates current page and total number of pages. You can also tap this element and enter a specific page number.
- Page forward** — Select to display the next page.

5. **Last page** — Select to display the last page of the PDF document.
6. **Zoom out** — Select to zoom out, in 10% increments.
7. **Zoom in** — Select to zoom in, in 10% increments.
8. **Find** — Select to display the onscreen keyboard and enter a search word or phrase.
9. **Fit page width** — Zoom the document display to fit the width of the PDF page.
10. **Fit page height** — Zoom the document display to fit the height of the PDF page.
11. **Close PDF** — Closes the PDF and displays the initial PDF Viewer app start screen.
12. **Settings** — Displays the Settings menu, which allows you to add data overlays to the PDF Viewer app.


With the PDF displayed in the viewer:

1. Select **Find**.
2. Enter the word or search term.
3. Select **FIND**.

The document will scroll to the first occurrence of the searched term, which will be highlighted. Use the **Right arrow** and **Left arrow** controls to cycle to the previous or next occurrence of the search term. You can also search for another term by selecting **Find** and entering a new term, or you can cancel the find function by selecting **Cancel**.

27.4 Searching a PDF

You can search a PDF document for a word or phrase using the Find function.

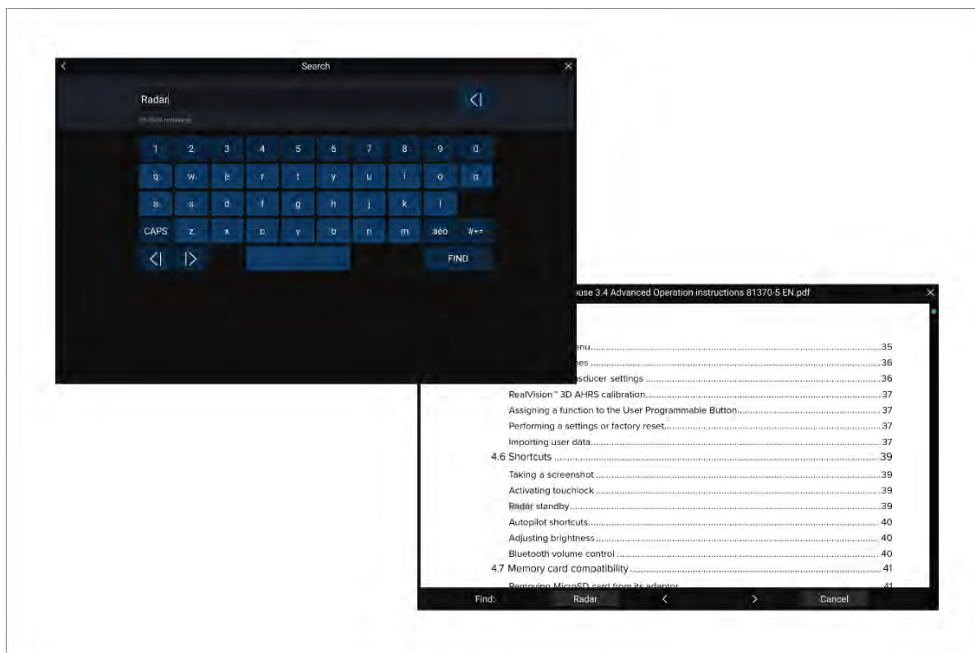

CHAPTER 28: UAV (UNMANNED AERIAL VEHICLE) APP

CHAPTER CONTENTS

- 28.1 UAV disclaimer — page 360
- 28.2 UAV app overview — page 360
- 28.3 UAV pre-requisites — page 362
- 28.4 UAV precautions — page 363
- 28.5 Getting started — page 363
- 28.6 UAV app page — page 364
- 28.7 Opening the UAV app — page 364
- 28.8 Launching the UAV — page 366
- 28.9 Controlling the UAV in flight — page 366
- 28.10 Retrieving your UAV — page 366
- 28.11 Disconnect UAV remote controller from MFD — page 367
- 28.12 Fish on / Circle me mode — page 367
- 28.13 UAV Chart integration — page 368
- 28.14 UAV Emergency procedures — page 369


28.1 UAV disclaimer

The UAV app allows the FLIR multifunction display (“MFD”) to serve as an auxiliary controller for approved unmanned aerial vehicle (UAV) models. You are responsible for your own conduct while using the UAV and for any consequences thereof. You must use the UAV in accordance with all applicable legal regulations and safety recommendations of the UAV manufacturer. The primary controller should be readily accessible at all times while using the MFD as an auxiliary controller. FLIR accepts no liability for any damage, loss or injury caused by the UAV, whether caused by the use of the MFD or any other FLIR product. Particular attention must be paid to landing the UAV which must be done by the primary controller and not the MFD. By selecting continue, you confirm that you understand and accept these conditions.

28.2 UAV app overview

Axiom (Axiom™, Axiom™ Pro and Axiom™ XL) MFDs include the UAV (Unmanned Aerial Vehicle) app, which enables you to control a DJI Mavic Pro or Mavic Pro Platinum UAV using your MFD. The UAV app provides auxiliary remote controls, settings, video display and flight data for your connected UAV.

UAVs and MFDs have a one-to-one relationship, meaning that you can only control a UAV from the MFD that it is physically connected to. On an MFD network, each MFD can be connected to a different UAV, if required.

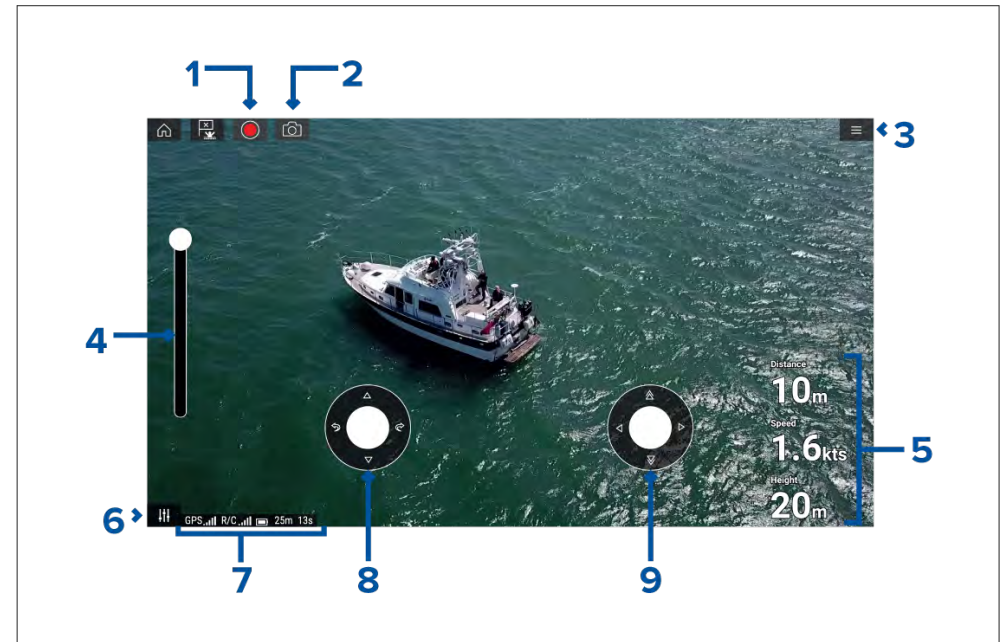

| | |
|---|--|
| 1 | <p>Record Start recording your UAV’s video feed to a memory card inserted into the UAV’s memory card slot. While recording, the Record icon is replaced with a Stop icon and a time counter is displayed.</p> |
| 2 | <p>Take photo Take a screenshot of what is currently displayed in the UAV’s video feed. The image is saved to a memory card inserted into the UAV’s memory card slot.</p> |
| 3 | <p>Menu Opens the UAV app menu.</p> |
| 4 | <p>Gimbal pitch control Adjusts the pitch of the UAV’s camera gimbal, from pointing forwards (control at top of slider) to pointing straight down (control at bottom of slider).</p> |

| | |
|---|--|
| 5 | <p>Flight data Distance, Speed and Height data is displayed onscreen.</p> <hr/> <p>Note: Displayed Flight data is specific to the UAV app and cannot be edited.</p> |
| 6 | <p>Controls Provides access to the onscreen virtual joystick controls.</p> |
| 7 | <p>Status area The status area provides the:</p> <ul style="list-style-type: none"> • signal strength of the UAV's GNSS (GPS) position fix. • signal strength from remote controller to UAV. • battery charge state. • flight time remaining. • identification of restricted no fly zones. |
| 8 | <p>Virtual joystick Provides Up, Down, Turn left and Turn right controls.</p> |
| 9 | <p>Virtual joystick Provides Forward, Backward, Move left and Move right controls.</p> |

Note:

- The UAV app is not available on eS Series and gS Series MFDs.
- On an Axiom XL MFD the UAV connects to the same connection as a remote card reader. Therefore, on a standalone Axiom XL MFD installation, electronic cartography, via a chart card, will NOT be available at the same time as a connection to your UAV. Only pre-loaded world basemaps will be available in the Chart application.

Compatible UAVs

Currently the UAVs listed below are supported:

- Mavic Pro by DJI
- Mavic Pro Platinum by DJI
- Mavic 2 Pro by DJI

- Mavic 2 Zoom by DJI

Connection to any other UAV is not approved and is performed at your own risk.

UAV sport mode

When your UAV is in Sport mode (S-Mode), control via your MFD is limited.

In Sport mode the following MFD controls are disabled **virtual joystick**, **Gimbal pitch control**, **Take off**, **Return to boat** and **Fish on / Circle me**.

UAV app settings menu

You should check and configure the settings listed in the Advanced settings menu before attempting to operate your UAV.

Advanced

| Settings | Description |
|---|--|
| Initial height after take-off: | Specifies the height at which the UAV will hover once it has taken off. |
| Minimum safe height during UAV goto: | Specifies the minimum safe height of the UAV when performing a Goto. |
| Action if remote control signal is lost: | If your UAV loses connection to the remote controller then you can select whether your UAV Hovers in its current location or performs a Return to boat . |
| Minimum height: | Specifies the minimum height of the UAV when performing a Return to boat. |
| Return distance: | Specifies the distance from your vessel the UAV will reach when performing a Return to boat. |
| Height: | Specifies the initial height of the UAV when performing a Fish on / Circle me. |
| Distance: | Specifies the initial distance from your vessel when performing a Fish on / Circle me. |

Page settings

| Settings | Description |
|------------------|---|
| Data Overlays | Enables configuration of Data overlays |
| Edit split ratio | Enables you to customize the position of the partitions in splitscreen app pages. |

Data overlays in the UAV app are separate from the Flight data information.


28.3 UAV pre-requisites

Before you can use the MFD's UAV app with your UAV you must have:

- set up your UAV in accordance with the instructions provided with the device.
- registered your UAV using the applicable DJI app (e.g.: **DJI GO 4**) on your mobile device.
- gained experience of launching, flying and retrieving your UAV.
- removed the RC cable from the side of your UAV's remote controller.
- ensured the remote controller is not in Sport mode.
- Created a UAV app page icon on the MFD's Homescreen.

Removing the RC cable

The RC cable used for connecting the UAV's primary controller to a mobile device must be removed, before connecting the controller to your MFD.

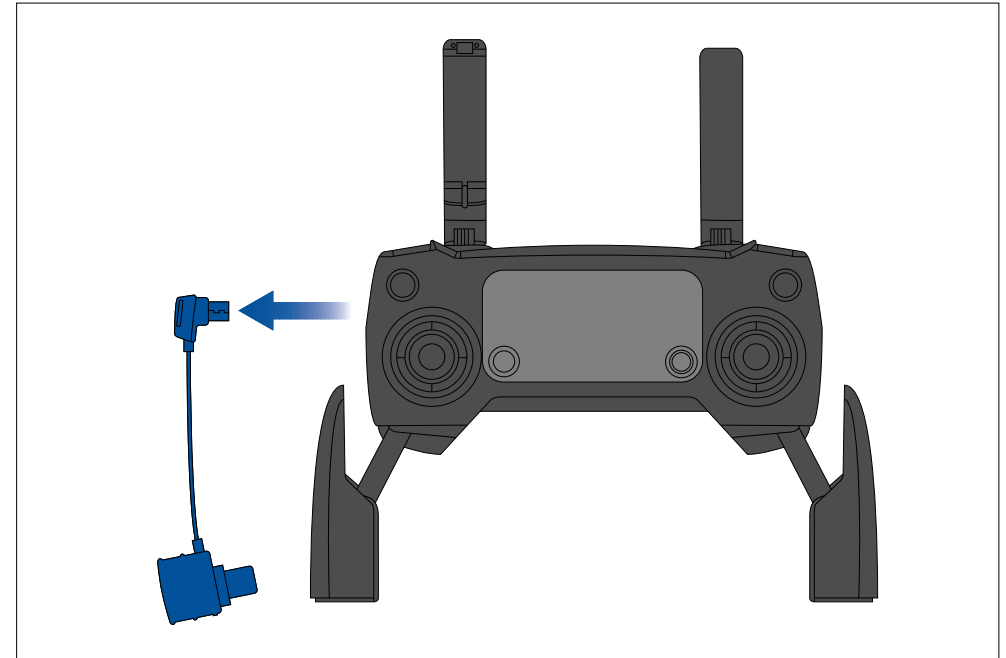


UAV controller connection

Your MFD's accessory connection must be connected to your UAV's primary remote controller using a USB "Micro B" to USB "A" cable.

Note:

- The UAV can NOT be connected to your MFD via the RCR-SDUSB. The card reader must be disconnected to enable connection to a UAV.
- The UAV can only be controlled by the MFD that the controller is connected to.

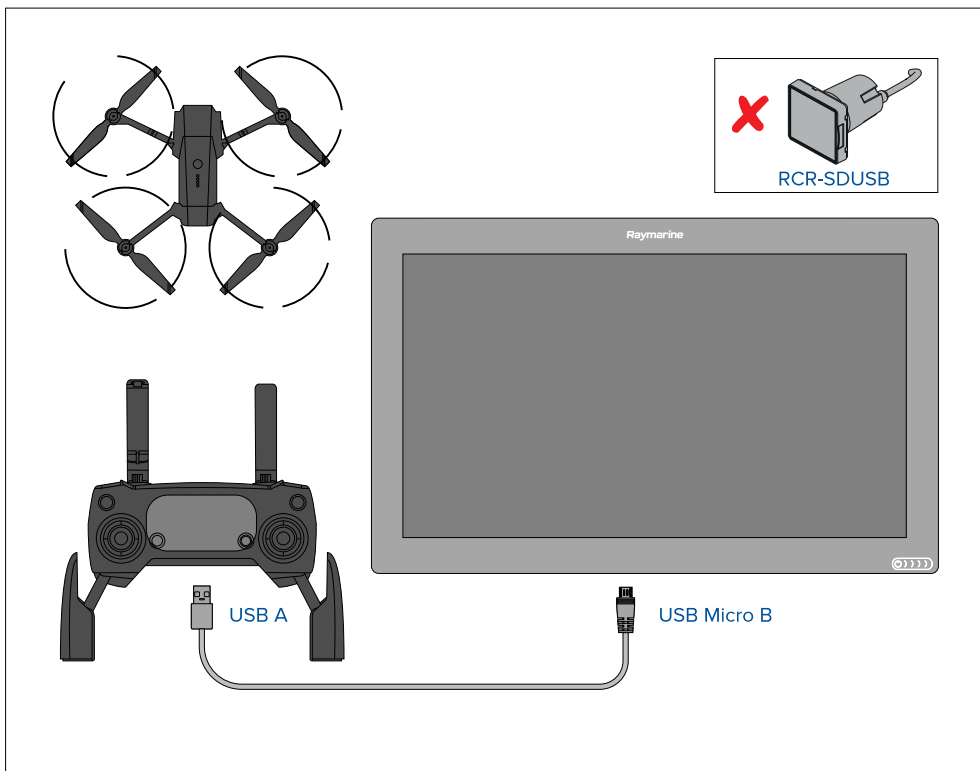

Important:

Ensure that the USB connection to your MFD is secure and protected against water ingress.

28.4 UAV precautions

Operating your UAV over water and launching and retrieving your UAV on a vessel can be a significantly different experience than when on land.

The following precautions should be followed:

- You will need to be an experienced, competent pilot as launching and retrieving the UAV on a vessel is more difficult due to confined space and vessel movement / drift.
- Only launch your UAV in calm wind and tide conditions. When attempting to launch or retrieve your UAV your vessel should be travelling at less than 1 knot and your captain should be ready at the helm to back down or maneuver the vessel to avoid accidental collisions

- Maintain awareness of your UAV's battery status, remaining flight time, distance from your vessel and Wind and Tide conditions. A UAV flying against the wind will consume battery power more rapidly than when flying downwind or in calm conditions. Always budget sufficient power reserves to ensure the safe return and retrieval of your UAV.
- Maintain a permanent watch of your UAV while in flight. The UAV pilot or competent observer must maintain awareness of surrounding air and marine traffic while the UAV is in flight. The pilot must remain ready to take control of the UAV and manually fly it to avoid interfering with other vessels or aircraft.
- While your UAV's controller is connected to your MFD it should be positioned so that it maintains line of sight with your airborne UAV. If the controller is not hand held then it must be secured to prevent it becoming disconnected from your MFD and to prevent unintentional button presses.

No-fly zones

It is illegal to fly your UAV in no-fly zones. No fly zones include:

- Airports
- Airfields
- Country borders
- Sensitive institutions

The Remote controller and the MFD will alert you that there is a no-fly zone. Your UAV will not enter the restricted airspace covered by a no-fly zone. You will also be unable to launch your UAV in restricted airspace. Please refer to the DJI app or the DJI website for more information on no-fly zones and their locations.

28.5 Getting started

Initial steps to get up and running with your UAV.

1. Using a **USB A to USB Micro B** cable, connect the Micro B end of the cable to the Accessory connection on the rear of your MFD.
2. Power on the MFD.
3. Obtain a GNSS (GPS) position fix on the MFD.
4. Open the UAV app.

5. Connect the MFD to the internet. (An internet connection is only required the first time you open the UAV app, after a Factory reset, or after an MFD software update).

Ensure that an internet connection is available on your MFD at the point of registration. If your vessel is likely to be out-of-range of cellular or satellite internet service at registration time, you will need to register the UAV before heading out on the water.


6. Wait for successful registration.
7. Power on the UAV's remote controller.
8. Power on the UAV.
9. Wait for the UAV to obtain a GNSS (GPS) position fix and for the "Ready to go" message to be displayed on the remote controller's screen.
10. Connect the USB A end of the USB cable to the relevant connection on the UAV's remote controller.

28.6 UAV app page

The UAV app is not displayed on the Homescreen by default. To open the UAV app you must first create a UAV app page icon on your MFD's Homescreen.

UAV control features are integrated with the Chart app; when creating a UAV app page it is recommended that you create a splitscreen Chart / UAV app page.

Follow the instructions detailed in the [5.4 Creating / Customizing an app page](#) section for information on creating an app page. Chart / UAV splitscreen app pages will be set to a 30/70 page split by default.

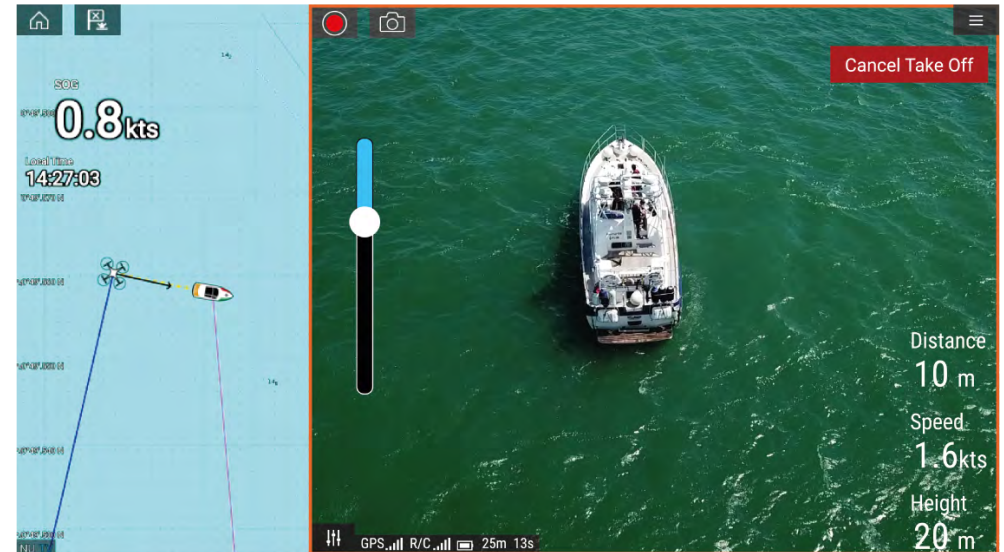


28.7 Opening the UAV app

The UAV app is opened from the Homescreen by selecting an app page icon that includes the UAV app.

The first time you open the UAV app and after each power cycle, a disclaimer is displayed. By selecting **Continue** you are agreeing to the terms of this disclaimer.

The UAV app will then open in 1 of 3 states:

No Wi-Fi connection

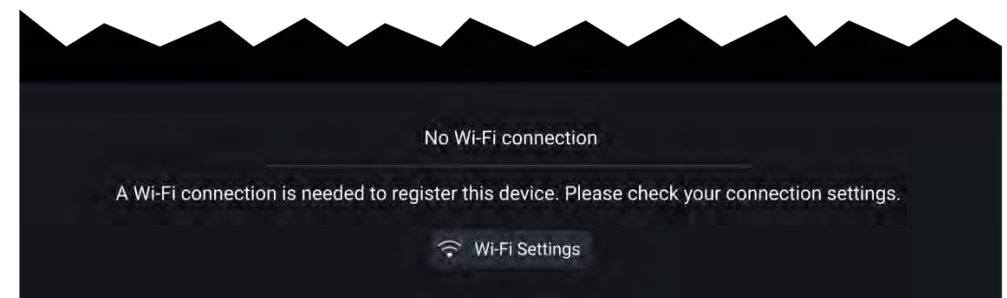


The first time you open the UAV app, after an MFD factory reset, or after you have updated your MFD's software, the UAV app must be registered using an internet connection on your MFD. Select **Wi-Fi Settings** to create an internet connection.



When registration is complete, if desired you can turn off your Wi-Fi connection by selecting **Wi-Fi Settings** and turning off your MFD's Wi-Fi. Selecting **OK** will close the info box keeping your Wi-Fi connection turned on.

Registration failed

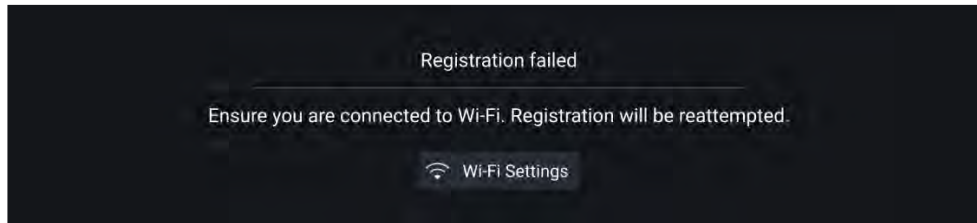


The registration failed notification is displayed if the DJI servers cannot be reached. Registration will be re-attempted automatically. If the failure persists, check your Wi-Fi and internet or try again later.

No connection detected



After successful registration, the 'No connection detected' notification is displayed. Connect the USB A end of your USB cable to the UAV's primary controller. Once a successful connection is established, the notification will be closed.


UAV app

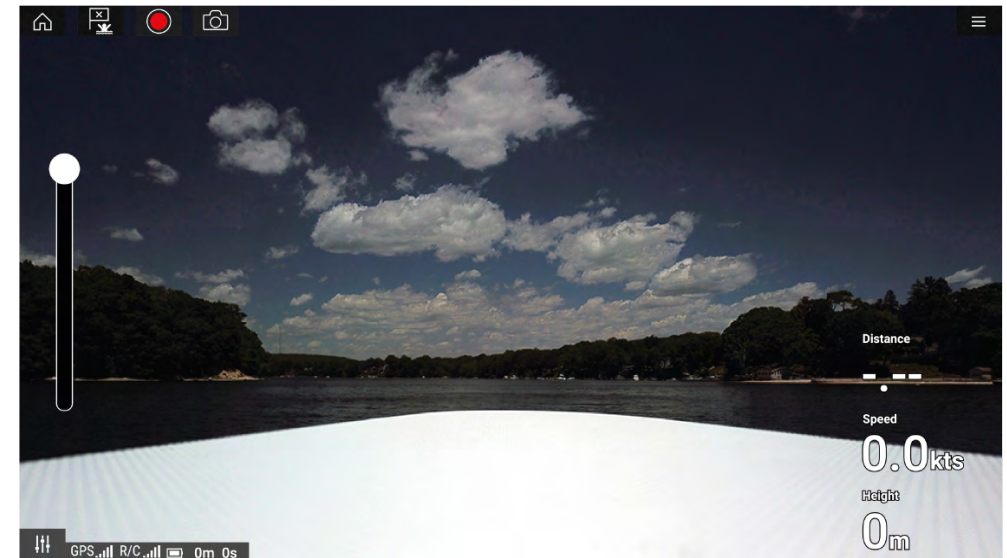

Once your UAV is correctly set up and connected to your MFD and your MFD's UAV app is registered successfully, the UAV's video feed is displayed and the app is ready to be used as an auxiliary controller for your UAV.

28.8 Launching the UAV

When it is safe to do so you can use the UAV app to launch your UAV.

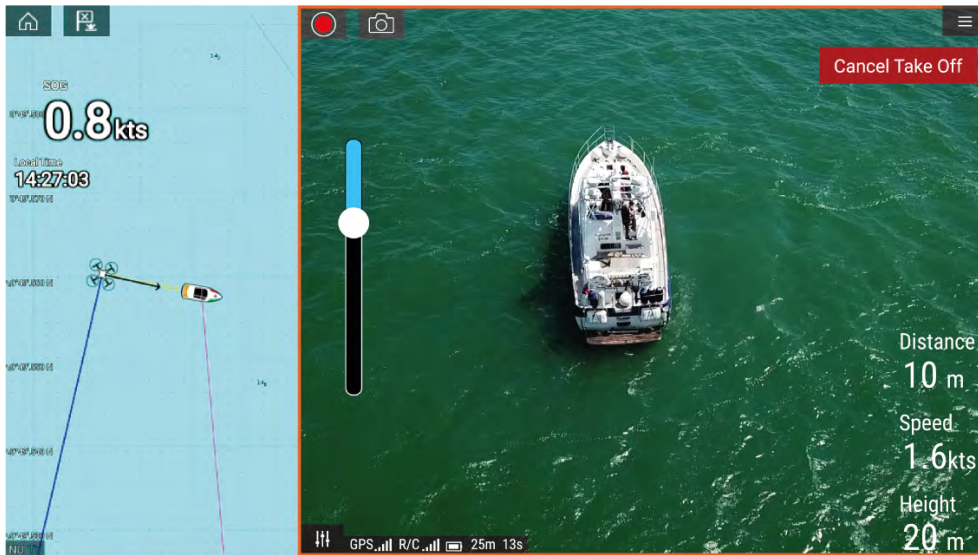

Prior to launch ensure that all necessary precautions have been taken to ensure no loss, damage or injury can occur.

1. Ensure your UAV is correctly connected and configured.
2. Ensure you have set an **Initial height after take-off**: in the appropriate Advanced settings menu: **Menu > Settings > Advanced > Initial height after take-off**:

Height needs to be sufficient so that your UAV will not collide with your vessel's sails, masts, rigging etc. or any other structure.

3. Place your UAV in an open space with sufficient room to launch unobstructed, taking into consideration the effects of wind direction and speed, tide direction and speed and the drift of your own vessel.
4. Select **Take off** from the UAV menu.
5. Select **Yes** to confirm take off.

The UAV will take off and lift to the height specified in step 2 above and hover.

The Take off can be cancelled at anytime by selecting the Red **Cancel Take Off** button. When **Cancel Take Off** is selected the UAV will stop and hover in

its current position. If required, you can then use manual control to retrieve your UAV.

28.9 Controlling the UAV in flight

When in flight you can control the UAV using the onscreen virtual joysticks.

1. Select the **Controls** icon to display the **Virtual joysticks**.
2. The Virtual joysticks include controls for: **Up, Down, Turn left, Turn right, Forwards, Backwards, Move left** and **Move right**.
3. Use the **Gimbal pitch control** to move the UAV's camera to the required position.
4. If desired, use the **Record** and **Take photo** icons to record footage of your flight.

Note:

The Virtual joysticks take priority over your UAV's remote controller's joysticks, To use the remote controller's joysticks hide the Virtual joysticks by selecting the **Controls** icon.

28.10 Retrieving your UAV

To retrieve your UAV follow the instructions below:

1. Ensure that the **Minimum height** and **Return distance** settings are adequate for current conditions (Minimum height and Return distance can be adjusted from the Advanced settings menu: **Menu > Settings > Advanced**).
2. When you are ready to retrieve your UAV select the **Return to boat** option from the UAV app menu: **Menu > Return to boat**.

The UAV will return to your vessel's location within the specified Return distance and Minimum height, based on your MFD's current GNSS (GPS) position.

3. Once your UAV has reached the Return to boat position use the UAV's remote controller to manually retrieve your UAV safely.

Note:

The Return home manoeuvre can be cancelled at any time by selecting the Red, onscreen **Cancel return to boat** option. Once selected the UAV will stop and hover in its current position.

28.11 Disconnect UAV remote controller from MFD


When you have finished using the UAV app it is recommended that you disconnect the USB cable from the UAV's remote controller.

Before performing a MFD Factory reset, or software update, ensure that your UAV's remote controller is either powered off or disconnected from your MFD.

28.12 Fish on / Circle me mode

When Fish on / Circle me mode is activated your UAV will launch and circle your vessel, maintaining its camera's view on your vessel and recording the camera's video feed. Fish on / Circle me mode can also be initiated when your UAV is already in flight.

When your UAV is in Fish on / Circle me mode you should ensure your vessel speed does not exceed 10 knots or the UAV may not be able to keep up with your vessel. If your UAV cannot keep up slow your vessel speed.

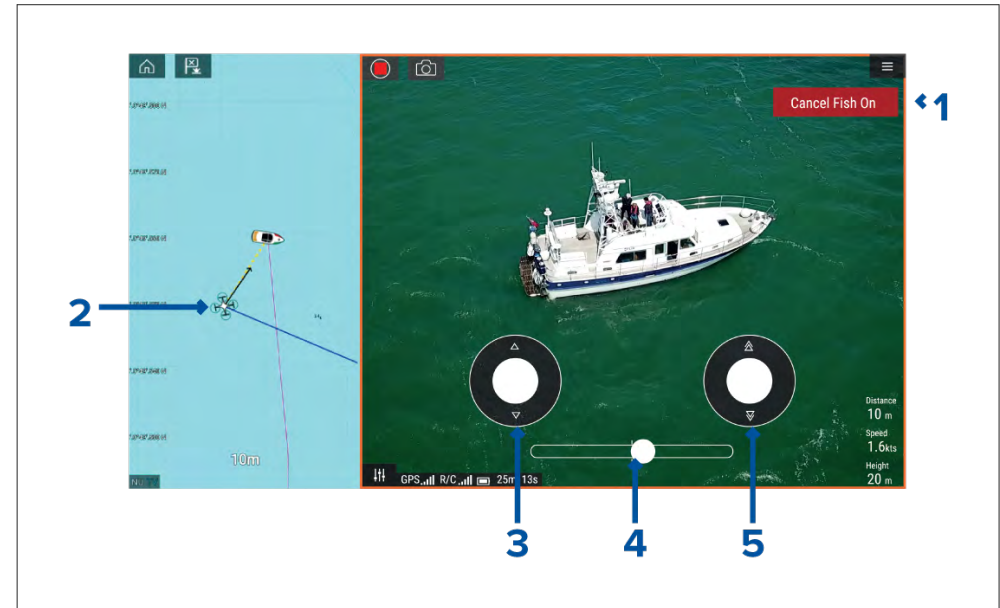

| | |
|---|--|
| 1 | Cancel Fish On / Cancel Circle me Selecting Cancel Fish On / Cancel Circle me will stop Fish On / Circle me mode and the UAV will hover in its current location. If required you can manually stop recording by selecting the Stop icon. |
| 2 | UAV icon The UAV icon can be displayed in the Chart app. The icon includes a camera heading graphic, a Course Over Ground (COG) vector and a line linking your vessel icon to your UAV icon. |
| 3 | Virtual joystick In Fish On / Circle me mode the left virtual joystick provides Up and Down controls to adjust the UAV's distance from your vessel. |


| | |
|---|--|
| 4 | <p>Rotation</p> <p>The Rotation slider control is used to adjust the UAV's direction of rotation and rotation speed. With the control on the slider center line the UAV will maintain position in relation to your vessel. Moving the slider right of the slider center line rotates the UAV counter-clockwise and moving the slider control to the left of the center line rotates the UAV clockwise. The farther left or right the slider control is set the faster the rotation speed will be.</p> |
| 5 | <p>Virtual joystick</p> <p>In Fish On / Circle me mode the right virtual joystick provides Forward and Backwards controls to adjust the UAV's height from your vessel.</p> |

Note:

During your initial MFD configuration the boating **Activity** you selected will determine whether the function is labelled **Fish on** or **Circle me**. If Fishing (freshwater), Fishing (saltwater) or Retail/demonstration is selected then the function is labelled **Fish on**, otherwise the function is labelled **Circle me**.

28.13 UAV Chart integration

When a compatible UAV with a GNSS (GPS) position fix is connected to your MFD, a UAV icon representing the position of the UAV is displayed in the Chart app.

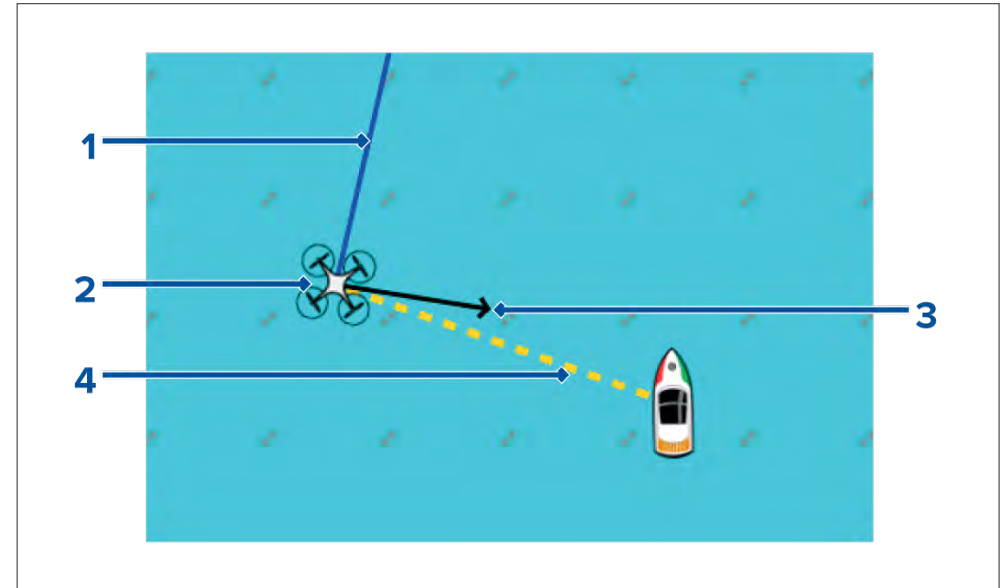

| | |
|---|--|
| 1 | <p>UAV COG</p> <p>The direction of the Blue line indicates the UAV's current Course Over Ground (COG). The length of the line indicates the UAV's predicted position when the specified vector Reference period has passed.</p> <p>The Vector Reference period can be adjusted from the vessel icon's context menu.</p> |
| 2 | <p>UAV Icon</p> <p>Displayed when the UAV option is enabled in the Chart app settings, and your UAV has a GNSS (GPS) position fix.</p> |
| 3 | <p>Camera heading</p> <p>The Black Camera heading arrow is fixed to provide an indication of the direction the UAV's camera is pointing towards.</p> |
| 4 | <p>Line to vessel</p> <p>The Yellow dotted line represents the angle of the UAV's position relative to your vessel.</p> |

Showing or hiding the UAV icon

The UAV icon is displayed by default in the Chart app. The icon can be hidden if required.

From the Chart app menu:

1. Select **Settings**.
2. Select the **Layers** tab.
3. Select the **UAV**: toggle switch.
Selecting the UAV toggle switch will make the UAV icon visible (on) or invisible (off).

Performing a UAV Goto

When your UAV is in flight you can select a location or object in the Chart app and perform a **UAV Goto** (your UAV will fly to the selected location or object and hover).

1. Select a location or object in the Chart app.
The Chart context menu is displayed.
2. Select **More**.
3. Select **UAV Goto**.
A UAV waypoint marker is placed to signify the UAV's destination and the UAV will fly to that location.

You can stop a UAV Goto at anytime by selecting the Red **Cancel UAV Goto** that is displayed onscreen in the UAV app, when a UAV Goto is active. Cancelling a UAV Goto will stop the Goto action and the UAV will hover in its current location.

A UAV Goto can be cancelled at any time by selecting **Stop UAV Goto** from the Chart context menu.

28.14 UAV Emergency procedures

The guidance below is intended to provide details of steps taken automatically by your UAV, and any manual intervention that may be required in certain situations.

Controller signal to UAV lost

In the event that your UAV loses its connection to the primary controller, the UAV will perform 1 of 2 actions, depending on your selection in the **Advanced** setting menu: **Menu > Settings > Advanced > Action if remote control signal lost**:

- **Hover** — The UAV will stop and hover in its current location. You should maneuver your vessel towards your UAV's position and attempt to re-establish control. When control is re-established it is recommended that you retrieve the UAV and inspect it immediately.
- **Return to boat** — The UAV will perform a Return to boat maneuver and hover at the **Return distance** and **Minimum height** specified in the Return to boat settings:
 - **Menu > Settings > Advanced > Minimum height**
 - **Menu > Settings > Advanced > Return distance**

If connection between the Remote controller and UAV is not re-established, your UAV will attempt to land.

Low battery warnings

Ensure while flying your UAV that you remain aware of the remaining flight time and distance from your vessel at all times. You must return your UAV to your vessel and safely retrieve it before a low battery warning occurs. The UAV app will mirror the UAV's primary controller battery state warnings.

- **Normal low battery level warning** — when the UAV reaches normal low battery level, in addition to the remote controller's audible and visual warnings a warning is also displayed on your MFD. You should immediately return the UAV to your vessel and retrieve.
- **Critical low battery warning** — when the UAV reaches critical low battery level, your UAV will automatically perform a **Return to boat** maneuver and attempt to land. It is not recommended that you allow your UAV to reach critical low battery while in flight, as it could result in damage or loss of your UAV.

Assuming manual control

The UAV pilot has the ability to take manual control of the UAV at any time. Manual control may be required for normal in-flight maneuvering or positioning, or in emergency situations. The methods of assuming manual control are as follows:

- Virtual joysticks will need to be hidden, using the **Controls** icon before control is returned to the Remote controller.
- Enabling Sport mode on the UAV's Remote controller at any time will override MFD controls. Fly with caution, as flight characteristics change in Sport mode.

- In an emergency, unplugging the USB cable from the Remote controller will override the MFD controls and immediately restore manual control to the Remote controller.

CHAPTER 29: PARTNER INTEGRATION AND THIRD-PARTY APPS

CHAPTER CONTENTS

- [29.1 Partner integration — page 372](#)
- [29.2 LightHouse third-party apps — page 372](#)
- [29.3 App launcher — page 372](#)
- [29.4 Interface shortcuts on the homescreen — page 374](#)
- [29.5 Internet connection — page 374](#)
- [29.6 Bluetooth speaker set up — page 375](#)

29.1 Partner integration

Raymarine allows 3rd party hardware suppliers to integrate their hardware with Raymarine Axiom™ MFDs.

Integration allows Interface shortcuts to be available on the MFD which provide access to HTML based user interfaces on integration partner's hardware.

The hardware must be connected to the MFD using an ethernet (SeaTalkhs®) connection.

Interface shortcuts can be accessed from the App launcher and can also be included in app pages on the homescreen.

Details of current integration partners is available on the Raymarine website: <http://www.raymarine.com/multifunction-displays/lighthouse3/lighthouse-apps/>

Raymarine also partners with third party hardware suppliers that use android APK apps to control their hardware. These APKs are approved and installed the same way as LightHouse third party apps.

Note:

- For partners who integrated prior to the release of LightHouse™ 3 version 3.16 the interface shortcuts are always displayed.
- For partners who integrated after the release of LightHouse™ 3 version 3.16 the interface shortcuts are only displayed when the MFD detects partner hardware.
- For partners who integrated after the release of LightHouse™ 4 the interface shortcuts are only displayed when the MFD detects partner hardware.
- Raymarine does not warrant or provide support for third-party user interfaces or related third-party hardware. Please refer to the relevant partner for assistance and troubleshooting.

29.2 LightHouse third-party apps

LightHouse™ third-party apps are Android APK apps, developed by third parties and approved for use on Raymarine Axiom™ MFDs running the LightHouse™ 3 or LightHouse™ 4 operating system.

Android APK apps must be digitally signed by Raymarine. Signed APKs can then be bundled with LightHouse™ operating system updates and / or downloaded from the Raymarine website and installed on Axiom™ MFDs.

APK apps can be accessed from the App launcher.

A list of current approved APKs can be found on the Raymarine website: Details of current integration partners is available on the Raymarine website: <http://www.raymarine.com/multifunction-displays/lighthouse3/lighthouse-apps/>


Note:

- APKs from other sources such as the Google Play store that have not been signed by Raymarine cannot be installed on Axiom™ MFDs.
- Raymarine does not warrant or provide support for third-party apps or any related third-party hardware. Please refer to the relevant third party app developer for assistance and troubleshooting.

29.3 App launcher

The app launcher provides access to LightHouse™ third party apps and Interface shortcuts for 3rd party partner hardware.

Select the **Apps** icon located at the bottom of the Homescreen to open the App launcher.

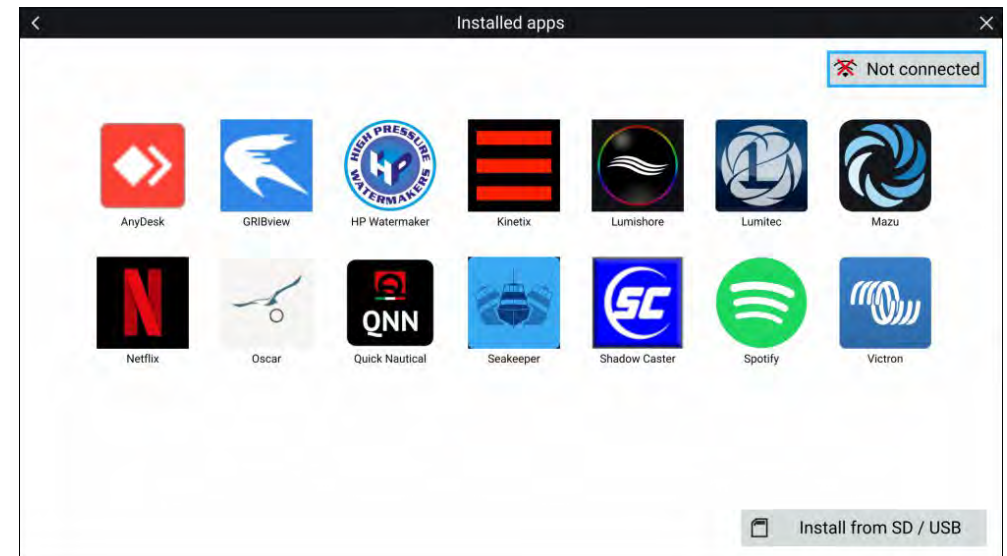

Selecting an icon will launch the app.

Some apps require an internet connection. You can connect your MFD to the internet by selecting the Wi-Fi connection button located on the top right of the screen. Refer to: [p.374 – Internet connection](#)

APK apps downloaded from the Raymarine website can be installed by selecting **Install from SD / USB**. Refer to: [p.373 – Installing Lighthouse third-party apps](#)

To listen to audio a bluetooth speaker must be connected to the MFD. Refer to: [p.375 – Bluetooth speaker set up](#)

Apps may run in the background, enabling you to use your MFD as usual whilst, for instance, listening to music.

MFD alarms will be displayed and sounded as normal whilst using apps or partner interfaces. When paired with a Bluetooth speaker alarms will also be sounded through the speaker.

Bluetooth speaker volume can be controlled from the Shortcuts page or from the Status bar area on the Homescreen.

Note:

- If you use a wireless connection to a Quantum Radar, the Radar should be put in Standby before connecting your MFD to the internet.



Warning: Maintain a permanent watch

Do NOT navigate whilst distracted by entertainment apps. Failure to maintain a permanent watch puts yourself, your vessel and others at serious risk of harm.

Installing Lighthouse third-party apps

Additional Lighthouse third-party apps can be installed on your MFD via an SD card or USB.


To install Lighthouse third-party apps:

1. Copy the downloaded apk to your MicroSD card or USB device.
2. Insert SD card or USB device into your MFD or external card reader.
3. From the **App Launcher** page, select **Install from SD / USB**.
4. Browse to and select the apk file to install the app.
5. The app will be located on the **App Launcher** page.

You can uninstall Lighthouse third-party apps from your MFD by long pressing them and selecting **uninstall**.

Removing an apk app

Android apk apps can be removed (uninstalled) from your MFD by follow the steps below.

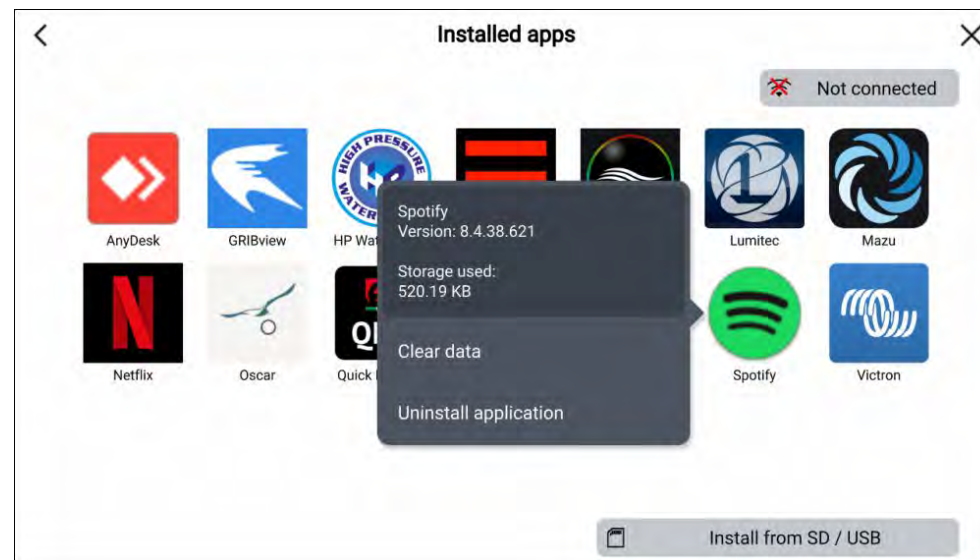

From the homescreen:

1. Select **Apps** to open the App launcher.
2. Press and hold on the android apk app to open the pop-over menu.

Partner hardware interface shortcuts cannot be removed this way.

3. Select **Uninstall application**.
4. Select **Yes** on the notification.

The app will be removed from the MFD.


Note:

Apps that do not have the **Uninstall application** option cannot be removed.

29.4 Interface shortcuts on the homescreen

When the MFD detects integration partner hardware, Interface shortcuts can be added to the homescreen.

Example

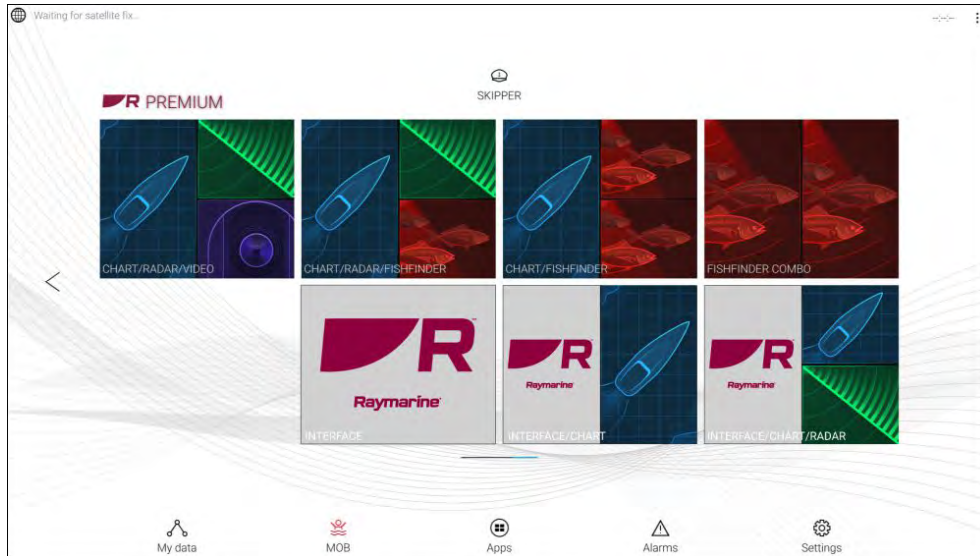

The Interface shortcuts can be added as either Fullscreen app pages or as a part of a portrait splitscreen app pages.

The method for creating the app page is the same as for creating an MFD app page. Refer to: [p.63 — Creating an app page](#)

If the associated hardware is removed or not detected the app page icons will remain on the homescreen but you will not be able to access the hardware's user interface.

29.5 Internet connection

Connecting to the internet


From the Homescreen:

1. Select **Apps**.
The app launcher is displayed.

2. Select the Wi-Fi connection status button, located on the top right of the app launcher page.
The Wi-Fi settings page is displayed and will scan for available networks.
3. Select the relevant connection.
4. Enter the password for the network and select **Connect**.
Your MFD will now connect to the chosen network.
5. Select the **Back** triangle symbol or the **Home** Circle symbol at the bottom of the screen.

You can now use LightHouse™ apps that require an internet connection.

Wi-Fi settings

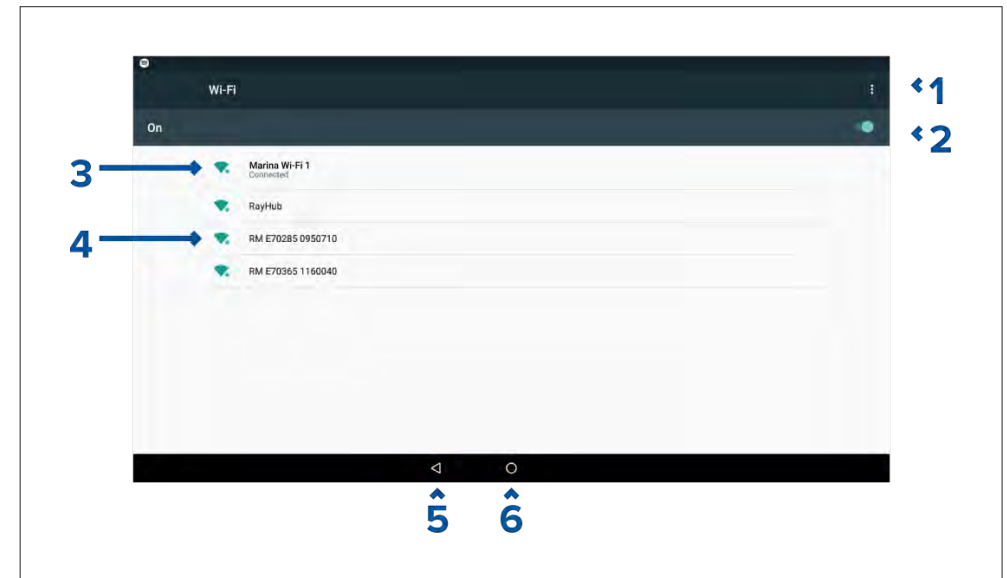

1. Wi-Fi options — Provides the following options:
 - Add network — Manually add a network.
 - Saved networks — View a list of all saved networks.
 - Refresh — Rescan available networks.
 - Advanced — View advanced network settings.
2. Enable/Disable Wi-Fi.
3. Connected access point.

4. Available access points.
5. Back button.
6. Home button

29.6 Bluetooth speaker set up


Enabling and disabling Bluetooth



1. Select the Status bar area located in the top right of the screen.
2. Select **Bluetooth Settings**.
3. Select the Toggle switch on the right of the Bluetooth settings page to enable Bluetooth.

Alternatively the Bluetooth settings page can be accessed from the This display settings tab: **Homescreen > Settings > This display > Bluetooth > Bluetooth settings**.

Bluetooth Settings

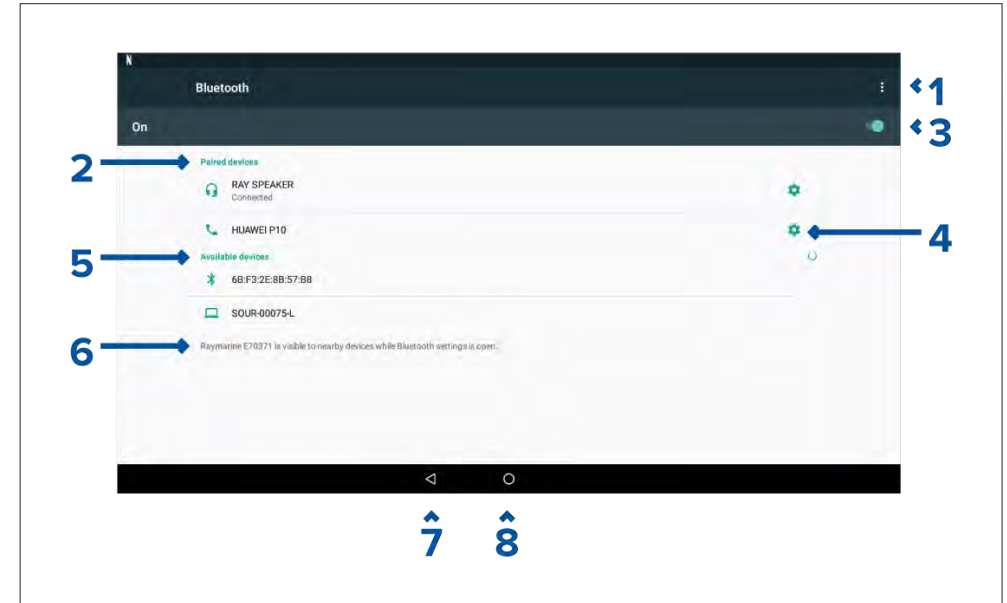

1. Bluetooth options — Provides the following options:
 - Refresh — Selecting refreshes the list of available devices.
 - Rename this device — Allows you to rename the Bluetooth name your MFD uses.
 - Show file received — Not used as your MFD cannot receive files over Bluetooth.
2. Paired devices — List of devices paired with your ~MFD.
3. Enable/Disable Bluetooth.
4. Paired device settings — Allows you to rename the paired device or forget the device.
5. Available devices — List of available Bluetooth devices.
6. MFD Bluetooth name.
7. Back button.
8. Home button.

Pairing a Bluetooth speaker

Before attempting to pair with a Bluetooth speaker, ensure that the speaker is switched on and discoverable.

With your MFD's Bluetooth enabled:

1. From the Bluetooth settings page, select the relevant device from the **Available devices** list.
2. If requested, confirm the bluetooth pairing code.

If pairing is successful the speaker will appear in the **Paired devices** list and display the **Connected** message.

Bluetooth volume control


When your MFD is connected to a Bluetooth speaker, controls will be available to adjust speaker volume.

Homescreen



From the Homescreen select the Status area and then select the Speaker symbol to display the Bluetooth volume control for LightHouse™ app and MFD alarms.

Shortcuts page

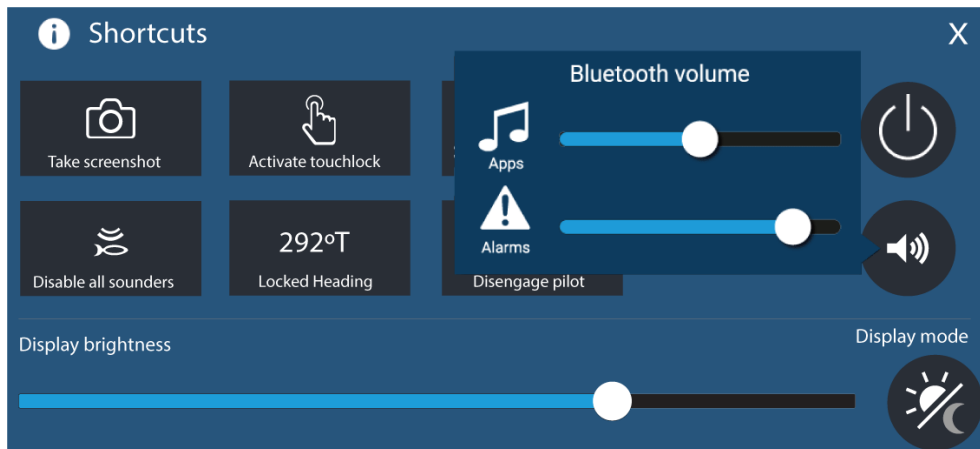

Press or swipe the **Power** button to display the Shortcuts page and then select the speaker symbol to display the Bluetooth volume control for LightHouse™ apps and MFD alarms.


CHAPTER 30: MOBILE APP SUPPORT

CHAPTER CONTENTS

- 30.1 Raymarine mobile apps — page 378
- 30.2 Connecting an Android device to the display — page 378
- 30.3 Connecting an iOS device to the display — page 379
- 30.4 RayConnect — page 379
- 30.5 Fishidy sync — page 381
- 30.6 Navionics plotter sync — page 383
- 30.7 Controlling your MFD using RayControl — page 383
- 30.8 Controlling your MFD using RayRemote — page 383
- 30.9 Viewing your MFD screen using RayView — page 384

30.1 Raymarine mobile apps

Please check the relevant app store for Raymarine mobile apps.

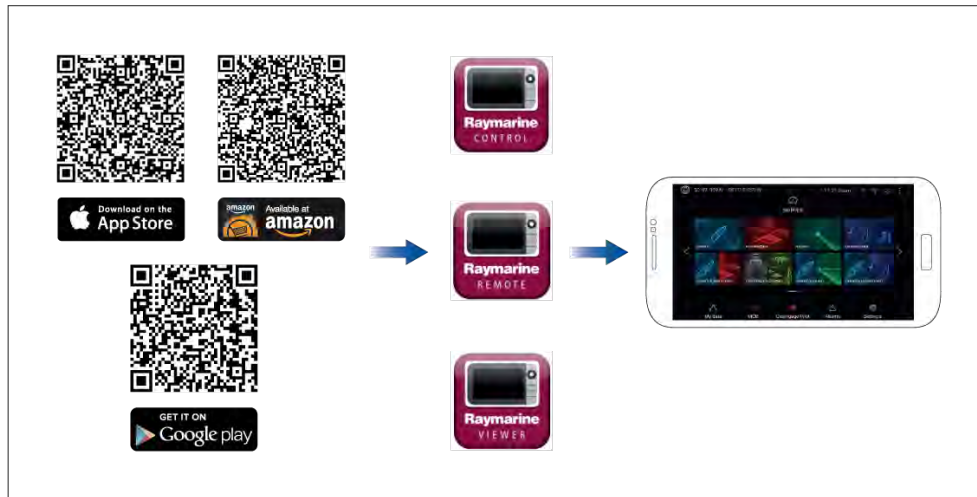


Note: When updating your MFD software ensure that you check for updates to your mobile apps.

30.2 Connecting an Android device to the display

Android devices can be connected to the display's Wi-Fi connection.

Open your Android device's Wi-Fi settings from the top drop down menu or via the **Settings** icon.

Example Android Wi-Fi connection

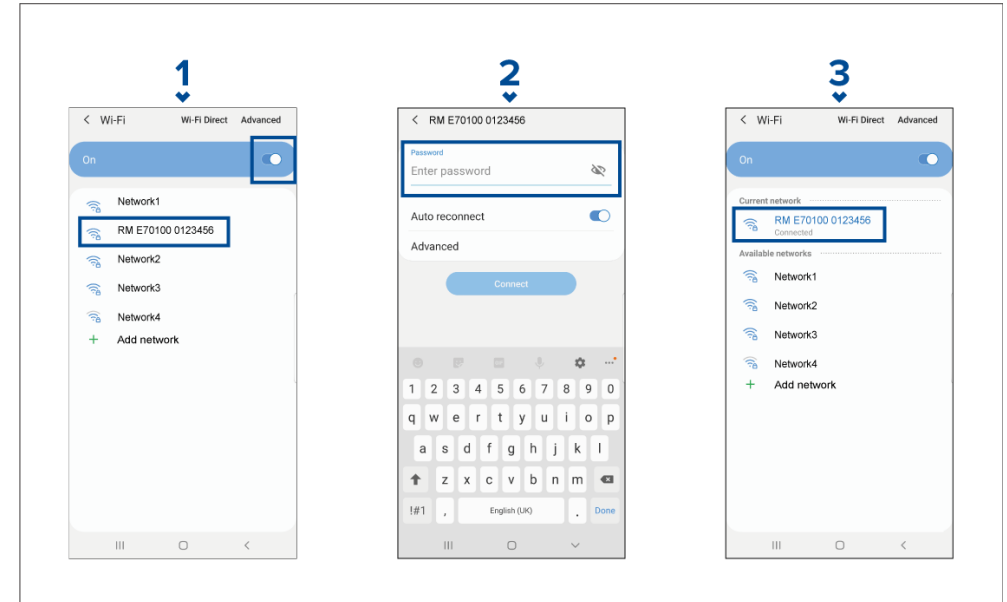

Note:

Depending on device type, manufacturer and version of the Android operating system in use, screens and options may be different than in the example above.

1. Enable Wi-Fi by setting the toggle to on (blue) and select your MFD from the available networks.
2. Enter your MFD's Wi-Fi passphrase and select **Connect**.

Make sure the password you enter is case sensitive.


3. When your Android device is connected to your MFD's Wi-Fi it will display connected under the MFD's name.

For troubleshooting advice refer to the Wi-Fi troubleshooting information on the Troubleshooting chapter [p.385 – Troubleshooting](#)

30.3 Connecting an iOS device to the display

iOS devices can be connected to the display's Wi-Fi connection.

Open your iOS device's Wi-Fi settings from the top drop down menu or via **Settings**.

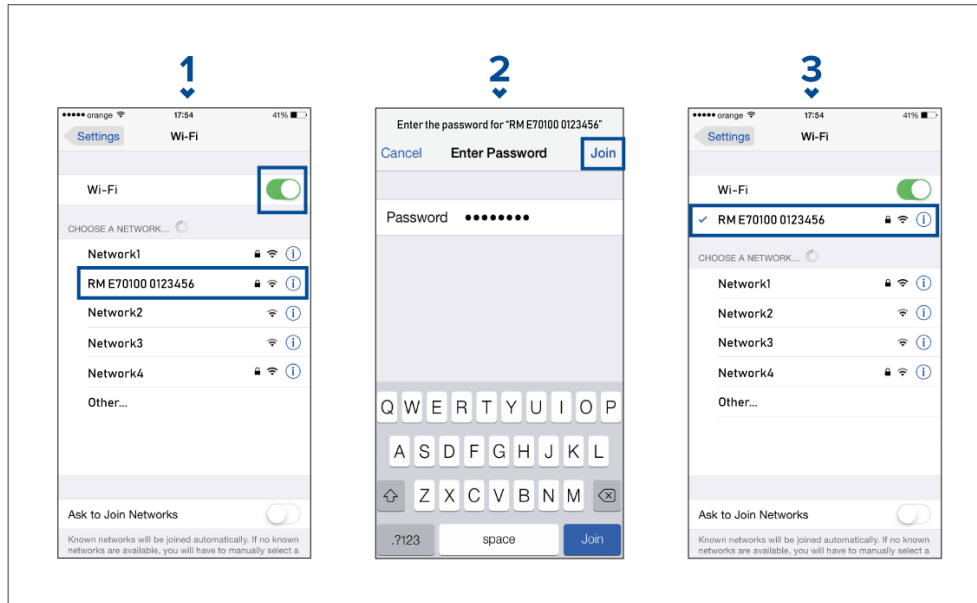

Note:

Depending on device type, and iOS version in use, screens and options may be different than in the example above.

1. Enable Wi-Fi by setting the toggle to on (green) and select your MFD from the available networks.
2. Enter your MFD's Wi-Fi passphrase and select join.

Make sure the password you enter is case sensitive.

3. When your iOS device is connected to your MFD's Wi-Fi it will display a tick next to the MFD's name.

For troubleshooting advice refer to the Wi-Fi troubleshooting information on the Troubleshooting chapter [p.385 – Troubleshooting](#)

30.4 RayConnect

Use the RayConnect app to purchase and download LightHouse Charts from the Chart Store.

Follow the steps below to use the RayConnect app:

1. Log in with an existing Raymarine account or create one using the app.
2. Purchase LightHouse Charts with the Chart Store.
3. Define the regions and types of cartographic data you want the chart to contain.
4. Download the charts to an SD card inserted in your Axiom™ or Element™ MFD, or download the chart data directly to an Axiom™ MFD's internal memory.

LightHouse charts

LightHouse™ charts is the brand name for Raymarine's electronic navigational charts. LightHouse™ charts can include a premium subscription which adds new and enhanced features.

Note:

Legacy LightHouse™ Vector, Raster and NC2 charts have now been discontinued and can no longer be downloaded or updated.

New LightHouse™ charts come with a free 1 year subscription to LightHouse™ Premium. The premium subscription unlocks data-rich points of interest (POI), high-resolution satellite aerial overlays and regular chart updates. After the free subscription ends the premium features can be continued for an annual fee.


LightHouse™ charts can be purchased from Raymarine dealers, as either a pre-loaded chart card or a blank chart card that includes a voucher that can be redeemed from the chart store.

To find out more about available regions and latest features visit the LightHouse™ charts store: <https://chartstore.raymarine.com/lighthouse-charts>

LightHouse Chart Store

LightHouse™ charts can be purchased from the LightHouse™ Chart Store, which can be accessed from a personal computer (PC) or from a mobile device via the RayConnect app.

You must have a Chart Store account and be logged in to the account before you can purchase charts in the Chart Store. This account can be created during the checkout process if required.

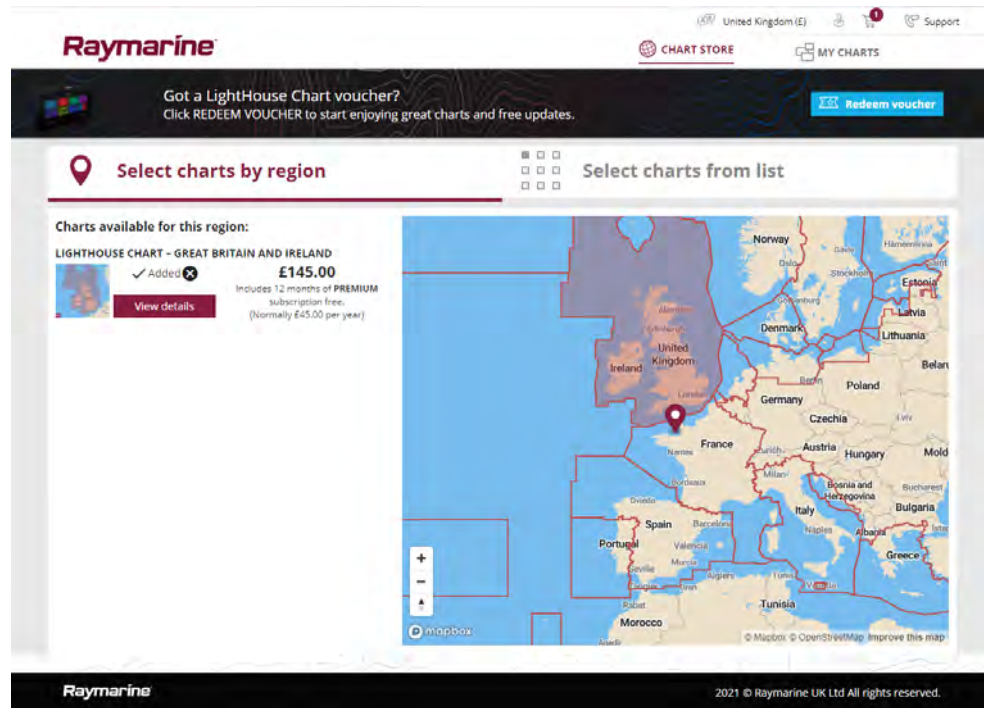

Downloading charts using the RayConnect app

Purchased LightHouse™ charts can be downloaded to a MicroSD (µSD) memory card inserted into your MFD or to the internal storage of an Axiom™ MFD using a mobile device and the RayConnect app.


The following pre-requisites should be observed:

- If using mobile data, ensure you have sufficient data allowance remaining to prevent being charged.
- Ensure you have sufficient free space on your mobile device's internal storage for the charts to be downloaded to.

- Ensure that the memory card you want to use is formatted in the exFAT file system format (Chart cards purchased from the Raymarine chart store will arrive in this format).
- Ensure that the memory card has been inserted into the MFD's card reader prior to commencing the process (this will create the necessary Lighthouse_ID file in the card's root directory).
- A file named 'Lighthouse_charts' must be created in the memory card's root directory (Chart cards purchased from the Raymarine chart store will already include this folder).
- It is recommended that there are no other files on the memory card prior to downloading charts to it.
- Ensure **Allow devices to connect** is enabled in your MFD settings:
 - Element™ MFDs: **Homescreen > Settings > Wi-Fi.**
 - Axiom™ MFDs: **Homescreen > Settings > This display > Wi-Fi SHARING.**
- Part of the process involves connecting your mobile device's Wi-Fi to your MFD. For information on connecting your mobile device, refer to:
 - Android — [p.378 – Connecting an Android device to the display](#)
 - iOS — [p.379 – Connecting an iOS device to the display](#)

Note:

- Once a storage location (memory card or internal memory) has been chosen for your charts you cannot change it. Charts cannot subsequently be saved to a different card.
- Charts cannot be downloaded to the internal storage of Element™ MFDs.

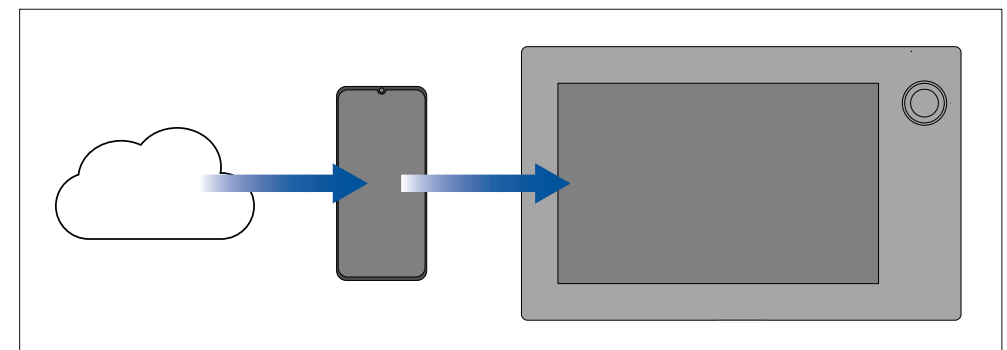

1. Install and open the RayConnect app from the relevant app store.
2. Create an account or Log in to the RayConnect app.
3. If requested select **ALLOW ONLY WHILE USING THE APP**.
4. Go to the **MY CHARTS** area.
5. Select the chart region you want to download.
6. If you have more than 1 region on the same continent in MY CHARTS, to minimize download file size, you can group up to 3 regions together.
7. If updates are available click **Get latest data**.
8. If you have a valid Premium subscription you can add **Streets & Points of Interest** and **Aerial photos** by clicking **Add now** next that you want to include.

*When adding **Streets & Points of Interest** and **Aerial photos** you can create up to 5 area boxes for each feature per purchased region. Follow the onscreen instructions to define each area of coverage.*

9. Select **Download** and then follow the onscreen instructions to download your charts to your MFD.

Account settings

You can edit your Raymarine account details using the **Account** menu.

You can edit the account's:

- Name
- Email address
- Password
- Region
- News and offers notification settings

30.5 Fishidy sync

You can synchronize Fishidy Spots and Waypoints between the Fishidy app and your MFD's Chart app.

Note:

Fishidy sync requires:

- Fishidy software version 6.1.0 or later.
- LightHouse version 3.11 or later.
- LightHouse version 4.0 or later.

Note:

Fishidy is currently available in:

- North America

Additional regions will become available in future Fishidy updates.



Enable sync


After connecting your mobile device to your MFD's Wi-Fi, you can begin syncing waypoints and Fishidy spots with the Fishidy app.

1. From the Fishidy app select **More**.
2. Select **Raymarine Sync**.
3. Select **Enable Sync** to begin synchronization between your Fishidy app and MFD.



4. When prompted by your MFD, select **Yes** to confirm sync.

*If you select **No**, sync will be cancelled and will need to be restarted.*

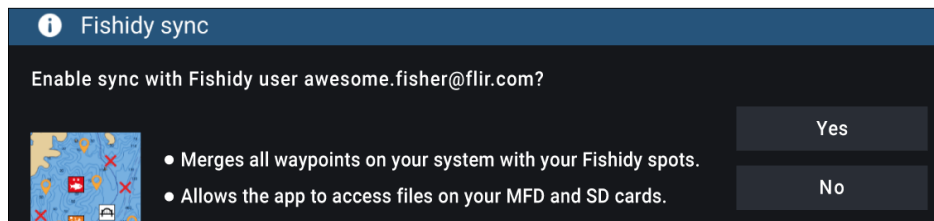

Once enabled, data will automatically sync in real-time across both devices via Wi-Fi.


Note:

- Fishidy Spots and Waypoints will be shared and can be interacted with from both devices.
- Your private waypoints remain private, whether viewing on Fishidy or your Raymarine MFD system.
- If you edit a Fishidy Spot or Waypoint on either device when sync is disabled (e.g. editing the name), re-enabling sync might place the item in the Fishidy **Recycle Bin**. In this scenario, the data can be restored from the recycling bin in the Fishidy app.
- Attempting to sync a new Fishidy account to your MFD while it is already synced with another account will prompt you to end sync with the first account. Ending sync with the first account and syncing the second account replaces any existing Fishidy Spots and Waypoints.

Disable sync

You can disable Fishidy sync from the Fishidy app or your MFD.

1. **Fishidy app**
 - i. Access the **Raymarine Sync** menu and select **Disable Sync**.
 - ii. **More > Raymarine Sync > Disable Sync**
2. **MFD**
 - i. Access the **My Data** page, select **Mobile sync** and select **Disable sync**.
 - ii. **Homescreen > My Data > Mobile sync > Disable sync**

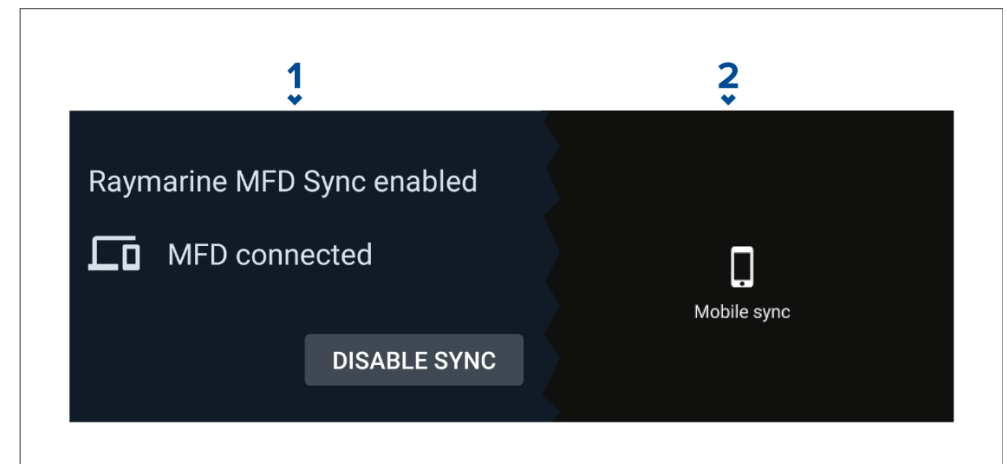

30.6 Navionics plotter sync


You can use the Navionics boating mobile app to:

- transfer waypoints and routes between your MFD and mobile device.
- update, activate and renew your Navionics cartography

30.7 Controlling your MFD using RayControl

The RayControl app allows you to remotely view and control your MFD from your mobile device.

1. Download and install RayControl from your app store.
2. Ensure your mobile device is connected to your MFD's Wi-Fi.
3. Open the RayControl app.
4. Control your MFD using your mobile device's touchscreen in the same way you would interact with the MFD's touchscreen.
5. You can also use a representation of an Axiom Pro's or RMK remote's physical buttons by sliding the controls sidebar out from the right of the screen or on smaller devices selecting **Remote Control**.

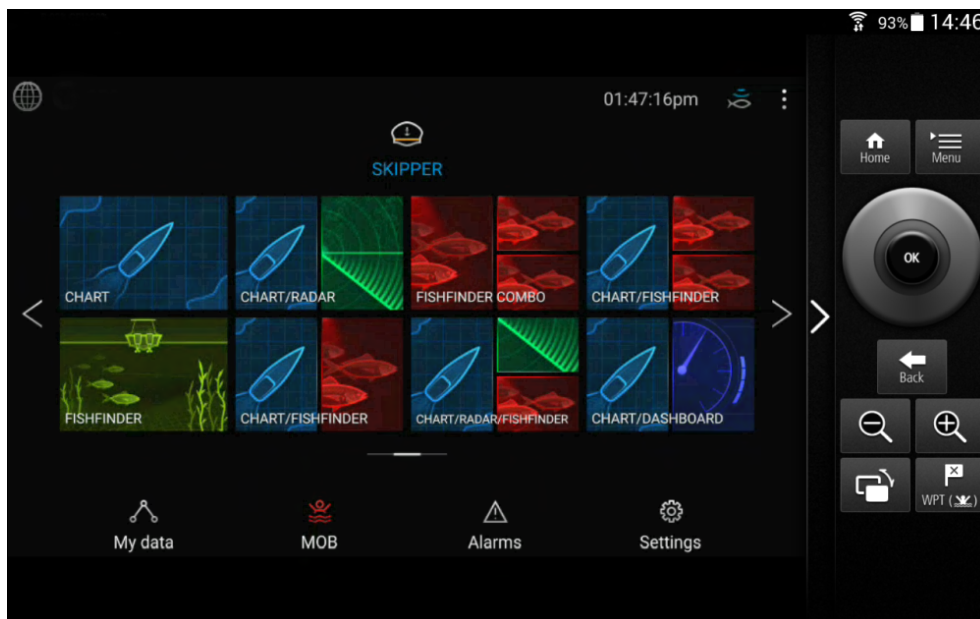

30.8 Controlling your MFD using RayRemote


The RayRemote app allows you to remotely control your MFD from your mobile device.



1. Download and install RayRemote from your app store.
2. Ensure your mobile device is connected to your MFD's Wi-Fi.
3. Open the RayRemote app.
4. Control your MFD on your mobile device using the on-screen equivalents of the physical buttons found on the Axiom Pro MFD or RMK remote keypad.

30.9 Viewing your MFD screen using RayView

The RayView app allows you to remotely view your MFD from your mobile device.

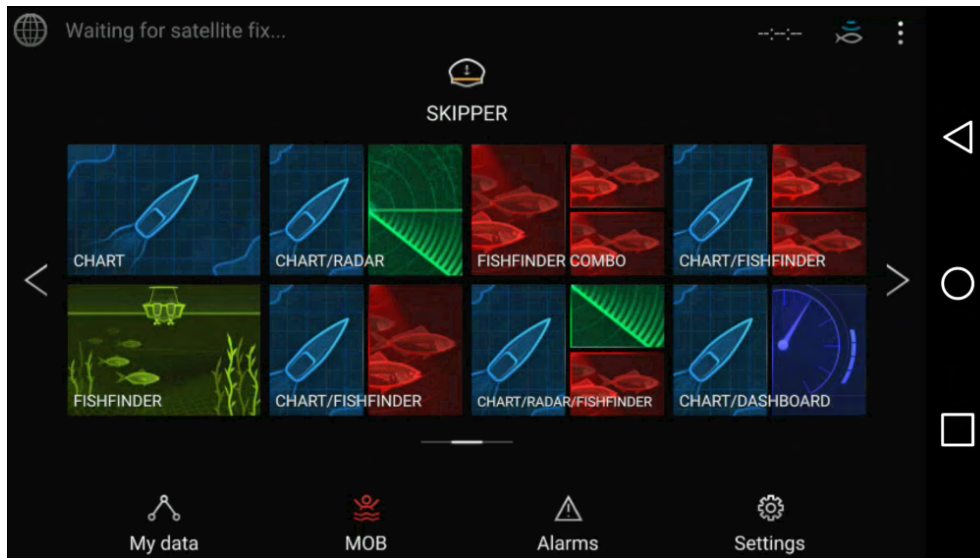

1. Download and install RayView from your app store.
2. Ensure your mobile device is connected to your MFD's Wi-Fi.
3. Open the RayView app.
4. Your mobile device's screen will now mirror your MFD's screen.

CHAPTER 31: TROUBLESHOOTING

CHAPTER CONTENTS

- 31.1 Troubleshooting — page 386
- 31.2 Diagnostic product information — page 386
- 31.3 Power up troubleshooting — page 387
- 31.4 Radar troubleshooting — page 389
- 31.5 GNSS (GPS) troubleshooting — page 390
- 31.6 Sonar troubleshooting — page 390
- 31.7 Camera troubleshooting — page 393
- 31.8 Augmented Reality (AR) Troubleshooting — page 395
- 31.9 Wi-Fi troubleshooting — page 396
- 31.10 Wireless display troubleshooting — page 398
- 31.11 Data troubleshooting — page 399
- 31.12 Touchscreen troubleshooting — page 399

31.1 Troubleshooting

The troubleshooting information provides possible causes and corrective action required for common problems associated with installation and operation of your product.


Before packing and shipping, all Raymarine products are subjected to comprehensive testing and quality assurance programs. If you do experience problems with your product this section will help you to diagnose and correct problems to restore normal operation.

If after referring to this section you are still having problems with your product, please refer to the Technical support section of this manual for useful links and Raymarine Product Support contact details.

31.2 Diagnostic product information

Diagnostic product information can be viewed from your MFD, for products networked using SeaTalkhs[®] and SeaTalkng[®] / NMEA 2000.

To view diagnostic product information, select **View all product info** from the **Diagnostics** pop over menu: **Homescreen > Settings > Network > Diagnostics > View all product info**.

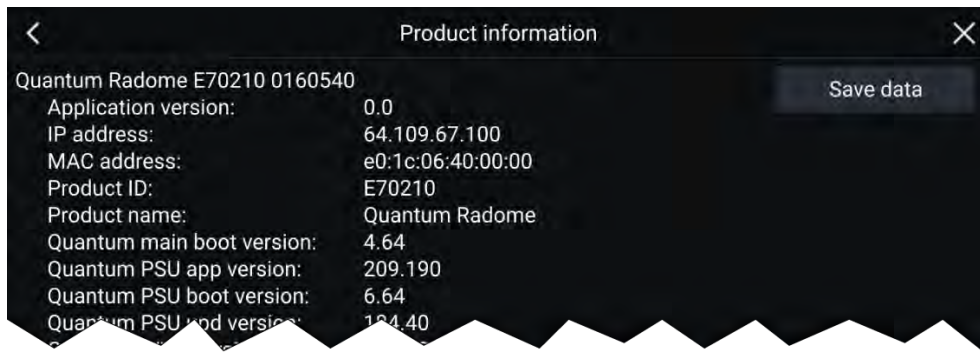

Saving product information

Diagnostic product information can be saved to MicroSD card for off boat records.

With the Diagnostics product information page displayed:

1. Select **Save data**.

2. Select the storage device you want to save the data to.
3. Enter a filename.
4. Select **Save**.
5. Select **OK**.

A .json file will be saved, using your chosen filename to your memory card.

You may view the file using a most standard notepad applications.

31.3 Power up troubleshooting

Product does not turn on or keeps turning off

| Possible causes | Possible solutions |
|--|--|
| Blown fuse / tripped breaker. | <ol style="list-style-type: none"> 1. Check condition of relevant fuses and breakers and connections, replace if necessary. (Refer to the <i>Technical Specification</i> section of your product's installation instructions for fuse ratings.) 2. If fuse keeps blowing check for cable damage, broken connector pins or incorrect wiring. |
| Poor / damaged / insecure power supply cable / connections | <ol style="list-style-type: none"> 1. Check that the power cable connector is correctly orientated and fully inserted into the display connector and locked in position. 2. Check the power supply cable and connectors for signs of damage or corrosion, and replace if necessary. 3. With the display turned on, try flexing the power cable near to the display connector to see if this causes the unit to restart or lose power. Replace if necessary. 4. Check the vessel's battery voltage and the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion. Replace if necessary. 5. With the product under load, using a multi-meter, check for high voltage drop across all connectors / fuses etc, and replace if necessary. |
| Incorrect power connection | The power supply may be wired incorrectly, ensure the installation instructions have been followed. |

Product will not start up (restart loop)

| Possible causes | Possible solutions |
|-----------------------------|---|
| Power supply and connection | See possible solutions from the table above, entitled 'Product does not turn on or keeps turning off'. |
| Software corruption | <ol style="list-style-type: none"> 1. In the unlikely event that the product's software has become corrupted, try downloading and installing the latest software from the Raymarine website. 2. On display products, as a last resort, attempt to perform a 'Power on Reset'. Be aware that this will delete all settings / presets and user data (such as waypoints and tracks), and revert the unit back to factory defaults. |



Warning: Factory reset warning

Performing a factory reset will restore all system and app settings to factory defaults and erase all user data (such as waypoints, routes, tracks, camera recordings and photos).

Performing a power on reset — Axiom™

Important:

- Before performing a power on reset ensure you have backed up your settings and user data (waypoints, routes and tracks) to a memory card.
- You may also want to save any crash logs that are stored on your MFD to memory card for future reference..

1. Switch off power at the breaker to ensure that the MFD is completely powered off, and not in Standby mode. Alternatively, remove the power cable from the display.
2. Power on your MFD, and within approximately 10 seconds, swipe your finger from right to left (opposite direction to powering on) across the **Power** button swipe area 5 times.
Recovery options are displayed.
3. Swipe your finger from right to left twice to highlight **Wipe data/factory reset**.
4. Swipe your finger from left to right once to accept.
5. Swipe your finger from right to left once to highlight **Yes**.
6. Swipe your finger from left to right once to restore your MFD to factory default settings.
7. When **Data wipe complete** is displayed, swipe your finger from left to right to restart your MFD.

Performing a power on reset - Axiom Pro

Important:

Before performing a power on reset ensure you have backed up your settings and user data to a memory card.

1. Switch off power at the breaker to ensure that the MFD is completely powered off, and not in Standby mode. Alternatively, remove the power cable from the display.
2. Within approximately 10 seconds of powering on your MFD, press and hold the **Back** and **Switch active** buttons until the screen goes black and the Raymarine logo appears.
The MFD will boot into Recovery mode.
3. Use the directional controls to highlight **Wipe data/factory reset**.
4. Press **Ok**.
5. Select **Yes** to restore your MFD to factory default settings.
6. When 'Data wipe complete' is displayed, select **Reboot system** now.

Performing a Power on Reset - eS and gS Series MFDs

1. Power the MFD off.
2. Power the MFD back on.

3. When the Raymarine logo appears press and hold the **Power** button, until the Initialization screen is displayed.
4. Press the Waypoint button to restore your MFD to factory default settings.
The MFD will reboot when complete.

31.4 Radar troubleshooting

No connection can be made to the scanner

| Possible Causes | Possible Solution |
|--|--|
| Radar powered down | <ul style="list-style-type: none"> If the scanner product has shut down, power it up by opening the Radar app and selecting the Power icon. A Quantum Radar will shut down after 30 minutes if neither a wired (RayNet) , nor a wireless (Wi-Fi) connection can be made to a MFD. |
| Radar not transmitting | <ul style="list-style-type: none"> Select Transmit for the relevant Radar scanner from the Radar app. |
| Missing or incorrect Wi-Fi credentials | <ul style="list-style-type: none"> If using a wireless (Wi-Fi) connection, check that you have entered the correct SSID and passcode for your Radar. Both the SSID and passcode are provided on the Radar scanner's packaging, and are also shown on the serial number label on the underside of the product. |

| Possible Causes | Possible Solution |
|---|---|
| Damaged or disconnected Power cable / RayNet cable | <ol style="list-style-type: none"> Check that the cable connectors are fully inserted and locked in position. Check the power supply cable and connectors for signs of damage or corrosion, replace if necessary. With the product turned on, try flexing the cable near to the display connector to see if this causes the product to re-boot/lose power, replace if necessary. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the product to reset/turn off), replace if necessary. Check condition of relevant breakers and fuses, replace if necessary. If the breaker keeps tripping or fuses keep blowing, contact a Raymarine authorized dealer for assistance. |
| Open Array power in Off position | <ul style="list-style-type: none"> Ensure Open Array power switch is in the On position. |
| Software mismatch between equipment may prevent communication | <ul style="list-style-type: none"> Ensure all Raymarine products contain the latest available software, check the Raymarine website: www.raymarine.com/software for software compatibility. |

Poor image quality

| Possible Causes | Possible Solution |
|--|--|
| High network bandwidth usage may interfere with a Quantum Radar connected wirelessly | <ul style="list-style-type: none"> • Disconnect Wireless display and close the Wireless display page. • Disconnect other devices connected wirelessly. |

Displayed bearing is different to the true bearing

| Possible Causes | Possible Solution |
|---------------------------------------|--|
| Bearing alignment adjustment required | <ul style="list-style-type: none"> • Carry out the Bearing Alignment procedure. |

Radar will not initialize (Voltage control module (VCM) stuck in “sleep mode”

| Possible Causes | Possible Solution |
|---------------------------------------|---|
| Intermittent or poor power connection | Check power connection at VCM. (Voltage at input = 12 / 24 V, Voltage at output = 40 V) |

31.5 GNSS (GPS) troubleshooting

No fix displayed

| Possible causes | Possible solutions |
|--|--|
| Geographic location or prevailing conditions preventing satellite fix. | Check to see if a fix is obtained in better conditions or another geographic location. |
| GNSS (GPS) connection fault. | Ensure that external GNSS (GPS) connections and cabling are correct and fault free. |

| Possible causes | Possible solutions |
|---|--|
| External GNSS (GPS) receiver in poor location e.g.: <ul style="list-style-type: none"> • Below decks. • Close proximity to transmitting equipment, such as a VHF radio. | Ensure GNSS (GPS) receiver has a clear view of the sky. |
| GNSS (GPS) installation problem. | Refer to the installation instructions supplied with your product. |

Note: A GNSS (GPS) Status screen is accessible from the display. This provides satellite signal strength and other relevant information.

31.6 Sonar troubleshooting

Scrolling image is not being displayed

| Possible causes | Possible solutions |
|-------------------------------|--|
| Sonar disabled | Enable Ping from the Fishfinder app’s sounder tab: Menu > Settings > Sounder > Ping. |
| Incorrect transducer selected | Check that the correct transducer is selected in the Fishfinder app’s Transducer tab: Menu > Settings > Transducer > Ping. |

| Possible causes | Possible solutions |
|------------------------------|--|
| Damaged cables | <ol style="list-style-type: none"> 1. Check that the transducer cable connector is fully inserted and locked in position. 2. Check the power supply cable and connectors for signs of damage or corrosion, replace if necessary. 3. With the unit turned on, try flexing the cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary. 4. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary. 5. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the Fishfinder applications to stop scrolling or the unit to reset/turn off), replace if necessary. |
| Damaged or fouled transducer | Check transducer condition, ensuring it is not damaged and is free from debris/fouling. If necessary, clean or replace your transducer. After cleaning or replacement coat the transducer using a water-based anti-fouling paint. |
| Wrong transducer fitted | Check product and transducer documentation and ensure that the transducer is compatible with your system. |

| Possible causes | Possible solutions |
|---|--|
| External sonar module: SeaTalkhs / RayNet network problem. | <ul style="list-style-type: none"> • Check that the unit is correctly connected to the Display or network switch. Check all connections ensuring connections are secure, clean and free from corrosion, replace if necessary. |
| External sonar module: Software mismatch between equipment may prevent communication. | Ensure all Raymarine products contain the latest available software, check the Raymarine website: www.raymarine.com/software for software compatibility. |

No depth reading / lost bottom lock

| Possible causes | Possible solutions |
|------------------------------|--|
| Transducer location | Check that the transducer has been installed in accordance with the instructions provided with the transducer. |
| Transducer angle | If the transducer angle is too great the beam can miss the bottom, adjust transducer angle and recheck. |
| Transducer kicked-up | If the transducer has a kick-up mechanism, check that it has not kicked up due to hitting an object. |
| Power source insufficient | With the product under load, using a multi-meter, check the power supply voltage as close to the unit as possible to establish actual voltage when the current is flowing. (Check your product's Technical specification for power supply requirements.) |
| Damaged or fouled transducer | Check transducer condition, ensuring it is not damaged and is free from debris/fouling. If necessary, clean or replace your transducer. After cleaning or replacement coat the transducer using a water-based anti-fouling paint. |

| Possible causes | Possible solutions |
|--------------------------------|---|
| Damaged cables | <ol style="list-style-type: none"> 1. Check the unit's connector for broken or bent pins. 2. Check that the cable connector is fully inserted into the unit and that the locking collar is in the locked position. 3. Check the cable and connectors for signs of damage or corrosion, replace if necessary. 4. With the unit turned on, try flexing the power cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary. 5. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary. 6. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the Fishfinder applications to stop scrolling or the unit to reset/turn off), replace if necessary. |
| Vessel speed too high | Slow vessel speed and recheck. |
| Bottom too shallow or too deep | The bottom depth may be outside of the transducers depth range, move vessel to shallower or deeper waters as relevant and recheck. |
| Ping depth limit set | <p>If using a transducer with greater than 600 W power, check if the Ping depth limit has been enabled: Menu > Settings > Transducer > Ping depth limit.</p> <p>If you are in water deeper than the specified Ping depth limit then the transducer may not provide depth readings.</p> <p>Disable or adjust setting and retry.</p> |

Poor / problematic image

| Possible causes | Possible solutions |
|---|---|
| Targets will appear differently if your vessel is stationary (e.g.: fish will appear on the display as straight lines). | Increase vessel speed. |
| Scrolling paused or speed set too low | Unpause or increase sonar scrolling speed. |
| Sensitivity settings may be inappropriate for present conditions. | Check and adjust sensitivity settings or perform a Sonar reset. |
| Damaged cables | <ol style="list-style-type: none"> 1. Check the unit's connector for broken or bent pins. 2. Check that the cable connector is fully inserted into the unit and that the locking collar is in the locked position. 3. Check the cable and connectors for signs of damage or corrosion, replace if necessary. 4. With the unit turned on, try flexing the power cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary. 5. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary. 6. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the Fishfinder applications to stop scrolling or the unit to reset/turn off), replace if necessary. |

| Possible causes | Possible solutions |
|---|--|
| Transducer location | <ul style="list-style-type: none"> Check that the transducer has been installed in accordance with the instructions provided with the transducer. If a transom mount transducer is mounted too high on the transom it may be lifting out of the water, check that the transducer face is fully submerged when planing and turning. |
| Transducer kicked-up | If the transducer has a kick-up mechanism, check that it has not kicked up due to hitting an object. |
| Damaged or fouled transducer | Check transducer condition, ensuring it is not damaged and is free from debris/fouling. If necessary, clean or replace your transducer. After cleaning or replacement coat the transducer using a water-based anti-fouling paint. |
| Damaged transducer cable | Check that the transducer cable and connection is free from damage and that the connections are secure and free from corrosion. |
| Turbulence around the transducer at higher speeds may affect transducer performance | Slow vessel speed and recheck. |
| Interference from another transducer | <ol style="list-style-type: none"> Turn off the transducer causing the interference. Reposition the transducers so they are farther apart. |
| Unit power supply fault | Check the voltage from the power supply, if this is too low it can affect the transmitting power of the unit. |

31.7 Camera troubleshooting

Video not displayed

| Possible causes | Possible solutions |
|---|---|
| Incorrect power up sequence | Your MFD needs to be powered up before your camera to enable the MFD to provide the camera with a valid IP address. |
| Camera not compatible. | <p>Ensure the camera feed and network settings are compatible:</p> <ul style="list-style-type: none"> Camera feed should be set to 720p max. Network should be set to obtain network address automatically (DHCP). Anonymous login should be enabled. |
| Too many IP feeds on network. | Displaying multiple feeds on multiple MFDs simultaneously may cause some feeds to not be displayed. Try viewing less feeds. |
| Problem with the camera connections. | <ol style="list-style-type: none"> Check the unit's connector for broken or bent pins. Check that the cable connector is fully inserted into the unit and that the locking collar is in the locked position. Check the cable and connectors for signs of damage or corrosion, replace if necessary. With the unit turned on, try flexing the power cable to see if this causes the unit to re-boot/loose power, replace if necessary. |
| Problem with power supply to the camera or thermal camera's JCU (if used as the primary controller) | <ul style="list-style-type: none"> Check the power connections to the camera, JCU, and PoE injector (if used). Ensure that the power switch / breaker is on. Check the fuse / breaker state. |
| Camera is in Standby mode. | Use the camera controls (either the Camera app or a Thermal camera's JCU) to "wake" the camera from standby. |

PTZ cameras – Erratic or unresponsive controls

| Possible causes | Possible solutions |
|--|--|
| Network problem. | <ul style="list-style-type: none"> • Check that the controller and camera are correctly connected to the network. • If used, check the status of the network switch. • Check that RayNet cables are free from damage. |
| Control conflict, e.g. caused by multiple users at different stations. | Ensure that no other controllers are in use at the same time. |
| Problem with the controller. | <ul style="list-style-type: none"> • Check power / network cabling to the controller and PoE injector, if used. • Check other controllers, if available. |

Cannot switch between camera feeds

| Possible causes | Possible solutions |
|-------------------------------------|---|
| Camera is not a dual payload model. | Only “dual payload” (dual lens) cameras support feed switching. |

Noisy image

| Possible causes | Possible solutions |
|---|--|
| Poor quality or faulty cabling. | <ul style="list-style-type: none"> • Ensure cable runs are no longer than they need to be. • Use only high quality shielded cable suitable for the marine environment. |
| Cable is picking up electromagnetic interference (EMI) from another device. | <ul style="list-style-type: none"> • Ensure you are using a high quality shielded cable. • Ensure proper cable separation, for example do not run data and power cables in close proximity with each other. • In certain conditions it may be necessary to fit suppression ferrites to cabling to eliminate interference. |

Image too dark or too light

| Possible causes | Possible solutions |
|--|--|
| Brightness set too low. | Check MFD brightness and adjust if necessary. |
| The contrast and / or brightness settings in the Camera app are set too low. | Check Camera brightness and contrast, adjust if necessary. |
| The Scene Mode is not appropriate for the current conditions. | When viewing a thermal camera feed, a particular environment may benefit from using a different Scene Mode setting. For example, a very cold background (such as the sky) could cause the camera to use a wider temperature range than appropriate. Adjust the Scene as appropriate. |

Image freezes momentarily

| Possible causes | Possible solutions |
|------------------------------|--|
| FFC (Flat Field Correction). | A Thermal camera’s image will pause momentarily on a periodic basis during the Flat Field Correction (FFC) cycle. Just prior to the FFC, a small green square may appear in the upper left corner of the screen. |

Image is inverted (upside down or mirror image)

| Possible causes | Possible solutions |
|---|---|
| Vertical or Horizontal flip control incorrectly set | Check the image flip controls to ensure they are set correctly for your installation. |

31.8 Augmented Reality (AR) Troubleshooting

AR options not available in Video app

| Possible causes | Possible solutions |
|---|---|
| Wrong camera selected. | Ensure that the correct AR-compatible camera has been selected in the Video app menu. |
| Compatible camera not detected. | <ol style="list-style-type: none"> 1. Ensure your camera is AR compatible. 2. Ensure your camera is correctly installed and networked to your MFD. |
| AR200 not detected. | <ol style="list-style-type: none"> 1. Ensure your AR200 is correctly installed and on the same network as the MFD from which you are using the AR features. |
| Incorrect LightHouse™ software version. | Ensure that your MFD is running LightHouse™ 3 version 3.7 or above or .LightHouse™ 4 |
| AR options turned off. | <p>The Compass bar, AIS, Waypoint and Chart object flags can be enabled and disabled from the ClearCruise settings page (Video app > Menu > Settings > ClearCruise). Ensure relevant options are enabled.</p> <hr/> <p>Note:</p> <p>For AIS flags to be displayed, compatible AIS hardware must be operational and connected to the same network as your MFD.</p> |

AR flags do not appear directly above on-screen target

| Possible causes | Possible solutions |
|---|---|
| AIS update rate | Depending on the classification of the target's AIS hardware, transmitted position updates may be sent up to 3 minutes apart and therefore the flag may appear up to 3 minutes behind the actual onscreen target. |
| Camera Field of View (FOV) set incorrectly. | Ensure that the FOV setting reflects your camera's horizontal FOV. Check your camera's documentation for FOV specifications. |
| AR200 interference | If your AR200 is installed in a location which includes a source of magnetic interference large enough to affect AR flag placement, you may need to re-install the AR200 in a different location. |
| Deviation too high | <ol style="list-style-type: none"> 1. Reset the AR200 calibration by selecting Reset from the AR200 calibration page: Homescreen > Settings > Network > Data sources > Heading > Raymarine AR200 Attitude > Calibrate. 2. If the problem persists, you may need to move your AR200 to a location with less magnetic interference. |

31.9 Wi-Fi troubleshooting

Before troubleshooting problems with your Wi-Fi connection, ensure that you have followed the Wi-Fi location requirements guidance provided in the relevant installation instructions and performed a power cycle/reboot of the devices you are experiencing problems with.

Cannot find network

| Possible cause | Possible solutions |
|--|--|
| Wi-Fi not currently enabled on devices. | Ensure Wi-Fi is enabled on both Wi-Fi devices and rescan available networks. |
| Some devices may automatically turn off Wi-Fi when not in use to save power. | Power cycle / reboot devices and rescan available networks. |
| Device not broadcasting. | <ol style="list-style-type: none"> 1. Try to enable broadcasting of the device's network using the Wi-Fi settings on the device you are trying to connect to. 2. You may still be able to connect to the device, when it is not broadcasting, by manually entering the device's Wi-Fi Name / SSID and passphrase in the connection settings of the device you are trying to connect. |
| Devices out of range or signal being blocked. | Move devices closer together or, if possible remove the obstructions and then rescan available network. |

Cannot connect to network

| Possible cause | Possible solutions |
|---|--|
| Some devices may automatically turn off Wi-Fi when not in use to save power. | Power cycle/reboot devices and retry the connection. |
| Trying to connect to the wrong Wi-Fi network | Ensure you are trying to connect to the correct Wi-Fi network, the Wi-Fi network's name can be found in the Wi-Fi settings on the broadcasting device (the device that you are trying to connect to). |
| Incorrect network credentials | Ensure you are using the correct passphrase, the Wi-Fi network's passphrase can be found in the Wi-Fi settings on the broadcasting device (the device that you are trying to connect to). |
| Bulkheads, decks and other heavy structure can degrade and even block the Wi-Fi signal. Depending on the thickness and material used it may not always be possible to pass a Wi-Fi signal through certain structures | <ol style="list-style-type: none"> 1. Try repositioning the devices so the structure is removed from the direct line of sight between the devices, or 2. If possible use a wired connection instead. |
| Interference being caused by other Wi-Fi enabled or older Bluetooth enabled devices (Bluetooth and Wi-Fi both operate in the 2.4 GHz frequency range, some older bluetooth devices may interfere with Wi-Fi signals.) | <ol style="list-style-type: none"> 1. Change the Wi-Fi Channel of the device you are trying to connect to and retry the connection. You can use free Wi-Fi analyzer apps on your smart device to help you choose a better channel (channel with least traffic). 2. Temporarily disable each wireless device in turn until you have identified the device causing the interference. |

| Possible cause | Possible solutions |
|---|---|
| <p>Interference caused by other devices that use the 2.4GHz frequency See list below of some common devices that use the 2.4GHz frequency:</p> <ul style="list-style-type: none"> • Microwave ovens • Fluorescent lighting • Cordless phones / baby monitors • Motion sensors | <p>Temporarily switch off each device in turn until you have identified the device causing the interference, then remove or reposition the offending device(s).</p> |
| <p>Interference caused by electrical and electronic devices and associated cabling could generate an electromagnetic field which may interfere with the Wi-Fi signal.</p> | <p>Temporarily switch off each item in turn until you have identified the device causing the interference, then remove or reposition the offending device(s).</p> |

Connection extremely slow and or keeps dropping out

| Possible cause | Possible solutions |
|---|---|
| <p>Wi-Fi performance degrades over distance so products farther away will receive less network bandwidth. Products installed close to their maximum Wi-Fi range will experience slow connection speeds, signal drop outs or not being able to connect at all.</p> | <ul style="list-style-type: none"> • Move devices closer together. • For fixed installations such as a Quantum Radar, enable the Wi-Fi connection on an MFD installed closer to the device. |
| <p>Interference being caused by other Wi-Fi enabled or older Bluetooth enabled devices (Bluetooth and Wi-Fi both operate in the 2.4 GHz frequency range, some older bluetooth devices may interfere with Wi-Fi signals.)</p> | <ol style="list-style-type: none"> 1. Change the Wi-Fi Channel of the device you are trying to connect to and retry the connection. You can use free Wi-Fi analyzer apps on your smart device to help you choose a better channel (channel with least traffic). 2. Temporarily switch off each device in turn until you have identified the device causing the interference, then remove or reposition the offending device(s). |
| <p>Interference from devices on other vessels. When in close proximity to other vessels, for example, when moored up in a marina, many other Wi-Fi signals may be present.</p> | <ol style="list-style-type: none"> 1. Change the Wi-Fi Channel of the device you are trying to connect to and retry the connection. You can use free Wi-Fi analyzer apps on your smart device to help you choose a better channel (channel with least traffic). 2. If possible, move your vessel to a location with less Wi-Fi traffic. |

Network connection established but no data

| Possible cause | Possible solutions |
|---|---|
| Connected to the wrong network. | Ensure that your devices is connected to the correct network. |
| Device software incompatibility | Ensure both devices are running the latest available software. |
| It may be possible that the device has become defective | <ol style="list-style-type: none"> 1. Try updating software to a later version, or 2. try reinstalling the software. 3. Obtain new replacement device. |

Mobile application running slowly or not at all

| Possible cause | Possible solutions |
|--|---|
| Raymarine app not installed | Install mobile app from relevant app store. |
| Raymarine app version not compatible with MFD software | Ensure mobile app and MFD software are latest available versions. |
| Mobile apps not enabled on MFD | Enable “Viewing only” or “Remote Control” as required in the Mobile Apps setting on your MFD. |

31.10 Wireless display troubleshooting

Cannot connect to wireless display

| Possible cause | Possible solutions |
|---|--|
| Some Miracast compatible but non certified devices may not be able to connect with Wi-Fi Sharing enabled. | Disable Wi-Fi Sharing on your MFD and retry connection. |
| Wi-Fi Sharing has been enabled or disable since the wireless display was first connected. | Try power cycling devices and trying again. Depending on dongle used a factory reset may be required to establish a connection. |

| Possible cause | Possible solutions |
|---|--|
| Missed confirmation on wireless display | Restart connection procedure and ensure you check the wireless display for confirmation dialogs. |
| Wireless display too far away | Try moving the wireless display closer to the MFD and retry connection. |
| Chromecast devices are not supported. | Purchase a Miracast compatible device. |

Poor performance

| Possible cause | Possible solutions |
|-------------------------------|---|
| High video processing demand. | The Camera app, Raymarine mobile app connections can interfere with the wireless display performance as they use shared video processing resource. Try switching off video feeds and/or mobile app connections. |
| Wireless display too far away | Try moving the wireless display closer to the MFD and retry connection. |

Wireless display disconnects

| Possible cause | Possible solutions |
|--|---|
| Changing the Wi-Fi Sharing option on your MFD will cause the wireless display to disconnect. | Do not change Wi-Fi sharing options whilst connected to a wireless display. Wireless display may require factory reset to re-establish connection. |
| Quantum wireless pairing process will cause wireless display to disconnect. | Do not pair with a Quantum Radar whilst wireless display connection is active. |
| Wireless display too far away | Try moving the wireless display closer to the MFD and retry connection. |

31.11 Data troubleshooting

Instrument, engine or other system data is unavailable at all displays

| Possible causes | Possible solutions |
|---|---|
| Data is not being received at the display(s). | <ul style="list-style-type: none"> • Check transmitted data is compatible with your display. Refer to MFD supported PGN list. • Check the data bus (e.g. SeaTalk^{ng}) wiring and connections. |
| Data source (e.g. instrument display or engine interface) is not operating. | <ul style="list-style-type: none"> • Check the source of the missing data (e.g. instrument display or engine interface). • Check power to the data bus. |
| Software mismatch between equipment may prevent communication. | <ul style="list-style-type: none"> • Check the Raymarine website and ensure all your Raymarine products have the latest software. |

Instrument or other system data is missing from some but not all displays

| Possible causes | Possible solutions |
|--|--|
| Network connection problem. | <ul style="list-style-type: none"> • Check that all required equipment is connected to the same network. • Check correct operation of network switch, if used. • Check network cabling is correct and free from damage. |
| Software mismatch between equipment may prevent communication. | Check all MFDs are using the same version of software. |

31.12 Touchscreen troubleshooting

Touchscreen does not operate as expected.

| Possible causes | Possible solutions |
|--|--|
| Touch lock is enabled. | Disable TouchLock, using the power button.. |
| Screen is not being operated with bare fingers, for example gloves are being worn. | Bare fingers must make contact with the screen for correct operation. Alternatively you may use conductive gloves. |
| Saltwater deposits on the screen. | Carefully clean and dry the screen with a damp non-abrasive cloth. |

CHAPTER 32: TECHNICAL SUPPORT

CHAPTER CONTENTS

- 32.1 Raymarine product support and servicing — page 401
- 32.2 Learning resources — page 402

32.1 Raymarine product support and servicing

Raymarine provides a comprehensive product support service, as well as warranty, service, and repairs. You can access these services through the Raymarine website, telephone, and e-mail.

Product information

If you need to request service or support, please have the following information to hand:

- Product name.
- Product identity.
- Serial number.
- Software application version.
- System diagrams.

You can obtain this product information using diagnostic pages of the connected MFD.

Servicing and warranty

Raymarine offers dedicated service departments for warranty, service, and repairs.

Don't forget to visit the Raymarine website to register your product for extended warranty benefits: <http://www.raymarine.co.uk/display?id=788>.

United Kingdom (UK), EMEA, and Asia Pacific:

- E-Mail: emea.service@raymarine.com
- Tel: +44 (0)1329 246 932

United States (US):

- E-Mail: rm-usrepair@flir.com
- Tel: +1 (603) 324 7900

Web support

Please visit the "Support" area of the Raymarine website for:

- **Manuals and Documents** — <http://www.raymarine.com/manuals>
- **Technical support forum** — <http://forum.raymarine.com>
- **Software updates** — <http://www.raymarine.com/software>

Worldwide support

United Kingdom (UK), EMEA, and Asia Pacific:

- Help desk: <https://raymarine.custhelp.com/app/ask>

- Tel: +44 (0)1329 246 777

United States (US):

- Help desk: <https://raymarine.custhelp.com/app/ask>
- Tel: +1 (603) 324 7900 (Toll-free: +800 539 5539)

Australia and New Zealand (Raymarine subsidiary):

- E-Mail: aus.support@raymarine.com
- Tel: +61 2 8977 0300

France (Raymarine subsidiary):

- E-Mail: support.fr@raymarine.com
- Tel: +33 (0)1 46 49 72 30

Germany (Raymarine subsidiary):

- E-Mail: support.de@raymarine.com
- Tel: +49 40 237 808 0

Italy (Raymarine subsidiary):

- E-Mail: support.it@raymarine.com
- Tel: +39 02 9945 1001

Spain (Authorized Raymarine distributor):

- E-Mail: sat@azimut.es
- Tel: +34 96 2965 102

Netherlands (Raymarine subsidiary):

- E-Mail: support.nl@raymarine.com
- Tel: +31 (0)26 3614 905

Sweden (Raymarine subsidiary):

- E-Mail: support.se@raymarine.com
- Tel: +46 (0)317 633 670

Finland (Raymarine subsidiary):

- E-Mail: support.fi@raymarine.com
- Tel: +358 (0)207 619 937

Norway (Raymarine subsidiary):

- E-Mail: support.no@raymarine.com
- Tel: +47 692 64 600

Denmark (Raymarine subsidiary):


- E-Mail: support.dk@raymarine.com
- Tel: +45 437 164 64

Russia (Authorized Raymarine distributor):

- E-Mail: info@mikstmarine.ru
- Tel: +7 495 788 0508

Viewing product information

Use the **Settings** menu to view hardware and software information about your MFD, and connected products.

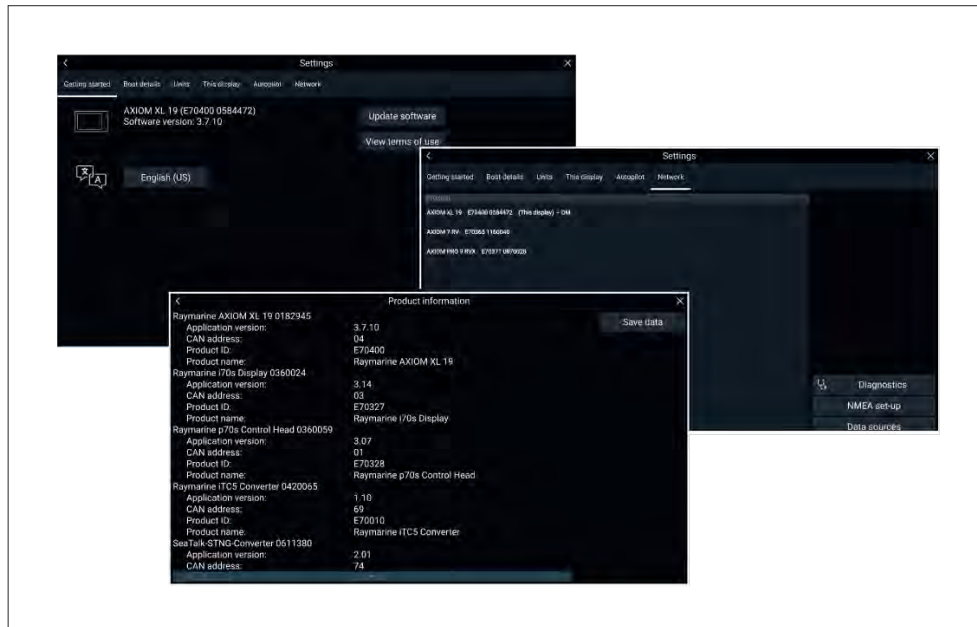

1. Select **Settings**, from the Homescreen.
The **Getting started** menu contains hardware and software information for your MFD.
2. You can view further information about your MFD, or view information about products networked using SeaTalkhs[®] and SeaTalkng[®] / NMEA 2000, by selecting the **Network** tab, then:
 - i. to display detailed software information and your MFD's network IP address, select your MFD from the list.

- ii. to display detailed diagnostics information for all products, select **Product info** from the **Diagnostics** pop over menu.

Remote Support via AnyDesk

The AnyDesk remote desktop app is available from the app launcher: **Homescreen > Apps**.

The AnyDesk app enables a Raymarine Product Support representative to remotely connect to and control your MFD over an Internet connection, for the purposes of technical support and troubleshooting.

To get started, you will first need to contact Raymarine Product Support. If the representative considers that your support case would benefit from a remote session, you need to first ensure that your MFD has an active Internet connection via Wi-Fi. Next, launch the AnyDesk app from your MFD's homescreen, and then provide the displayed unique ID to the Raymarine Product Support representative. Then follow any further instructions provided to you by the representative.

Attention

- **AnyDesk is provided for troubleshooting and support purposes only, and is NOT intended to perform remote functions on your vessel. Raymarine will NOT be held liable for damage or injury to equipment or persons caused by the use of a remote connection to your MFD.**
- **Do not disclose your AnyDesk ID to anyone other than authorised Raymarine Product Support personnel.**
- **Do not use the AnyDesk app to remotely activate connected devices such as Autopilot, Radar or Sonar hardware.**

32.2 Learning resources

Raymarine has produced a range of learning resources to help you get the most out of your products.

Video tutorials

Raymarine official channel on YouTube:

- [YouTube](#)

Training courses

Raymarine regularly runs a range of in-depth training courses to help you make the most of your products. Visit the Training section of the Raymarine website for more information:

- <http://www.raymarine.co.uk/view/?id=2372>

Technical support forum

You can use the Technical support forum to ask a technical question about a Raymarine product or to find out how other customers are using their Raymarine equipment. The resource is regularly updated with contributions from Raymarine customers and staff:

- <https://raymarine.custhelp.com/app/home>

Appendix A NMEA 0183 sentence support

Note:

NMEA 0183 sentence support is dependent on MFD variant.

- Axiom® and Axiom®+ MFDs do NOT support NMEA 0183 connections.
- Axiom® Pro and Axiom® XL MFDs support NMEA 0183 connections.

Supported sentences:

- **AAM** — Waypoint Arrival Alarm (Receive / Transmit)
- **ALR** — Set Alarm State (Receive)
- **APB** — Autopilot B Sentence (Receive / Transmit)
- **BWC** — Bearing & Distance to Waypoint — Great Circle (Receive / Transmit)
- **BWR** — Bearing & Distance to Waypoint — Rhumb Line (Receive / Transmit)
- **DBT** — Depth Below Transducer (Receive / Transmit)
- **DPT** — Depth (Receive / Transmit)
- **DSC** — Digital Selective Calling Information (Receive)
- **DSE** — Extended DSC (Receive)
- **DTM** — Datum Reference (Receive / Transmit)
- **GBS** — GPS Satellite Fault Detection (Receive / Transmit)
- **GGA** — Global Positioning System Fix Data (Receive / Transmit)
- **GLL** — Geographic Position — Latitude / Longitude (Receive / Transmit)
- **GLC** — Geographic Position — Loran-C (Receive / Transmit)
- **GSA** — GPS DOP & Active Satellites (Receive / Transmit)
- **GST** — GPS Pseudorange Error Statistic (Receive / Transmit)
- **GSV** — GPS Satellites in View (Receive / Transmit)
- **HDG** — Heading — Deviation & Variation (Receive / Transmit)
- **HDM** — Heading — Magnetic (Receive / Transmit)
- **HDT** — Heading — True (Receive / Transmit)
- **MDA** — Meteorological Composite (Receive / Transmit)
- **MSK** — Control for a Beacon Receiver (Receive / Transmit)
- **MSS** — Beacon Receiver Status (Receive / Transmit)
- **MTW** — Mean Temperature of Water (Receive / Transmit)
- **MWV** — Wind Speed and Angle (Receive / Transmit)
- **RMA** — Recommended Minimum Navigation Information — Loran-C Data (Receive / Transmit)
- **RMB** — Recommended Minimum Navigation Information — GPS Data (Receive / Transmit)
- **RMC** — Recommended Minimum Navigation Information — Specific GPS Data (Receive / Transmit)
- **RTE** — Routes (Receive / Transmit)
- **SSD** — AIS Ship Static Data (Receive)
- **VDM** — AIS VHF Data-link Message (Receive)
- **VDO** — AIS VHF Data-link Own-Vessel Report (Receive)
- **VHW** — Water Speed and Heading (Receive / Transmit)
- **VLW** — Distance Travelled Through Water (Receive / Transmit)
- **VTG** — Course Over ground & Ground Speed (Receive / Transmit)
- **VSD** — AIS Voyage Static Data (Receive)
- **WPL** — Waypoint Location (Receive / Transmit)
- **XTE** — Measured Cross Track Error (Receive / Transmit)
- **ZDA** — Time & date (Receive / Transmit)

Appendix B NMEA 2000 PGN support

Administration PGNs

- **59392** — ISO Acknowledge (Receive / Transmit)
- **59904** — ISO Request (Receive / Transmit)
- **60160** — ISO Transport Protocol, Data Transfer (Receive)
- **60416** — ISO Transport Protocol, Connection Management — BAM Group Function (Receive)
- **60928** — ISO Address Claim (Receive / Transmit)
- **65240** — ISO Commanded address (Receive)
- **126208** — NMEA — Request, Commanded, Acknowledged Group Function (Receive / Transmit)
- **126464** — PGN Transmit and Receive List (Receive / Transmit)
- **126996** — Product Information (Receive / Transmit)
- **126998** — Configuration Information (Receive / Transmit)

Data PGNs

- **126983** — Alert (Receive)
- **126984** — Alert Response (Transmit)
- **126985** — Alert Text (Receive)
- **126986** — Alert Configuration (Receive)
- **126992** — System Time (Receive / Transmit)
- **126993** — Heartbeat (Receive / Transmit)
- **127237** — Heading/Track Control (Receive)
- **127245** — Rudder (Receive)
- **127250** — Vessel Heading (Receive / Transmit)
- **127251** — Rate of Turn (Receive / Transmit)
- **127257** — Attitude (Receive / Transmit)
- **127258** — Magnetic Variation (Transmit)
- **127488** — Engine Parameters, Rapid Update (Receive)
- **127489** — Engine Parameters, Dynamic (Receive)
- **127493** — Transmission Parameters, Dynamic (Receive)
- **127496** — Trip Parameters, Vessel (Receive)
- **127497** — Trip Parameters, Engine (Receive)
- **127498** — Engine Parameters, Static (Receive)
- **127503** — AC input status (Receive)
- **127504** — AC output status (Receive)
- **127505** — Fluid Level (Receive)
- **127506** — DC detailed status (Receive)
- **127507** — Charger status (Receive)
- **127508** — Battery status (Receive)
- **127509** — Inverter status (Receive)
- **128259** — Speed, (Receive / Transmit)
- **128267** — Water Depth (Receive / Transmit)
- **128275** — Distance Log (Receive / Transmit)
- **129025** — Position, Rapid Update (Receive / Transmit)
- **129026** — COG & SOG, Rapid Update (Receive / Transmit)
- **129029** — GNSS Position Data (Receive / Transmit)
- **129033** — Time & Date (Receive / Transmit)
- **129038** — AIS Class A Position Report (Receive)
- **129039** — AIS Class B Position Report (Receive)
- **129040** — AIS Class B Extended Position Report (Receive)
- **129041** — AIS Aids to Navigation (AtoN) Report (Receive)
- **129044** — Datum (Receive / Transmit)
- **129283** — Cross Track Error (Receive / Transmit)
- **129284** — Navigation Data (Receive / Transmit)
- **129285** — Navigation — Route / WP Information (Transmit)
- **129291** — Set & Drift, Rapid Update (Receive / Transmit)
- **129301** — Time to/from Mark (Receive)
- **129539** — GNSS DOPs (Receive / Transmit)
- **129540** — GNSS Sats in View (Receive / Transmit)
- **129542** — GNSS Pseudorange Noise Statistics (Receive)
- **129545** — GNSS RAIM Output (Receive)
- **129547** — GNSS Pseudorange Error Statistics (Receive)
- **129550** — GNSS Differential Correction Receiver Interface (Receive)
- **129551** — GNSS Differential Correction Receiver Signal (Receive)
- **129793** — AIS UTC and Date Report (Receive)
- **129794** — AIS Class A Static and Voyage Related Data (Receive)
- **129798** — AIS SAR Aircraft Position Report (Receive)
- **129801** — AIS Addressed Safety Related Message (Receive)

- **129802** — AIS Safety Related Broadcast Message (Receive)
- **129808** — DSC call information (Receive)
- **129809** — AIS Class B "CS" Static Report, Part A (Receive)
- **129810** — AIS Class B "CS" Static Report, Part B (Receive)
- **129811** — AIS Single Slot Binary Message (Receive / Transmit)
- **129812** — AIS Multi Slot Binary Message (Receive / Transmit)
- **130064** — Route and WP Service — Database List (Receive / Transmit)
- **130065** — Route and WP Service — Route List (Receive / Transmit)
- **130066** — Route and WP Service — Route/WP List Attributes (Receive / Transmit)
- **130067** — Route and WP Service — Route/WP Name & Position (Receive / Transmit)
- **130068** — Route and WP Service — Route/WP Name (Receive / Transmit)
- **130069** — Route and WP Service — XTE Limit & Navigation Method (Receive / Transmit)
- **130070** — Route and WP Service — WP Comment (Receive / Transmit)
- **130072** — Route and WP Service — Database Comment (Receive / Transmit)
- **130074** — Route and WP Service — WP List — WP Name & Position (Receive / Transmit)
- **130306** — Wind Data (Receive / Transmit)
- **130310** — Environmental Parameters (Receive / Transmit)
- **130311** — Environmental Parameters (Receive)
- **130312** — Temperature (Receive)
- **130313** — Humidity (Receive)
- **130314** — Actual pressure (Receive)
- **130316** — Temperature, Extended Range (Receive)
- **130569** — Entertainment — Current File and Status (Receive)
- **130570** — Entertainment — Library Data File (Receive)
- **130571** — Entertainment — Library Data Group (Receive)
- **130572** — Entertainment — Library Data Search (Receive)
- **130573** — Entertainment — Supported Source Data (Receive)
- **130574** — Entertainment — Supported Zone Data (Receive)

- **130576** — Small Craft Status (Receive)
- **130577** — Direction Data (Receive / Transmit)
- **130578** — Vessel Speed Components (Receive)
- **130580** — Entertainment — System Configuration Status (Receive)
- **130586** — Entertainment — Zone Configuration Status (Receive)
- **130582** — Entertainment — Zone Volume (Receive)

Raymarine® provides field programmability of the Device and System Instances within PGN 60928 which can be commanded via use of PGN 126208 as required by the latest **NMEA 2000** standard.

Appendix C Hardware and software compatibility

The lists below identify the LightHouse™ 4 software version required to support the listed hardware and also the hardware's software version required to be compatible with the latest features and improvements in the LightHouse™ 4 operating system.

Note:

It is recommended that you always update devices to the latest available versions.

LightHouse™ 4 version 4.0.70

- **CP100** (E70204) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **CP200** (E70256) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **CP370** (E70297) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **CP470** (E70298) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **CP570** (E70258) — Bundle V21.0.04 (application V21.0.22 / platform V21.0.20).
- **RVX1000** (E70511) — V4.0.70 (same version number as MFD software.)
- **RMK-9** (A80217) — Bundle V20.0.8 (application V20.0.15, / platform V18.0.17).
- **RMK-10** (A80438 / T70293) — Bundle V20.0.8 (application V20.0.15, / platform V18.0.17).

Appendix D Document change history

| Document revision and (Date) | Software version | Changes |
|------------------------------|------------------|----------------|
| 81406–1 (03–2022) | LH4.0.70 | First release. |

Index

A

| | |
|------------------------------|--------------|
| Activate Touchlock | 50 |
| ActiveCaptain | 170 |
| Adjust Locked heading..... | 51 |
| Advance waypoint..... | 103 |
| AIS | 169 |
| Buddy | 148 |
| Enhanced AIS targets | 174 |
| Silent mode..... | 72, 149, 253 |
| Target icons..... | 146, 251 |
| Target list..... | 148, 251 |
| Target options | 148 |
| Target tracking..... | 250 |
| AIS PAD | 169 |
| AIS targets..... | 146 |
| AIS names..... | 149, 253 |
| AIS types..... | 149, 253 |
| Blue force | 278 |
| Enhanced AIS targets | 149, 253 |
| Enhanced icons | 146, 252 |
| Enhanced target status..... | 147, 252 |
| Show..... | 149, 253 |
| Static targets..... | 149, 253 |
| AIS, Buddy..... | 338 |
| Alarm | |
| Depth measurement lost | 271 |
| Alarm manager..... | 61, 77 |
| Alarms | 77 |
| Acknowledgement..... | 80 |
| Active..... | 77 |
| AIS safety messages..... | 79 |
| Anchor drag..... | 79 |
| AX8 camera | 79 |
| Cross track error (XTE)..... | 79 |
| Dangerous | 77 |
| Dangerous AIS targets..... | 79 |
| Dangerous Radar targets..... | 79 |
| Deep water arrival | 79 |
| Digital switching..... | 79–80 |
| DSC..... | 79 |
| Engine..... | 79 |
| External speaker | 80 |
| Fishing range | 79 |
| Guard zone 1..... | 79 |
| Guard zone 2 | 79 |
| History..... | 78 |
| Lost Radar targets..... | 78 |
| Low fuel | 79 |
| Minimum sonar depth..... | 80 |
| MOB data type..... | 79 |
| Obstruction | 158 |
| Off track | 79 |
| Position drift..... | 79 |
| Settings..... | 78 |
| Shallow depth | 79 |
| Shallow water arrival..... | 79 |
| Warning | 77 |
| Water temperature..... | 79 |
| Waypoint arrival | 79 |
| Align wind transducer..... | 48 |
| Aligning the rudder..... | 97 |
| Anchoring | |
| Anchor drag..... | 186 |
| Chain out | 186 |
| Mark anchor position | 186 |
| Anchoring wizard..... | 185 |
| apk..... | 75 |
| App launcher | 61, 372 |
| App page icons | 61 |
| App pages | |
| Creating | 63 |
| Customizing..... | 64 |
| Delete | 64 |
| Rename..... | 64 |
| Applicable documents..... | 21 |
| Applications..... | 61 |
| Apps | 61 |
| LightHouse third-party | 25 |
| MFD | 25 |
| AR200 | 342 |
| Calibration..... | 342 |
| Audio | 373 |
| Audio app..... | 62, 345, 350 |
| app controls..... | 346 |

| | | | |
|-------------------------------------|---------|-------------------------|-------------------|
| Balance | 352 | Shortcuts..... | 51 |
| Crossover | 352 | Sidebar | 102 |
| Diagnostics mode | 353 | Standby..... | 102 |
| Fade..... | 352 | Status..... | 103 |
| Menu options..... | 351 | Autopilot set-up | |
| Multi-zone | 354 | Deadband angles | 106 |
| Multi-zone control..... | 353 | Rudder Damping..... | 106 |
| Opening..... | 349 | Autorouting..... | 112 |
| Player controls..... | 346 | | |
| Reset..... | 353 | B | |
| Settings..... | 352 | Back up | |
| Source | 350 | Settings..... | 75 |
| Zones..... | 350 | User data | 75 |
| Audio controls | 346 | Backup | 73 |
| Audio receiver | 345 | MFD settings..... | 76 |
| Audio sidebar | 348 | Routes..... | 76 |
| Augmented Reality | 331 | Tracks | 76 |
| AIS targets | 339 | Waypoints | 76 |
| AR200 setup..... | 334 | Battery | 30, 289 |
| Camera installation and setup | 332 | Battery data | 30, 289, 303 |
| Cartography source..... | 339 | Battery selection..... | 85 |
| ClearCruise settings | 339 | Bearing mode..... | 295 |
| Compass bar..... | 339 | BeiDou..... | 65 |
| Flags | 337 | Bird mode..... | 248 |
| Goto flag | 339 | Blue Force | |
| Range limit..... | 339–340 | AIS targets | 278 |
| Roll correction..... | 340 | Bluetooth | |
| Troubleshooting | 395 | Audio | 58, 376 |
| Waypoints | 339 | Connection | 375 |
| Augmented Reality, camera FOV | 333 | Disabling..... | 375 |
| Augmented Reality, Overview | 336 | Enabling..... | 375 |
| Auto turn..... | 105 | pairing speaker | 58, 376 |
| Automatic linearization..... | 343 | Settings..... | 375 |
| Autopilot | | Speaker volume..... | 52, 376 |
| Adjust locked heading..... | 51 | Volume | 51, 373 |
| Advanced settings | 104 | Bluetooth keyboard | |
| Control..... | 101 | Connection | 39 |
| Debug..... | 105 | Controls | 38 |
| Disengage | 102–103 | Bluetooth Settings..... | 39 |
| Engage or Disengage | 51 | Boat data | 30, 289, 303, 306 |
| Engaging..... | 101–102 | Boat details..... | 84 |
| Pop-ups..... | 103 | Tanks | |
| Reset..... | 105 | | |

| | |
|--------------------------------------|-----------|
| Calibration..... | 87 |
| Calibration points..... | 87 |
| Boat length..... | 84 |
| Boat name..... | 84 |
| Boat type..... | 84 |
| Bow to GPS..... | 84 |
| Bright sun..... | 168 |
| Brightness..... | 51–52, 91 |
| Buddy, add to list from AR flag..... | 338 |
| Buoy mode..... | 248 |

C

| | |
|--------------------------------|----------|
| Calibration..... | 342 |
| Depth..... | 45, 230 |
| iTC-5..... | 47 |
| Linearization..... | 342 |
| RealVision™..... | 46 |
| transducer..... | 47 |
| Calibration lock..... | 104 |
| Calibration, reset..... | 343 |
| Camera | |
| Tracking..... | 133, 241 |
| Chart..... | 171 |
| Advanced settings..... | 174 |
| Aerial overlay..... | 170 |
| Aerial overlay coverage..... | 170 |
| Aerial overlay visibility..... | 170 |
| Anchor mode..... | 130 |
| Auto find ship..... | 174 |
| Boat position..... | 173 |
| Cartographic objects..... | 174 |
| ClearCruise..... | 164 |
| Controls..... | 128 |
| Current animation..... | 216 |
| Current graph..... | 218 |
| Current station..... | 218 |
| Cursor info boxes..... | 174 |
| Depth settings..... | 171 |
| Detailed mode..... | 130 |
| Field of View (FOV)..... | 165 |
| Find nearest..... | 162 |
| Fish mapping | |

| | |
|-------------------------------------|----------|
| Fishing Recommendations..... | 198 |
| Layer identification..... | 199 |
| Sea temp limits..... | 200 |
| Fish mapping layers..... | 199 |
| Fish mapping mode..... | 130, 197 |
| Fishing mode..... | 130 |
| Layer settings..... | 168 |
| Layers..... | 132 |
| Laylines settings..... | 189 |
| My data appearance..... | 175 |
| Race Start Line..... | 192 |
| Race Start Line and Race Timer..... | 192 |
| Racing mode..... | 130 |
| Radar overlay..... | 174 |
| Radar settings..... | 151 |
| RealBathy..... | 160 |
| Safe contour..... | 171 |
| Search for objects..... | 162 |
| Shallow area..... | 171 |
| Shallow contour..... | 171 |
| Show soundings..... | 171 |
| Simple mode..... | 129 |
| SOG for vectors..... | 174 |
| Sync view with other charts..... | 173 |
| Tide animation..... | 216 |
| Tide animation interval..... | 174 |
| Tide bar..... | 218 |
| Tide graph..... | 217 |
| Tide graphic..... | 218 |
| Tide station..... | 217 |
| Tides..... | 169 |
| Tides mode..... | 130, 216 |
| View & motion settings..... | 173 |
| Weather mode..... | 130 |
| Weather settings..... | 211 |
| Chart / Radar Sync..... | 151 |
| Chart app..... | 61 |
| Fishing chart mode..... | 181 |
| Laylines..... | 188 |
| Chart appearance..... | 175 |
| Chart appObject information | |
| Cursor info boxes..... | 131 |
| Chart detail..... | 168 |

| | | | |
|------------------------------------|----------|---------------------------------------|--------------|
| Chart motion..... | 173 | Color gain..... | 234 |
| Auto range..... | 173 | Commissioning pre-requisites..... | 96 |
| Relative motion..... | 173 | Commissioning steps..... | 96 |
| True motion..... | 173 | Community edits..... | 170 |
| Chart Object Size..... | 168 | Compass | |
| Chart orientation..... | 173–174 | Alignment..... | 105 |
| Course-up..... | 173–174 | Linearization..... | 342–343 |
| Head-up..... | 173–174 | Lock..... | 104 |
| North-up..... | 173–174 | Offset..... | 104 |
| Chart racing mode | | Restart..... | 104 |
| Adjust for tides..... | 190 | Compass linearization..... | 96 |
| Boat type..... | 190 | Compass lock..... | 96, 101, 343 |
| Display Layines on this chart..... | 190 | Compass offset..... | 343 |
| Distance To Line..... | 194 | Compatible entertainment systems..... | 345–346 |
| Edit Line..... | 195 | Compatible hardware..... | 408 |
| (Fixed angle) Upwind angle..... | 189–190 | Compatible MFDs..... | 22 |
| Line Bias..... | 195 | Connecting | |
| (Polar) Polar..... | 190 | RayControl..... | 383 |
| Race Timer..... | 194 | RayRemote..... | 383 |
| Sail Performance..... | 189 | RayView..... | 384 |
| Show wind shifts..... | 190 | Connection | |
| Time To Burn..... | 195 | NMEA 0183..... | 92 |
| (Wind shifts) Reset..... | 190 | Connections..... | 60 |
| (Wind shifts) Time Period..... | 190 | Bluetooth..... | 375 |
| Chart settings | | Internet..... | 374 |
| Page settings menu..... | 175 | Wi-Fi..... | 374 |
| Chart style..... | 169 | Contact details..... | 401 |
| Chart, | | Context menus..... | 26 |
| Modes..... | 129 | Controls | |
| Checking rudder drive..... | 99 | Bluetooth keyboard..... | 38 |
| ClearCruise | | Chart..... | 128 |
| Augmented Reality..... | 333 | Dashboard..... | 288 |
| Augmented Reality (AR)..... | 331 | Fishfinder..... | 227 |
| Object detection..... | 331, 335 | Radar..... | 240 |
| Coastal mode..... | 248 | Uni-controller..... | 37 |
| COG / SOG filter..... | 68–69 | Video app..... | 319 |
| Collision avoidance | | Yamaha app..... | 302 |
| Course change..... | 155, 157 | CPA..... | 258 |
| Moving target..... | 153 | Cross track error..... | 141 |
| Predicted Area of Danger zone..... | 153 | Cruise speed..... | 104 |
| Predicted areas of danger..... | 154 | CSP (Commence Search Point)..... | 119, 121 |
| Speed change..... | 155, 157 | Current reading..... | 343 |
| Stationary target..... | 153 | Cursor info boxes..... | 131 |

| | |
|-------------------------------|-----------------------|
| Cyclops load cells..... | 34 |
| CZone plug and play | 296 |
| D | |
| Dangerous targets alarm | 152 |
| AIS targets | 152 |
| Ignore static targets | 79, 152 |
| Radar targets | 152 |
| Show safe distance..... | 153 |
| Dashboard | |
| Controls | 288 |
| Data widget..... | 64 |
| Dashboard app..... | 62 |
| Data | 30, 289, 302, 304 |
| Battery | 303 |
| Boat | 30, 289, 303, 306 |
| Depth | 30, 289 |
| Display | 30, 290 |
| Distance..... | 30, 290, 302, 304 |
| Engine..... | 31, 290, 302–304 |
| Environmental..... | 31, 291, 302, 305 |
| Fuel..... | 31, 290, 303, 305–306 |
| GNSS (GPS)..... | 32, 291, 302–303 |
| Heading | 32, 291, 303 |
| Inside Environmental | 31, 291 |
| Load cells..... | 34, 294 |
| Navigation..... | 32, 292, 304 |
| Pilot..... | 32, 292, 302, 304 |
| Speed | 33, 292, 303–304 |
| Tank | 33–34, 293–294 |
| Time | 33, 292, 305 |
| Wind..... | 33, 293, 305 |
| Data import and export | 73 |
| Data items | |
| Data overlays..... | 29–30, 289 |
| Sidebar | 30, 289 |
| Data master | 90 |
| Designation..... | 90 |
| Multiple | 41 |
| Selection..... | 41 |
| Data overlays..... | 29–30, 289 |
| Data sources | 49 |

| | |
|-----------------------------|-------------------|
| Selection | 50 |
| Data widget | 64 |
| Date format..... | 88 |
| Day color palette | 168 |
| Deadband angles | 106 |
| Deep contour | 171 |
| Deep water color..... | 171 |
| Delete rulers..... | 164 |
| Demo | |
| Movie | 70 |
| Profiles..... | 70 |
| Demo movie | |
| format..... | 71 |
| Density | 172 |
| Depth..... | 302, 304 |
| Depth calibration | 45, 230 |
| Depth contour | |
| Options | 144 |
| Depth contours..... | 144 |
| Depth data..... | 30, 289, 302, 304 |
| Depth gradient | 171 |
| Depth measurement lost..... | 271 |
| Depth offset..... | 45, 230 |
| Depth soundings | |
| Options | 143 |
| Units..... | 143 |
| Depth units | 88 |
| Deviation | 343 |
| Diagnostics..... | 402 |
| Product info | 386 |
| Digital switching | |
| Exporting pages..... | 294 |
| Importing pages..... | 294 |
| Disable all Sounders..... | 50 |
| Display brightness | 52 |
| Display data..... | 30, 290 |
| Display mode..... | 51–52 |
| Distance data | 30, 290, 302, 304 |
| Distance units | 88 |
| Dock-to-dock | 112 |
| DockSense app | 63 |
| Dockside wizard..... | 96, 104 |
| Document history | 408 |

| | |
|--------------------------------|----------|
| Documentation | |
| Operation instructions | 21 |
| Doppler..... | 151 |
| Data source requirements | 260 |
| Overview..... | 259 |
| Downwind angle..... | 84 |
| Drive polarity | 105 |
| Drive type | 97, 104 |
| DSC | |
| Target list..... | 274 |
| Target options | 274 |
| DSC notifications..... | 81 |
| DSC targets | 146, 273 |

E

| | |
|------------------------------------|-------------------|
| Easy Routing..... | 112 |
| Easy View | 170 |
| Economy units..... | 88 |
| Eject SD card..... | 51, 73 |
| Engage / Disengage autopilot..... | 51 |
| Engine | |
| Fault codes | 316 |
| Engine connection wizard | 85 |
| Engine data | 31, 290, 302–304 |
| Engine identification wizard | 45 |
| Engine manufacturer | 85 |
| Engine messages | |
| Alarm | 313 |
| Notice | 313 |
| Warning | 313 |
| Engine quad display..... | 85 |
| Engine selection | 85 |
| Entertainment systems | 345 |
| Environment data | 31, 291, 302, 305 |
| Environment sensors..... | 85 |
| Event groups | 109 |
| Export | |
| Routes..... | 76 |
| Settings..... | 75 |
| Tracks | 76 |
| User data | 75 |
| Waypoints | 76 |

| | |
|---------------------|----|
| External storage | |
| Eject SD card | 51 |
| Inserting..... | 55 |
| Removal | 55 |

F

| | |
|---|----------|
| Factory reset | 387–388 |
| File browser..... | 73, 75 |
| First power up | 40 |
| First responder | 269 |
| AIS mode | 269, 278 |
| Boat name | 269 |
| Data logging | 269, 271 |
| FID | 269 |
| FID checksums | 269 |
| Messages app | 63, 73 |
| MMSI..... | 269 |
| No Hdg | 270 |
| No SOG..... | 270 |
| OneShot TOI settings | 269 |
| Passphrase | 269 |
| Password protection..... | 269 |
| SITREP | 279 |
| Vessel type..... | 269 |
| Fish detection..... | 233 |
| Detection sensitivity..... | 233 |
| Fish depth labels..... | 233 |
| Fish detection beep..... | 233 |
| Fish icons..... | 233 |
| Fish mapping, See Chart Fish mapping mode | |
| Fishfinder | |
| Fish depth labels..... | 238 |
| Fish detection | 238 |
| Fish detection sensitivity..... | 238 |
| Fish icons..... | 238 |
| Zoom mode | 227 |
| Fishfinder app..... | 62 |
| App overview..... | 226 |
| Auto range..... | 227 |
| Channels..... | 232 |
| Controls | 227 |
| No source | 229 |

| | |
|-------------------------|-----------------------|
| No transducer | 229 |
| Range | 227 |
| Scroll back | 233 |
| Waypoints | 232 |
| Fishing AOI | 170 |
| Fishing range | 172 |
| FOV layer | 169 |
| Fuel data..... | 31, 290, 303, 305–306 |
| Fuel manager | 73 |
| Set-up | 74 |
| Fuel tanks | |
| Fuel..... | 87 |
| Fuel (propulsive) | 87 |
| Fusion..... | 345 |

G

| | |
|------------------------------------|------------------|
| Galileo | 65 |
| GLONASS | 65 |
| GNSS / GPS | 60 |
| GNSS (GPS) | 66 |
| COG / SOG filter | 68–69 |
| Constellations | 65, 67 |
| Differential positioning..... | 67, 69 |
| Internal receiver..... | 68–69 |
| SBAS..... | 67, 69 |
| GNSS (GPS) constellations. | 65 |
| GNSS (GPS) data | 32, 291, 302–303 |
| GNSS (GPS) Settings | 67 |
| GNSS constellation selection | 68 |
| GNSS/GPS troubleshooting..... | 390 |
| Goto waypoint | 141 |
| GPS..... | 65–66 |
| gpx..... | 75 |
| Guard zone alarms | 258 |
| Guest profiles | 70 |
| Gybe..... | 105 |

H

| | |
|----------------------|--------------|
| Harbor mode | 248 |
| Hard over time..... | 105 |
| Hard-over time | 96, 98 |
| Heading data..... | 32, 291, 303 |

| | |
|-------------------------------|-----|
| Height correction..... | 172 |
| High res bathy | 170 |
| Homescreen | 60 |
| Background image | 60 |
| Data widget..... | 64 |
| Settings menu..... | 82 |
| Settings menus | 61 |
| Settings pages..... | 26 |
| Homescreen customization..... | 90 |
| Homescreen pages | 61 |

I

| | |
|------------------------------|-----|
| Image..... | 75 |
| Import | |
| Settings..... | 75 |
| User data | 75 |
| Import tank calibration..... | 87 |
| Import/export..... | 73 |
| Initial setup | 40 |
| Intel | |
| Target list..... | 273 |
| Targets..... | 273 |
| Intel target | |
| Target options | 273 |
| Intel targets..... | 146 |
| Internet connection | 374 |
| IP address..... | 402 |
| IP device..... | 93 |
| IRPCS / COLREGS | 153 |
| iTC-5 calibration | 47 |

J

| | |
|----------------|-----|
| JL Audio | 346 |
|----------------|-----|

L

| | |
|----------------------------------|--------------|
| Languages..... | 41, 84 |
| Selection..... | 83 |
| Lat/Long format | 88 |
| Laylines | 188, 191–192 |
| displaying and interpreting..... | 190 |

| | |
|----------------------------------|----------|
| enabling..... | 189 |
| Settings..... | 189 |
| system requirements..... | 189 |
| Wind shifts..... | 191 |
| LightHouse 4 | |
| Compatible MFDs..... | 22 |
| LightHouse charts..... | 162 |
| LightHouse™ charts | |
| Premium..... | 135, 379 |
| LightHouse™ charts | |
| Premium subscription..... | 60 |
| Lighthouse third-party apps | |
| Install..... | 373 |
| LightHouse third-party apps..... | 372 |
| Background app..... | 373 |
| Lighthouse_id.txt..... | 75 |
| Limitations on Use..... | 60 |
| Limitations on Use (LoU)..... | 60 |
| Linearise transducer..... | 48 |
| Linearization..... | 342–343 |
| Load cells..... | 34, 294 |
| Locked heading..... | 101, 103 |

M

| | |
|-------------------------------|---------|
| Magnetic deviation..... | 342 |
| magnetic interference..... | 342 |
| Main menu..... | 25 |
| Man Over Board (MOB)..... | 60 |
| Man Overboard (MOB)..... | 80 |
| Marine protected areas..... | 170 |
| MARPA | |
| Data source requirements..... | 254 |
| Measure..... | 163–164 |
| Memory cards | |
| Compatibility..... | 53 |
| Menus | |
| Pop-over..... | 26 |
| Settings..... | 82 |
| Types..... | 25 |
| Mercury | |
| Information messages..... | 314 |
| VesselView fault codes..... | 316 |

| | |
|-------------------------|-------------|
| Message inbox..... | 280 |
| Messages | |
| Broadcast reply..... | 281 |
| Character limit..... | 281 |
| Export..... | 280 |
| link ID..... | 281 |
| New broadcast..... | 280–281 |
| New direct message..... | 280–281 |
| Received..... | 280 |
| Reply..... | 281 |
| Sent..... | 280 |
| Messages app..... | 63, 73, 280 |
| Messaging app..... | 63 |
| MFD | |
| Buttons..... | 36 |
| Controls..... | 36 |
| MFD alarms..... | 373 |
| MFD app | |
| Context menus..... | 26 |
| Main menu..... | 25 |
| MFD apps..... | 61 |
| Audio app..... | 62 |
| Chart app..... | 61 |
| Dashboard app..... | 62 |
| DockSense app..... | 63 |
| Fishfinder app..... | 62 |
| Messages app..... | 63, 73 |
| Messaging app..... | 63 |
| PDF viewer app..... | 63 |
| Radar app..... | 61 |
| UAV app..... | 63 |
| VesselView app..... | 62 |
| Video app..... | 62 |
| YachtSense app..... | 63 |
| Yamaha app..... | 62 |
| Yamaha HDMI app..... | 62 |
| MFD settings | |
| Import..... | 76 |
| Restore..... | 76 |
| MicroSD | |
| Adaptor..... | 54 |
| Inserting..... | 54 |
| Removal..... | 54 |

| | |
|----------------------------------|------------|
| Minimum safe depth..... | 42–43, 112 |
| Minimum safe height..... | 43, 112 |
| Minimum safe width..... | 44, 112 |
| Miracast..... | 93 |
| MMSI number..... | 281 |
| Mobile apps..... | 378 |
| RayConnect..... | 379 |
| Motor phasing..... | 105 |
| Multiple data sources (MDS)..... | 49 |
| Mute..... | 350 |
| My data..... | 61, 73 |
| My profiles..... | 70 |

N

| | |
|-----------------------------|--------------|
| Navigation data..... | 32, 292, 304 |
| Navigation mode..... | 102–103 |
| Navionics plotter sync..... | 383 |
| New features..... | 22 |
| NMEA 0183 | |
| Baud rate..... | 92 |
| Exporting Routes..... | 285 |
| Exporting waypoints..... | 285 |
| Importing Routes..... | 284 |
| Importing waypoints..... | 284 |
| Supported sentences..... | 405 |
| NMEA 2000..... | 406 |
| Notifications..... | 77 |

O

| | |
|---------------------------|-----|
| Object detection..... | 335 |
| ClearCruise settings..... | 335 |
| Object information..... | 131 |
| Obstruction alarm..... | 158 |
| Parameters..... | 158 |
| Offshore mode..... | 248 |

P

| | |
|--------------------|----|
| Pairing | |
| Quantum radar..... | 57 |
| RMK keypad..... | 57 |
| PDF..... | 75 |

| | |
|----------------------------|-------------------|
| PDF Viewer | |
| controls..... | 357 |
| Opening files..... | 357 |
| Overview..... | 357 |
| Searching a PDF..... | 358 |
| PDF viewer app..... | 63 |
| PGNs..... | 406 |
| Pilot data..... | 32, 292, 302, 304 |
| Pilot icon..... | 101 |
| Pilot sidebar..... | 101 |
| Point camera here..... | 133, 241 |
| point to point..... | 164 |
| Polar..... | 84 |
| Pop-over menus..... | 26 |
| Position..... | 66 |
| Power off..... | 51 |
| Power steering..... | 105 |
| Power swipe..... | 36 |
| Power troubleshooting..... | 387 |
| Powering off..... | 39–40 |
| Powering on..... | 39–40 |
| Premium subscription..... | 60 |
| Pressure units..... | 88 |
| Primary MFD..... | 90 |
| Product information..... | 402 |
| Product support..... | 401 |
| Profiles..... | 60 |

R

| | |
|-----------------------------|---------------|
| Race Start Line..... | 192 |
| based on waypoints..... | 193 |
| creating..... | 192 |
| editing or deleting..... | 193 |
| Race Timer..... | 192 |
| starting..... | 194 |
| Radar..... | 150, 169, 256 |
| Antenna size selection..... | 247 |
| Bearing alignment..... | 248 |
| Blank sectors..... | 261 |
| Color Gain..... | 262 |
| Comparison..... | 242 |
| Compatible scanners..... | 244 |

| | | | |
|--------------------------------|----------|-----------------------------------|----------|
| Controls | 240 | Dual range | 263 |
| Dual range | 151, 247 | Expanded returns | 264 |
| Dual range channel..... | 151 | Expansion level..... | 264 |
| Features..... | 242 | Installation menu..... | 265 |
| Gain | 262 | Interference rejection | 264 |
| MARPA..... | 150, 254 | Interference rejection level..... | 264 |
| Modes..... | 248 | Main Bang Suppression (MBS)..... | 266 |
| Overlay | 151 | Menu..... | 262 |
| Overlay color palette | 151 | Motion mode..... | 263 |
| Overlay visibility..... | 151 | Near Target Enhancement..... | 264 |
| Overlay without heading..... | 151 | Orientation..... | 263 |
| Powering off..... | 246 | Page settings menu | 266 |
| Rain..... | 262 | Parking offset..... | 265 |
| Range | 151 | Preferences menu | 264 |
| Range and Bearing | 249 | Presentation menu..... | 264 |
| Range rings..... | 249 | Radar Rotation Speed..... | 264 |
| Preferred number..... | 249 | Range Fusion..... | 263 |
| Sea..... | 262 | Range ring labels | 264 |
| Sector blanking..... | 151 | Range ring mode | 264 |
| Selecting a scanner | 246 | Range rings..... | 264 |
| Selection..... | 151 | Reset..... | 266 |
| Sensitivity controls..... | 261 | Rings..... | 264 |
| Standby..... | 246 | Scanner..... | 262 |
| Stop transmitting..... | 50 | Sea clutter curve..... | 266 |
| Target options | 150 | Show waypoints..... | 264 |
| Target settings..... | 256 | Standby..... | 263 |
| Timed transmit..... | 247 | STC preset..... | 266 |
| Transmit | 151 | Timed transmit..... | 262 |
| Radar app..... | 61, 240 | Transmission menu..... | 262 |
| Radar Doppler | | Transmit | 263 |
| Color palettes | 260 | Transmit frequency..... | 265 |
| Mode..... | 260 | Tune adjust..... | 264 |
| Radar PAD | 170 | Tune preset | 266 |
| Radar settings | | View & motion menu..... | 263 |
| Advanced menu..... | 266 | VRM/EBL reference | 264 |
| Antenna size selection..... | 262 | Zero range | 266 |
| Beam sharpening..... | 265 | Radar target | |
| Beam sharpening amount..... | 265 | Automatic acquisition | 255 |
| Bearing alignment..... | 265 | Cancel target | 258 |
| Blank sector | 265 | Cancel targets..... | 151, 256 |
| Boat position..... | 263 | Clear trails..... | 258 |
| Channel shown in this app..... | 262 | Context menu | 258 |
| Color palette | 264 | History..... | 257 |

| | |
|----------------------------|----------|
| Information..... | 258 |
| Manual acquisition..... | 150, 254 |
| Reference mode..... | 256–257 |
| Relative mode..... | 256 |
| Shown CPA..... | 258 |
| Symbols..... | 149, 254 |
| Tracking..... | 253 |
| Trails (Wakes)..... | 257 |
| True mode..... | 256 |
| Vectors..... | 257 |
| Radar targets..... | 146 |
| Radar troubleshooting..... | 389 |
| Range rings..... | 169, 249 |
| RayControl..... | 378, 383 |
| RayRemote..... | 378, 383 |
| RayView..... | 378, 384 |
| RealBathy..... | 160, 172 |
| Chart..... | 161 |
| Density..... | 162 |
| Height correction..... | 161 |
| RealBathy..... | 161 |
| Visibility..... | 162 |
| Waterline to tdc..... | 161 |
| RealVision 3D..... | |
| Controls..... | 228 |
| Waypoints..... | 232 |
| Record depth data..... | 171 |
| Recovery mode..... | 387–388 |
| Reeds almanac..... | 162 |
| Regulatory approvals..... | 19 |
| Responder..... | |
| Settings..... | 269 |
| Restore..... | 73 |
| Rockford Fosgate..... | 345 |
| Route..... | 110, 141 |
| Add waypoint..... | 113 |
| Capacity..... | 110, 116 |
| Color..... | 114 |
| Creation..... | 110 |
| Delete..... | 114 |
| Export..... | 114 |
| Follow..... | 113, 142 |
| Follow from here..... | 113 |

| | |
|------------------------|---------|
| Hide/show..... | 114 |
| highlighting..... | 143 |
| Importing..... | 112 |
| List..... | 73, 113 |
| New route..... | 113 |
| Options..... | 113 |
| Rename..... | 114 |
| Reverse..... | 113 |
| Show/Hide..... | 113 |
| Speed..... | 114 |
| Time..... | 114 |
| View route plan..... | 113 |
| Route options..... | 114 |
| Routes..... | |
| Sharing..... | 115 |
| Rudder..... | |
| Damping..... | 105 |
| Limit..... | 105 |
| Offset..... | 105 |
| Reverse reference..... | 105 |
| Rudder bar..... | 103 |
| Rudder Damping..... | 106 |
| Rudder limit..... | 98 |
| Ruler..... | 163 |

S

| | |
|---------------------------------------|----------|
| S-63 Encrypted Charts..... | 137 |
| Base cells..... | 139 |
| Cell permits..... | 139 |
| Chart app settings..... | 140 |
| Cumulative update files..... | 139 |
| Expiry..... | 140 |
| Installation process..... | 137 |
| Installed charts..... | 140 |
| MFD activation file..... | 137 |
| Purchasing..... | 138 |
| Scheme administrator certificate..... | 138, 141 |
| SSE-06 notification..... | 138 |
| SSE-22 notification..... | 138 |
| Update charts..... | 140 |
| User permit..... | 141 |
| User permits file..... | 138 |

| | | | |
|----------------------------|----------|---------------------------------|------------------|
| Safe depth, minimum..... | 84 | Selection..... | 103 |
| Safe distance..... | 152 | Selector..... | 28 |
| Safe height, minimum..... | 84 | VesselView..... | 314 |
| Safe width, minimum..... | 84 | Sidebars | |
| Sail performance..... | 84 | Audio..... | 348 |
| SAR..... | 118 | Simulator, See Demo | |
| creation..... | 119, 121 | Sirius..... | 197 |
| pattern..... | 118 | Subscription..... | 200, 211 |
| Sector search pattern..... | 118 | Sirius XM..... | 170 |
| SAR Pattern | | SiriusXM..... | 345 |
| Drifts effects..... | 120, 123 | SiriusXM weather..... | 202 |
| Save settings..... | 76 | Slew to Cue..... | 133, 241 |
| Save to..... | 172 | SmartStart..... | 192 |
| Saving | | Software | |
| Product information..... | 386 | Compatible MFDs..... | 408 |
| SBAS..... | 67, 69 | Software updates..... | 55–57 |
| SBAS selection..... | 66, 68 | Software version..... | 21 |
| Screen mirroring..... | 93 | Sonar | |
| Screen resolutions..... | 89 | Channel selection..... | 228 |
| Screenshot..... | 51 | Disable all sounders..... | 50 |
| Search and Rescue, See SAR | | Gain..... | 234 |
| Secure messaging..... | 280 | History..... | 233 |
| Service Center..... | 401 | Intensity..... | 234 |
| Setting controls..... | 27 | Noise filter..... | 234 |
| Settings | | Sensitivity controls..... | 234 |
| Restore..... | 75 | Surface filter..... | 234 |
| Settings menu | | TVG (Time Varied Gain)..... | 235 |
| Regulatory approvals..... | 19 | Sonar logs..... | 172 |
| Settings pages..... | 26 | SonarChart Live..... | 167, 172 |
| setup..... | 269 | Enabling..... | 167 |
| Shallow depth shading..... | 172 | Tide correction..... | 167 |
| Shared brightness..... | 91 | Speed | |
| Shortcuts menu..... | 50 | Adjust STW..... | 49 |
| Show contours..... | 171 | Set STW to SOG..... | 49 |
| Sidebar..... | 27 | Speed data..... | 33, 292, 303–304 |
| Audio..... | 29 | Speed input..... | 104 |
| Customizing..... | 29 | Speed units..... | 88 |
| Data 1..... | 28 | Splashscreen customization..... | 89 |
| Data 2..... | 28 | Splashscreen resolution..... | 89 |
| Mercury..... | 29 | Sports fishing..... | 170 |
| Pilot..... | 28 | Spotify..... | 23 |
| Race start..... | 28 | Startup wizard..... | 41 |
| Search..... | 28 | Status area..... | 71 |

| | |
|-------------------------------|-------|
| Status area icons | 72 |
| Steer to Hdg | 103 |
| Steer to Nav | 103 |
| Stop Radar transmitting | 50 |
| Streets & POI | 169 |
| Support forum | 403 |
| Switching off | 39–40 |
| Switching on | 39–40 |
| System Datum | 295 |
| System time | 60 |

T

| | |
|--------------------------------|------------------------|
| Take Screenshot | 50 |
| Tank calibration | 85 |
| Tank data | 33–34, 293–294 |
| Tanks | 85 |
| Black water tanks | 85 |
| Calibration | 86 |
| Fresh water tanks | 85 |
| Fuel (gasoline) tanks | 85 |
| Fuel tanks | 85 |
| Gray water tanks | 85 |
| Live well tanks | 85 |
| Target acquisition | |
| Data source requirements | 254 |
| Target list | 150, 256 |
| Target of Interest (TOI) | |
| OneShot | 276 |
| Position updates | 276 |
| Received | 275 |
| Repeating | 276 |
| Sent | 275 |
| Target icons | 275 |
| Transmission rate | 276 |
| Target options | 148, 150, 273–274, 276 |
| Target tracking | 146 |
| AIS | 146 |
| DSC | 146 |
| Intel | 146 |
| Radar | 146 |
| TOI | 146 |
| Targets | |

| | |
|-----------------------------------|--------------|
| Intel | 273 |
| Targets of Interest | 146 |
| Technical support | 401, 403 |
| Temperature units | 88 |
| Thermal camera | |
| Tracking | 133, 241 |
| third-party apps | |
| LightHouse third-party apps | 372 |
| Third-party apps | 372 |
| Tide correction | 172 |
| Tide height | 218 |
| Tides mode | |
| Animation controls | 217 |
| Displaying graphs | 220 |
| Time data | 33, 292, 305 |
| Time format | 88 |
| Time to Burn | 192 |
| Time/Date format | 88, 295 |
| TOI | |
| OneShot decay | 275 |
| OneShot decay times | 276 |
| OneShot Delay | 275 |
| Target list | 277 |
| Touchlock | 51 |
| Track | |
| Capacity | 116 |
| Track with camera | 133, 241 |
| Tracking | |
| Thermal Camera | 133, 241 |
| Tracks | 114 |
| Capacity | 114 |
| Creation | 114 |
| Customize | 115 |
| Interval | 115 |
| List | 73, 115 |
| Sharing | 115 |
| Trails clearing | 258 |
| Trails reset | 258 |
| Training courses | 403 |
| Transducer | |
| Temperature calibration | 46, 230 |
| Temperature settings | 46, 230 |
| Trip | |

| | |
|-------------------------|-----|
| Counter | 73 |
| Trip logs..... | 73 |
| Troubleshooting | 386 |
| Augmented Reality | 395 |

U

| | |
|-----------------------------|----------|
| UAV | 169 |
| App | 365 |
| App overview..... | 360 |
| Assuming control..... | 369 |
| Chart icon | 166, 368 |
| Chart integration..... | 166, 368 |
| Circle me..... | 367 |
| Compatible devices..... | 361 |
| Connection | 362 |
| Controller RC Cable..... | 362 |
| Controller signal lost..... | 369 |
| Controls | 366 |
| Critical battery..... | 369 |
| Disclaimer | 360 |
| Disconnect..... | 367 |
| Emergency procedures | 369 |
| Fish on | 367 |
| Flight..... | 366 |
| Flight data | 361 |
| Getting started..... | 363 |
| Goto | 166, 369 |
| Icon | 166, 369 |
| launching | 366 |
| Low battery..... | 369 |
| Manual control | 369 |
| No connection | 364 |
| No-fly zone..... | 363 |
| pre-requisites..... | 362 |
| Precautions..... | 363 |
| Record | 360 |
| Registration failed..... | 365 |
| Restricted airspace | 363 |
| Retrieval..... | 366 |
| Set up sequence..... | 363 |
| Settings..... | 361 |
| Splitscreen page..... | 364 |

| | |
|--------------------------------------|----------|
| Sport mode | 361 |
| Status area..... | 361 |
| Take off..... | 366 |
| Take photo..... | 360 |
| vectors | 166, 368 |
| Virtual joysticks..... | 361 |
| UAV app..... | 63 |
| Units | 88, 295 |
| Unmute..... | 350 |
| Unpairing | |
| RMK keypad..... | 57 |
| Upgrading, software..... | 55 |
| Upwind angle | 84 |
| Used for propulsion..... | 87 |
| User data | 73 |
| Import..... | 76 |
| Restore | 76 |
| Back up | 75 |
| User interface | |
| Languages | 83 |
| User profiles | 70 |
| User programmable button (UPB) | 50 |

V

| | |
|-------------------------------------|---------|
| Variation | 295 |
| Vessel hull type | 96, 104 |
| Vessel Hull Type | 96 |
| Vessel to point..... | 164 |
| VesselView | |
| Sidebar | 314 |
| VesselView app..... | 62 |
| Sport exhaust..... | 314 |
| Steering angle indicator..... | 315 |
| Video | 318 |
| Feed selection | 321 |
| Renaming feeds..... | 318 |
| Video Analytics..... | 335 |
| Video app..... | 62 |
| Controls | 319 |
| Video app pages | 318 |
| Video playback..... | 75 |
| Video, viewing multiple inputs..... | 318 |

| | |
|-----------------------|-----|
| View route plan | 113 |
| Visibility | 172 |
| Volume units..... | 88 |

W

| | |
|-------------------------------------|----------|
| Warranty | 19, 401 |
| Waterline to tdcr | 171 |
| Waypoint | 108 |
| capacity..... | 108 |
| Capacity..... | 116 |
| Delete | 113 |
| DSC..... | 81 |
| Edit..... | 113 |
| Goto..... | 141 |
| List | 73 |
| Placement..... | 232 |
| Remove from route | 113 |
| Waypoint at Range and Bearing..... | 272 |
| Waypoint management | 108 |
| Waypoint, place from AR flag | 338 |
| Waypoints | |
| Delete | 109 |
| Details..... | 109 |
| Event groups..... | 109 |
| Group list | 109 |
| List | 108 |
| New group..... | 108 |
| Sharing..... | 115 |
| Weather | |
| Settings..... | 211 |
| Weather layers | 203 |
| Weather mode..... | 202, 248 |
| Animated weather | 204 |
| Animated weather layers..... | 204 |
| Cities layer | 206 |
| Cloud tops layer..... | 206 |
| Context menu | 202 |
| Lightning layer | 206 |
| Reports | 202 |
| Sea surface temperature layer | 207 |
| Storm cast..... | 208 |
| Storm tracks..... | 208 |

| | |
|---|--------------|
| Subscription..... | 200, 211 |
| Surface observation stations layer..... | 206 |
| Surface pressure..... | 205 |
| Surface pressure layer..... | 207 |
| Watchbox | 209–210 |
| Watchbox alerts | 210 |
| Wave direction..... | 205, 210 |
| Wave height..... | 205 |
| Wave Height | 210 |
| Wave period | 205, 211 |
| Weather radar..... | 205 |
| Weather radar layer | 205 |
| Wind..... | 209 |
| Wind arrows..... | 209 |
| Wind barbs..... | 209 |
| Wind direction..... | 205, 209 |
| Wind fields | 209 |
| Wind Radii | 209 |
| Wind speed..... | 209 |
| Weather Radar layer..... | 169 |
| WeatherMarine zone boundaries | 211 |
| WeatherWatchbox alerts | 211 |
| WeatherWatchbox range..... | 211 |
| WeatherWind symbol | 211 |
| Wi-Fi | |
| Settings..... | 374 |
| Wind | |
| Align wind transducer | 48 |
| Angle adjustment..... | 48 |
| Data type | 105 |
| Linearise transducer | 48 |
| Shift..... | 105 |
| Speed adjustment..... | 48 |
| Wind data | 33, 293, 305 |
| Wind speed units..... | 88 |
| Wireless display..... | 93 |

X

| | |
|--------------|-----|
| XTE, | |
| Restart..... | 141 |

Y

| | |
|-----------------------------|-------------|
| YachtSense app | 63 |
| YachtSense Link | |
| Status..... | 72 |
| Yamaha app | |
| Controls | 302 |
| Yamaha app | 62, 301–302 |
| Advanced..... | 310 |
| data items | 302 |
| Data page | 303 |
| Engine instances reset..... | 310 |
| Engine page..... | 302, 306 |
| Engine trim..... | 308 |
| Fuel flow offset | 310 |
| Gateway reset..... | 310 |
| Overview..... | 301 |
| Requirements | 301 |
| Settings..... | 309 |
| Status | |
| Engine warming up | 307 |
| Immobilizer lock | 308 |
| Synchronization..... | 307 |
| Status indicator | 307 |
| Tanks | 308 |
| Tanks page | 305 |
| Transmission | 307 |
| Trim Calibration | 310 |
| Troll mode..... | 309 |
| Warning | |
| Catalyst | 308 |
| Check engine warning | 308 |
| Low oil pressure..... | 308 |
| Low voltage..... | 308 |
| Overheat | 308 |
| Steering system | 308 |
| Water in fuel..... | 308 |
| Warning indicator..... | 308 |
| Yamaha gateway..... | 301 |
| Yamaha HDMI | 301 |
| Yamaha HDMI app | 62 |



Raymarine (UK)

Marine House, Cartwright Drive, Fareham, Hampshire.
PO15 5RJ. United Kingdom.

Tel: (+44) (0)1329 246 700

www.raymarine.co.uk

Raymarine (US)

9 Townsend West,
Nashua, NH 03063.
United States of America.

Tel: (+1) 603-324-7900

www.raymarine.com

Raymarine Belgium BVBA

Luxemburgstraat 2, 2321 Meer.
Belgium.

Tel: (+32) (0) 3665 5162

www.raymarine.com

Raymarine®